

Dell XPS 12

Owner's Manual

Computer model: XPS 9Q33/9Q34

Regulatory model: P20S

Regulatory type: P20S002



Notes, Cautions, and Warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2013 Dell Inc.

Trademarks used in this text: Dell™, the DELL logo, and XPS™ are trademarks of Dell Inc.; Microsoft® and Windows® are registered trademarks of Microsoft corporation in the United States and/or other countries.

Contents

- Before Working Inside Your Computer 7**
 - Before You Begin 7
 - Recommended Tools. 7
 - Safety Instructions. 8
- After Working Inside Your Computer 9**
- Removing the Base Cover 10**
 - Procedure 10
- Replacing the Base Cover 12**
 - Procedure 12
- Removing the Battery 13**
 - Prerequisites. 13
 - Procedure 13
- Replacing the Battery 14**
 - Procedure 14
 - Postrequisites. 14
- Removing the Wireless Card 15**
 - Prerequisites. 15
 - Procedure 15
- Replacing the Wireless Card 16**
 - Procedure 16
 - Postrequisites. 16
- Removing the mSATA Card 17**
 - Prerequisites. 17
 - Procedure 17
- Replacing the mSATA Card 18**
 - Procedure 18
 - Postrequisites. 18

Removing the Speakers	19
Prerequisites.	19
Procedure	19
Replacing the Speakers	20
Procedure	20
Postrequisites.	20
Removing the Coin-Cell Battery	21
Prerequisites.	21
Procedure	21
Replacing the Coin-Cell Battery	23
Procedure	23
Postrequisites.	23
Removing the I/O Board	24
Prerequisites.	24
Procedure	24
Replacing the I/O Board	25
Procedure	25
Postrequisites.	25
Removing the Fan	26
Prerequisites.	26
Procedure	26
Replacing the Fan	28
Procedure	28
Postrequisites.	28
Removing the Heat Sink	29
Prerequisites.	29
Procedure	29
Replacing the Heat Sink	30
Procedure	30
Postrequisites.	30

Removing the Power-Adapter Port	31
Prerequisites.	31
Procedure	31
Replacing the Power-Adapter Port	32
Procedure	32
Postrequisites.	32
Removing the System Board	33
Prerequisites.	33
Procedure	33
Replacing the System Board	36
Procedure	36
Postrequisites.	36
Entering the Service Tag in the BIOS.	36
Removing the Display Assembly	37
Prerequisites.	37
Procedure	37
Replacing the Display Assembly	39
Procedure	39
Postrequisites.	39
Removing the Display Back-Cover	40
Prerequisites.	40
Procedure	40
Replacing the Display Back-Cover	42
Procedure	42
Postrequisites.	42
Removing the Camera Module	43
Prerequisites.	43
Procedure	43
Replacing the Camera Module	44
Procedure	44
Postrequisites.	44

Removing the Windows-Button Board	45
Prerequisites.	45
Procedure	45
Replacing the Windows-Button Board	46
Procedure	46
Postrequisites.	46
Removing the Display Panel	47
Prerequisites.	47
Procedure	47
Replacing the Display Panel	49
Procedure	49
Postrequisites.	49
Removing the Keyboard	50
Prerequisites.	50
Procedure	50
Replacing the Keyboard	54
Procedure	54
Postrequisites.	55
Flashing the BIOS	56

Before Working Inside Your Computer

Before You Begin

 **CAUTION:** To avoid data loss, save and close all open files and exit all open programs before turning off your computer.

- 1 Save and close all open files, exit all open programs, and turn off your computer.
Microsoft Windows 8: Point to the lower/upper-right corner of the screen to open the Charms sidebar and click **Settings**→ **Power**→ **Shut down**.

 **NOTE:** If you use a different operating system, see the documentation of your operating system for shut-down instructions.

- 2 After the computer shuts down, disconnect it from the electrical outlet.
- 3 Disconnect all cables — such as power and USB cables — from your computer.
- 4 Disconnect all peripherals connected to your computer.

Recommended Tools

The procedures in this document require the following tools:

- Phillips screwdriver
- Torx #5 (T5) screwdriver
- Plastic scribe

Safety Instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.

-  **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.
-  **WARNING:** Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the power source.
-  **CAUTION:** Only a certified service technician is authorized to remove the computer cover and access any of the components inside the computer. See the safety instructions for complete information about safety precautions, working inside your computer, and protecting against electrostatic discharge.
-  **CAUTION:** To avoid damaging the computer, make sure that the work surface is flat and clean.
-  **CAUTION:** When you disconnect a cable, pull on its connector or on its pull-tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, make sure that the ports and connectors are correctly oriented and aligned.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges and avoid touching pins and contacts.
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.

After Working Inside Your Computer



CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.


- 1** Replace all screws and make sure that no stray screws remain inside your computer.
- 2** Connect any cables, peripherals, and other parts you removed before working on your computer.
- 3** Connect your computer to the electrical outlet.
- 4** Turn on your computer.

Removing the Base Cover

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure


- 1 Close the display, and turn the computer over.
- 2 Turn the system badge over and place it on the base cover.

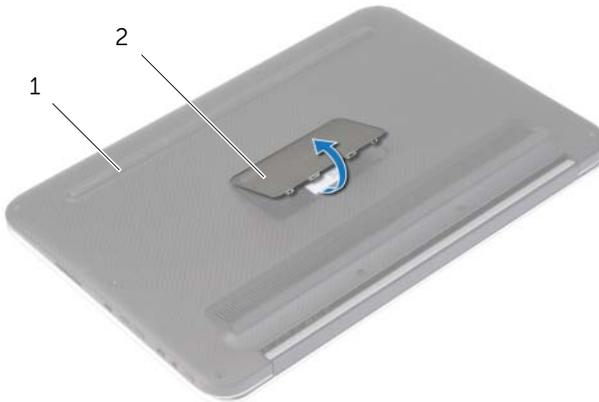

1 base cover

2 system badge

- 3** Remove the screws that secure the base cover to the palm-rest assembly.

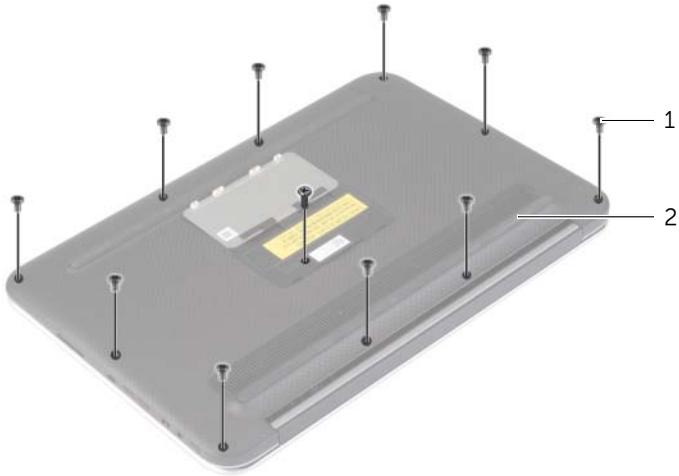

1 screws (11)

2 base cover

- 4** Place the computer with the rear side facing you, and starting from the right side, gently pry up the base cover.
- 5** Lift the base cover at an angle and slide it to release the power-switch slot from the power switch.



1 power-switch slot

2 power switch

3 base cover

Replacing the Base Cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Slide the power-switch slot into the power switch and place the base cover on the palm-rest assembly.
- 2 Snap the base cover into place.
- 3 Replace the screws that secure the base cover to the palm-rest assembly.
- 4 Turn the system badge over and snap it into place.

Removing the Battery


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

Remove the base cover. See "Removing the Base Cover" on page 10.

Procedure

- 1 Disconnect the battery cable from the system board.
- 2 Remove the screws that secure the battery to the palm-rest assembly.
- 3 Lift the battery, along with its cable, off the palm-rest assembly.

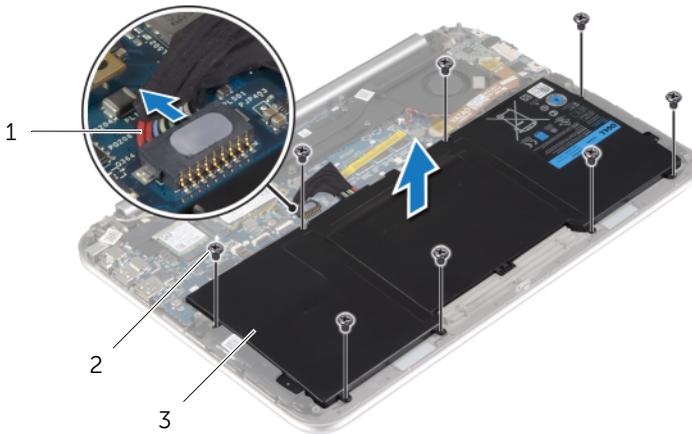

1 battery cable

2 screws (8)

3 battery

- 4 Slide and hold the power switch for about five seconds to ground the system board.

Replacing the Battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the battery with the screw holes on the palm-rest assembly and place the battery on the palm-rest assembly.
- 2 Replace the screws that secure the battery to the palm-rest assembly.
- 3 Connect the battery cable to the system board.

Postrequisites

Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Wireless Card


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.

Procedure

- 1 Peel off the Mylar and conductive tape that cover the antenna cables.
- 2 Disconnect the antenna cables from the wireless card.
- 3 Remove the screw that secures the wireless card to the system board.
- 4 Slide and remove the wireless card out of the wireless-card connector.

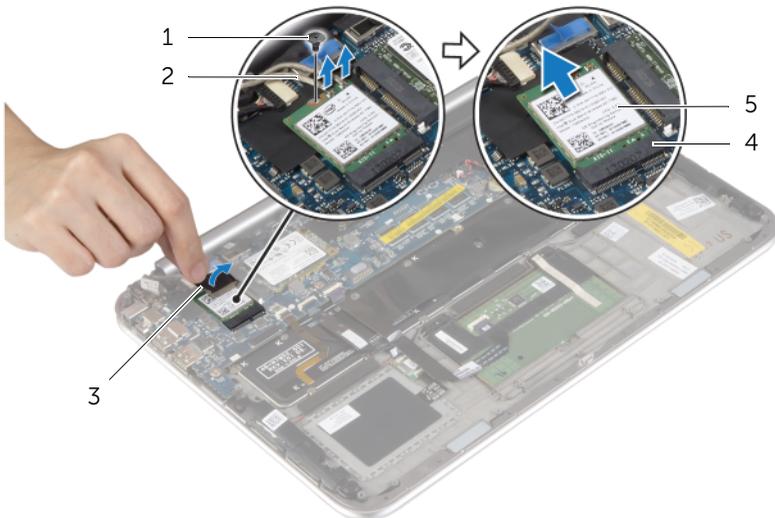

1	screw	2	antenna cables (2)
3	Mylar and conductive tape	4	wireless-card connector
5	wireless card		

Replacing the Wireless Card

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

-  **CAUTION:** To avoid damage to the wireless card, do not place any cables under it.
- 1 Align the notch on the wireless card with the tab on the wireless-card connector.
 - 2 Insert the wireless card into the wireless-card connector and replace the screw that secures the wireless card to the system board.
 - 3 Connect the antenna cables to the wireless card.

 **NOTE:** The color of the antenna cables is visible near the tip of the cables. The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

Connectors on the wireless card	Antenna-cable color
Main (white triangle)	white
Auxiliary (black triangle)	black

- 4 Adhere the Mylar and conductive tape on the antenna cables.

Postrequisites

- 1 Replace the battery. See "Replacing the Battery" on page 14.
- 2 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the mSATA Card


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.

Procedure

- 1 Remove the screw that secures the mSATA card to the system board.
- 2 Slide and remove the mSATA card out of the mSATA-card connector.

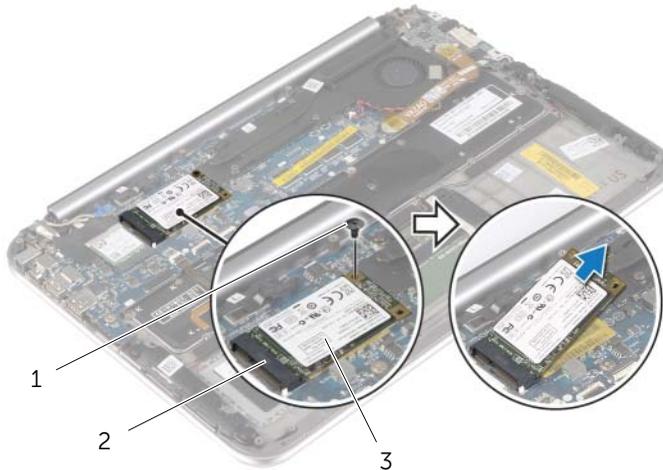

1	screw	2	mSATA-card connector
3	mSATA card		

Replacing the mSATA Card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Align the notch on the mSATA card with the tab on the mSATA-card connector.
- 2 Insert the mSATA card, at an angle, into the mSATA-card connector.
- 3 Press the other end of the mSATA card down and replace the screw that secures the mSATA card to the system board.

Postrequisites

- 1 Replace the battery. See "Replacing the Battery" on page 14.
- 2 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Speakers


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.

Procedure

- 1 Lift the connector latch and disconnect the touchpad cable from the system board.
- 2 Remove the screws that secure the speakers to the palm-rest assembly.
- 3 Disconnect the speaker cable from the I/O board.
- 4 Peel off the adhesive foams from the speaker cable, note the routing, and remove the cables from the routing guides.
- 5 Lift the speakers, along with the speaker cable, off the palm-rest assembly.

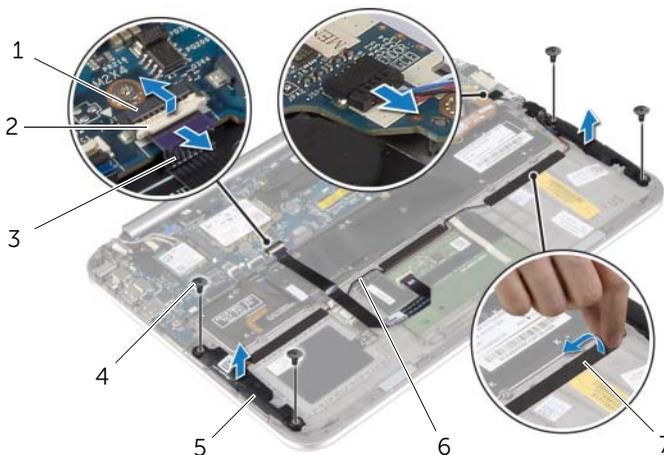

1	touchpad-cable connector	2	latch
3	touchpad cable	4	screws (4)
5	speakers (2)	6	speaker cable
7	adhesive foams (3)		

Replacing the Speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Using the alignment posts on the palm-rest assembly, place the speakers on the palm-rest assembly.
- 2 Replace the screws that secure the speakers to the palm-rest assembly.
- 3 Route the speaker cable through the routing guides on the palm-rest assembly and adhere the adhesive foams.
- 4 Connect the speakers cable to the I/O board.
- 5 Slide the touchpad cable into the touchpad-cable connector and press the connector latch to secure the cable.

Postrequisites

- 1 Replace the battery. See "Replacing the Battery" on page 14.
- 2 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Coin-Cell Battery

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.


⚠ CAUTION: Removing the coin-cell battery resets the BIOS settings to default. It is recommended that you note the BIOS settings before removing the coin-cell battery.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.

Procedure

- 1 Using the pull tabs, disconnect the I/O-board cable from the I/O board and the system board, and remove the cable.

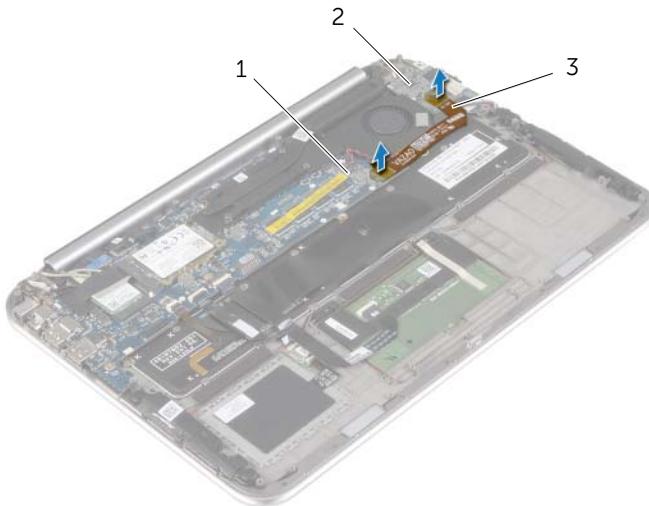


1 system board

2 I/O board

3 I/O-board cable

- 2 Disconnect the coin-cell battery cable from the system board.
- 3 Note the routing of the coin-cell battery cable and remove the cable from the routing guides.
- 4 Peel off the coin-cell battery from the keyboard.
- 5 Lift the coin-cell battery, along with its cable, off the keyboard.

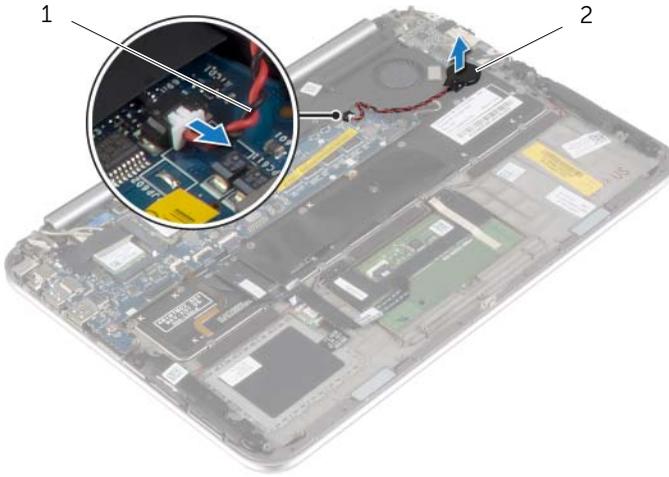

1 coin-cell battery cable

2 coin-cell battery

Replacing the Coin-Cell Battery

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

 **WARNING:** The battery may explode if installed incorrectly. Replace the battery only with the same or equivalent type. Discard used batteries according to the manufacturer's instructions.

Procedure

- 1 Adhere the coin-cell battery to the keyboard.
- 2 Connect the coin-cell battery cable to the system board.
- 3 Route the coin-cell battery cable through the routing guides.
- 4 Connect the I/O-board cable to the I/O board and the system board.

Postrequisites

- 1 Replace the battery. See "Replacing the Battery" on page 14.
- 2 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the I/O Board


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.

Procedure

- 1 Disconnect the speaker cable from the I/O board.
- 2 Using the pull tab, disconnect the I/O-board cable from the system board and the I/O-board.
- 3 Remove the screws that secure the I/O board to the palm-rest assembly.
- 4 Lift the I/O board away from the palm-rest assembly.

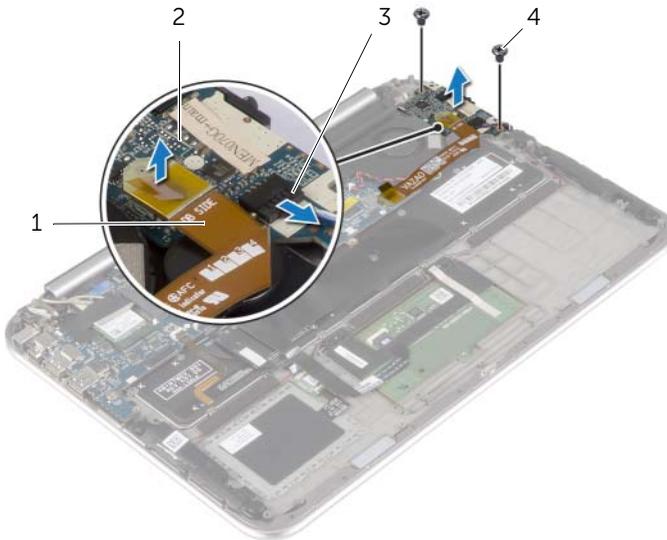

1	I/O-board cable	2	I/O board
3	speakers cable	4	screws (2)

Replacing the I/O Board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure



NOTE: Make sure that the power switch is in its default position — moved towards the back of the computer — before replacing the I/O board.

- 1 Align the screw holes on the I/O board with the screw holes on the palm-rest assembly.
- 2 Replace the screws that secure the I/O board to the palm-rest assembly.
- 3 Connect the speaker cable to the I/O board.
- 4 Connect the I/O-board cable to the I/O board and the system board.

Postrequisites

- 1 Replace the battery. See "Replacing the Battery" on page 14.
- 2 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Fan


WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.

Procedure

- 1 Using the pull tabs, disconnect the I/O-board cable from the I/O board and the system board, and remove the cable.

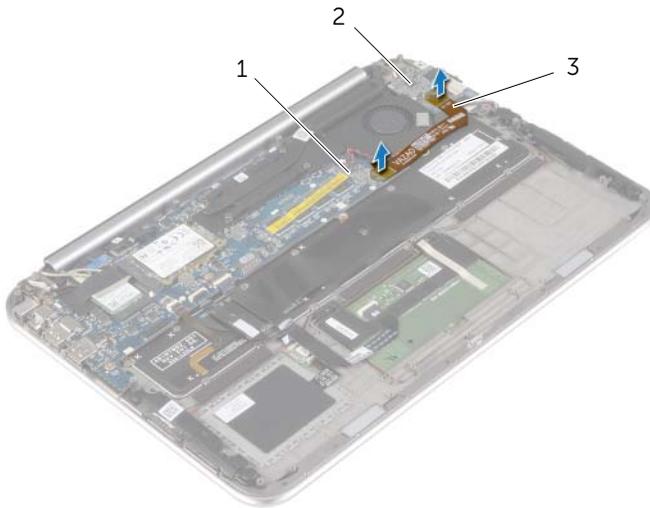


1 system board

2 I/O board

3 I/O-board cable

- 2 Note the routing of the coin-cell battery cable and remove the cable from the routing guides on the fan.
- 3 Disconnect the fan cable from the system board.
- 4 Remove the screws that secure the fan to the keyboard.
- 5 Slide and lift the fan, along with its cable, away from the keyboard.

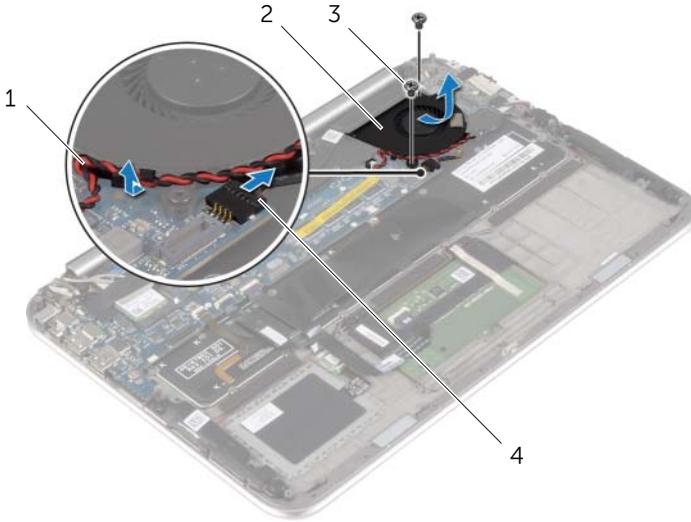

1	coin-cell battery cable	2	fan
3	screws (2)	4	fan cable

Replacing the Fan



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Slide the tab on the fan under the heat sink and align the screw holes on the fan with the screw holes on the keyboard.
- 2 Replace the screws that secure the fan to the keyboard.
- 3 Connect the fan cable to the system board.
- 4 Route the coin-cell battery cable through the routing guides on the fan.
- 5 Connect the I/O-board cable to the I/O board and the system board.

Postrequisites

- 1 Replace the battery. See "Replacing the Battery" on page 14.
- 2 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Heat Sink


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.

Procedure

- 1 In sequential order (indicated on the heat sink), loosen the captive screws that secure the heat sink to the system board.
- 2 Lift the heat sink off the system board.

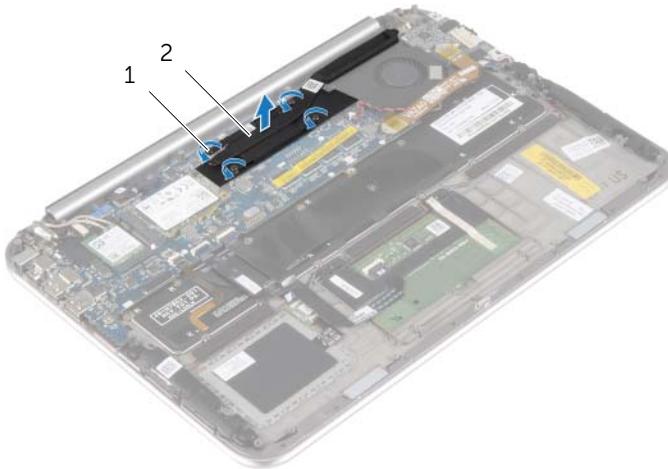

1 captive screws (4)

2 heat sink

Replacing the Heat Sink



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure



NOTE: The original thermal grease can be reused, if the original system board and heat sink are reinstalled together. If either the system board or the heat sink is replaced, use the thermal pad provided in the kit to make sure that thermal conductivity is achieved.

- 1 Align the screws on the heat sink with the screw holes on the system board.
- 2 In sequential order (indicated on the heat sink), tighten the captive screws that secure the heat sink to the system board.

Postrequisites

- 1 Replace the battery. See "Replacing the Battery" on page 14.
- 2 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Power-Adapter Port


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.

Procedure

- 1 Disconnect the power-adapter port cable from the system board.
- 2 Remove the screw that secures the power-adapter port to the palm-rest assembly.
- 3 Slide and release the power-adapter port cable from under the display hinge.
- 4 Lift the power-adapter port off the palm-rest assembly.

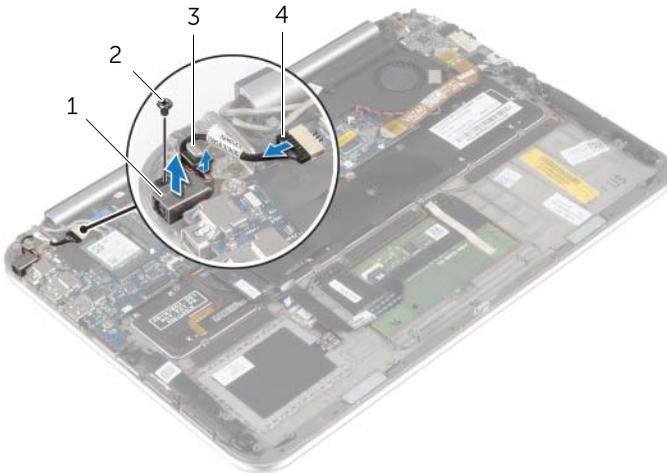

1	power-adapter port	2	screw
3	display hinge	4	power-adapter port cable

Replacing the Power-Adapter Port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Slide the power-adapter port cable under the display hinge.
- 2 Align the screw hole on the power-adapter port with the screw hole on the palm-rest assembly.
- 3 Replace the screw that secures the power-adapter port to the palm-rest assembly.
- 4 Connect the power-adapter port cable to the system board.

Postrequisites

- 1 Replace the battery. See "Replacing the Battery" on page 14.
- 2 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the System Board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.
- 3 Remove the wireless card. See "Removing the Wireless Card" on page 15.
- 4 Remove the mSATA card. See "Removing the mSATA Card" on page 17.
- 5 Remove the fan. See "Removing the Fan" on page 26.
- 6 Remove the heat sink. See "Removing the Heat Sink" on page 29.

Procedure




NOTE: Replacing the system board removes any changes you have made to the BIOS using System Setup. Enter the Service Tag of your computer in the BIOS and make the desired changes again after you replace the system board. For more information on entering the Service Tag in the BIOS, see "Replacing the System Board" on page 36.



NOTE: Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect them correctly after you replace the system board.


- 1 Disconnect the power-adapter port cable from the system board.
- 2 Using the pull tabs, disconnect the display cables from the system board.

- 3** Lift the connector latches, and using the pull tabs, disconnect the keyboard-backlight cable, the NFC cable, and the touchpad cable from the system board.

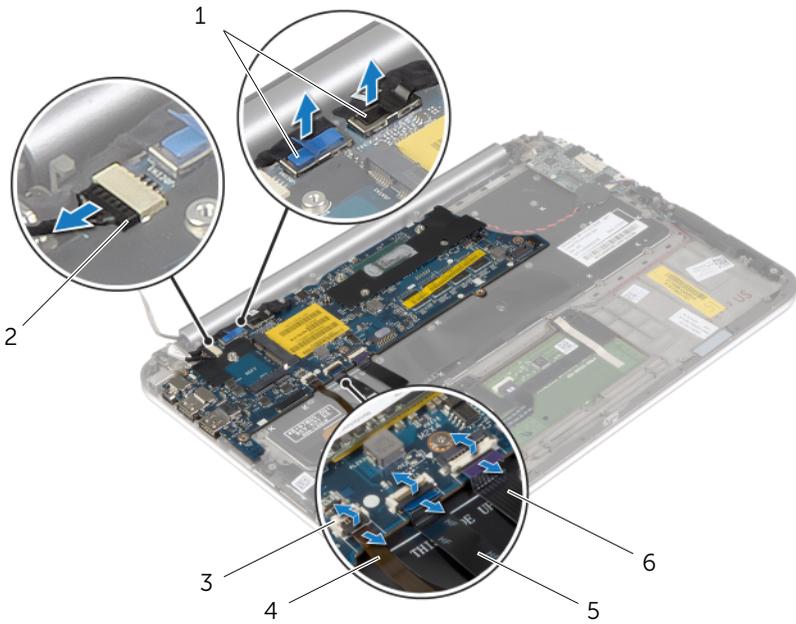


1	display cables (2)	2	power-adaptor port cable
3	connector latches (3)	4	keyboard-backlight cable
5	NFC cable	6	touchpad cable

- 4 Disconnect the coin-cell battery cable from the system board.
- 5 Remove the screws that secure the system board to the palm-rest assembly.
- 6 Carefully lift the system board and turn it over.

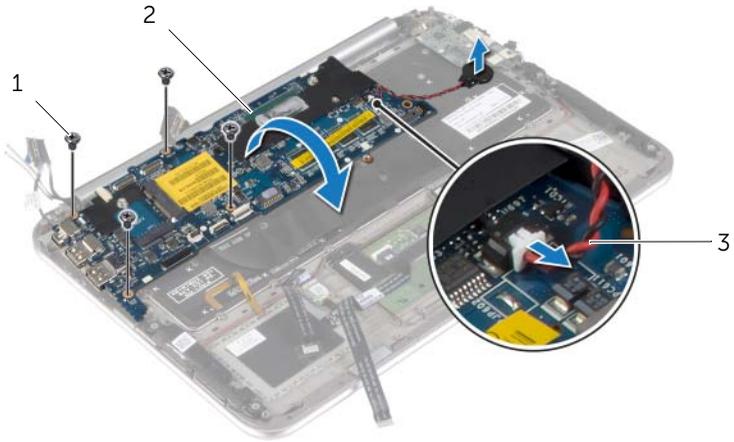

1	screws (4)	2	system board
3	coin-cell battery cable		

- 7 Lift the connector latch and disconnect the keyboard cable from the system board.

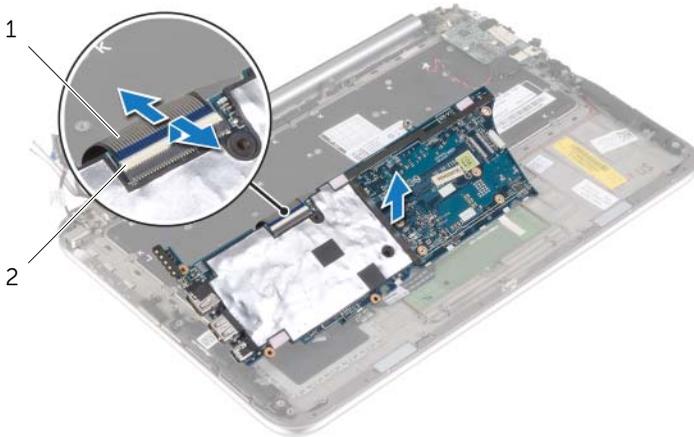

1	keyboard cable	2	connector latch
---	----------------	---	-----------------

- 8 Lift the system board off the palm-rest assembly.

Replacing the System Board

-  **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Slide the keyboard cable into the keyboard-cable connector and press down on the connector latch to secure the cable.
-  **CAUTION:** Make sure that no cables are placed under the system board.
- 2 Turn the system board over and align the screw holes on the system board with the screw holes on the palm-rest assembly.
- 3 Replace the screws that secure the system board to the palm-rest assembly.
- 4 Connect the coin-cell battery cable to the system board.
- 5 Slide the keyboard-backlight cable, the NFC cable, and the touchpad cable in the respective connectors, and press down on the connector latches to secure the cables.
- 6 Connect the display cables to the system board.
 -  **NOTE:** When connecting the display cables to the system board, match the labels (L and R) on the display cables to the labels on the system board.
- 7 Connect the power-adaptor port cable to the system board.

Postrequisites

- 1 Replace the heat sink. See "Replacing the Heat Sink" on page 30.
- 2 Replace the fan. See "Replacing the Fan" on page 28.
- 3 Replace the mSATA card. See "Replacing the mSATA Card" on page 18.
- 4 Replace the wireless card. See "Replacing the Wireless Card" on page 16.
- 5 Replace the battery. See "Replacing the Battery" on page 14.
- 6 Replace the base cover. See "Replacing the Base Cover" on page 12.

Entering the Service Tag in the BIOS

- 1 Turn on the computer.
- 2 At the Dell logo, press <F2> to enter System Setup.
- 3 Navigate to the **Main** tab and type the Service Tag in the **Service Tag** field.

Removing the Display Assembly


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.
- 3 Remove the heat sink. See "Removing the Heat Sink" on page 29.

Procedure

- 1 Disconnect the power-adaptor port cable from the system board and remove the cable from the display hinge.
- 2 Peel off the Mylar and conductive tape that cover the antenna cables and disconnect the antenna cables from the wireless card.
- 3 Using the pull tabs, disconnect the display cables from the system board.
- 4 Note the routing of the display-cables and remove the cables from the routing guides.

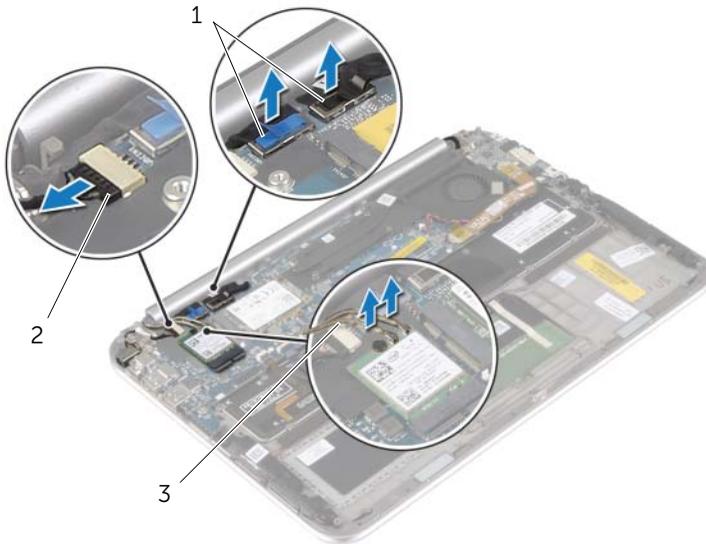


1 display cables (2)

2 power-adaptor port cable


3 antenna cables (2)

5 Remove the screws that secure the display assembly to the palm-rest assembly.

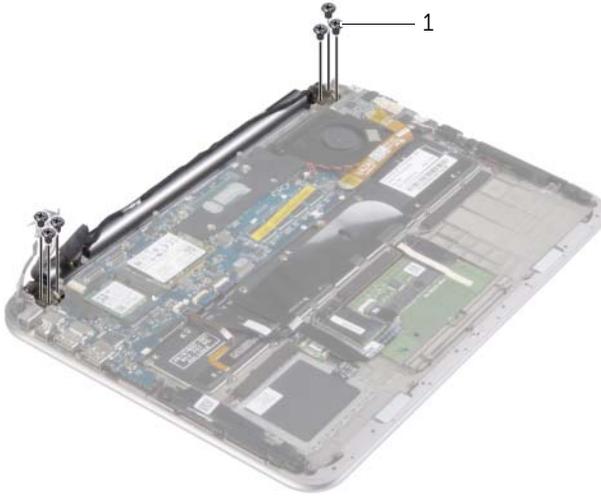

1 screws (6)

6 Carefully rotate the palm-rest assembly up, and then slide the palm-rest assembly to release the tabs on the palm-rest assembly from the display hinges.

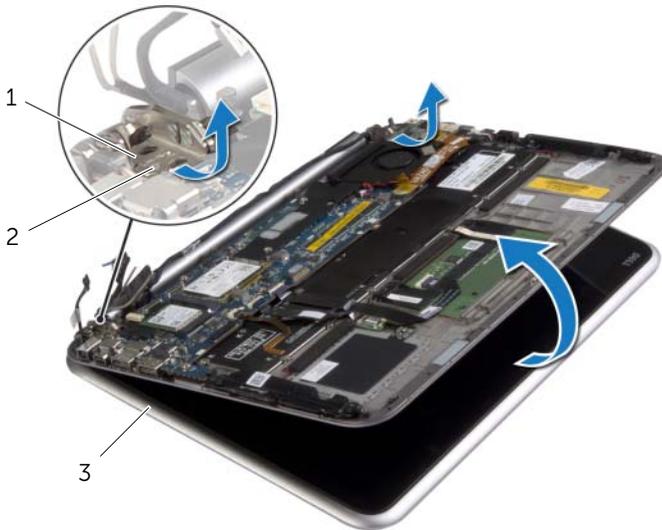

1 display hinges (2)

2 tabs

3 display assembly

Replacing the Display Assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Slide the tab on the palm-rest assembly under the display hinges to align the palm-rest assembly and then place it on the display assembly.
- 2 Rotate the display hinges down to insert the tabs on the palm-rest assembly into the slots on the display hinges.
- 3 Replace the screws that secure the display assembly to the palm-rest assembly.
- 4 Connect the power-adaptor port cable and display cables to the system board.
 **NOTE:** When connecting the display cables to the system board, match the labels (L and R) on the display cables to the labels on the system board.
- 5 Connect the antenna cables to the wireless card, and then adhere the Mylar and conductive tape over the antenna cables.

Postrequisites

- 1 Replace the heat sink. See "Replacing the Heat Sink" on page 30.
- 2 Replace the battery. See "Replacing the Battery" on page 14.
- 3 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Display Back-Cover

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.

Procedure


- 1 Turn the computer over and open the display as far as possible.
- 2 Rotate the display panel and remove the screws that secure the display back-cover to the display panel.



1 display panel

2 screws (8)

- 3 Rotate the display and remove the screws that secure the display back-cover to the display panel.

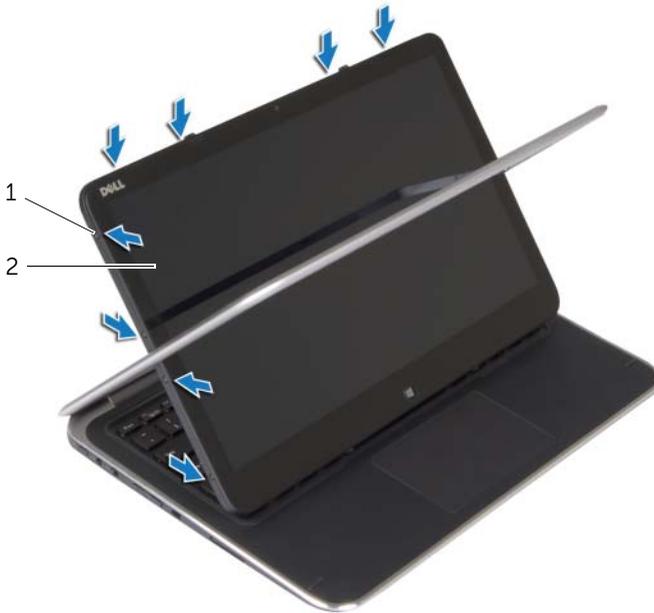

1 screws (8)

2 display panel

- 4 Starting from the corners, gently pry the display back-cover from the display panel.

Replacing the Display Back-Cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Place the display back-cover on the display panel and snap it in place.
- 2 Replace the screws that secure the display back-cover to the display panel.

Postrequisites

- 1 Replace the battery. See "Replacing the Battery" on page 14.
- 2 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Camera Module


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.
- 3 Remove the display back-cover. See "Removing the Display Back-Cover" on page 40.

Procedure

- 1 Remove the screws that secure the camera module to the display panel.
- 2 Turn the camera module over and disconnect the camera cable from the camera module.
- 3 Lift the camera module off the display panel.

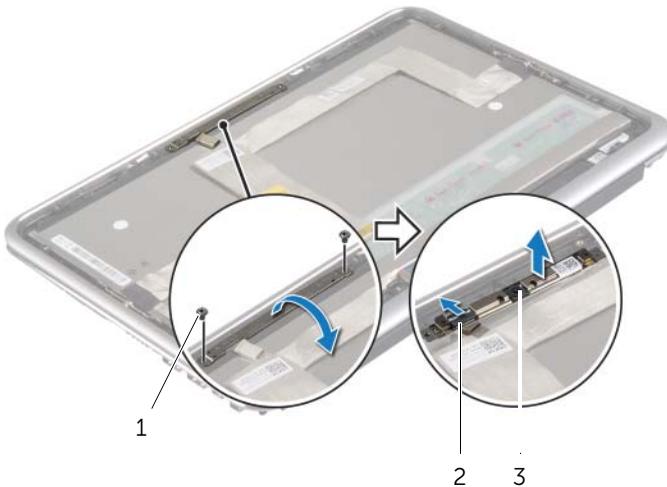

1	screws (2)	2	camera cable
3	camera module		

Replacing the Camera Module



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Connect the camera cable to the camera module.
- 2 Use the alignment posts on the display panel to place the camera module on the display panel.
- 3 Align the screw holes on the camera module with the screw holes on the display panel.
- 4 Replace the screws that secure the camera module to the display panel.

Postrequisites

- 1 Replace the display back-cover. See "Replacing the Display Back-Cover" on page 42.
- 2 Replace the battery. See "Replacing the Battery" on page 14.
- 3 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Windows-Button Board


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.
- 3 Remove the display back-cover. See "Removing the Display Back-Cover" on page 40.

Procedure

- 1 Remove the screws that secure the Windows-button board to the display panel.
- 2 Turn the Windows-button board over and disconnect the Windows-button board cable from the board.
- 3 Lift the Windows-button board off the display panel.

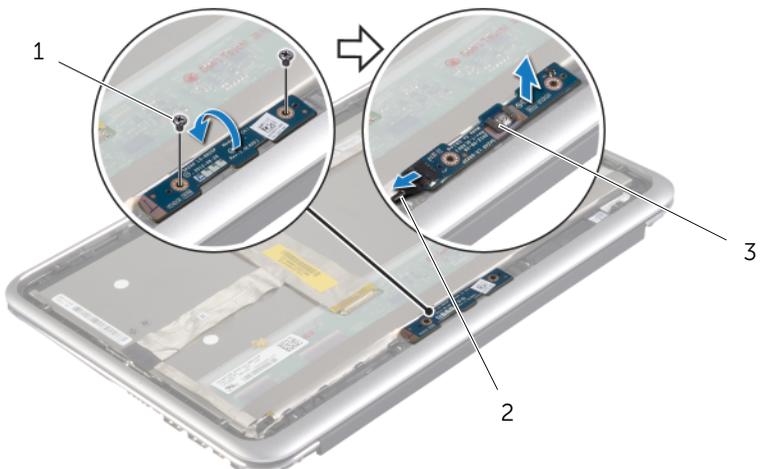

1 screws (2)

2 Windows-button board cable

3 Windows-button board

Replacing the Windows-Button Board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Connect the Windows-button board cable to the Windows-button board.
- 2 Use the alignment posts on the display panel to place the Windows-button board on the display panel.
- 3 Align the screw holes on the Windows-button board with the screw holes on the display panel.
- 4 Replace the screws that secure the Windows-button board to the display panel.

Postrequisites

- 1 Replace the display back-cover. See "Replacing the Display Back-Cover" on page 42.
- 2 Replace the battery. See "Replacing the Battery" on page 14.
- 3 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Display Panel

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.
- 3 Remove the display back-cover. See "Removing the Display Back-Cover" on page 40.
- 4 Remove the camera module. See "Removing the Camera Module" on page 43.
- 5 Remove the Windows-button board. See "Removing the Windows-Button Board" on page 45.

Procedure

- 1 Peel off the tape and disconnect the display cable from the display panel.




1 display panel

2 display bezel

3 display cable

⚠ CAUTION: Do not remove the display cable from the display bezel.

2 Peel off the display cable from the display panel.

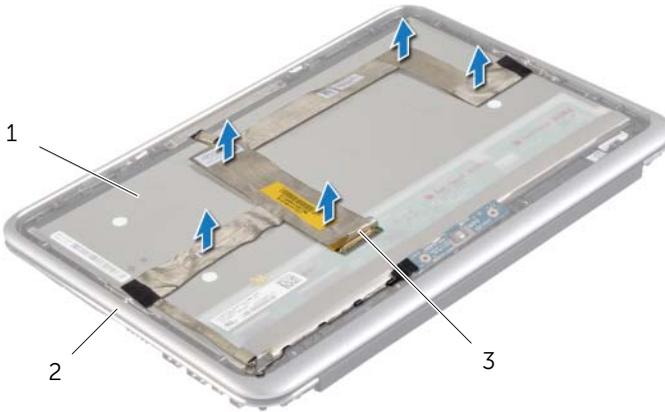


1 display panel

2 display bezel

3 display cable

3 Remove the screws that secure the display panel to the display bezel.

4 Slide and lift the display panel off the display bezel.

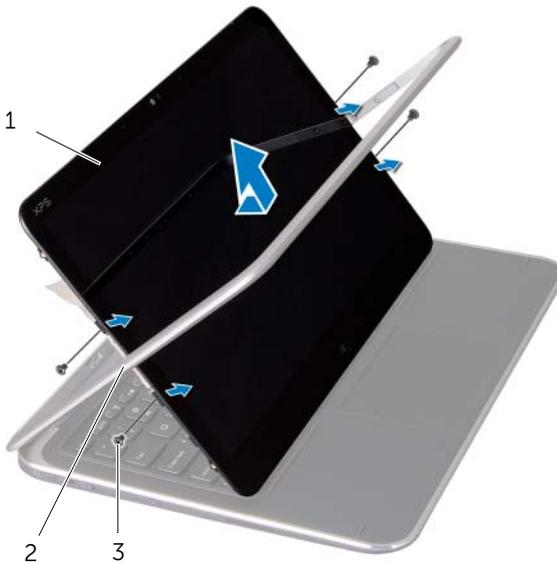

1 display panel

2 display bezel

3 screws (4)

Replacing the Display Panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

- 1 Slide the display panel into the display bezel and align the screw holes on the display panel with the screw holes on the display bezel.
- 2 Replace the screws that secure the display panel to the display bezel.
- 3 Adhere the display cable to the display panel.
- 4 Connect the display cable to the display panel and adhere the tape.

Postrequisites

- 1 Replace the Windows-button board. See "Replacing the Windows-Button Board" on page 46.
- 2 Replace the camera module. See "Replacing the Camera Module" on page 44.
- 3 Replace the display back-cover. See "Replacing the Display Back-Cover" on page 42.
- 4 Replace the battery. See "Replacing the Battery" on page 14.
- 5 Replace the base cover. See "Replacing the Base Cover" on page 12.

Removing the Keyboard



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9.

For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.


Prerequisites

- 1 Remove the base cover. See "Removing the Base Cover" on page 10.
- 2 Remove the battery. See "Removing the Battery" on page 13.
- 3 Remove the I/O board. See "Removing the I/O Board" on page 24.
- 4 Remove the coin-cell battery. See "Removing the Coin-Cell Battery" on page 21.
- 5 Remove the fan. See "Removing the Fan" on page 26.
- 6 Remove the mSATA card. See "Removing the mSATA Card" on page 17.

Procedure


- 1 Disconnect the display cables and the power-adaptor port cable from the system board.
- 2 Peel off the Mylar and conductive tape that cover the antenna cables and disconnect the antenna cables from the wireless card.

- 3** Lift the connector latches, and using the pull tabs, disconnect the keyboard-backlight cable, the NFC cable, and the touchpad cable from the system board.

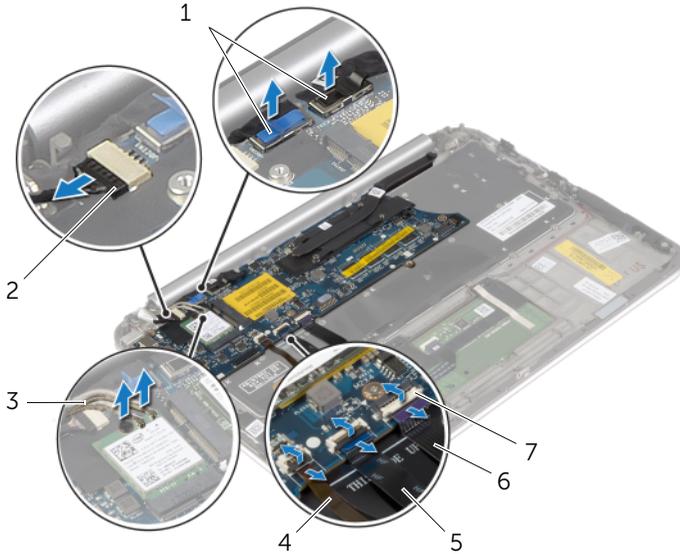


1	display cables (2)	2	power-adaptor port cable
3	antenna cables (2)	4	keyboard-backlight cable
5	NFC cable	6	touchpad cable
7	connector latches (3)		

- 4** Remove the screws that secure the system board to the palm-rest assembly.
5 Carefully lift the system board and turn it over.

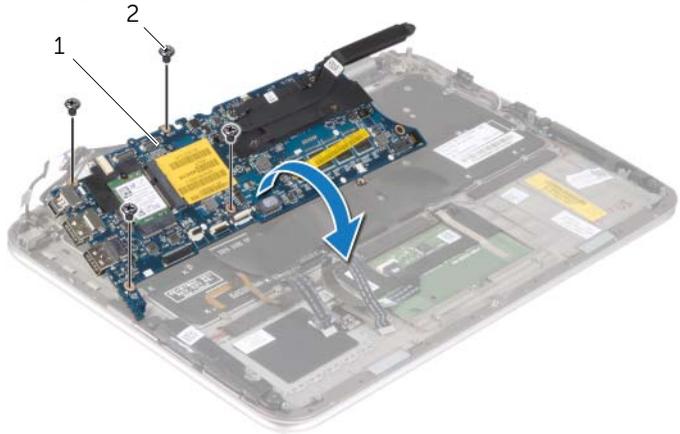

1	system board	2	screws (4)
---	--------------	---	------------

- 6** Lift the connector latch and disconnect the keyboard cable from the system board, and then lift the system board off the palm-rest assembly.

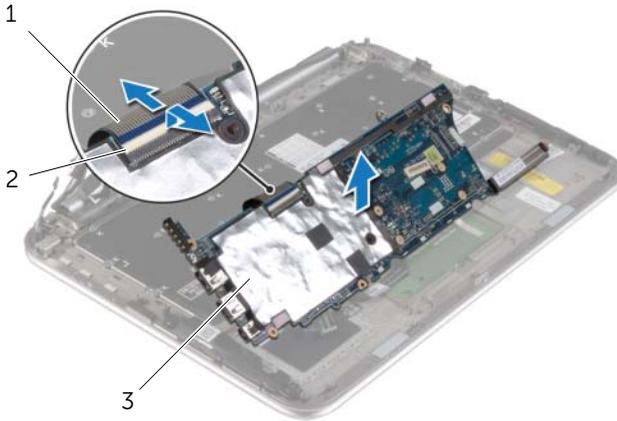


1 keyboard cable

2 connector latch

3 keyboard

- 7** Remove the screws that secure the mSATA bracket to the palm-rest assembly and remove the bracket.

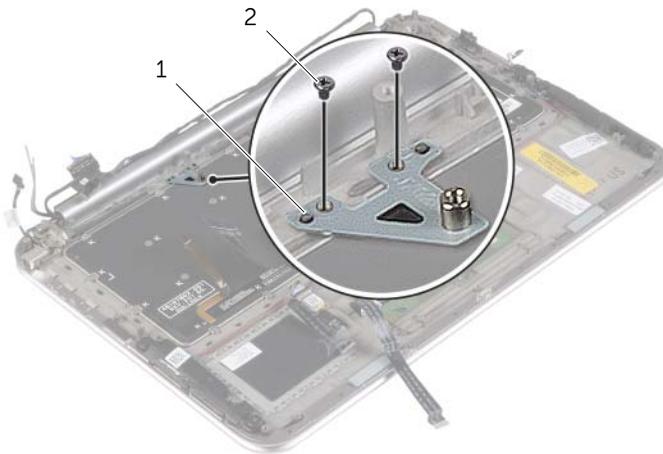


1 mSATA bracket

2 screws (2)

⚠ CAUTION: The keycaps on the keyboard are fragile, easily dislodged, and time-consuming to replace. Be careful when removing and handling the keyboard.

- 8** Remove the screws that secure the keyboard to the palm-rest assembly.
- 9** Lift the keyboard off the palm-rest assembly.

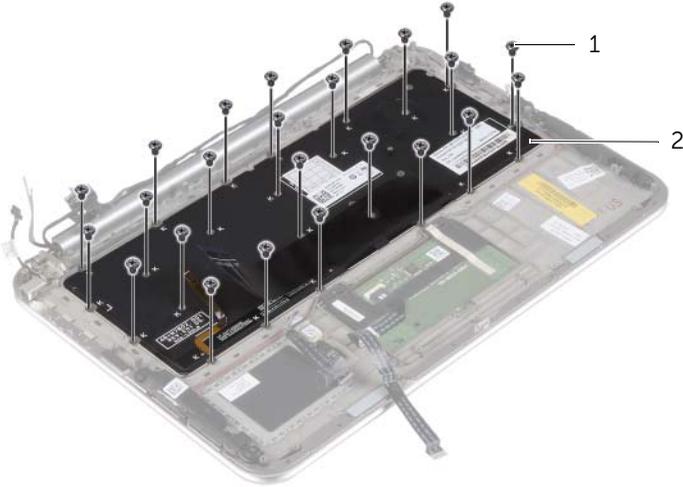

1 screws (24)

2 keyboard

Replacing the Keyboard

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in "Before Working Inside Your Computer" on page 7. After working inside your computer, follow the instructions in "After Working Inside Your Computer" on page 9. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory_compliance.

Procedure

-  **CAUTION:** Make sure that no cables are placed under the keyboard.
- 1 Insert the key caps into the slots on the palm-rest assembly and align the screw holes on the keyboard with the screw holes on the palm-rest assembly.
 - 2 Replace the screws that secure the keyboard to the palm-rest assembly.
 - 3 Align the screw holes on the mSATA bracket with the screw holes on the palm-rest assembly.
 - 4 Replace the screws that secure the mSATA bracket to the palm-rest assembly.
 - 5 Slide the keyboard cable into the keyboard-cable connector and press down on the connector latch to secure the cable.
-  **CAUTION:** Make sure that no cables are placed under the system board.
- 6 Turn the system board over and align the screw holes on the system board with the screw holes on the palm-rest assembly.
 - 7 Replace the screws that secure the system board to the palm-rest assembly.
 - 8 Connect the display cables to the system board.
-  **NOTE:** When connecting the display cables to the system board, match the labels (L and R) on the display cables to the labels on the system board.
- 9 Connect the power-adaptor port cable to the system board.
 - 10 Connect the antenna cables to the wireless card, and adhere the Mylar and conductive tape over the antenna cables.
 - 11 Slide the keyboard-backlight cable, the NFC cable, and the touchpad cable in the respective connectors, and press down on the connector latches to secure the cables.

Postrequisites

- 1 Replace the mSATA card. See "Replacing the mSATA Card" on page 18.
- 2 Replace the fan. See "Replacing the Fan" on page 28.
- 3 Replace the coin-cell battery. See "Replacing the Coin-Cell Battery" on page 23.
- 4 Replace the I/O board. See "Replacing the I/O Board" on page 25.
- 5 Replace the battery. See "Replacing the Battery" on page 14.
- 6 Replace the base cover. See "Replacing the Base Cover" on page 12.

Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board. To flash the BIOS:

- 1 Turn on the computer.
- 2 Go to **dell.com/support**.
- 3 If you have your computer's Service Tag, type your computer's Service Tag and click **Submit**.

If you do not have your computer's Service Tag, click **Detect Service Tag** to allow automatic detection of the Service Tag.



NOTE: If the Service Tag cannot be detected automatically, select your product under the product categories.

- 4 Click **Drivers and Downloads**.
- 5 In the **Operating System** drop-down, select the operating system installed on your computer.
- 6 Click **BIOS**.
- 7 Click **Download File** to download the latest version of the BIOS for your computer.
- 8 On the next page, select **Single-file download** and click **Continue**.
- 9 Save the file and once the download is complete, navigate to the folder where you saved the BIOS update file.
- 10 Double-click the BIOS update file icon and follow the instructions on the screen.