Dell P2418HZm

User's Guide



Monitor Model: P2418HZm Regulatory Model: P2418HZc NOTE: A NOTE indicates important information that helps you make better use of your computer.

 \bigtriangleup CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.

MARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2018–2020 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2020-11

Rev. A03

Contents

About your monitor5
Package contents5
Product features7
Identifying parts and controls8
Monitor specifications12
Universal serial bus (USB) interface22
Plug and play capability25
LCD monitor quality and pixel policy25
Maintenance guidelines25
Setting up the monitor26
Attaching the stand
Connecting your monitor28
Organizing cables
Disconnecting the monitor stand
Wall mounting (optional)
Operating your monitor33
Power on the monitor

	Using the front panel controls	33
	Using the on-screen display (OSD) menu	37
	Setting up your monitor	50
	Using the Tilt, Swivel, and Vertical Extension	51
	Operating the webcam cover shutter	53
	Installing the monitor IR Camera driver	54
	Setting up Windows Hello	55
	Setting up the monitor webcam as default setting	58
	Setting up the monitor speaker as default setting	62
Tro	oubleshooting	66
	J	
	Self-test	
	-	66
	Self-test	66 68
	Self-test Built-in diagnostics	66 68 69
	Self-test Built-in diagnostics Common problems	66 68 69 71
	Self-test Built-in diagnostics Common problems Product-specific problems	66 68 69 71 72
Ар	Self-test Built-in diagnostics Common problems Product-specific problems Universal serial bus (USB) specific problems	66 68 69 71 72 72
Ар	Self-test Built-in diagnostics Common problems Product-specific problems Universal serial bus (USB) specific problems Microsoft® Skype for Business® Specific Problems	66 68 71 72 72 74

4 | Contents

(døli


About your monitor

Package contents

Your monitor ships with the components shown below. Ensure that you have received all the components and Contacting Dell if something is missing.



NOTE: Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.

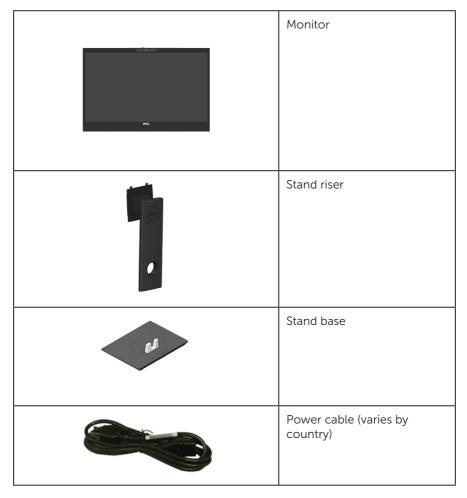

VGA cable
DP Cable
USB 3.0 Upstream Cable (Enables the USB Ports on the Monitor)
 Quick Setup Guide Safety and Regulatory Information

Product features

The **Dell P2418HZm** flat panel display has an active matrix, Thin-Film Transistor (TFT), Liquid Crystal Display (LCD), and LED backlight. The monitor features include:

- **P2418HZm**:60.47 cm (23.8 inch) viewable area display (measured diagonally). 1920 x 1080 resolution, plus full-screen support for lower resolutions.
- Plug and play capability if supported by your system.
- Features built-in 2MP Full HD image sensor and dual IR LEDs with infrared camera at the top bezel for top notch video quality.
- Comes with 2 x 5W integrated front-firing speakers and dual mic array with noise cancellation to provide a rich audio experience.
- VGA, HDMI and DisplayPort connectivity.
- Equipped with 1 USB upstream port and 2x USB2.0/ 2x USB3.0 downstream ports (including 1x USB3.0 BC1.2 charging port).
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Security-cable slot.
- Tilt, swivel, height and rotate adjustment capabilities.
- Removable stand and Video Electronics Standards Association (VESA™) 100 mm mounting holes for flexible mounting solutions.
- ≤ 0.3 W in the Standby Mode.
- Optimize eye comfort with a flicker-free screen and ComfortView feature which minimizes blue light emission.
- Certified for Skype for Business.
- Certified for Windows Hello (Face Authentication) and supports Microsoft Cortana.


WARNING: If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.


WARNING: Please confirm the distribution system in building installation shall provide the circuit breaker rated 120/240V, 20A (maximum).

DEL

Identifying parts and controls

Front View

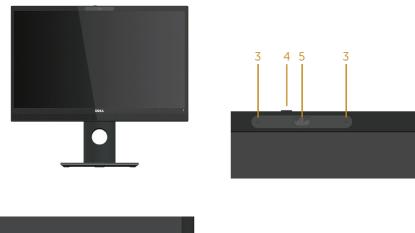



Front panel controls

Label	Description			
1	Function buttons (For more information, see Operating your monitor)			
2	Power On/Off button(with power-status light)			
3	Microphone			
4	Webcam cover shutter			
5	Webcam (Full HD)			

NOTE: For displays with glossy bezels the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.



Back View





Back View without monitor stand

Back View with monitor stand

Label	Description	Use	
1	VESA mounting holes (100 mm x 100 mm - behind attached VESA Cover)	Wall mount monitor using VESA- compatible wall mount kit (100 mm x 100 mm).	
2	Regulatory label	Lists the regulatory approvals.	
3	Stand release button	Release stand from monitor.	
4	Security lock slot	Secures monitor with security lock(sold separately).	
5	Barcode, serial number, and Service Tag label	Refer to this label if you need to contact Dell for technical support.	
6	Cable management slot	Use to organize cables by placing them through the slot.	


Side View



Label	Description	Use
1	USB downstream port 2x USB 3.0 downstream port (including 1x USB3.0 BC1.2 charging port)	Connect your USB device. NOTE : To use this port, you must connect the USB cable (shipped with your monitor) to the USB-upstream port on the monitor and to your computer.
2	Headphone-out / Microphone-in combo jack	Connect the headset.

(DELL

Bottom View



Bottom view without monitor stand

Label	Description	Use		
1	Power port	Connect the power cable.		
2	HDMI port	Connect your computer with HDMI cable(optional).		
3	DP port	Connect your computer to the monitor using a DP cable.		
4	VGA port	Connect your computer with VGA cable.		
5	USB connector (x2 downstream, x1 upstream)	Connect the USB cable that came with your monitor to the computer. Once the cable is connected, you can use the USB connectors on the rear side and bottom side of the monitor.		
6	Stand lock feature	To lock the stand to the monitor using a M3 x 6mm screw (screw not included).		

Monitor specifications

Model	P2418HZm		
Screen type	Active matrix - TFT LCD		
Panel type	e In-Plane Switching Technology		
Viewable image			
Diagonal	604.70 mm (23.80 in)		
Horizontal, Active Area	527.04 mm (20.75 in)		
Vertical, Active Area	296.46 mm (11.67 in)		
Area	1562.46 cm ² (242.15 in ²)		
Pixel pitch	0.2745 mm x 0.2745 mm		
Pixel per inch (PPI)	93		
Viewing angle (vertical /	178° (vertical) typical		
horizontal)	178° (horizontal) typical		
Brightness	250 cd/m ² (typical)		
Contrast ratio	1000: 1 (typical)		
	8 Million: 1 (Dynamic)		
Aspect ratio	16:9		
Display screen coating	Anti-glare with 3H hardness		
Backlight	White LED edgelight system		
Response time	6 ms (gray to gray)		
Color depth	16.7 million colors		
Color support	83% (CIE 1976), 72% (CIE 1931)		
Built-in devices	USB 3.0 super-speed hub (with 1x USB 3.0 upstream port, 2x USB 3.0 downstream ports and 2x USB2.0 downstream ports, including 1x USB 3.0 BC1.2 chargir port)		
Dell Display Manager compatibility	Yes		

P			
Connectivity	1xDP 1.2 (HDCP 1.4)		
	1xHDMI 1.4 (HDCP 1.4)		
	1xVGA		
	1xUSB3.0 port - Upstream		
	2xUSB3.0 port - Side		
	2xUSB2.0 port - Bottom		
	1xHeadphone-out / Microphone-in combo jack		
Border width (edge of	19.8mm (Top)		
monitor to active area)	11.4mm(Left/Right)		
	43.3mm(Bottom)		
Security	Security lock slot (cable lock sold separately)		
Adjustability	Height adjustable stand (125mm)		
	Tilt (-5°/+21°)		
	Swivel (-45°/+45°)		
	Pivot (90°)		

(D&LL

Resolution specifications

Model	P2418HZm
Horizontal scan range	30 kHz to 83 kHz (automatic)
Vertical scan range	56 Hz to 76 Hz (automatic)
Maximum preset resolution	1920 x 1080 at 60 Hz

Supported video modes

Model	P2418HZm
Video display capabilities (HDMI & DP playback)	480i, 480p, 576i, 576p, 720p, 1080i, 1080p

Preset display modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal / Vertical)
VESA, 720 x 400	31.5	70.1	28.3	-/+
VESA, 640 x 480	31.5	60.0	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.3	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108.0	+/+
VESA, 1280 x 1024	64.0	60.0	108.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1600 x 900	60.0	60.0	108.0	+/+
VESA, 1920 x 1080	67.5	60.0	148.5	+/+

Electrical specifications

Model	P2418HZm
Video input signals	 Analog RGB, 0.7 Volts +/-5%, positive polarity at 75 ohm input impedance
	 HDMI 1.4, 600mV for each differential line,100 ohm input impedance per differential pair
	 DisplayPort 1.2, 600mV for each differential line, 100 ohm input impedance per differential pair
AC input voltage/frequency/ current	100 VAC to 240 VAC / 50 Hz or 60 Hz \pm 3 Hz /
	1.5A (typical)
Inrush current	• 120 V: 30 A (Max.) at 0°C (cold start)
	• 240 V: 60 A (Max.) at 0°C (cold start)
Power	0.2 W (Off Mode) ¹
Consumption	0.2 W (Standby Mode) ¹
	14.6 W (On Mode) ¹
	60.80 W (Max) ²
	13.83 W (Pon) ³
	43.31 kWh (TEC) ³

As defined in EU 2019/2021 and EU 2019/2013.

²Max brightness and contrast setting with maximum power loading on all USB ports.

³ Pon: Power consumption of On Mode as defined in Energy Star 8.0 version.

TEC: Total energy consumption in kWh as defined in Energy Star 8.0 version.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components and peripherals you ordered and shall have no obligation to update such information. Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.

NOTE: This monitor is ENERGY STAR certified.



This product qualifies for ENERGY STAR in the factory default settings which can be restored by "Factory Reset" function in the OSD menu. Changing the factory default settings or enabling other features may increase power consumption that could exceed the ENERGY STAR specified limit.

Webcam – microphone specifications

Lens	Field of view	77.5° for 1920 x 1080
	Focus mode	Fixed Focus
	Focus area	28 cm~2.47 m
	Focusing distance	50 cm
	(normal mode)	
Image Sensor	Active array size	2.12 mega-pixel
Video	Video frame rate	1920 x 1080 (Full HD)- up to 30 frames
Specification		per second
		640 x 480 (VGA) and below - up to 30
		frames per second
Audio	Microphone type	Omni-directional digital microphone x 2
Specification		
Interface	USB 2.0 High Speed	
Power Supply	3.3 volts +/- 5%	

Speaker specifications

Model	P2418HZm
Speaker	2 x 5.0 W
Frequency	200 Hz - 20 kHz
Response	
Operating	-25 °C ~ 70 °C
Temperature	

(Dell

Physical characteristics

Model	P2418HZm
Signal cable type	• Digital: detachable, HDMI, 19 pins.
	 Digital: detachable, DP, 20 pins.
	 Analog: detachable, D-Sub, 15 pins
	 Universal Serial Bus: USB, 9 pins
Dimensions (with stand)	
Height (extended)	500.6 mm (19.71 in)
Height (compressed)	375.6 mm (14.79 in)
Width	549.8 mm (21.65 in)
Depth	180.0 mm (7.09 in)
Dimensions (without stand)	
Height	359.6 mm (14.16 in)
Width	549.8 mm (21.65 in)
Depth	51.1 mm (2.01 in)
Stand dimensions	
Height (extended)	401.5 mm (15.87 in)
Height (compressed)	354.4 mm (13.95 in)
Width	242.6 mm (9.55 in)
Depth	180.0 mm (7.09 in)
Weight	
Weight with packaging	8.25 kg (18.18 lb)
Weight with stand assembly and cables	6.12 kg (13.49 lb)
Weight without stand assembly (no cables)	3.60 kg (7.93 lb)
Weight of stand assembly	1.96 kg (4.32 lb)
Front-frame gloss	2 - 4


Environmental characteristics

Model	P2418HZm
Compliant Standards	
Energy Saver feature for Energy S	Star certified Monitor
EPEAT registered where applicab	le. EPEAT registration varies by country.
See www.epeat.net for registration	on status by country
TCO-certified display	
BFR/PVC- Free monitor (excludir	ng external cables)
Energy Gauge shows the energy	level being consumed by the monitor in real time
Temperature	
Operating	0°C to 40°C (32°F to 104°F)
Non-operating	 Storage: -20°C to 60°C (-4°F to 140°F)
	 Shipping: -20°C to 60°C (-4°F to 140°F)
Humidity	
Operating	20% to 80% (non-condensing)
Non-operating	 Storage: 10% to 90% (non-condensing)
	 Shipping: 10% to 90% (non-condensing)
Altitude	
Operating (maximum)	5,000 m (16,400 ft)
Non-operating (maximum)	12,192 m (40,000 ft)
Thormal dissination	• 218.52 BTU/hour(maximum)
Thermal dissipation	• 64.87 BTU/hour(typical)

(D&LL)


Pin assignments

VGA connector

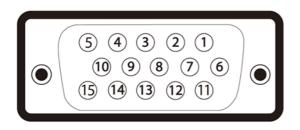


Pin Number	15-pin Side of the Connected Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G
8	GND-B
9	Computer 5V/3.3V
10	GND-sync
11 12	GND
12	DDC data
13	H-sync
14	V-sync
15	DDC clock

DELL)



Pin Number	19-pin Side of the Connected Signal Cable
1	T.M.D.S. Data 2+
2	T.M.D.S. Data 2 Shield
3	T.M.D.S. Data 2-
4	T.M.D.S. Data 1+
5	T.M.D.S. Data 1 Shield
6	T.M.D.S. Data 1 -
7	T.M.D.S. Data 0+
8	T.M.D.S. Data 0 Shield
9	T.M.D.S. Data 0-
10	T.M.D.S. Clock +
11	T.M.D.S. Clock Shield
12	T.M.D.S. Clock -
13	CEC
14	Reserved (N.C. on device)
15	SCL
16	SDA
17	DDC/CEC Ground
18	+5V Power
19	Hot Plug Detect

DisplayPort connector

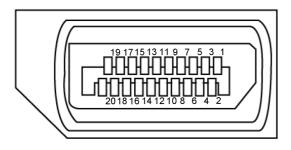

Pin Number	20-pin Side of the Connected Signal Cable
1	ML3 (n)
2	GND
3	ML3 (p)
4	ML2 (n)
5	GND
6	ML2 (p)
7	ML1 (n)
8	GND
9	ML1 (p)
10	ML0 (n)
11	GND
12	MLO (p)
13	GND
14	GND
15	AUX (p)
16	GND
17	AUX (n)
18	Hot Plug Detect
19	Re-PWR
20	+3.3 V DP_PWR

About your monitor | 21

Universal serial bus (USB) interface

This section gives you information about the USB ports that are available on the monitor.



NOTE: This monitor is Super-Speed USB 3.0 and High-Speed USB 2.0 compatible.

Transfer Speed	Data Rate	Power Consumption*
Super-speed	5 Gbps	4.5 W (Max, each port)
High speed	480 Mbps	4.5 W (Max, each port)
Full speed	12 Mbps	4.5 W (Max, each port)


Transfer Speed	Data Rate	Power Consumption
High speed	480 Mbps	2.5 W (Max, each port)
Full speed	12 Mbps	2.5 W (Max, each port)
Low speed	1.5 Mbps	2.5 W (Max, each port)

*Up to 2A on USB downstream port (port with SS) lightning icon) with BC1.2 compliance devices or normal USB devices.

USB 3.0 upstream connector



Pin Number	9-pin Side of the Connector
1	VCC
2	D-
3	D+
4	GND
5	SSTX-
6	SSTX+



DELI


7	GND
8	SSRX-
9	SSRX+

USB 3.0 downstream connector



Pin Number	9-pin Side of the Connector	
1	VCC	
2	D-	
3	D+	
4	GND	
5	SSRX-	
6	SSRX+	
7	GND	
8	SSTX-	
9	SSTX+	

USB 2.0 Downstream Connector



Pin Number	4-pin Side of the Connector	
1	VCC	
2	DMD	
3	DPD	
4	GND	

About your monitor | 23

USB Ports

- 1 x USB 3.0 upstream bottom
- 2 x USB 2.0 downstream bottom
- 2 x USB 3.0 downstream side
- Power Charging Port- the port with SS ← ☐ lightning icon; supports fast current charging capability if the device is BC1.2 compatible.



NOTE: USB 3.0 functionality requires a USB 3.0-capable computer.

NOTE: The monitor's USB interface works only when the monitor is On or in the Standby Mode. If you turn Off the monitor and then turn it On, the attached peripherals may take a few seconds to resume normal functionality.



NOTE: USB2.0 and above is needed to support webcam video & audio functions.

DEL

Plug and play capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the system can configure itself and optimize the monitor settings. Most monitor installations are automatic, you can select different settings if desired. For more information about changing the monitor settings, see Operating your monitor.

LCD monitor quality and pixel policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state which are hard to see and do not affect the display quality or usability. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: www.dell.com/support/monitors.

Maintenance guidelines

Cleaning your monitor

WARNING: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

∧ CAUTION: Read and follow the Safety instructions before cleaning the monitor.

For best practices, follow the instructions in the list below while unpacking, cleaning or handling your monitor:

- To clean your anti-static screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the antistatic coating. Do not use benzene, thinner, ammonia, abrasive cleaners or compressed air.
- Use a lightly-dampened, warm cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
- If you notice white powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as a darker-colored monitor may get scratched and show white scuff marks more than a lighter-colored monitor.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.

25 About your monitor

DEL

Setting up the monitor

Attaching the stand




NOTE: The stand is detached when the monitor is shipped from the factory.




NOTE: This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for the set up instructions.

To attach the monitor stand.

- **1.** Follow the instructions on the flaps of carton to remove the stand from the top cushion that secures it.
- 2. Insert the stand base blocks fully into the stand slot.
- 3. Lift the screw handle and turn the screw clockwise.
- 4. After fully tightening the screw, fold the screw handle flat within the recess.

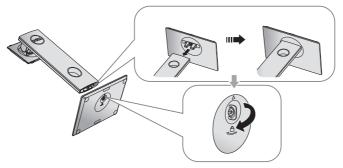


5. Lift the cover, as shown, to expose the VESA area for stand assembly.

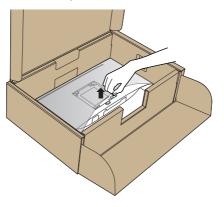



- 6. Attach the stand assembly to the monitor.
 - **a.** Fit the two tabs on the upper part of the stand to the groove on the back of the monitor.
 - **b.** Press the stand down till it snaps into place.

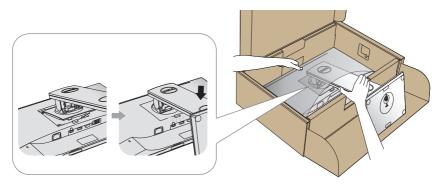

7. Place the monitor upright.

NOTE: Lift the monitor carefully to prevent it from slipping or falling.

DEL

Connecting your monitor



MARNING: Before you perform any of the procedures in this section, follow the Safety instructions.

NOTE: Do not connect all cables to the computer at the same time. It is recommend to route the cables through the cable-management slot before you connect them to the monitor.

To connect your monitor to the computer:

- 1. Turn off your computer and disconnect the power cable.
- 2. Connect the VGA, HDMI or DP cable from your monitor to the computer.


Connecting the VGA cable



Connecting the HDMI cable (optional)



Connecting the DP cable

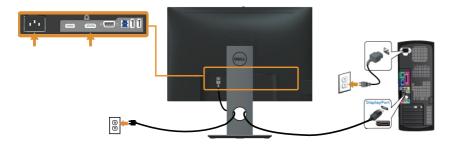

Connecting the USB 3.0 cable

After you have completed connecting the DP/HDMI cable, follow the procedures below to connect the USB 3.0 cable to the computer and complete your monitor setup:

- **1.** Connect the upstream USB 3.0 port (cable supplied) to an appropriate USB 3.0 port on your computer. (See Bottom View for details.)
- 2. Connect the USB 3.0 peripherals to the downstream USB 3.0 ports on the monitor.
- 3. Plug the power cables for your computer and monitor into a nearby outlet.
- **4.** Turn on the monitor and the computer. If your monitor displays an image, installation is complete. If it does not display an image, see Universal serial bus (USB) specific problems.
- 5. Use the cable slot on the monitor stand to organize the cables.



DEL

Organizing cables

Use the cable-management slot to organize the cables connected to your monitor.





Disconnecting the monitor stand




NOTE: To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a soft and clean surface.



NOTE: This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for the set-up instructions.


To remove the stand:

- **1.** Place the monitor on a soft cloth or cushion.
- 2. Press and hold the stand release button.
- **3.** Lift the stand up and away from the monitor.

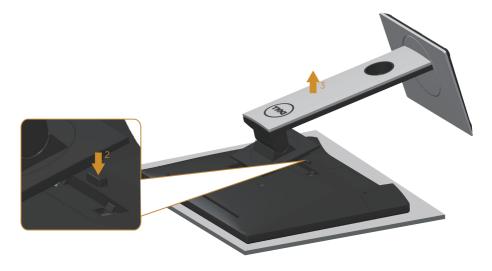

Déi

Wall mounting (optional)

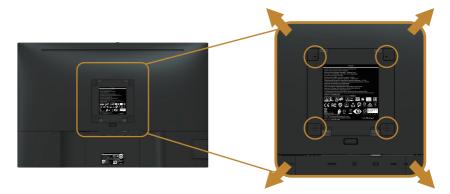

(Screw dimension: M4 x 10 mm).

Refer to the instructions that come with the VESA-compatible wall mounting kit.

- 1. Place the monitor panel on a soft cloth or cushion on a stable, flat table.
- 2. Remove the stand.
- **3.** Use a screwdriver to remove the four screws securing the plastic cover.
- 4. Attach the mounting bracket from the wall mounting kit to the monitor.
- **5.** Mount the monitor on the wall by following the instructions that comes with the wall mounting kit.

NOTE: For use only with UL or CSA or GS-listed wall mount bracket with minimum weight/load bearing capacity of 14.4 kg



DELI

Operating your monitor


Power on the monitor

Press the **b**utton to turn on the monitor.



Using the front panel controls

Use the control buttons on the front of the monitor to link up Microsoft® Skype for Business® Software or adjust the characteristics of the image being displayed. As you use these buttons, an On-Screen Display (OSD) or LED indicator shows the numeric values or activities of the characteristics as they change.



The following table describes the front panel buttons:

	Front Panel Button / OSD Button	Description
1	C	Use the Hook button to accept an incoming invite notification.
	Hook	
2	d×	Use the Mute button to mute audio.
	MUTE	

3	لی Volume Down	Up	 Use Volume Down button to decrease OSD bar volume. Use the Up button to adjust (increase ranges) items in the OSD menu
4	Volume Up	Down	 Use Volume Up button to increase OSD bar volume. Use the Down button to adjust (decrease ranges) items in the OSD menu.
5	₩× Microphone Mute	ОК	 Use the Microphone Mute button to mute microphone. Use the OK button to confirm your selection.
6	MENU	B ack	 Use the MENU button to launch the OSD. Use the Back button to go back to the previous menu. See Accessing the Menu System.
7	Power On/Off button (with power-status light)		To turn the monitor on or off. Solid white light indicates the monitor is turned on and functioning normally.Blinking white light indicates the monitor is in Standby Mode.

Accessing Microsoft® Skype for Business® with the Panel **Buttons**



NOTE: To enable Microsoft® Skype for Business® functions with your monitor, make sure that the USB upstream cable is connected between your computer and the monitor. If not, the following message will be displayed:





NOTE: The front panel buttons, excluding **Volume Up** and **Volume Down**, function only when Microsoft® Skype for Business® is active on your computer.

1. Hook

The **Hook** button light flashes when someone calls you on Skype for Business. Press the Hook button to answer the incoming voice or video call.



To end an active voice or video call, press the **Hook** button.



2. Mute

To mute the audio, press the **Mute** button. The mute-button light turns on when audio is muted.



3. Volume Down/Volume Up

To adjust the volume, press the **Volume Down** or **Volume Up** buttons. The activated OSD shows the numeric values of the volume level.



4. Microphone Mute

To mute the microphone, press the **Microphone Mute** button. The microphonemute-button light turns on when the microphone is muted.



DELI

Using the on-screen display (OSD) menu

Accessing the Menu System

- **NOTE:** Any changes you make are automatically saved when you move to another menu, exit the OSD menu, or wait for the OSD menu to automatically close.
 - 1. Press the 🛅 button to display the OSD main menu.

Main menu for analog (VGA) input



- 2. Press the \triangle and \heartsuit buttons to move between the setting options. As you move from one icon to another, the option is highlighted.
- **3.** Press the \rightarrow button once to activate the highlighted option.
- 4. Press \land and \checkmark button to select the desired parameter.
- 5. Press \ominus and then use the \land and \lor buttons, according to the indicators on the menu, to make your changes.
- 6. Select the **b** button to return to the main menu.

lcon	Menu and Submenus	Description	
- ` -	Brightness/ Contrast	Use this menu to activate brightness/contrast adjustment.	
	Brightness	Brightness adjusts the luminance of the backlight. Press the → button to increase the brightness and press the → button to decrease the brightness (min. 0 / max. 100). NOTE: Manual adjustment of brightness is disabled when dynamic contrast is switched on.	
	Contrast	 Adjust the brightness first, and then adjust the contrast only if further adjustment is necessary. Press the → button to increase the contrast and press the → button to decrease the contrast (min. 0 / max. 100). The contrast function adjusts the degree of difference between darkness and lightness on the monitor screen. 	




t	Auto Adjust	Use this key to activate automatic setup and adjust menu.
		monitor self-adjusts to the current input: Auto Adjustment in Progress
		Auto adjustment allows the monitor to self-adjust to the incoming video signal. After using auto adjustment, you can further tune your monitor by using the pixel clock (coarse) and phase (fine) controls under display settings.
		NOTE : Auto adjust does not occur if you press the button while there are no active video input signals or attached cables.
		This option is only available when you are using the analog (VGA) connector.

	Input Source	Use the input source menu to select between the different video signals that may be connected to your monitor.
	VGA	Select VGA input when you are using the analog (VGA) connector. Push 🔿 to select the VGA input source.
	DP	Select DP input when you are using the DP connector. Push 🔿 to select the DP input source.
	HDMI	Select HDMI input when you are using the HDMI connector. Push Đ to select the HDMI input source.
	Auto Select	Select auto select to scan for available input signals.
	Reset Input Source	Select this option to restore default Input Source.
Ø1	Color	Use color to adjust the color setting mode.

Preset Modes	When you select preset modes, you can choose standard, comfortview, multimedia, movie, game, warm, cool, or custom color from the list.
	• Standard: Loads the monitor's default color settings. This is the default preset mode.
	• ComfortView: Decreases the level of blue light emitted from the screen to make viewing more comfortable for your eyes.
	• Multimedia: Loads color settings ideal for multimedia applications.
	• Movie: Loads color settings ideal for movies.
	 Game: Loads color settings ideal for most gaming applications.
	• Warm: Increases the color temperature. The screen appears warmer with a red/yellow tint.
	• Cool: Decreases the color temperature. The screen appears cooler with a blue tint.
	• Custom Color: Allows you to manually adjust the color settings.
	Press the \Lambda and 💟 buttons to adjust the three colors
	(R, G, B) values and create your own preset color mode.
	Oct (\$ 2415)Clm Courter Image: Source and the Agent Prease Modes Image: Source and the Agent Control Work Image: Source and the Agent Mode and

Input Color Format	Allows you to set the video input mode to: • RGB: Select this option if your monitor is connected to a computer or DVD player using the HDMI cable. • YPbPr: Select this option if your DVD player supports only YPbPr output. • • • • • • • • • • • • • • • • • • •
Hue	This feature can shift the color of the video image to green or purple. This is used to adjust the desired flesh tone color. Use or to adjust the hue from 0 to 100. Press to increase the green shade of the video image. Press to increase the purple shade of the video image. NOTE: Hue adjustment is available only when you select Movie or Game preset mode.
Saturation	 This feature can adjust the color saturation of the video image. Use or to adjust the saturation from 0 to 100. Press to increase the monochrome appearance of the video image. Press to increase the colorful appearance of the video image. NOTE: Saturation adjustment is available only when you select movie or game preset mode.
Reset Color	Allows your monitor color settings to the factory settings.



(D&LI

	Display	Use the display to adjust image.
Ŧ		Drill #2418/50m Encorpy Unit Implements / Constrant Appect Ratio Wide 16-9
		Auto Adjust Horizontal Position 50 Imput Source Vertical Position 50
		Gl Color Sharpness 50
		Energy Phase 12 Energy Memu Dynamic Contrast
		Differs Response Time Normal Reset Display
	Aspect Ratio	Adjusts the image ratio to wide 16:9, 4:3 or 5:4
	Horizontal Position	Use 🐼 or 文 the buttons to adjust image left and right. Minimum is 0 (-). Maximum is 100 (+).
	Vertical Position	Use the 🐼 or V buttons to adjust image up and down. Minimum is 0 (-). Maximum is 100 (+).
		NOTE : Horizontal position and vertical position adjustments are only available for "VGA" input.
	Sharpness	This feature can make the image look sharper or softer.
		Use \Lambda or V to adjust the sharpness from 0 to 100.
	Pixel Clock	The phase and pixel clock adjustments allow you to adjust
		your monitor to your preference. Use \odot or \heartsuit buttons to adjust for best image quality. Minimum is 0 (-). Maximum is 100 (+).
	Phase	If satisfactory results are not obtained using the phase
		adjustment, use the pixel clock (coarse) adjustment and then use phase (fine), again. Minimum is 0 (-). Maximum is 100 (+).
		NOTE : Pixel clock and phase adjustments are only available for "VGA" input.
	Dynamic Contrast	Allows you to increase the level of contrast to provide sharper and more detailed image quality.
		Press the \bigcirc button to select the dynamic contrast on or off.
		NOTE: Dynamic contrast provides higher contrast if you select game or movie preset mode.
	Response Time	User can select between fast or normal.
	Reset Display	Select this option to restore default display settings.

Energy	Dell®	P2418HZm	Energ	ry Use	l I
Energy	×.	Brightness / Contrast	Power Button LED	On in On Mode	
	0	Auto Adjust	USB	Off in Standby Mode 🕏	
	1	Input Source	Reset Energy		
	61	Color Display			
	<u> </u>	Energy			
		Menu			
	11	Others			
	0	Resolution: 1920x1080, 60Hz		-	
				$\wedge \lor \rightarrow \times$	
Power Button	Allows you to	o set the po	wer LED	indicator On i	n On
LED	Mode or Off				
LED	Mode of Off	In On Mou	e to save	energy.	
USB	Allows you to	o enable or	disable l	JSB function d	urina
002	2				anng
	monitor stan	laby mode.			
			der stand	by mode is on	ly ava
				-	-
	when USB up	pstream cal	ole unplu	gged. This opt	ion w
	grey out whe	en USB upst	tream cal	ole plug in.	
	5 5 6			1 3	
Reset Energy				ult Energy set	

	Menu	Select this option to adjust the settings of the OSD, such as, the languages of the OSD, the amount of time the menu remains on screen and so on.
	Language	Language options set the OSD display to one of the eight languages (English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese).
	Rotation	Rotates the OSD by 90 degrees counter-clockwise. You can adjust the menu according to your display rotation.
	Transparency	Select this option to change the menu transparency by pressing the \bigwedge and \bigvee buttons from 0 to 100.
	Timer	OSD hold time: sets the length of time the OSD will remain active after the last time you pressed a button. Use or or to adjust the slider in 1 second increments, from 5 to 60 seconds.
	Lock	Controls user access to adjustments. When lock is selected, no user adjustments are allowed. All buttons are locked. NOTE: When the OSD is locked, pressing the menu key takes you directly to the OSD settings menu, with 'OSD Lock' pre-selected on entry. Press and hold they for 6 seconds to unlock and allow user access to all applicable settings.
	Reset Menu	Reset all OSD settings to the factory preset values.
1114	Others	OLI (24/03/25m) Exciting Use Mightness / Contrast. DOCCI. Daule Daule Daule Input Source. Promusion. MOCIDI (25/03/00). Color: Rest: Officers. Operation (25/03/00). Color: Rest: Officers. Operation (25/03/00). Color: Proving (25/03/00). Color: Color: Rest: Officers Color:s Resolution:: 3020/0000. Color:

(D&LL

DDC/CI	DDC/Cl (display data channel/command interface) allows your monitor parameters (brightness, color balance and etc.) to be adjustable via the software on your computer. You can disable this feature by selecting disable. Enable this feature for best user experience and optimum performance of your monitor.
LCD Conditioning	Helps reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to run. To start LCD conditioning, select Enable.
Firmware	Show your monitor current firmware revision.
Reset Other	Reset all settings under the Others setting menu to the factory preset values.
Factory Reset	Restore all preset values to the factory default settings. These are also the settings for ENERGY STAR® tests.

NOTE: Your monitor has a built-in feature to automatically calibrate the brightness to compensate for LED aging.



OSD warning messages

When you adjust the **Brightness** level for the first time, the following message appears:



NOTE: If you select Yes, the message will not appear next time when you intend to change the Brightness setting.

When **USB** is set to **On in Standby Mode** for the first time, the following message appears:

Dell P2418HZm
Changing to this setting(without $ otin Q$ symbol)will increase power consumption. Do you want to continue?
No
Yes


NOTE: If you select Yes, the message will not appear next time when you intend to change the USB setting.

When the **Dynamic Contrast** feature is enabled (in these preset modes: **Game** or **Movie**), the manual brightness adjustment is disabled.



When the monitor does not support a particular resolution mode, the following message is displayed:



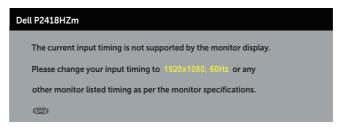

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See Monitor specifications for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is 1920 x 1080.

Before the **DDC/CI** function is disabled, the following message is displayed:

	Dell P2418HZm
l	The function of adjusting display setting using PC application will
	be disabled.
	Do you wish to disable DDC/CI function?
	No
	NO
	Yes

When the monitor enters the **Standby Mode**, the following message appears:

Dell P2418HZm	
Going into Standby Mode	
() ()	

If you press any button other than the power button, the following messages will appear depending on the selected input:

Dell P24	418HZm
	No VGA signal from your device.
Pr	ess any key on the keyboard or move the mouse to wake it up.
If	there is no display, press the monitor button again to select
th	e correct input source.

If VGA, HDMI, or DP cable is not connected, a floating dialog box as shown below appears. The monitor will enter Standby Mode after 4 minutes if left at this state.





OI	

No HDMI Cable
The display will go into Standby Mode in 4 minutes.
www.dell.com/support/monitors

or

Dell P2418HZm	
🚥 🛈 No DP Cable	
The display will go into Standby Mode in 4 minutes.	
www.dell.com/support/monitors	

See Troubleshooting for more information.

DELI

Setting up your monitor

Setting the maximum resolution

To set the maximum resolution for the monitor:

In Windows® 7, Windows® 8, and Windows® 8.1:

- **1.** For Windows 8 and Windows 8.1, select the Desktop tile to switch to classic desktop.
- 2. Right-click on the desktop and click Screen resolution.
- 3. Click the dropdown list of the Screen Resolution and select 1920 x 1080
- 4. Click OK.

In Windows® 10:

- 1. Right-click on the desktop and click Display settings.
- 2. Click Advanced display settings.
- 3. Click the dropdown list of **Resolution** and select **1920 x 1080**.
- 4. Click Apply.

If you do not see 1920 x 1080) as an option, you may need to update your graphics driver. Depending on your computer, complete one of the following procedures:

If you have a Dell desktop or portable computer:

• Go to www.dell.com/support, enter your computer's Service Tag, and download the latest driver for your graphics card.

If you are using a non-Dell computer (portable or desktop):

- Go to the support site for your computer and download the latest graphic drivers.
- Go to your graphics card website and download the latest graphic drivers.

Using the Tilt, Swivel, and Vertical Extension

NOTE: This is applicable for a monitor with a stand. When any other stand is bought, please refer to the respective stand setup guide for set up instructions.

Tilt, Swivel

With the stand attached to the monitor, you can tilt and swivel the monitor for the most comfortable viewing angle.



NOTE: The stand is detached when the monitor is shipped from the factory.

Vertical Extension




NOTE: The stand extends vertically up to 125 mm. The figure below illustrates how to extend the stand vertically.



Rotating the Monitor

Before you rotate the monitor, your monitor should be fully vertically extended (Vertical Extension) and fully tilted up to avoid hitting the bottom edge of the monitor.

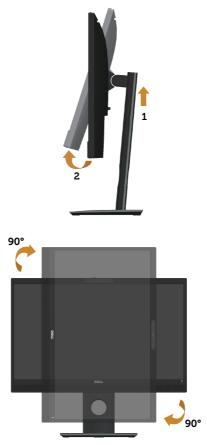

NOTE: To use the Display Rotation function (Landscape versus Portrait view) with your Dell computer, you require an updated graphics driver that is not included with this monitor. To download the graphics driver, go to www.dell. com/support and see the Download section for Video Drivers for latest driver updates.

NOTE: When in the Portrait View Mode, you may experience performance degradation in graphic-intensive applications (3D Gaming and etc.).



Adjusting the Rotation Display Settings of Your System

After you have rotated your monitor, you need to complete the procedure below to adjust the Rotation Display Settings of your system.



NOTE: If you are using the monitor with a non-Dell computer, you need to go the graphics driver website or your computer manufacturer website for information on rotating the 'contents' on your display.

To adjust the Rotation Display Settings:

- 1. Right-click on the desktop and click **Properties**.
- 2. Select the Settings tab and click Advanced.
- 3. If you have an ATI graphics card, select the Rotation tab and set the preferred rotation
- 4. If you have an nVidia graphics card, click the **nVidia** tab, in the left-hand column select **NVRotate**, and then select the preferred rotation.
- 5. If you have an Intel® graphics card, select the Intel graphics tab, click Graphic **Properties**, select the **Rotation** tab, and then set the preferred rotation.

NOTE: If you do not see the rotation option or it is not working correctly, go to www.dell.com/support and download the latest driver for your graphics card.

Operating the webcam cover shutter



Slide the shutter to the left: Uncover the webcam.

Slide the shutter to the right: Cover the webcam.




Installing the monitor IR Camera driver

The IR camera driver is available for download from Dell.com/P2418HZm.

Navigate to the Drivers & Downloads section to download the driver file, unzip the file, and then double click "setup.exe" to install the driver.

It will directly transfer to the Realtek PC Camera installation interface. Wait for automatic running of the installation program.

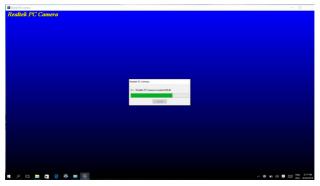

When the installation is complete, restart your computer.

witek PC Camera			- 0
ealtek PC Camera			
	Realtak PC Carnera		
		InstallShield Wissed Complete	
		Yes, I want to restart my computer now.	
		No, I will restart ny computer laive.	
		Renove any disks from their drives, and then slick Finish to complete setup.	
	1000000	(gal frid) Cared	

Setting up Windows Hello

In Windows® 10:


Click Windows start menu, click Settings.



Click Accounts.

Settings				- 🗆 ×
SETTINGS			Find a setting	٩ ١
System Display, notifications, apps, power	Devices Bluetooth, printers, mouse	Network & Internet Wii-Fi, airplane mode, VPN	Personalization Background, Jock screen, colors	Accounts Your accounts, email, sync, work, family
Time & language Speech, region, date	Ease of Access Narrator, magnifier, high contrast	Privacy Location, camera	Update & security Windows Update, recovery, backup	

Click Sign-in options. You must set up a PIN before you can enroll in Windows Hello.

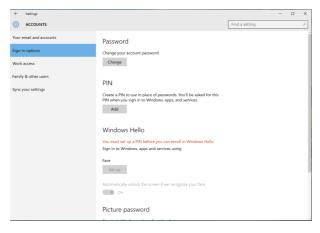

DELI

Click **Add** under **PIN** enter to **Set up a PIN**. Enter New PIN and Confirm PIN, and then click **OK**.



Once you've done that, the options to set up Windows Hello will unlock. Click **Set up** under **Windows Hello**, enter to **Windows Hello** setup.

← Settings			-	×
ACCOUNTS		Find a setting		 2
Your email and accounts	Password			^
Sign-in options	Change your account password			- 1
Work access	Change			
Family & other users	PIN			
Sync your settings	You can use this PIN to sign in to Windows, apps, and services. Change Remove I forgot my PIN			
	Windows Hello Sign in to Windows, apps and services using			
	Face Set up			
	Automatically unlock the screen if we recognize your face On			
	Picture password			
	and the second sec			~

The following message is displayed, click **Get started**.





Keep looking directly at your screen and position yourself so that your face is in the center of the frame that appears on screen. The webcam will then register your face.

Windows Hello setup	×
-	15
Keep looking directly at your so	reen.
_	Cancel

When the following message is displayed, click **Close** to exit **Windows Hello setup**.


Windows Hello setup	×
All set!	
Use your face the next time you want to unlock your device.	
Select Improve recognition so Windows Hello can recognize you in different lighting conditions, or when your appearance changes (for example, your glasses).	
This doesn't erase your current setup - it just helps Windows Hello get better at recognizing you and unlocking your device.	
Improve recognition Close	

Once you have set up, you have another option to improve the recognition. Click **Improve recognition** if necessary.

Setting up the monitor webcam as default setting

When using a notebook with built-in webcam to connect this monitor, in the device manager interface, you can find the notebook built-in webcam and the monitor webcam. Normally, they are in enable status, and the default setting is using notebook built-in webcam.



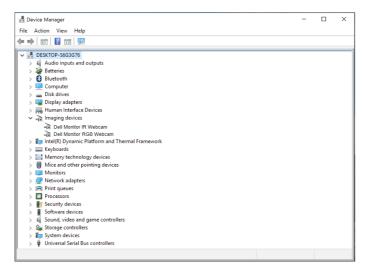

If you want to set up the monitor webcam as default setting, you need disable the notebook built-in webcam. To identify the notebook built-in webcam and disable it, please follow below instructions:

Right-click **Dell Monitor IR Webcam**, and click **Properties** to open the **Dell Monitor IR Webcam Properties**.

🚠 Device Manager	-	\times
File Action View Help		
(= ⇒) 📰 📴 🕎 🖳 💺 🗙 🛞		
V 🗄 DESKTOP-S6G3G76		
> 👖 Audio inputs and outputs		
> 😺 Batteries		
> 🚯 Bluetooth		
> 🔜 Computer		
> Disk drives > Display adapters		
> 🙀 Display adapters		
And a manufactor devices		
Dell Monitor IR Mohcam		
Dell Monitor R: Ugdate Driver Software		
> 🛅 Intel(R) Dynamic F Disable		
> Keyboards Uninstall		
> Memory technolo		
> III Mice and other pc Scan for hardware changes		
Monitors Properties		
> Vetwork adapters		
> Print queues		
> Processors		
> P Security devices		
Software devices		
> 🐗 Sound, video and game controllers > 🤹 Storage controllers		
> 2 Storage controllers		
 Universal Serial Bus controllers 		
Opens property sheet for the current selection.		

DELI

Dell Mon	itor IR W	/ebcam F	Properties	×
General	Driver	Details	Events	
Sal.	Dell M	onitor IR V	/ebcam	
	Device	e type:	Imaging devices	
	Manuf	acturer:	Microsoft	
	Locati	on:	0000.0014.0000.005.000.000.000.000.000	
Devid	e status:			
This	device is	s working	properly.	
			~	
			OK Cance	el

Click **Details > Property** and select **Hardware Ids**.

Dell Monitor IR Webcam Properties	×
General Driver Details Events	
Dell Monitor IR Webcam	
Property	
Device description	~
Device description	0
Device instance path	
Hardware Ids	
Compatible Ids	
Capabilities	
Status	
Problem code	
Config flags	
Class	
Class Guid	
Inf name	
Driver date Driver version	
Provider	
Inf section	
Inf section	
Included Infs	
Matching device Id	
Bank of driver	
Service	
Address	
BIOS device name	
Base container Id	
Bus number	
Bus reported device description	
Bus type Guid	
Container Id	
Device categories	
Device stack	
Display name	¥



The **Value** will show the detail hardware ids of this Dell Monitor IR Webcam. The hardware ids of the notebook built-in webcam and the monitor webcam are different. For P2418HZm, the monitor webcam hardware ids will show as below:

DELL Monitor IR Webcam Properties	×
General Driver Details Events	
DELL Monitor IR Webcam	
Property	
Hardware Ids	\sim
<u>V</u> alue	
USBVVID_OBDA&PID_58FC&REV_7822&MI_02 USBVVID_OBDA&PID_58FC&MI_02	
	1
OK Can	cel


Right click the **Dell Monitor IR Webcam** which has different hardware ids of the P2418HZm monitor webcam, and then click **Disable**.

🛃 Device Manager			
		-	
File Action View Help			
• • = = =	💻 🖡 🗙 🖲		
V 🗄 DESKTOP-S6G3G76			
> 🧃 Audio inputs and ou	tputs		
> 🦢 Batteries			
> 🚯 Bluetooth			
> 💻 Computer			
> 👝 Disk drives			
> 🏣 Display adapters			
> 🐺 Human Interface Dev	vices		
Imaging devices			
Dell Monitor IR 14			
Dell Monitor R	Update Driver Software		
> 🏣 Intel(R) Dynamic P	Disable		
> Keyboards	Uninstall		
> 🧾 Memory technolog	Scan for bardware changes		
 > Memory technolog > Mice and other po 	Scan for hardware changes		
 Memory technolog Mice and other po Monitors 	Scan for hardware changes Properties		
 A Memory technolog Mice and other po Monitors Network adapters 			
 Amony technologies Mice and other po Monitors Retwork adapters Print queues 			
Memory technolog Mice and other po Monitors Protework adapters Processors			
 Memory technoloc Mice and other po Monitors Retwork adapters Protessors Processors Processors 			
 > Memory technolo; > Mice and other po > Monitors > Point queues > Print queues > Processors > Software devices 	Properties		
 Memory technoloc Mice and other po Monitors Retwork adapters Protessors Processors Processors 	Properties		
 Memory technolo: Mice and other po Monitors Protessors Processors Scurity devices Sound, video and ga 	Properties		

The following message is displayed:



Click **Yes**. The notebook webcam is now disabled and the monitor webcam will be used as the default setting. Restart the notebook.

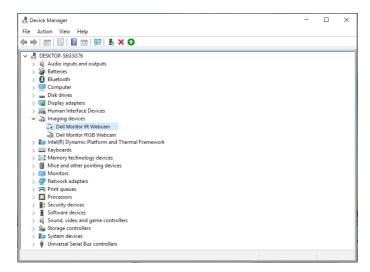

Setting up the monitor speaker as default setting

When your computer connects multiple speakers, if you want to set up the monitor speaker as default setting, please follow below instructions:

Right-click Volume in the Windows task bar notification area.



click Playback devices enter to Sound setting interface.






If only the HDMI or DP cable is connected from your monitor to the computer, only one speaker named **DELL P2418HZm** from the monitor will show in the **Sound** setting interface.

Sound	ł					×
Playback	Recording	Sounds	Commu	inications		
Select a	playback dev	ice below	to modif	y its settin	gs:	
	DELL P2418HZm ntel(R) Displa Ready					
	Speakers / He Realtek Audio Default Device					
Conf	igure			Set Def	ault 🔻	Properties
			OK		Cancel	Apply

click **DELL P2418HZm**, and then click **Set Default**, the monitor speaker will be used as the default setting.

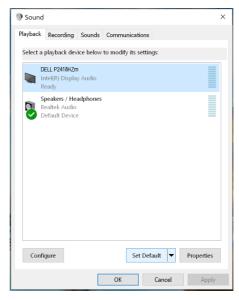

DELI

Click **OK** to exit the **Sound** setting.

Sound	×
Playback Recording Sounds Communications	
Select a playback device below to modify its settings:	
DELL P2418HZm Intel(R) Display Audio Default Device	
Speakers / Headphones Reatek Audio Ready	
Configure Set Default 💌 Pro	perties
OK Cancel	Apply

If the USB cable and the HDMI or DP cable are connected from monitor to the computer, two speakers named **DELL P2418HZm** and **P2418HZm** respectively from the monitor will show in the **Sound** setting interface. The difference between **DELL P2418HZm** and **P2418HZm** is only different signal source. You can choose any one to set default, the monitor speaker will be used as the default setting.



Sound	×	Sound	×
Playback Recording Sounds Communications		Playback Recording Sounds Communications	
Select a playback device below to modify its settings:		Select a playback device below to modify its settings:	
DELL P2418HZm Intel(R) Display Audio Default Device		DELL P2418HZm Inte(R) Display Audio Ready	
Speakers P2418HZm Ready		Speakers P2418HZm Default Device	
Speakers / Headphones Reattek Audio Ready		Speakers / Headphones Realtek Audio Ready	
Configure Set Default	Properties	Configure Set Default 💌 Propert	ies
OK Cancel	Apply	OK Cancel Ap	oply

(D&LL

Troubleshooting

WARNING: Before you begin any of the procedures in this section, follow the Safety instructions.


Self-test

Your monitor provides a self-test feature that allows you to check if your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

- 1. Turn off both your computer and the monitor.
- **2.** Disconnect all video cables from the monitor. This way, the computer doesn't have to be involved.
- 3. Turn on the monitor.

If the monitor is working correctly, it detects that there is no signal and one of the following message appears. While in self-test mode, the power LED remains white.

Dell P2418HZm
No VGA Cable
The display will go into Standby Mode in 4 minutes.
-
www.dell.com/support/monitors
or
Dell P2418HZm
No HDMI Cable
The display will go into Standby Mode in 4 minutes.
www.dell.com/support/monitors

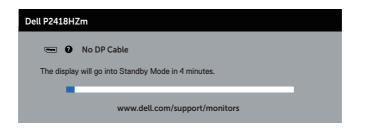



NOTE: This box also appears during normal system operation, if the video cable is disconnected or damaged.

4. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.


If your monitor remains dark after you reconnect the cables, check your video controller and computer.

Built-in diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if any screen abnormality you experience is an inherent problem with your monitor, or with your computer and video card.



NOTE: You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in *self-test mode*.

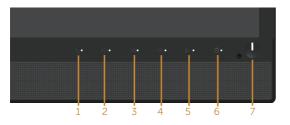

To run the built-in diagnostics:

- 1. Ensure that the screen is clean (no dust particles on the surface of the screen).
- **2.** Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
- **3.** Press and hold **Button 3** on the front panel simultaneously for 5 seconds. A gray screen appears.
- 4. Carefully inspect the screen for abnormalities.
- 5. Press button 3 on the front panel again. The color of the screen changes to red.
- 6. Inspect the display for any abnormalities.
- **7.** Repeat steps 5 and 6 to inspect the display in green, blue, black, white and text screens.

The test is complete when the text screen appears. To exit, press **button 3** again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.



Common problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

Common Symptoms	Possible Solutions
No video/power LED off	 Ensure that the video cable connecting the monitor and the computer is properly connected and secure. Verify that the power outlet is functioning properly using any other electrical equipment. Ensure that the correct input source is selected via the Input source menu.
No video/power LED on	 Increase brightness and contrast controls using the OSD. Perform monitor self-test feature check. Check for bent or broken pins in the video cable connector. Run the built-in diagnostics. Ensure that the correct input source is selected via the Input source menu.
Poor focus	 Eliminate video extension cables. Reset the monitor to Factory Settings (Factory Reset). Change the video resolution to the correct aspect ratio.
Shaky/jittery video	 Reset the monitor to Factory Settings (Factory Reset). Check environmental factors. Relocate the monitor and test in another room.
Missing pixels	 Cycle power on-off. Pixel that is permanently Off is a natural defect that can occur in LCD technology. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at www.dell.com/support/monitors.
Stuck-on pixels	 Cycle power on-off. Pixel that is permanently off is a natural defect that can occur in LCD technology. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at www.dell.com/support/monitors.
Brightness problems	 Reset the monitor to Factory Settings (Factory Reset). Adjust brightness & contrast controls via OSD.
Geometric distortion	 Reset the monitor to Factory Settings (Factory Reset). Adjust horizontal & vertical controls via OSD.
Horizontal/vertical lines	 Reset the monitor to Factory Settings (Factory Reset). Perform monitor self-test feature check and determine if these lines are also in self-test mode. Check for bent or broken pins in the video cable connector. Run the built-in diagnostics.

Synchronization problems	 Reset the monitor to Factory Settings (Factory Reset). Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode. Check for bent or broken pins in the video cable connector. Restart the computer in the safe mode.
Safety related issues	Do not perform any troubleshooting steps.Contact Dell immediately.
Intermittent problems	 Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Reset the monitor to Factory Settings (Factory Reset). Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Missing color	 Perform monitor self-test feature check. Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Check for bent or broken pins in the video cable connector.
Wrong color	 Change the Color Setting Mode in the Color Settings OSD to Graphics or Video depending on the application. Try different Preset Modes in Color settings OSD. Adjust R/G/B value in Custom Color in Color settings OSD. Change the Input Color Format to RGB or YPbPr in the Color settings OSD. Run the built-in diagnostics.
Image retention from a static image left on the monitor for a long period of time	 Set the screen to turn off after a few minutes of screen idle time. These can be adjusted in Windows Power Options or Mac Energy Saver setting. Alternatively, use a dynamically changing screensaver.
Video ghosting or overshooting	• Change the Response Time in the Display OSD to Fast or Normal depending on your application and usage.

Product-specific problems

Specific Symptoms	Possible Solutions
Screen image is too small	 Check the Aspect Ratio setting in the Display settings OSD. Reset the monitor to Factory Settings (Factory Reset) .
Cannot adjust the monitor with the buttons on the side panel	 Turn off the monitor, unplug the power cord, plug it back, and then turn on the monitor. Check if the OSD menu is locked. If yes, press and hold the button above the power button for 6 seconds to unlock. (For more information, see Lock).
No input signal when user controls are pressed	 Check the signal source. Ensure the computer is not in standby or sleep mode by moving the mouse or pressing any key on the keyboard. Check if the video cable is plugged in properly. Disconnect and reconnect the video cable if necessary. Reset the computer or video player.
The picture does not fill the entire screen	 Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen. Run the built-in diagnostics.

Universal serial bus (USB) specific problems

Specific Symptoms	Possible Solutions
USB interface is not working	 Check that your monitor is turned On. Reconnect the upstream cable to your computer. Reconnect the USB peripherals (downstream connector). Switch Off and then turn On the monitor again. Reboot the computer. Some USB devices like external portable HDD require higher electric current; connect the device directly to the computer system.
Supre Speed USB 3.0 interface is slow	 Check that your computer is USB 3.0-capable Some computers have USB 3.0, USB 2.0, and USB 1.1 ports. Ensure that the correct USB port is used. Ensure that the correct USB port is used. Reconnect the upstream cable to your computer. Reconnect the USB peripherals (downstream connector). Reboot the computer.
Wireless USB peripherals stop working when a USB 3.0 device is plugged in	 Increase the distance between the USB 3.0 peripherals and the wireless USB receiver. Position your wireless USB receiver as close as possible to the wireless USB peripherals. Use a USB-extender cable to position the wireless USB receiver as far away as possible from the USB 3.0 port.

Microsoft® Skype for Business® Specific Problems

Specific Symptoms	Possible Solutions
The Hook button is not working	 Ensure that the USB upstream cable is connected between the monitor and the computer or notebook. Ensure that you have signed in to Skype for Business.
Webcam is not detected	 Ensure that the USB upstream cable is connected between the monitor and the computer or notebook. Reconnect the USB upstream cable to the computer or notebook.
The Mute button is not working	 Ensure that the USB upstream cable is connected between the monitor and the computer or notebook. Reconnect the USB upstream cable to the computer or notebook.

No sound coming from the speakers	 Ensure that you have set the default playback device as "DELL P2418HZm" on your system.
	• Turn Off the monitor, unplug the monitor power cord, replug it, and then turn On the monitor.
	 Reset the monitor to Factory Settings.
Wireless mouse is not working or lagging	 Increase the distance between the USB 3.0 peripherals and the wireless USB receiver.
	 Position your wireless USB receiver as close as possible to the wireless mouse.
	• Use a USB-extender cable to position the wireless USB receiver as far away as possible from the USB 3.0 port.

Appendix

WARNING: Safety Instructions



WARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the Safety, Environmental, and Regulatory Information (SFRI)

FCC notices (U.S. Only) and other regulatory information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com/regulatory_compliance.

Contacting Dell

To contact Dell for sales, technical assistance, or customer service issues:

- 1. Go to www.dell.com/contactdell
- 2. Verify your country or region in the Choose a Country/Region drop-down list at the bottom of the page.
- **3.** Select the appropriate service or support link based on your requirement or choose the method of contacting Dell that is convenient for you. Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area



NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

EU product database for energy label and product information sheet

P2418HZm:https://eprel.ec.europa.eu/gr/344926

