Dell UltraSharp U2419H/U2419HX/ U2719D/U2719DX User's Guide



Ø	NOTE: A NOTE indicates important information that helps you make better use of your computer.
\triangle	CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.
\triangle	WARNING: A WARNING indicates a potential for property damage,

personal injury, or death.

Copyright © 2018-2020 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks

are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2020 - 11

Rev. A03

Contents

About	Your Monitor5
	Package Contents
	Product Features
	Identifying Parts and Controls
	Monitor Specifications
	Plug-and-Play
	LCD Monitor Quality and Pixel Policy
Setting	g Up the Monitor
	Attaching the Stand
	Using the Tilt, Swivel, and Vertical Extension
	Adjusting the Rotation Display Settings of Your System
	Connecting Your Monitor
	Organizing Your Cables
	Removing the Monitor Stand
	Wall Mounting (Optional)
Opera ⁻	ting the Monitor30
	Turning on the Monitor
	Using the Front Panel Controls
	Using the OSD Lock function



	Using the On-Screen Display (OSD) Menu	5
Troub	leshooting4	8
	Self-Test	18
	Built-in Diagnostics	١9
	Common Problems	0
	Product Specific Problems	52
Apper	ndix 5	3
	Safety Instructions	;3
	FCC Notices (U.S. only) and Other Regulatory Information	;3
	Contacting Dell	;3
	EU product database for energy label and product information sheet	54
	Setting Up Your Monitor	i 4
	Maintenance Guidelines	6



About Your Monitor

Package Contents

Your monitor ships with the components shown below. Make sure that you have received all the components and Contact Dell if something is missing.



NOTE: Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.





DP cable (DP to DP, U2419H/ U2719D only)
HDMI cable (U2419HX/U2719DX only)
 Quick Setup Guide Safety,Environmental,and Regulatory Information Factory Calibration Report

Product Features

The Dell UltraSharp U2419H/U2419HX/U2719D/U2719DX monitor has an active matrix, thinfilm transistor (TFT), liquid crystal display (LCD), and LED backlight. The monitor features include:


- U2419H/U2419HX: 60.47 cm (23.8-inch) active area display (Measured diagonally) 1920 x 1080 (16:9) resolution, plus full-screen support for lower resolutions.
- U2719D/U2719DX: 68.47 cm (27-inch) active area display (Measured diagonally) 2560 x 1440 (16:9) resolution, plus full-screen support for lower resolutions.
- Wide viewing angles with 99% sRGB color with an average Delta E<2.
- Tilt, swivel, pivot and vertical extension adjustment capabilities.
- Removable pedestal and Video Electronics Standards Association (VESA™) 100 mm mounting holes for flexible mounting solutions.
- Ultra-thin bezel minimizes the bezel gap in multi-monitor usage, enabling easier set up with an elegant viewing experience.
- Extensive digital connectivity with DP, HDMI and USB 3.0 helps future-proof your monitor.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Power and OSD buttons lock.
- Security lock slot.
- ≤ 0.3 W in Standby Mode.
- Optimize eye comfort with a flicker-free screen.

NOTE: The possible long-term effects of blue light emission from the monitor may cause damage to the eyes, including eye fatigue or digital eye strain. ComfortView feature is designed to reduce the amount of blue light emitted from the monitor to optimize eye comfort.



Identifying Parts and Controls

Front view

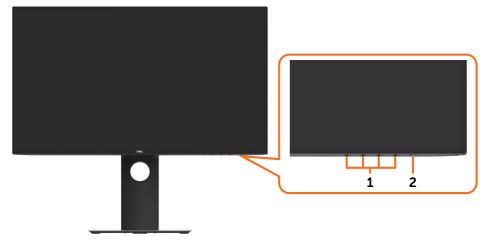

Label	Description
1	Function buttons (For more information, see Operating the Monitor)
2	Power on/off button (with LED indicator)




Back View




Label	Description	Use
1	VESA mounting holes (100 mm x 100 mm-behind attached VESA cover)	Wall mount monitor using VESA-compatible wall mount kit (100 mm x 100 mm).
2	Regulatory label	Lists the regulatory approvals.
3	Stand release button	Release stand from monitor.
4	Security lock slot	Secures monitor with security cable lock (sold separately).
5	Barcode, serial number, and Service Tag label	Refer to this label if you need to contact Dell for technical support.
6	Cable management slot	Use to organize cables by placing them through the slot.

Side View

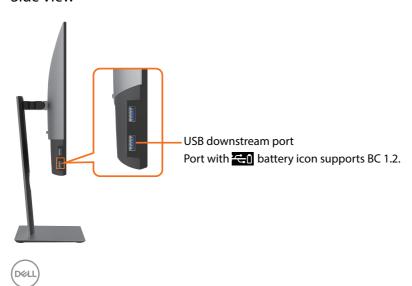

Bottom View

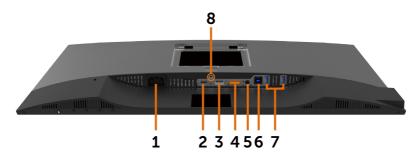

Label	Description	Use
1	AC power connector	To connect the monitor power cable.
2	HDMI connector	Connect your computer with HDMI cable.
3	DP connector (in)	Connect your computer with DP cable.
4	DP connector (out)	DP output for MST (multi-stream transport) capable monitor. To enable MST, refer to instruction on section "Connecting the Monitor for DP MST Function". NOTE: Remove the rubber plug when using DP out connector.
5	Audio line-out port	Connect speakers to playback audio coming through HDMI or DP audio channels. Only supports 2-channel audio. NOTE: The audio line-out port does not support headphones.
6	USB upstream port	Connect the USB cable that comes with your monitor to the computer. Once this cable is connected, you can use the USB downstream connectors on the monitor.
7	USB downstream ports (2)*	Connect your USB device. You can only use this connector after you have connected the USB cable to the computer and USB upstream connector on the monitor. NOTE: Port with battery icon supports BC 1.2.
8	Stand lock	Lock the stand to the monitor using a M3 x 6 mm (U2719D/U2719DX)/ M3 x 8 mm (U2419H/U2419HX) screw (screw not included).

^{*}To avoid signal interference, when a wireless USB device has been connected to a USB downstreamport, it is NOT recommended to connect any other USB devices to the adjacent port(s).



Monitor Specifications

Model U2419H/U2419HX		U2719D/U2719DX	
Screen type	Active matrix - TFT LCD	Active matrix - TFT LCD	
Panel Type	In-plane switching Technology	In-plane switching Technology	
Aspect ratio	16:9	16:9	
Viewable image dimens	ions		
Diagonal	60.47 cm (23.8 inches)	68.47 cm (27 inches)	
Active Area			
Horizontal	527.04 mm (20.75 inches)	596.74 mm (23.49 inches)	
Vertical	296.46 mm (11.67 inches)	335.66 mm (13.21 inches)	
Area	156246.3 mm ² (242.15 inches ²)	200301.7 mm ² (310.30 inches ²)	
Pixel pitch	0.2745 mm x 0.2745 mm	0.233 mm x 0.233 mm	
Pixel per inch (PPI)	92.5	109	
Viewing angle			
Horizontal	178° (typical)	178° (typical)	
Vertical	178° (typical)	178° (typical)	
Brightness	250 cd/m² (typical)	350 cd/m² (typical)	
Contrast ratio	1000 to 1 (typical)	1000 to 1 (typical)	
Display screen coating	Anti-glare treatment of the front polarizer (3H) hard coating	Anti-glare treatment of the front polarizer (3H) hard coating	
Backlight	LED	LED	
Response Time (Gray to Gray)	5 ms (FAST mode) 8 ms (NORMAL mode)	5 ms (FAST mode) 8 ms (NORMAL mode)	
Color depth	16.7 million colors	16.7 million colors	
Color gamut*	99% sRGB 99% REC709 85% DCI-P3	99% sRGB 99% REC709 85% DCI-P3	
Calibration accuracy	Delta E < 2 (average)	Delta E < 2 (average)	



Connectivity	• 1 x DP 1.4 (HDCP 1.4)	• 1 x DP 1.4 (HDCP 1.4)	
	• 1 x DP (out) with MST (HDCP 1.4)	• 1 x DP (out) with MST (HDCP 1.4)	
	• 1 x HDMI 1.4 (HDCP 1.4)	• 1 x HDMI 1.4 (HDCP 1.4)	
	• 2 x USB 3.0 downstream port	• 2 x USB 3.0 downstream port	
	• 2 x USB 3.0 with BC1.2 charging capability at 2A (max)	• 2 x USB 3.0 with BC1.2 charging capability at 2A (max)	
	• 1 x USB 3.0 upstream port	• 1 x USB 3.0 upstream port	
	• 1 x Analog 2.0 audio line out (3.5mm jack)	• 1 x Analog 2.0 audio line out (3.5mm jack)	
Border width (edge	5.0 mm (Top)	6.90 mm (Top)	
of monitor to active	5.1 mm (Left/Right)	6.90 mm (Left/Right)	
area)	8.0 mm (Bottom)	8.1 mm (Bottom)	
Adjustability			
Height adjustable stand	130 mm	130 mm	
Tilt	-5° to 21°	-5° to 21°	
Swivel	-40° to 40°	-40° to 40°	
Cable management	Yes	Yes	
Dell Display Manager (DDM)Compatibility	Easy Arrange and other key features	Easy Arrange and other key features	
Security	Security lock slot (cable lock sold separately) Anti-theft stand lock slot (to panel)	Security lock slot (cable lock sold separately) Anti-theft stand lock slot (to panel)	

^{*} At panel native only, under Custom Mode preset.

Resolution Specifications

Model	U2419H/U2419HX	U2719D/U2719DX
Horizontal scan range	30 khz to 83khz	30 khz to 90khz
Vertical scan range	56 Hz to 76 Hz	56 Hz to 76 Hz
Maximum preset resolution	1920 x 1080 at 60 Hz	2560 x 1440 at 60 Hz
Video display capabilities (DP & HDMI playback)	480i, 480p, 576i, 576p, 720p, 1080i, 1080p	480i, 480p, 576i, 576p, 720p, 1080i, 1080p



Preset Display Modes

U2419H/U2419HX

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/ Vertical)
720 x 400	31.5	70.0	28.3	-/+
VESA, 640 x 480	31.5	60.0	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.3	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108.0	+/+
VESA, 1280 x 1024	64.0	60.0	108.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1600 x 900	60.0	60.0	108.0	-/+
VESA, 1920 x 1080	67.5	60.0	148.5	+/+

U2719D/U2719DX

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/ Vertical)
720 x 400	31.5	70.0	28.3	-/+
VESA, 640 x 480	31.5	60.0	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.3	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108.0	+/+
VESA, 1280 x 1024	64.0	60.0	108.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1600 x 1200	75.0	60.0	162.0	+/+
VESA, 1920 x 1080	67.5	60.0	148.5	+/+
VESA, 2048 x 1080	66.58	60.0	147.16	+/-
CVR, 2560 x 1440	88.8	60.0	241.5	+/-



MST Multi-Stream Transport (MST) Modes

U2419H/U2419HX

MST Source Monitor	Maximum number of external monitors that can be supported.
	1920 x 1080/60 Hz
1920 x 1080/60 Hz	3

NOTE: Maximum external monitor resolution supported is 1920 x 1080 60Hz only.

U2719D/U2719DX

MST Source Monitor	Maximum number of external monitors that can be supported. 2560 x 1440/60 Hz
2560 x 1440/60 Hz	1

NOTE: Maximum external monitor resolution supported is 2560 x 1440 60Hz only.




Electrical Specifications

Model	U2419H/U2419HX/U2719D/U2719DX		
Video input signals	Digital video signal for each differential line Per differential line at 100 ohm impedance DP/HDMI signal input support		
Input voltage/ frequency/current	100-240 VAC / 50 or 60 Hz ± 3 Hz / 1.6 A (maximum)		
Inrush current	120 V: 30 A (Max.)		
240 V		: 60 A (Max.)	
Power Consumption			
U2419H/U2419HX		U2719D/U2719DX	
0.2 W (Off Mode) ¹		0.3 W (Off Mode) ¹	
0.2 W (Standby Mode) ¹		0.3 W (Standby Mode) ¹	
12.3 W (On Mode) ¹		23.8 W (On Mode) ¹	
68 W (Max) ²		74 W (Max) ²	
13.08 W (P _{op}) ³		19.40 W (P _{op}) ³	
42.21 kWh (TEC) ³		61.61 kWh (TEC) ³	


¹ As defined in EU 2019/2021 and EU 2019/2013.

TEC: Total energy consumption in kWh as defined in Energy Star 8.0 version.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components and peripherals you ordered and shall have no obligation to update such information. Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.



the ENERGY STAR specified limit.





² Max brightness and contrast setting with maximum power loading on all USB ports.

³ P_{on}: Power consumption of On Mode as defined in Energy Star 8.0 version.

Physical Characteristics

Model	U2419H/U2419HX	U2719D/U2719DX
Connector type	 DP connector (include DP in and DP out) HDMI connector Audio line-out USB 3.0 upstream port connector USB 3.0 downstream port connector x 4 (Port with battery icon supports BC 1.2.) 	 DP connector (include DP in and DP out) HDMI connector Audio line-out USB 3.0 upstream port connector USB 3.0 downstream port connector x 4 (Port with ♣1 battery icon supports BC 1.2.)
Signal cable type	DP to DP 1.8 M cable (U2419H/U2719D) HDMI 1.8 M cable (U2419HX/U2719DX) USB 3.0 1.8 M cable	DP to DP 1.8 M cable (U2419H/U2719D) HDMI 1.8 M cable (U2419HX/U2719DX) USB 3.0 1.8 M cable
Dimensions (with stand)		
Height (extended)	478.4 mm (18.84 inches)	520.2 mm (20.48 inches)
Height (compressed)	348.4 mm (13.72 inches)	390.2 mm (15.36 inches)
Width	538.5 mm (21.20 inches)	612.2 mm (24.10 inches)
Depth	165.0 mm (6.50 inches)	180.0 mm (7.09 inches)
Dimensions (without stand)		
Height	313.7 mm (12.35 inches)	355.0 mm (13.98 inches)
Width	538.5 mm (21.20 inches)	612.2 mm (24.10 inches)
Depth	39.0 mm (1.54 inches)	39.0 mm (1.54 inches)
Stand dimensions		
Height (extended)	393.5 mm (15.49 inches)	413.6 mm (16.28 inches)
Height (compressed)	347.0 mm (13.66 inches)	367.1 mm (14.45 inches)
Width	218.0 mm (8.58 inches)	230.0 mm (9.06 inches)
Depth	165.0 mm (6.50 inches)	180.0 mm (7.09 inches)
Weight		
Weight with packaging	7.32 kg (16.14 lb)	8.52 kg (18.78 lb)
Weight with stand assembly and cables	5.09 kg (11.22 lb)	5.96 kg (13.14 lb)



Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	3.14 kg (6.92 lb)	3.92 kg (8.64 lb)
Weight of stand assembly	1.59 kg (3.50 lb)	1.72 kg (3.79 lb)


Environmental Characteristics

Model	U2419H/U2419HX/U2719D/U2719DX	
Compliant Standards		
ENERGY STAR certified Monitor		
EPEAT registered where applicable. EPEAT registration varies by country.		
See www.epeat.net for registration	status by country.	
TCO Certified Display		
RoHS Compliant		
BFR/PVC Free monitor (excluding excluding	•	
Meets NFPA 99 leakage current requ		
Arsenic-Free glass and Mercury-Free for the panel only		
Temperature		
Operating	0°C to 40°C (32°F to 104°F)	
Non-operating	-20°C to 60°C (-4°F to 140°F)	
Humidity		
Operating	10% to 80% (non-condensing)	
Non-operating	5% to 90% (non-condensing)	
Altitude		
Operating	5,000 m (16,404 ft) (maximum)	
Non-operating	12,192 m (40,000 ft) (maximum)	
Thermal dissipation		
U2419H/U2419HX	232.03 BTU/hour (maximum)	
	42 BTU/hour (On Mode)	
U2719D/U2719DX	252.5 BTU/hour (maximum)	
	81.20 BTU/hour (On Mode)	



Pin Assignments


DP connector (in)



Pin number	20-pin side of the connected signal cable
1	ML3(n)
2	GND
3	ML3(p)
4	ML2(n)
5	GND
6	ML2(p)
7	ML1(n)
8	GND
9	ML1(p)
10	MLO(n)
11	GND
12	ML0(p)
13	CONFIG1
14	CONFIG2
15	AUX CH (p)
16	GND
17	AUX CH (n)
18	Hot Plug Detect
19	Return
20	DP_PWR




DP connector (out)



Pin number	20-pin side of the connected signal cable
1	ML0(p)
2	GND
3	ML0(n)
4	ML1(p)
5	GND
6	ML1(n)
7	ML2(p)
8	GND
9	ML2(n)
10	ML3(p)
11	GND
12	ML3(n)
13	CONFIG1
14	CONFIG2
15	AUX CH(p)
16	GND
17	AUX CH(n)
18	Hot Plug Detect
19	Return
20	DP_PWR



HDMI connector



Pin number	19-pin side of the connected signal cable
1	TMDS DATA 2+
2	TMDS DATA 2 SHIELD
3	TMDS DATA 2-
4	TMDS DATA 1+
5	TMDS DATA 1 SHIELD
6	TMDS DATA 1-
7	TMDS DATA 0+
8	TMDS DATA 0 SHIELD
9	TMDS DATA 0-
10	TMDS CLOCK+
11	TMDS CLOCK SHIELD
12	TMDS CLOCK-
13	CEC
14	Reserved (N.C. on device)
15	DDC CLOCK (SCL)
16	DDC DATA (SDA)
17	DDC/CEC Ground
18	+5 V POWER
19	HOT PLUG DETECT



Universal Serial Bus (USB)

This section gives you information about the USB ports available on your monitor.



NOTE: Up to 2 A on USB downstream port (port with 50 battery icon) with BC 1.2 compliance devices; up to 0.9 A on the other 2 USB downstream ports.

Your computer has the following USB ports:

- 1 upstream bottom
- 4 downstream 2 at left side, 2 at bottom

Power Charging Port - the ports with 📢 battery icon supports fast current charging capability if the device is BC 1.2 compatible.



NOTE: The monitor's USB ports work only when the monitor is on or in standby mode. If you turn off the monitor and then turn it on, the attached peripherals may take a few seconds to resume normal functionality.

Transfer speed	Data rate	Power consumption
SuperSpeed	5 Gbps	4.5 W (Max., each port)
Hi-Speed	480 Mbps	4.5 W (Max., each port)
Full speed	12 Mbps	4.5 W (Max., each port)

USB upstream port



USB downstream port



Pin number	Signal name
1	VBUS
2	D-
3	D+
4	GND
5	StdB_SSTX-
6	StdB_SSTX+
7	GND_DRAIN
8	StdB_SSRX-
9	StdB_SSRX+
Shell	Shield

Pin number	Signal name
1	VBUS
2	D-
3	D+
4	GND
5	StdA_SSRX-
6	StdA_SSRX+
7	GND_DRAIN
8	StdA_SSTX-
9	StdA_SSTX+
Shell	Shield



Plug-and-Play

You can install the monitor in any Plug-and-Play-compatible system. The monitor automatically provides the computer system with its extended display identification data (EDID) using display data channel (DDC) protocols so the computer can configure itself and optimize the monitor settings. Most monitor installations are automatic; you can select different settings if desired. For more information about changing the monitor settings, see Operating the Monitor.

LCD Monitor Quality and Pixel Policy

During the LCD monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state which are hard to see and do not affect the display quality or usability. For more information on LCD Monitor Pixel Policy, see Dell support site at: http://www.dell.com/support/monitors.



Setting Up the Monitor

Attaching the Stand



NOTE: The stand riser and stand base are detached when the monitor is shipped from the factory.



NOTE: The procedure below is applicable for the default stand. If you purchased any other stand, see the documentation shipped with the stand to set it up.




CAUTION: Place monitor of a flat, clean, and soft surface to avoid scratching the display panel.



To attach the monitor stand:

- 1 Align the stand base protruded blocks to the matching slot on the stand.
- 2 Insert the stand base blocks fully into the stand slot.
- 3. Lift the screw handle and turn the screw clockwise.
- 4 After fully tightening the screw, fold the screw handle flat within the recess.



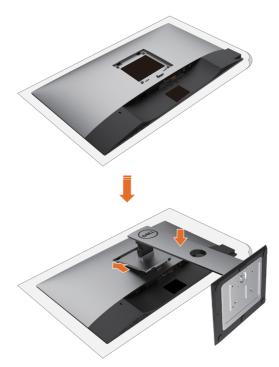

- 1 Remove the monitor protective cover and place the monitor with its front facing downward on it.
- 2 Insert the two tabs on the upper part of the stand to the groove on the back of the monitor.
- 3 Press the stand down till it snaps into its place.



Using the Tilt, Swivel, and Vertical Extension



NOTE: This is applicable for a monitor with a stand. If you purchased any other stand, refer to the respective stand setup guide for set up instructions.

Tilt, Swivel and Vertical Extension

With the stand attached to the monitor, you can tilt the monitor for the most comfortable viewing angle.






NOTE: The stand is detached when the monitor is shipped from the factory.

Rotating the Monitor

Before you rotate the monitor, your monitor should be fully vertically extended and fully tilted up to avoid hitting the bottom edge of the monitor.





NOTE: When in the Portrait View Mode, you may experience performance degradation in graphic-intensive applications (3D Gaming and etc.).

DELL

Adjusting the Rotation Display Settings of Your System

After you have rotated your monitor, you need to complete the procedure below to adjust the Rotation Display Settings of your System.

NOTE: If you are using the monitor with a non-Dell computer, you need to go the graphics driver website or your computer manufacturer website for information on rotating the 'contents' on your display.

To adjust the Rotation Display Settings:


- 1 Right-click on the desktop and click Properties.
- 2 Select the Settings tab and click Advanced.
- 3 If you have an AMD graphics card, select the Rotation tab and set the preferred rotation.
- 4 If you have an nVidia graphics card, click the nVidia tab, in the left-hand column select NVRotate, and then select the preferred rotation.
- 5 If you have an Intel® graphics card, select the Intel graphics tab, click Graphic Properties, select the Rotation tab, and then set the preferred rotation.
- NOTE: If you do not see the rotation option or it is not working correctly, go to www.dell.com/support and download the latest driver for your graphics card.

Connecting Your Monitor

MARNING: Before you begin any of the procedures in this section, follow the Safety Instructions.

To connect your monitor to the computer:

- 1 Turn off your computer.
- 2 Connect the HDMI/DP-DP/USB cable from your monitor to the computer.
- 3 Switch on your monitor.
- 4 Select the correct input source at monitor OSD Menu and turn on your computer.






Connecting the HDMI cable




Connecting the DP cable

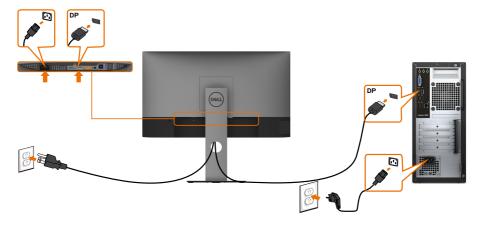




Connecting the monitor for DP Multi-Stream Transport (MST) function

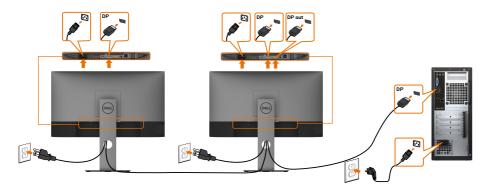

- NOTE: Supports the DP MST feature. To make use of this feature, your PC Graphics Card must be certified to DP1.2 with MST option.
- NOTE: Remove the rubber plug when using DP out connector.

Connecting the USB cable

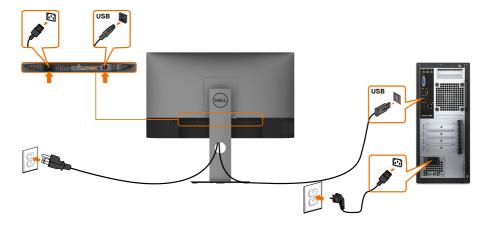



Organizing Your Cables



After attaching all necessary cables to your monitor and computer, (see Connecting Your Monitor for cable attachment) organize all cables as shown above.

Removing the Monitor Stand



CAUTION: To prevent scratches on the LCD screen while removing the stand, make sure that the monitor is placed on a soft, clean surface.



NOTE: The procedure below is applicable for the default stand. If you purchased any other stand, see the documentation shipped with the stand to set it up.

To remove the stand:

- 1 Place the monitor on a soft cloth or cushion.
- 2 Press and hold the stand-release button.
- 3 Lift the stand up and away from the monitor.





Wall Mounting (Optional)



MOTE: Use M4 x 10 mm screws to connect the monitor to the wall-mounting kit.

Refer to the instructions that come with the VESA-compatible wall mounting kit.

- 1 Place the monitor on a soft cloth or cushion on a stable, flat table.
- 2 Remove the stand.
- 3 Use a Phillips crosshead screwdriver to remove the four screws securing the plastic cover.
- 4 Attach the mounting bracket from the wall mounting kit to the monitor.
- 5 Mount the monitor on the wall by following the instructions that comes with the wall mounting kit.
- NOTE: For use only with UL or CSA or GS-listed wall mount bracket with minimum weight/load bearing capacity of 3.14 kg (U2419H/U2419HX)/3.92 kg (U2719D/U2719DX).



Operating the Monitor


Turning on the Monitor

Press the button to turn on the monitor.



Using the Front Panel Controls

Use the control buttons on the front of the monitor to adjust the characteristics of the image being displayed. As you use these buttons to adjust the controls, an OSD shows the numeric values of the characteristics as they change.

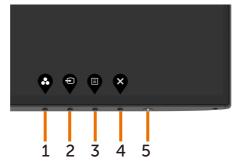




The following table describes the front panel buttons:

Fron	it-Panel Button	Description
1	©	Use this button to choose from a list of preset color modes.
	Shortcut key: Preset Modes	
2	Ð	Use this button to choose from a list of Input Source.
	Shortcut key: Input Source	
3		Use this menu button to launch the on-screen display (OSD) and select the OSD menu.
		See Accessing the Menu System.
	Menu	
4	Exit	Use this button to go back to the main menu or exit the OSD main menu.
5	EXIL	To turn the monitor on or off.
J	Power Button (with power-status light)	Solid white light indicates the monitor is turned on and functioning normally. Blinking white light indicates the monitor is in Standby Mode.



Using the OSD Lock function

With the control buttons on the monitor locked, you can prevent people from accessing the controls. It also prevents accidental activation in multiple monitors side-by-side setup.

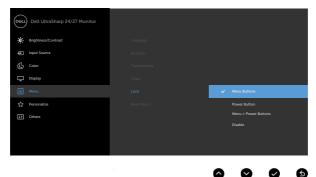


1. The following message will appear:

U2419H/U2419HX



U2719D/U2719DX



2. Select 'Yes' to Lock the buttons, the following table describes the control icons:

Options		Description
1		Use this icon to lock OSD menu function.
	Menu Buttons lock	
2	⊕	Use this icon to lock power button from powering off.
	Power button lock	
3	<u>=</u>	Use this icon to lock OSD menu and power button from powering off.
	Menu and Power buttons lock	



4



Use this icon to run the built-in diagnostics, see Built-in Diagnostics.

Built-in Diagnostics


3. Hold \bigotimes for 4 seconds, Select the following table describes the unlock icons:

Options		Description	
1	=	Use this icon to unlock OSD menu function.	
	Menu Buttons lock		
2	و 🗖	Use this icon to unlock power button from powering off.	
	Power button lock		
3	<u>□</u> • • •	Use this icon to unlock OSD menu and power button from powering off.	
	Menu and Power buttons lock		



Front-Panel Button

Use the buttons on the front of the monitor to adjust the image settings.

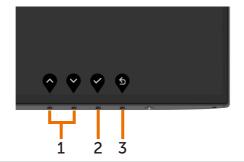

Front Panel Button			Description	
1	•	•	Use the Up (increase) and Down (decrease) keys to adjust items in the OSD menu.	
	Up	Down		
2		OK OK	Use the OK button to confirm your selection.	
3		Back	Use the Back button to go back to the previous menu.	




Using the On-Screen Display (OSD) Menu

Accessing the Menu System



NOTE: Any changes you make using the OSD menu are automatically saved if you move to another OSD menu, exit the OSD menu, or wait for the OSD menu to disappear.

1 Press the button to launch the OSD menu and display the main menu.

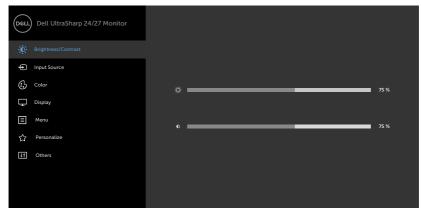









- 2 Press the and buttons to move between options. As you move from one icon to another, the option name is highlighted.
- 3 Press the or or button once to activate the highlighted option.
- 4 Press the and buttons to select the desired parameter.
- 5 Press to enter the slide bar and then use the or button, according to the indicators on the menu, to make your changes.
- 6 Select the to return to previous menu or to accept and return to previous menu.



Icon Menu and



Description



Brightness/ Contrast

Use this menu to activate Brightness/Contrast adjustment.











Brightness

Brightness adjusts the luminance of the backlight

(minimum 0; maximum 100).

Press the button to increase brightness.

Press the button to decrease brightness.

Contrast

Adjust the Brightness first, and then adjust Contrast only if further adjustment is necessary.

Press the button to increase contrast and press the button to decrease contrast (between 0 and 100).




Contrast adjusts the difference between darkness and lightness on the monitor.



Input Source

Use the Input Source menu to select between different video inputs that are be connected to your monitor.

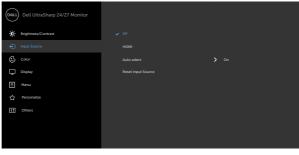












lcon	Menu and Submenus	Description
	DP	Select DP input when you are using the DP (DisplayPort) connector. Use to select the DP input source.
	HDMI	Select the HDMI input when you are using the HDMI connector. Use to select the HDMI input source.
	Auto Select	Use to select Auto Select, the monitor scans for available input sources.
	Reset Input Source	Resets your monitor's Input Source settings to the factory defaults.



Color

Use the Color menu to adjust the color setting mode.

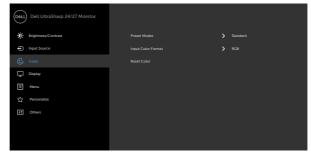












Icon Menu and Submenus

Menu and Description

Preset Modes

When you select Preset Modes, you can choose Standard, ComfortView, Multiscreen Match, Movie, Game, Color Temp. or Custom Color from the list.

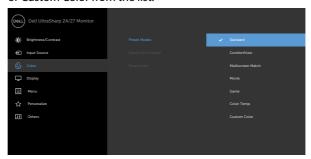









- Standard: Default color settings. This is the default preset mode.
- ComfortView: Decreases the level of blue light emitted from the screen to make viewing more comfortable for your eyes.
 NOTE: To reduce the risk of eye strain and neck/arm/back/ shoulders pain from using the monitor for long periods of time, we suggest you to:
 - Set the screen about 20 to 28 inches (50-70 cm) from your eyes.
 - Blink frequently to moisten or rewet your eyes when working with the monitor.
 - Take regular and frequent breaks for 20 minutes every two hours.
 - Look away from your monitor and gaze at a distant object at 20 feet away for at least 20 seconds during the breaks.
 - Perform stretches to relieve tension in the neck/arm/back/ shoulders during the breaks.
- Multiscreen Match: Option to allow matching of the white backgrounds on multiple monitors.
- · Movie: Ideal for movies.
- Game: Ideal for most gaming applications.
- Color Temp.: The screen appears warmer with a red/yellow tint with slider set at 5,000K or cooler with blue tint with slider set at 10,000K.
- Custom Color: Allows you to manually adjust the color settings.
 Press the and buttons to adjust the Red, Green, and
 Blue values and create your own preset color mode.



n	Menu and Submenus	Description		
	Input Color Format	Allows you to set the video input mode to:		
		 RGB: Select this option if your monitor is connected to a computer (or DVD player) using the HDMI, DP cable. 		
		 YPbPr: Select this option if your DVD player supports only YPbPr output. 		
		OMAL) Dell UltraSharp 24/27 Monitor		
		♠ Input Source Input Color Format		
		Color Reset Color YPaPr		
		□ Dioplay □		
		■ Menu		
		Others		
		• • • •		
	Hue	Use 🕎 or 💙 to adjust the hue from 0 to 100.		
		NOTE: Hue adjustment is available only for Movie and Game mode.		
	Saturation	Use or to adjust the saturation from 0 to 100.		
		NOTE: Saturation adjustment is available only for Movie and Game mode.		

Resets your monitor's color settings to the factory defaults.

Reset Color




Icon Menu and Description Submenus



Display

Use the Display menu to adjust image.

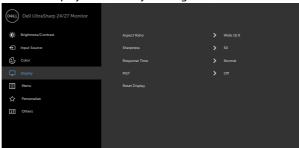










Aspect Ratio Adjust the image ratio to Wide 16:9, Auto Resize, 4:3, 1:1. Makes the image look sharper or softer. Sharpness Use or to adjust the sharpness from '0' to '100'. Allows you to set the Response Time to Normal or Fast. Response Time MST DP Multi Stream Transport, Set to ON enables MST(DP out), Set to OFF disables MST function. Restores the display settings to factory defaults. Reset Display



Menu

Select this option to adjust the settings of the OSD, such as, the languages of the OSD, the amount of time the menu remains on screen, and so on.

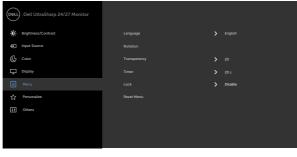









Set the OSD display to one of eight languages.

(English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese).



on	Menu and Submenus	Description	
	Rotation	Rotates the OSD by 0/90/180/270 degrees. You can adjust the menu according to your display rotation.	
	Transparency	Select this option to change the menu transparency by using and (min. 0 / max. 100).	
	Timer	OSD Hold Time: Sets the length of time the OSD remains active after you press a button.	
		Use the and buttons to adjust the slider in 1-second increments, from 5 to 60 seconds.	
	Lock	Controls user access to adjustments, the buttons are locked. Dell UltraSharp 24/27 Monitor	
		 Menu Buttons: Through OSD to lock the Menu buttons. Power Button: Through OSD to lock the Power button. Menu + Power Buttons: Through OSD to lock the all of Menu and Power buttons. 	
		• Disable: Press and hold the button on the left of the power button for 4 sec.	

Restore the menu settings to factory defaults.

Reset Menu



Icon Menu and

Submenus

Description



Personalize

Select from Preset Modes, Brightness/Contrast, Input Source, Aspect Ratio,Rotation set as shortcut key.











Power Button LED	Allows you to set the state of the power light to save energy.
USB	Allows you to enable or disable USB function during monitor standby mode.
	NOTE: USB ON/OFF under standby mode is only available when the USB upstream cable is unplugged. This option will be greyed out when the USB upstream cable plugs in.
Reset Persona- lization	Restores shortcut keys to factory defaults.




lcon

Menu and Submenus

Description



Other

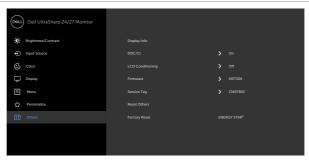









Select this option to adjust the OSD settings, such as the DDC/CI, LCD conditioning, and so on.

Display Info

Displays the monitor's current settings.

DDC/CI

DDC/CI (Display Data Channel/Command Interface) allows you to adjust the monitor settings using software on your computer. Select Off to turn off this feature.

Enable this feature for best user experience and optimum performance of your monitor.












Icon Menu and Description Submenus LCD Helps reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to Conditioning run. Select On to start the process. Dell UltraSharp 24/27 Monitor Firmware Firmware version. Service Tag Show Service Tag. **Reset Others** Restores other settings, such as DDC/CI, to factory defaults. Restores all preset values to the factory default settings. These Factory are also the settings for ENERGY STAR tests. Reset Dell UltraSharp 24/27 Monitor D Brightness/Contrast Color Display



OSD Warning Messages

When the monitor does not support a particular resolution mode, you can see the following message:

U2419H/U2419HX

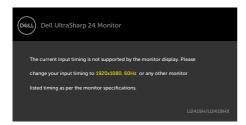


U2719D/U2719DX



This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See Monitor Specifications for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is $1920 \times 1080 \text{ (U2419H/U2419HX)} / 2560 \times 1440 \text{ (U2719D/U2719DX)}$.

You can see the following message before the DDC/CI function is disabled:

U2419H/U2419HX

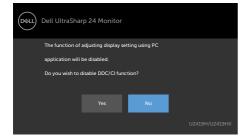


U2719D/U2719DX



When the monitor enters the Standby mode, the following message appears:

U2419H/U2419HX



U2719D/U2719DX




Activate the computer and wake up the monitor to gain access to the OSD.



If you press any button other than the power button, the following messages will appear depending on the selected input:

U2419H/U2419HX

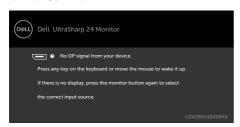

U2719D/U2719DX



If either DP, HDMI input is selected and the corresponding cable is not connected, a floating dialog box as shown below appears.

U2419H/U2419HX




U2719D/U2719DX



Dell UltraSharp 24 Monitor


No HDMI Cable

The display will go into Standby Mode in 4 minutes.

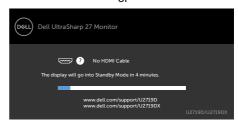


Select OSD items of On in Standby Mode in Personalize feature, the following message will appear:

U2419H/U2419HX

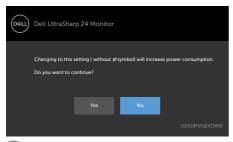

U2719D/U2719DX

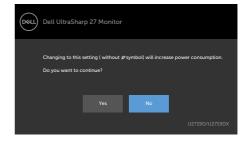



If adjust the Brightness level above the default level over 75%, the following message will appear:

U2419H/U2419HX



See Troubleshooting for more information.

U2719D/U2719DX





Troubleshooting

MARNING: Before you begin any of the procedures in this section, follow the Safety Instructions.

Self-Test

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:


- 1 Turn off both your computer and the monitor.
- 2 Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove all video cables from the back of computer.
- 3 Turn on the monitor.

The floating dialog box should appear on-screen (against a black background), if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains white. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.

U2419H/U2419HX



or



U2719D/U2719DX



Dell UltraSharp 27 Monitor

No HDMI Cable

The display will go into Standby Mode in 4 minutes.

www.dell.com/support/U2719D

www.dell.com/support/U2719DX

U2719D/U2719DX

- 4 This box also appears during normal system operation, if the video cable becomes disconnected or damaged.
- 5 Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.




Built-in Diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.



MOTE: You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in self-test mode.

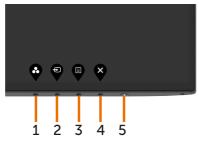

To run the built-in diagnostics:

- 1 Make sure that the screen is clean (no dust particles on the surface of the screen).
- 2 Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
- 3 Press and hold Button 1 for 5 seconds. A gray screen appears.
- 4 Carefully inspect the screen for abnormalities.
- 5 Press Button 1 on the front panel again. The color of the screen changes to red.
- 6 Inspect the display for any abnormalities.
- 7 Repeat steps 5 and 6 to inspect the display in green, blue, black, white, and text screens.

The test is complete when the text screen appears. To exit, press Button 1 again. If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.



Common Problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

Common Symptoms	What You Experience	Possible Solutions
No Video/Power LED off	No picture	 Ensure that the video cable connecting the monitor and the computer is properly connected and secure Verify that the power outlet is functioning properly using any other electrical equipment. Ensure that the power button is depressed fully. Ensure that the correct input source is selected in the Input Source menu.
No Video/Power LED on	No picture or no brightness	 Increase brightness & contrast controls via OSD. Perform monitor self-test feature check. Check for bent or broken pins in the video cable connector. Run the built-in diagnostics. Ensure that the correct input source is selected in the Input Source menu.
Missing Pixels	LCD screen has spots	 Cycle power on-off. Pixel that is permanently off is a natural defect that canoccur in LCD technology. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: http://www.dell.com/support/monitors.
Stuck-on Pixels	LCD screen has bright spots	 Cycle power On-Off. Pixel that is permanently off is a natural defect that canoccur in LCD technology. For more information on Dell Monitor Quality and PixelPolicy, see Dell Support site at: http://www.dell.com/support/monitors.
Brightness Problems	Picture too dim or too bright	Reset the monitor to factory settings.Adjust brightness & contrast controls via OSD.
Safety Related Issues	Visible signs of smoke or sparks	Do not perform any troubleshooting steps.Contact Dell immediately.
Intermittent Problems	Monitor malfunctions on & off	 Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Reset the monitor to factory settings. Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.



Common Symptoms	What You Experience	Possible Solutions
Missing Color	Picture missing color	 Perform monitor self-test. Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Check for bent or broken pins in the video cable connector.
Wrong Color	Picture color not good	 Change the settings of the Preset Modes in the Color menu OSD depending on the application. Adjust R/G/B value under Custom. Color in Color menu OSD. Change the Input Color Format to PC RGB or YPbPr in the Color menu OSD. Run the built-in diagnostics.
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	 Set the screen to turn off after a few minutes of screen idle time. These can be adjusted in Windows Power Options or Mac Energy Saver setting. Alternatively, use a dynamically changing screensaver.



Product Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	 Check the Aspect Ratio setting in the Display menu OSD. Reset the monitor to factory settings.
No Input Signal when user controls are pressed	No picture, the LED light is white	 Check the signal source. Ensure the computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard. Check whether the signal cable is plugged in properly. Re-plug the signal cable if necessary. Reset the computer or video player.
The picture does not fill the entire screen	The picture cannot fill the height or width of the screen	 Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen. Run the built-in diagnostics.
No image when using DP connection to the PC	Black screen	 Verify which DP standard (DP 1.1a or DP 1.4) is your Graphics Card certified to. Download and install the latest graphics card driver. Some DP 1.1a graphics card cannot support DP 1.4 monitors. Go to OSD menu, under Input Source selection, press and hold DP select key for 8 sec to change the monitor setting from DP 1.4 to DP 1.1a.



Appendix

Safety Instructions

For displays with glossy bezels the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

MARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the Safety, Environmental, and Regulatory Information (SERI).

FCC Notices (U.S. only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com/regulatory_compliance.

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).



NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area.

To get online Monitor support content:

See www.dell.com/support/monitors.

To contact Dell for sales, technical support, or customer service issues:

- 1 Go to www.dell.com/support.
- 2 Verify your country or region in the Choose A Country/Region drop-down menu at the top-left corner of the page.
- 3 Click Contact Us next to the country dropdown.
- 4 Select the appropriate service or support link based on your need.
- 5 Choose the method of contacting Dell that is convenient for you.



EU product database for energy label and product information sheet

U2419H: https://eprel.ec.europa.eu/qr/344772

U2419H WOST: https://eprel.ec.europa.eu/qr/349824

U2719D: https://eprel.ec.europa.eu/qr/344906

Setting Up Your Monitor

Setting Display Resolution to 1920 x 1080 (U2419H/U2419HX)/ 2560 x 1440 (U2719D/U2719DX) (maximum)

For best performance, set the display resolution to $1920 \times 1080 \text{ (U2419H/ U2419HX)/} 2560 \times 1440 \text{ (U2719D/U2719DX)}$ pixels by performing the following steps:

In Windows Vista, Windows 7, Windows 8 or Windows 8.1:

- 1 For Windows 8 or Windows 8.1 only, select the Desktop tile to switch to classic desktop.
- 2 Right-click on the desktop and click Screen Resolution.
- 3 Click the Dropdown list of the Screen Resolution and select 1920 x 1080 (U2419H/ U2419HX)/2560 x 1440 (U2719D/U2719DX).
- 4 Click OK.

In Windows 10:

- 1 Right-click on the desktop and click Display Settings.
- 2 Click Advanced display settings.
- 3 Click the dropdown list of Resolution and select 1920 x 1080 (U2419H/U2419HX)/2560 x 1440 (U2719D/U2719DX).
- 4 Click Apply.

If you do not see the recommended resolution as an option, you may need to update your graphics driver. Please choose the scenario below that best describes the computer system you are using, and follow the given steps.

Dell computer

- 1 Go to www.dell.com/support, enter your service tag, and download the latest driver for your graphics card.
- 2 After installing the drivers for your graphics adapter, attempt to set the resolution to 1920 x 1080 (U2419H/U2419HX)/2560 x 1440 (U2719D/U2719DX) again.



NOTE: If you are unable to set the resolution to $1920 \times 1080 (U2419H/U2419HX) / 2560 \times 1440 (U2719D/U2719DX)$, please contact Dell to inquire about a graphics adapter that supports these resolutions.



Non-Dell computer

In Windows Vista, Windows 7, Windows 8 or Windows 8.1:

- 1 For Windows 8 or Windows 8.1 only, select the Desktop tile to switch to classic desktop.
- 2 Right-click on the desktop and click Personalization.
- 3 Click Change Display Settings.
- 4 Click Advanced Settings.
- 5 Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, AMD, Intel etc.).
- 6 Refer to the graphic card provider website for updated driver (for example, http://www.AMD.com or http://www.NVIDIA.com).
- 7 After installing the drivers for your graphics adapter, attempt to set the resolution to 1920 x 1080 (U2419H/U2419HX)/2560 x 1440 (U2719D/U2719DX) again.

In Windows 10:

- 1 Right-click on the desktop and click Display Settings.
- 2 Click Advanced display settings.
- 3 Click Display adapter properties.
- 4 Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, AMD, Intel etc.).
- 5 Refer to the graphic card provider website for updated driver (for example, http://www.AMD.com or http://www.NVIDIA.com).
- 6 After installing the drivers for your graphics adapter, attempt to set the resolution to 1920 x 1080 (U2419H/U2419HX)/2560 x 1440 (U2719D/U2719DX) again.





Maintenance Guidelines

Cleaning Your Monitor

⚠

WARNING: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.



CAUTION: Read and follow the Safety Instructions before cleaning the monitor.

For best practices, follow these instructions in the list below while unpacking, cleaning, or handling your monitor:

- To clean your anti-static screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the anti-static coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
- Use a lightly-dampened, soft cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
- If you notice white powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as a darker-colored monitor may get scratched and show white scuff marks more than a lighter- colored monitor.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.

