

# Dell OpenManage

SNMP Reference Guide Version 8.3

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your computer.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2016 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

<b>1 Introduction.....</b>	<b>6</b>
What's New in this release.....	6
Supported SNMP Versions.....	6
Managed Object Used in This Document.....	7
Server Administrator Instrumentation MIB.....	7
Server Administrator Baseboard Management Controller, ASF MIB.....	9
Server Administrator Storage Management MIB.....	9
Server Administrator Field Replaceable Unit MIB.....	9
Server Administrator Change Management MIB.....	10
Basic Terminology.....	10
Frequently Used Terms in Variable Names.....	10
Tables.....	10
Section Organization.....	12
Other Documents You May Need.....	12
Introduction to the Server Administrator SNMP Subagent.....	12
Management Information Base Object Identifiers.....	13
SNMP Security.....	14
SNMP Traps.....	14
<b>2 Server Administrator Group.....</b>	<b>15</b>
Instrumentation MIB Version Group.....	15
Management Information Base Major Version Number.....	16
Management Information Base Minor Version Number.....	16
Management Information Base Maintenance Version Number.....	16
Systems Management Software Group.....	16
Systems Management Software.....	17
Systems Management Software Variable Values.....	19
System State Group.....	19
System State Group Table.....	20
Chassis Information Group.....	32
Chassis Information Group Tables.....	32
Chassis Information Group Variable Values.....	56
Operating System Group.....	64
Operating System Memory Table.....	64
System Resource Group.....	67
System Resource Group Tables.....	67
System Resource Group Variable Values.....	78
Power Group.....	80
Power Group Tables.....	80
Power Group Variable Values.....	102
Thermal Group.....	108
Thermal Group Tables.....	108
Thermal Group Variable Values.....	116
Remote Flash BIOS Group.....	118

Remote Flash BIOS Group Table.....	118
Remote Flash BIOS Variable Values.....	120
Port Group.....	121
Port Group Tables.....	121
Port Group Variable Values.....	139
Device Group.....	141
Device Tables.....	142
Device Group Variable Values.....	181
Slot Group.....	200
System Slot Group Table.....	200
System Slot Variable Values.....	203
Memory Group.....	207
Physical Memory Tables.....	207
Memory Group Variable Values.....	219
BIOS Setup Control Group.....	222
BIOS Setup Control Group Tables.....	222
BIOS Group Variable Values.....	241
Local Response Agent Group.....	246
LRA Group Tables.....	247
Local Response Agent Variable Values.....	250
Cost of Ownership Group.....	251
Cost of Ownership Group Tables.....	251
Cost of Ownership Variable Values.....	272
Cluster Group .....	273
Cluster Group.....	273
Cluster Group Variable Values.....	275
Baseboard Management Controller Group.....	275
Baseboard Management Controller Group Tables.....	276
Baseboard Management Controller Group Variable Values.....	283
Field Replaceable Unit Group.....	286
Field Replaceable Unit Group Tables.....	286
Field Replaceable Unit Group Variable Values.....	288
<b>3 Storage Management Group.....</b>	<b>289</b>
Storage Management Group.....	289
Storage Management Information Group.....	290
Global Data Group.....	291
Physical Devices Group.....	294
Controller Table.....	294
Channel Table.....	308
Enclosure Table.....	311
Array Disk Table.....	317
Array Disk Enclosure Connection Table.....	329
Array Disk Channel Connection Table.....	330
Fan Table.....	332
Fan Connection Table.....	336
Power Supply Table.....	337
Power Supply Connection Table.....	340
Temperature Probe Table.....	342
Temperature Probe Connection Table.....	345

Enclosure Management Module Table.....	346
Enclosure Management Module Connection Table.....	349
Battery Table.....	351
Battery Connection Table.....	352
Tape Drive Table.....	353
NVME adapter table.....	355
Logical Devices Group.....	360
Virtual Disk Table.....	361
Virtual Disk Partition.....	367
Array Disk Logical Connection Table.....	368
Storage Management Event Group.....	370
<b>4 Change Management Group.....</b>	<b>372</b>
Inventory Group.....	372
Device Group.....	372
Device Group Table.....	373
Application Group.....	374
Application Group Table.....	374
Operating System Group.....	376
Inventory Collector Product Information.....	376
<b>5 SNMP Traps.....</b>	<b>377</b>
Trap Variables.....	377
Understanding The Trap Description.....	379
Understanding Trap Severity.....	381
BMC Traps.....	381
<b>6 Storage Management Alert Reference.....</b>	<b>384</b>
Alert Monitoring and Logging.....	384
Viewing Alerts.....	384
Alert Severity Levels.....	384
SNMP Support for Storage Management Alerts.....	385
SNMP Trap Forwarding.....	385
SNMP Trap Definitions.....	385
Trap Variables.....	385
Viewing SNMP Traps.....	387
Alert Descriptions and Corrective Actions.....	387
<b>7 Standard Data Type Definitions.....</b>	<b>388</b>
Common Data Types.....	388
Variables with Data Types of State Capabilities and State Capabilities Unique.....	388
Dell Status Data Types.....	389
Dell Date.....	390
Full Dates.....	390
<b>8 SNMP Sample Output.....</b>	<b>391</b>

# Introduction

This reference guide provides information about the Simple Network Management Protocol (SNMP) Management Information Base (MIB) which is applicable for Dell OpenManage.

**NOTE:** This guide contains information that may also be applicable to earlier OpenManage supported platforms.

This introduction is divided into two sections. The first section, [Introduction to SNMP Reference Guide](#), explains the SNMP Reference Guide design. All essential Simple Network Management Protocol (SNMP) terms are defined in this section. Some of the vocabulary may seem complex and unfamiliar to system administrators who are using SNMP for the first time. SNMP experts can skim this section, and beginners can read the section more carefully.

The second section, [Introduction to the Server Administrator SNMP Subagent](#), is a more technical introduction to the management information base (MIB) that underlies Server Administrator services.

## Topics:

- [What's New in this release](#)
- [Supported SNMP Versions](#)
- [Managed Object Used in This Document](#)
- [Server Administrator Instrumentation MIB](#)
- [Server Administrator Baseboard Management Controller, ASF MIB](#)
- [Server Administrator Storage Management MIB](#)
- [Server Administrator Field Replaceable Unit MIB](#)
- [Server Administrator Change Management MIB](#)
- [Basic Terminology](#)
- [Frequently Used Terms in Variable Names](#)
- [Tables](#)
- [Section Organization](#)
- [Other Documents You May Need](#)
- [Introduction to the Server Administrator SNMP Subagent](#)

## What's New in this release

This release of Dell OpenManage SNMP introduces the following new attributes:

**NOTE:** For more information on SNMP traps with Out-of-Band using iDRAC and Chassis Management Controller, see [Dell OpenManage SNMP Reference guide for iDRAC and CMC](#)

- Added new varbinds for **Dell OpenManage Storage Management Group**
  - New varbinds added:
    - Physical Devices Group : Array Disk Table** `nonRAIDdiskCachePolicy`, `arraydiskCachePolicy`
  - Updated the possible values in **Logical Devices Group: Virtual Disk table** `virtualDiskDiskCachePolicy`

## Supported SNMP Versions

Operating System	Supported OMSA SNMP version
Windows	SNMP v1
Linux	SNMP v1

# Managed Object Used in This Document

The MIB is divided into several major groups. The following table provides information about the MIB names, name of the agent that uses each MIB and the purpose:

MIB Name	Agent / Hardware Supported	Purpose of the MIB
10892.mib	Server Administrator	Provides the information about the systems monitored by Server Administrator instrumentation software. This is the primary MIB for PowerEdge systems.
dcs3fru.mib	Server Administrator	Provides the information about the system Field Replaceable Unit (FRU) to SNMP management applications.
dcstorag.mib	Server Administrator Storage Management	Provides the information about the storage hardware components and RAID configurations monitored by Server Administrator.
iDRAC-SMlv1.mib	iDRAC7 and iDRAC 8	Provides information about the SNMP data and traps supported by iDRAC7 and iDRAC8. This is the SMLv1 version of the iDRAC MIB.
iDRAC-SMlv2.mib	iDRAC7 and iDRAC 8	Provides information about the SNMP data and traps supported by iDRAC7 and iDRAC8. This is the SMLv2 version of the iDRAC MIB.
dcs3rmt.mib	Dell Remote Access controller 5 (DRAC 5)	Provides information about remote access components monitored by the Server Administrator Remote Access Service.
rac_host.mib	Remote access out-of-band agent	Provides information about the components monitored by the remote access out-of-band software agent.
DELL-RAC-MIB.txt	Chassis Management Controller (CMC)	Provides information about components monitored by the Chassis Management Controller for modular chassis. This MIB is the legacy iDRAC MIB. Changes made in this MIB are not for iDRAC. iDRAC does not support all the objects and traps defined in this MIB. The new and more extensive iDRAC MIB is available for iDRAC7 and later versions.
DcAsfSrv.mib	Baseboard Management Controller (BMC)	Provides information about Dell server Platform Event Traps generated by the Baseboard Management Controller.

For further details see Release Notes for *Management Information Base* `readme_mibs.txt`.

## Server Administrator Instrumentation MIB

The Server Administrator Instrumentation MIB ( filename `10892.mib` ) provides instrumentation data that allows you to monitor the health of a system with SNMP management applications. It provides:

- Information about the status of temperatures, power supplies, voltages, currents, fans, and memory at key points in the system
- Rapid access to detailed fault and performance information gathered by industry standard systems management agents
- Version information for Basic Input/Output System (BIOS), firmware, and operating system
- A detailed account of every cost of ownership (COO) detail about your system

In addition, traps are sent to report a change in status of the health of critical components.

The Server Administrator Instrumentation MIB structures its MIB objects into groups of scalar objects or MIB tables that provide related information. The below table describes each Server Administrator Instrumentation MIB group and lists the MIB group number assigned to the MIB group. The Server Administrator Instrumentation MIB groups are identified by the SNMP OID `1.3.6.1.4.1.674.10892.1.<MIB group number>`, where `<MIB group number>` is the MIB group number assigned to the MIB group. See the relevant section for more information about the MIB objects defined in a MIB group.

**Table 1. Server Administrator Instrumentation MIB Sections in This Guide**

<b>Section</b>	<b>Topics</b>	<b>MIB Group Numbers</b>
<b>2</b>	Instrumentation MIB Version Group — defines version numbers of the Instrumentation MIB	1
<b>3</b>	Systems Management Software Group — defines information about the systems management software and the supported systems management standards	100
<b>4</b>	System State Group — defines status, state, and redundancy for a system and its components	200
<b>5</b>	Chassis Information Group — defines chassis types, events, and indicators	300
<b>6</b>	Operating System Group — defines variables for name, version, service pack, and other information about a system's operating system	400
<b>7</b>	System Resource Group — defines variables for input/output ports, memory, interrupts, and direct memory access	500
<b>8</b>	Power Group — defines variables for power units, power supplies, and their current and voltage probes	600
<b>9</b>	Thermal Group — defines variables for temperature probes and cooling devices	700
<b>10</b>	User Security Group — defines variables for creating and modifying user accounts	800
<b>11</b>	Remote Flash BIOS Group — defines variables for updating the system's BIOS remotely	900
<b>12</b>	Port Group — defines variables for major port types such as keyboard, monitor, small computer system interface (SCSI), Universal Serial Bus (USB), and parallel and serial ports	1000
<b>13</b>	Device Group — defines variables for pointing, keyboard, processor, cache, memory, and personal computer interface devices	1100
<b>14</b>	Slot Group — defines variables for the system's slots	1200
<b>15</b>	Memory Group — defines variables for the system's physical memory	1300
<b>16</b>	BIOS Setup Control Group — defines variables for BIOS functions such as boot sequence, speakers, Wake on the local area network (LAN), diskettes, ports, and network interface controllers (NIC)	1400
<b>17</b>	Local Response Agent Group — defines variables for global settings and actions. These variables allow users to predetermine how the system responds to a particular type of event	1500
<b>18</b>	Cost of Ownership Group — defines variables for tracking data on the system's service contract, lease, repair records, trouble tickets, and so on	1600
<b>20</b>	Cluster Group — defines variables for systems that operate as a cluster	1800
<b>21</b>	Baseboard Management Controller Group — provides information about the Baseboard Management Controller (BMC) that may be present in your system. In addition to providing general information about the BMC, this group provides information about the serial and local area network (LAN) interfaces of the BMC	1900
<b>26</b>	Traps — defines the types of alerts that can be sent to report the status of critical components	5000

# Server Administrator Baseboard Management Controller, ASF MIB

The Server Administrator BMC MIB (filename `DcAsfSrv.mib`) provides information about the traps sent by BMC. The Server Administrator BMC MIB structures its MIB objects that provide related information. The BMC MIB groups are identified by the SNMP OID 1.3.6.1.4.1.3183.1.1.<MIB group number>. The BMC MIB adheres to ASF 2.0 standard and hence the enterprise ID is wired for management (3183).

## Server Administrator Storage Management MIB

The Server Administrator Storage Management MIB (filename `dcstorag.mib`) provides storage management data that allows you to monitor the health of storage resources with SNMP management applications.

The following table describes each Server Administrator Storage Management MIB group and lists the MIB group number assigned to the MIB group. The Server Administrator Storage Management MIB groups are identified by the SNMP OID 1.3.6.1.4.1.674.<MIB group number> where <MIB group number> is the MIB group number assigned to the MIB group. See the relevant section for more information about the MIB objects defined in a MIB group.

**Table 2. Server Administrator Storage Management MIB Sections in This Guide**

Section	Topics	MIB Group Numbers
23	Storage Management Group — consists of definitions for the following MIB groups:	10893
		NA
	• Storage Management Group	20
	• Storage Management Information Group	NA
	• Global Data Group	NA
	• Physical Devices Group	NA
	• Logical Devices Group	130
	• Storage Management Event Group	140
• Software Group	NA	
		1
27	Storage Management Alert Reference — lets you monitor the health of storage resources such as controllers, connectors, array disks, and virtual disks	NA

## Server Administrator Field Replaceable Unit MIB

The Server Administrator Field Replaceable Unit MIB (filename `dc3fru.mib`) provides information about field replaceable unit (FRU) hardware that may be present in your system.

The Server Administrator Field Replaceable Unit MIB structures its MIB objects into groups of scalar objects or MIB tables that provide related information. The following table describes each Server Administrator Field Replaceable Unit MIB group and lists the MIB group number assigned to the MIB group. The Server Administrator Field Replaceable Unit MIB groups are identified by the SNMP OID 1.3.6.1.4.1.674.10892.1.<MIB group number> where <MIB group number> is the MIB group number assigned to the MIB group. See the relevant section for more information about the MIB objects defined in a MIB group.

**Table 3. Server Administrator Field Replaceable Unit MIB Sections in This Guide**

Section	Topic	MIB Group Numbers
22	Field Replaceable Unit Group — provides information about field replaceable units that may be present in your system	2000

# Server Administrator Change Management MIB

The Server Administrator Change Management MIB (filename `dellcm.mib`) provides management data that allows you to monitor the inventory of devices and applications with SNMP management applications.

The following table describes each Server Administrator Change Management MIB group and lists the MIB group number assigned to the MIB group. The Server Administrator Change Management MIB groups are identified by the SNMP OID 1.3.6.1.4.1.674.<*MIB group number*> where <*MIB group number*> is the MIB group number assigned to the MIB group. See the relevant section for more information about the MIB objects defined in a MIB group.

**Table 4. Server Administrator Change Management MIB Sections in This Guide**

Section	Topics	MIB Group Number
24	Change Management Group - describes the inventory data provided by the Change Management MIB that allows users to monitor devices and software present on a particular managed computer chassis	10899

## Basic Terminology

It is important to have a good understanding of the key technical terms used in this guide. This guide provides definitions for all essential terms used in describing the Server Administrator MIBs. For definitions on all essential terms and acronyms, see the *Glossary* available on the Dell Support website at [dell.com/support/manuals](http://dell.com/support/manuals).

## Frequently Used Terms in Variable Names

The following terms are frequently used in the name of a MIB variable:

**Capability** refers to the actions an object can perform, or to actions that can be taken by the object. Hot-pluggable is an example of a capability. If a card is hot-pluggable, it can be replaced while a system is running. Capability settings refer to the capabilities of the object that the user can select from and activate if desired. Capability settings allow users of the server administrator to predetermine how an object behaves under specific conditions.

**Settings** are the conditions of a manageable object that determine what happens when a certain value is detected in a component. For example, a user can set the upper critical threshold of a temperature probe to 75 degrees Celsius. If the probe reaches that temperature, the setting causes an alert to be sent to the management console. Some settings, when reached, can trigger a system shutdown or other response to prevent damage to the system.

**State** refers to the condition of an object that has more than one condition. For example, an object may be in a *not ready* or in an *enabled* state.

**Status** refers to the health of an object or how the object is functioning. For example, the status of a temperature probe that is measuring acceptable temperatures would be reported as normal. When the probe begins reading temperatures that exceed limits set by the user, it reports a critical status.

## Tables

This reference guide contains two types of tables: tables that are used to organize and define variable values and tables that define MIB objects. Readers must understand the difference between these two types of tables.

## SNMP Tables

Most of the MIB objects defined in this reference guide are organized into SNMP tables. SNMP tables organize data into two-dimensional structural arrays. In SNMP, objects that have a relationship to other objects are called columnar objects. Columnar objects are objects used to form lists and tables. When a MIB group is divided into one or more discrete tables, the word *table* has a technical meaning. An example is the section of this reference guide entitled Universal Unique Identifier (UUID). The UUID object has a type and a value that uniquely identifies an object such as a chassis. The table defines all of the variables that comprise the managed object UUID.

The following table is an example of an SNMP table. The table contains variables that must occur in a definite sequence. In the example table the defined variables are UUID Chassis Index, UUID Index, UUID Type, and UUID Value.

These objects comprise the Server Administrator definitions for the UUID.

**Table 5. UUID Table**

<b>Name</b>	uUUIDTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20
<b>Description</b>	Defines the UUID table.
<b>Syntax</b>	SEQUENCE OF UUIDTableEntry
<b>Access</b>	Not accessible

**Table 6. UUID Table Entry**

<b>Name</b>	uUUIDTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1
<b>Description</b>	Defines the UUID table entry.
<b>Syntax</b>	UUIDTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

uUUIDIndex

uUUIDchassisIndex

**Table 7. UUID Chassis Index**

<b>Name</b>	uUUIDchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 8. UUID Index**

<b>Name</b>	uUUIDIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.2
<b>Description</b>	Defines the index of the UUID in a specified chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 9. UUID Type**

<b>Name</b>	uUUIDType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.3
<b>Description</b>	Defines the type of the UUID for this chassis.
<b>Syntax</b>	DellUUIDType
<b>Access</b>	Read-only

**Table 10. UUID Value**

<b>Name</b>	uUUIDValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.4
<b>Description</b>	Defines the value of the UUID for this chassis.
<b>Syntax</b>	Octet String (SIZE[16])

## Section Organization

Sections in this reference guide are based on the Server Administrator MIBs, so the complexity of each section depends on the complexity of each MIB group. The first section provides a high-level introduction to the MIB group. If the group is defined by one or more tables, the second section lists these tables. The third section documents the variables that comprise the group, and if applicable, the variables that comprise the tables. The fourth section contains definitions for any Server Administrator-specific variables that are used in the section. The following example shows the typical content of these four sections:

1. BIOS Setup Control Group — This section explains the purpose of the MIB group and summarizes the major features of the component groups.
2. BIOS Group Tables — If there is more than one SNMP table for a group, this section lists all of the tables. For this BIOS group example, there are eight tables listed. In each section, double-clicking any table on the list takes you to that table.
  - BIOS Setup Control Table
  - SCSI Control Table
  - Parallel Port Control Table
  - Serial Port Control Table
  - USB Control Table
  - IDE Control Table
  - Diskette Control Table
  - Network Interface Control Table
3. Variables that make up each table in the group — This section documents the variables for the eight tables that comprise the BIOS group.
4. BIOS Variable Values — This section explains any Server Administrator-specific variables and data types that are used in this section. In the BIOS group example, there are 17 unique, Server Administrator-specific variable meanings. Information on each Server Administrator-specific variable is presented in a formatted table.

## Other Documents You May Need

In addition to this guide, you can access the following guides available on the Dell Support website at [dell.com/support/manuals](https://dell.com/support/manuals). On the **Manuals** page, click **Software Systems Management**. Click the appropriate product link on the right-side to access the documents.

- The *Server Administrator Messages Reference Guide* lists the messages that you can receive on your systems management console or on your operating system's event viewer. This guide explains the text, severity, and cause of each message that the server administrator issues.
- The *Server Administrator CIM Reference Guide* documents the Common Information Model (CIM) provider, an extension of the standard management object format (MOF) file. The Server-Administrator CIM provider documents supported classes of management objects.
- The *Glossary* provides information on the terms used in this document.

## Introduction to the Server Administrator SNMP Subagent

This guide provides formatted information drawn primarily from the MIB files written for the Server Administrator services that support the SNMP protocol.

For each of the variables defined in the MIBs, the following fields are specified:

- Variable name
- OID or unique identifying number
- Description
- Data type of the variable (for example: integer, string, octet string)
- Whether the variable is accessible, not accessible, or read-only
- Index or indexes, if applicable

For each MIB group that has unique variable definitions, tables are included in the last section of the section to explain the meaning of the terms.

Standards for writing MIBs are defined by the Internet Engineering Task Force (IETF). Structure of Management Information (SMI) is a standard that specifies the rules for defining the structure and type of managed objects and events in a MIB. SMIv1 is specified in Request For Comments (RFC) 1155. The Server Administrator MIB conforms to the SMIv1 standard.

SNMP is a systems management standard originally designed for network management. SNMP manages much more than networks. Information Technology (IT) professionals use SNMP for monitoring and managing computer systems and the various components and peripherals supported by their systems.

SNMP standards are defined by the Internet Engineering Task Force (IETF). SNMP version 1 was published in August 1988 and is the most commonly supported version of SNMP. SNMP version 2 was first published in May 1993, but has not gained widespread market acceptance. SNMP version 3 was recently completed and has addressed security issues that exist in version 1.

All SNMP systems consist of one or more managed systems that provide data through an SNMP agent to a management system. The management system provides a user interface to view data from the managed systems. The management system and managed systems communicate over a network (typically through User Datagram Protocol/Internet Protocol [UDP/IP]).

The management system and a managed system communicate by means of a common data schema. SNMP MIB files define the structure, type, and values of the SNMP data. While MIBs can be standardized or enterprise specific, most operating systems supply SNMP agents for the standard MIB-I and MIB-II schemas. MIB-I defines a base set of standard management information for systems implementing the Internet Protocol (IP) suite. MIB-II defines characteristics of the system, characteristics of network interfaces, and characteristics of components of the IP on the system. In addition to the standard MIBs, many hardware vendors have defined MIBs that provide management data specific to their systems and peripheral devices.

Monitored data can be retrieved through SNMP using the Get command. Typically, this command requires the host name or IP address of the target machine as well as the OID of the data to retrieve. Exact details are dependent on the operating system and the development tools being used to create the management application. The Get command has a variant known as GetNext.


## Management Information Base Object Identifiers

Each data class within a Management Information Base (MIB) is defined by an Object Identifier (OID). OIDs are unique across all MIBs. An OID consists of a series of digits separated by periods. The OID functions in a similar fashion to a phone number. The phone number 011-512-471-0000 uniquely identifies a single phone. The phone number can be broken down into a number of components to uniquely identify a phone. The first component, 011, is the country code for the United States. The second component, 512, identifies the area code for central Texas. The third component, 471, is the phone exchange for a large state university in the city of Austin. The final component, 0000, is the main switchboard.

There are two main differences between the phone number example and an actual OID. The first difference is that there are many more components in an OID, up to 128. The combination of these components is called an OID prefix. The second difference is that OIDs support the concept of indexes or keys. The OID prefix specifies the data class but does not specify an instance of the data within the class. Indexes can be used to identify the instances of a data class. These indexes are referred to as the OID suffix.

The assignment of values for each OID prefix component can be illustrated by using a tree structure. The following is an example of an OID assignment:

**Table 11. ROOT**

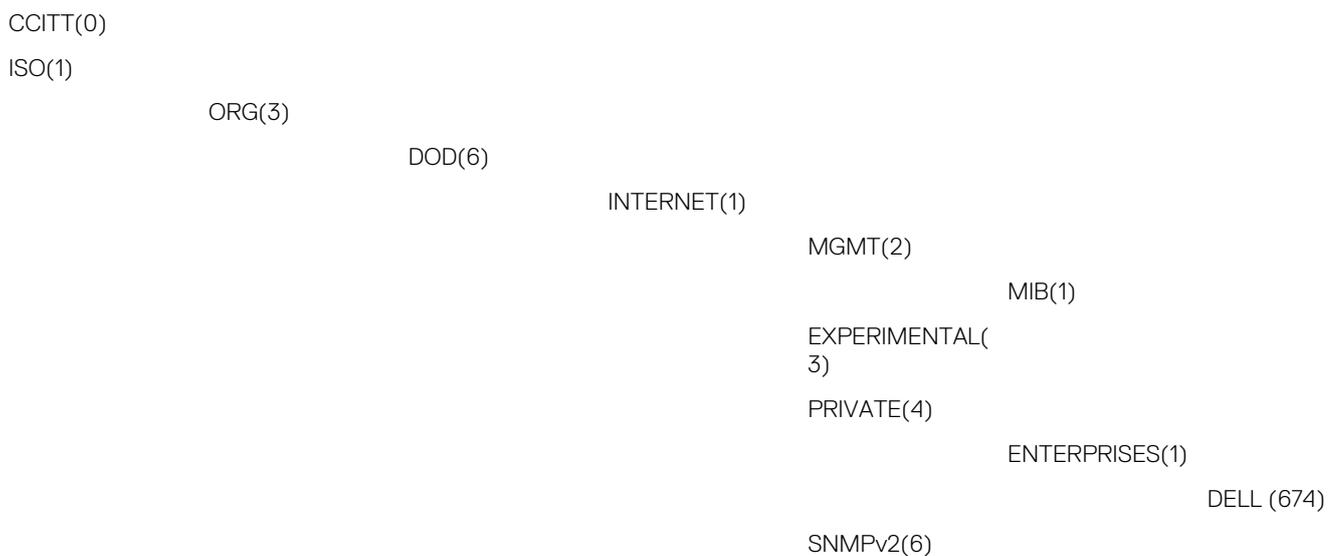

In the preceding example, the OID prefix for the Dell enterprise would be 1.3.6.1.4.1.674.

The numbers in boldface type show the categories and numbers that apply to Server Administrator. All Server Administrator-defined OIDs consist of 1.3.6.1.4.1.674 followed by additional component values.

## SNMP Security

SNMP version 1 has a very limited security mechanism. SNMP agents support the use of a community string, which is configured at each SNMP agent and is passed as a part of all SNMP request messages. There is no verification that the requester is actually a member of the specified community. As most system and network management data is not confidential, this limited security is acceptable for Get types of requests. On the other hand, this security is not acceptable for Set types of operations where an SNMP request could power off a system, reconfigure a redundant array of independent disks (RAID) card, and so on. Dell has chosen not to support SNMP Set operations for this reason.

**i** **NOTE:** The default SNMP agent configuration usually includes a SNMP community name such as public. For security reasons, change the SNMP community names from their default values. For information about changing SNMP community names, see the *Dell OpenManage Server Administrator User's Guide* available on the Dell Support website at [dell.com/openmanagemanuals](http://dell.com/openmanagemanuals).

**i** **NOTE:** As of iDRAC7 firmware release r1.30.30, iDRAC7 supports SNMP query operations (GET, GETNEXT, GETBULK) via the SNMPv3 protocol, in addition to supporting query operations via the SNMP v1 and SNMP v2c protocols. More specifically, iDRAC7 now supports the SNMP User Security Model (USM).

## SNMP Traps

SNMP is frequently used to monitor systems for fault conditions such as temperature violations, hard drive failures, and so on. Management applications can monitor for these conditions by polling the appropriate OIDs with the Get command and analyzing the returned data. This method has its drawbacks. If it is done frequently, significant amounts of network bandwidth can be consumed. If it is done infrequently, the response to the fault condition may not occur in a timely fashion. SNMP traps avoid these limitations of the polling method.

An SNMP trap is an asynchronous event indicating that something significant has occurred. This is analogous to a pager receiving an important message, except that the SNMP trap frequently contains all the information needed to diagnose a fault.

Two drawbacks to SNMP traps are that they are sent using UDP, which is not a guaranteed delivery mechanism, and that they are not acknowledged by the receiver.

An SNMP trap message contains the trap's enterprise OID, the agent IP address, a generic trap ID, the specific trap ID, a time stamp, and zero or more variable bindings (varbinds). The combination of an enterprise OID and a specific trap ID uniquely identifies each Server Administrator-defined trap. A varbind consists of an OID and its value and provides additional information about the trap.

In order for a management system to receive SNMP traps from a managed system, the node must be configured to send traps to the management system. Trap destination configuration is dependent on the operating system. When this configuration is done, a management application on the management system can wait for traps and act on them when received.

**i** **NOTE:** For information on Server Administrator Storage Management traps, see in **Storage Management Alert Reference**, the

[Alert Descriptions and Corrective Actions](#).

**i** **NOTE:** For the list of storage management alerts and storage management messages, see the *Dell OpenManage Server Administrator Messages Reference Guide* available on the Dell Support site at [dell.com/openmanagemanuals](http://dell.com/openmanagemanuals) navigate to **OpenManage Software** and select the version required.

# Server Administrator Group

The Server Administrator group comprises of the following sections:

- Instrumentation MIB Version Group
- Systems Management Software Group
- System State Group
- Chassis Information Group
- Operating System Group
- System Resource Group
- Power Group
- Thermal Group
- Remote Flash BIOS Group
- Port Group
- Device Group
- Slot Group
- Memory Group
- BIOS Setup Control Group
- Local Response Agent Group
- Cost of Ownership Group
- Cluster Group
- Baseboard Management Controller Group
- Field Replaceable Unit Group

## Topics:

- Instrumentation MIB Version Group
- Systems Management Software Group
- System State Group
- Chassis Information Group
- Operating System Group
- System Resource Group
- Power Group
- Thermal Group
- Remote Flash BIOS Group
- Port Group
- Device Group
- Slot Group
- Memory Group
- BIOS Setup Control Group
- Local Response Agent Group
- Cost of Ownership Group
- Cluster Group
- Baseboard Management Controller Group
- Field Replaceable Unit Group

## Instrumentation MIB Version Group

The Instrumentation Management Information Base (MIB) Version Group defines the attributes that identify the version of the Instrumentation MIB supported by the systems management software.

The `mIBMajorVersionNumber`, `mIBMinorVersionNumber`, and `mIBMaintenanceVersionNumber` attributes are scalar objects, meaning that they are not related to other MIB objects and are thus not placed in a table.

## Management Information Base Major Version Number

<b>Name</b>	mIBMajorVersionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1.1.0
<b>Description</b>	Defines the major version number of the version of this MIB supported by the systems management software. For example, if the MIB version is 1.2.3, the major version number is 1.  A major version number change indicates a major change in object functionality.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

## Management Information Base Minor Version Number

<b>Name</b>	mIBMinorVersionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1.2.0
<b>Description</b>	Defines the minor version number of the version of this MIB supported by the systems management software. For example, if the MIB version is 1.2.3, the minor version number is 2.  A minor revision provides additional support for new objects as well as problem fixes.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

## Management Information Base Maintenance Version Number

<b>Name</b>	mIBMaintenanceVersionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1.3.0
<b>Description</b>	Defines the maintenance version number for the version of this MIB supported by the systems management software. For example, if the MIB version is 1.2.3, the maintenance version number is 3.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

## Systems Management Software Group

The Systems Management Software Group allows users to see information about the standards and software that are supported by the agent of a particular managed computer chassis. The Systems Management Software Group classifies each computer chassis according to the systems management standard that the agent supports.

Additional objects define the universal resource locator (URL) of the systems management software and the language in which systems management information displays. Defining these objects enables users to manage a system using an internet browser. You can access Server Administrator using the secure hypertext transfer protocol (https) and a pre-assigned port number of 1311, or you can specify a port number of your own choosing.

 **NOTE: Using the Software > Server Preferences menu of Server Administrator, you can bind to either one IP address or to all IP addresses.**

To manage a system locally using Server Administrator, type the following in the address field of your browser: `https://localhost:<1311 or user-specified port number>`

To manage a system remotely using Server Administrator, type one of the following in the address field of your browser:

https://<systemname>:<1311 or user specified port number> or https://<IP address>:<1311 or user specified port number>

## Systems Management Software

The following objects describe the fields for server administrator systems management information. The systems management software variables are scalar objects, meaning that they are not related to other management information base (MIB) objects and are thus not placed in a table.

**Table 12. Systems Management Software Name**

<b>Name</b>	systemManagementSoftwareName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.1
<b>Description</b>	Defines the systems management software product name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 13. Systems Management Software Version Number Name**

<b>Name</b>	systemManagementSoftwareVersionNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.2
<b>Description</b>	Defines the version number of the systems management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 14. Systems Management Software Build Number**

<b>Name</b>	systemManagementSoftwareBuildNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.3
<b>Description</b>	Defines the build number of the systems management software.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

**Table 15. Systems Management Software Description Name**

<b>Name</b>	systemManagementSoftwareDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.4
<b>Description</b>	Defines the description of the systems management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 16. Systems Management Software Supported Protocol**

<b>Name</b>	systemManagementSoftwareSupportedProtocol
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.5
<b>Description</b>	Defines the systems management standards (SNMP or CIM) supported by the systems management software.
<b>Syntax</b>	SMSSupportedTypes ( <a href="#">Systems Management Software Supported Standards</a> )
<b>Access</b>	Read-only

**Table 17. Systems Management Software Preferred Protocol**

<b>Name</b>	systemManagementSoftwarePreferredProtocol
-------------	---

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.6
<b>Description</b>	Defines the preferred systems management standard for the systems management software.
<b>Syntax</b>	SMSSupportedTypes ( <a href="#">Systems Management Software Supported Standards</a> )
<b>Access</b>	Read-only

**Table 18. Systems Management Software Update Level Name**

<b>Name</b>	systemManagementSoftwareUpdateLevelName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.7
<b>Description</b>	Defines the update level of the system management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 19. Systems Management Software URL Name**

<b>Name</b>	systemManagementSoftwareURLName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.8
<b>Description</b>	Defines the universal resource locator (URL) of the systems management software.
<b>Syntax</b>	DisplayString (SIZE (0..1024))
<b>Access</b>	Read-only

**Table 20. Systems Management Software Language Name**

<b>Name</b>	systemManagementSoftwareLanguageName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.9
<b>Description</b>	Defines the language of the systems management software.
<b>Syntax</b>	DisplayString (SIZE (0..255))
<b>Access</b>	Read-only

**Table 21. Systems Management Software Global Version Name**

<b>Name</b>	systemManagementSoftwareGlobalVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.10
<b>Description</b>	Defines the global version of the systems management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 22. Systems Management Software Feature Flags**

<b>Name</b>	systemManagementSoftwareFeatureFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.11
<b>Description</b>	Defines the features of the systems management software.
<b>Syntax</b>	SMSFeatureFlags ( <a href="#">Systems Management Software Feature Flags</a> )
<b>Access</b>	Read-only

**Table 23. Systems Management Software SNMP Agent Feature Flags**

<b>Name</b>	systemManagementSoftwareSNMPAgentFeatureFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.12
<b>Description</b>	Defines the features of the SNMP agent software provided by the operating system.

<b>Syntax</b>	SMSSNMPAgentFeatureFlags ( <a href="#">Systems Management Software SNMP Agent Feature Flags</a> )
<b>Access</b>	Read-only

**Table 24. Systems Management Software Manufacturer Name**

<b>Name</b>	systemManagementSoftwareManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.13
<b>Description</b>	Defines the manufacturer of the systems management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Systems Management Software Variable Values

This section includes definitions of server administrator-specific variable values used in this section.

**Table 25. Systems Management Software Supported Standards**

**Variable Name:** SMSSupportedTypes

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
supportsSNMP (1)	This system supports SNMP.
supportsDMI (2)	This system supports DMI.
supportsSNMPandDMI (3)	This system supports SNMP and DMI.
supportsCIMOM (4)	This system supports CIM.
supportsSNMPandCIMOM (5)	This system supports SNMP and CIM.

**Table 26. Systems Management Software Feature Flags**

**Variable Name:** SMSFeatureFlags

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none (0)	The Systems Management Software features are not enabled.
webOneToOneManagementPreferred (1)	The web 1:1 management preferred feature is enabled

**Table 27. Systems Management Software SNMP Agent Feature Flags**

**Variable Name:** SMSSNMPAgentFeatureFlags

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none (0)	The Systems Management Software SNMP agent features are not enabled.
supportsSparseTables (1)	The SNMP agent supports sparse tables.

## System State Group

The Management Information Base (MIB) variables presented in this section enable you to track various attributes that describe the state of the critical components supported by your system. Components monitored under the System State Group include power supplies, AC power cords, AC power switches, and cooling devices, as well as temperature, fan, amperage, and voltage probes.

# System State Group Table

The System State Group defines objects in the System State MIB table.

## System State Table

The **systemStateGlobalSystemStatus** variable provides overall system health status and includes rolled-up (that is, worst) status for Instrumentation and Storage. This variable monitors the overall system health status. It reflects changes to **systemStateChassisStatus** variable, which represents Instrumentation health status and **agentGlobalSystemStatus** (`dcstorag.mib`), which represents Storage health status.

The **systemStateChassisStatus** variable provides the rolled-up health status for the subsystems associated with the chassis that is represented by the row in the **systemStateTable**. Changes to the variables in [List 1](#), each of which indicates the rolled-up health status of all the components of the corresponding subsystem, are reflected in **systemStateChassisStatus** variable.

For example, **systemStatePowerSupplyStatusCombined** provides the rolled up status of all power supplies for the chassis.

The variables in [List 2](#) provide the health status of each component of the corresponding subsystem. Each octet of the value represents a component. If a power supply fails, the corresponding entry in **systemStatePowerSupplyStatusDetails**, **systemStatePowerSupplyStatusCombined**, **systemStateChassisStatus** and **systemStateGlobalSystemStatus** transitions to critical.

## List 1

Variables that provide rolled-up health status for all components in associated subsystem in chassis:

- `systemStatePowerSupplyStatusCombined`
- `systemStateVoltageStatusCombined`
- `systemStateAmperageStatusCombined`
- `systemStateCoolingDeviceStatusCombined`
- `systemStateTemperatureStatusCombined`
- `systemStateMemoryDeviceStatusCombined`
- `systemStateChassisIntrusionStatusCombined`
- `systemStateACPowerCordStatusCombined`
- `systemStateEventLogStatus`
- `systemStatePowerUnitStatusCombined`
- `systemStateCoolingUnitStatusCombined`
- `systemStateACPowerSwitchStatusCombined`
- `systemStateRedundantMemoryUnitStatusCombined`
- `systemStateProcessorDeviceStatusCombined`
- `systemStateBatteryStatusCombined`
- `systemStateSDCardUnitStatusCombined`
- `systemStateSDCardDeviceStatusCombined`

## List 2

Variables that provide health status of each component in associated subsystem in chassis:

- `systemStatePowerSupplyStatusDetails`
- `systemStateVoltageStatusDetails`
- `systemStateAmperageStatusDetails`
- `systemStateCoolingDeviceStatusDetails`
- `systemStateTemperatureStatusDetails`
- `systemStateMemoryDeviceStatusDetails`
- `systemStateChassisIntrusionStatusDetails`
- `systemStateACPowerCordStatusDetails`
- `systemStatePowerUnitStatusList`
- `systemStateCoolingUnitStatusList`
- `systemStateACPowerSwitchStatusList`
- `systemStateRedundantMemoryUnitStatusList`
- `systemStateProcessorDeviceStatusList`
- `systemStateBatteryStatusList`

- systemStateSDCardUnitStatusList
- systemStateSDCardDeviceStatusList

## System State Table

The following object sets up the System State Table:

**Table 28. System State Table**

<b>Name</b>	systemStateTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10
<b>Description</b>	Defines the System State Table.
<b>Syntax</b>	SEQUENCE OF SystemStateTableEntry
<b>Access</b>	Not accessible

**Table 29. System State Table Entry**

<b>Name</b>	systemStateTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1
<b>Description</b>	Defines the System State Table entry.
<b>Syntax</b>	SystemStateTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemStatechassisIndex

**Table 30. System State Chassis Index**

<b>Name</b>	systemStatechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 31. System State Global System Status**

<b>Name</b>	systemStateGlobalSystemStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.2
<b>Description</b>	Defines the global system status of all chassis being monitored by this instrumentation instance.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 32. System State Chassis State**

<b>Name</b>	systemStateChassisState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.3
<b>Description</b>	Defines the system state of this chassis.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 33. System State Chassis Status**

<b>Name</b>	systemStateChassisStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.4

<b>Description</b>	Defines the system status of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 34. System State Power Unit State Details**

<b>Name</b>	systemStatePowerUnitStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.5
<b>Description</b>	Defines the state of all power units in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific power unit. The first byte returned represents the state of the first power unit, the second byte returned represents the state of the second power unit, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 35. System State Power Unit Status Redundancy**

<b>Name</b>	systemStatePowerUnitStatusRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.6
<b>Description</b>	Defines the system status of the power unit(s) in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 36. System State Power Unit Status Details**

<b>Name</b>	systemStatePowerUnitStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.7
<b>Description</b>	Defines the status of all power units in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific power unit. The first byte returned represents the status of the first power unit, the second byte returned represents the status of the second power unit, and so on. The bytes have the same definition type as DellStatusRedundancy.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 37. System State Power Supply State Details**

<b>Name</b>	systemStatePowerSupplyStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.8
<b>Description</b>	Defines the state of all power supplies in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific power supply. The first byte returned represents the state of the first power supply, the second byte returned represents the state of the second power supply, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 38. System State Power Supply Status Combined**

<b>Name</b>	systemStatePowerSupplyStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.9
<b>Description</b>	Defines the status of all power supplies in this chassis.

<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 39. System State Power Supply Status Details**

<b>Name</b>	systemStatePowerSupplyStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.10
<b>Description</b>	Defines the status of all power supplies in this chassis. The results are returned as a binary octet string, Each byte of the octet string represents the status of a specific power supply. The first byte returned represents the status of the first power supply, the second byte returned represents the status of the second power supply, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	Octet String (Size (1..128))
<b>Access</b>	Read-only

**Table 40. System State Voltage State Details**

<b>Name</b>	systemStateVoltageStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.11
<b>Description</b>	Defines the state of all voltage probes in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific voltage probe. The first byte returned represents the status of the first voltage probe, the second byte returned represents the status of the second voltage probe, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 41. System State Voltage Status Combined**

<b>Name</b>	systemStateVoltageStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.12
<b>Description</b>	Defines the status of all voltage probes in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 42. System State Voltage Status Details**

<b>Name</b>	systemStateVoltageStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.13
<b>Description</b>	Defines the status of all voltage probes in this chassis.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 43. System State Amperage State Details**

<b>Name</b>	systemStateAmperageStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.14
<b>Description</b>	Defines the state of all current probes in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific current probe. The first byte returned represents the state of the first current probe, the second byte returned represents the state of the second current probe, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	Octet String

**Access** Read-only

**Table 44. System State Amperage Status Combined**

**Name** `systemStateAmperageStatusCombined`  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.15  
**Description** Defines the status of all amperage probes in this chassis. The result is returned as a combined status value. The value has the same definition type as `DellStatus`.  
**Syntax** `DellStatus`  
**Access** Read-only

**Table 45. System State Amperage Status Details**

**Name** `systemStateAmperageStatusDetails`  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.16  
**Description** Defines the status of all amperage probes in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific amperage probe. The first byte returned represents the status of the first amperage probe, the second byte returned represents the status of the second amperage probe, and so on. The bytes have the same definition type as `DellStatus`.  
**Syntax** Octet String  
**Access** Read-only

**Table 46. System State Cooling Unit State Details**

**Name** `statesystemStateCoolingUnitStateDetails`  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.17  
**Description** Defines the state of all cooling units in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific cooling unit. The first byte returned represents the state of the first cooling unit, the second byte returned represents the state of the second cooling unit, and so on. The bytes have the same definition type as `DellStateSettings`.  
**Syntax** Octet String  
**Access** Read-only

**Table 47. System State Cooling Unit Status Redundancy**

**Name** `systemStateCoolingUnitStatusRedundancy`  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.18  
**Description** Defines the state of all cooling units in this chassis.  
**Syntax** `DellStatusRedundancy`  
**Access** Read-only

**Table 48. System State Cooling Unit State Details**

**Name** `systemStateCoolingUnitstateDetails`  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.19  
**Description** Defines the state of all cooling units in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific cooling unit. The first byte returned represents the state of the first cooling unit, the second byte returned represents the state of the second cooling unit, and so on. The bytes have the same definition type as `DellStateSettings`.  
**Syntax** Octet String  
**Access** Read-only

**Table 49. System State Cooling Device State Details**

<b>Name</b>	systemStateCoolingDeviceStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.20
<b>Description</b>	Defines the state of all cooling devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific cooling device. The first byte returned represents the state of the first cooling device, the second byte returned represents the state of the second cooling device, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 50. System State Cooling Device Status Combined**

<b>Name</b>	systemStateCoolingDeviceStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.21
<b>Description</b>	This attribute defines the cooling device status of all cooling devices in this chassis. The results is returned as a combined status value. The value has the same definition type as DellStatus.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 51. System State Cooling Device Status Details**

<b>Name</b>	systemStateCoolingDeviceStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.22
<b>Description</b>	Defines the status of all cooling devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific cooling device. The first byte returned represents the status of the first cooling device, the second byte returned represents the status of the second cooling device, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 52. System State Temperature State Details**

<b>Name</b>	systemStateTemperatureStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.23
<b>Description</b>	Defines the state of all temperature probes in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific temperature probe. The first byte returned represents the state of the first temperature probe, the second byte returned represents the status of the second temperature probe, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 53. System State Temperature Status Combined**

<b>Name</b>	systemStateTemperatureStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.24
<b>Description</b>	Defines the status of all temperature probes in this chassis. The result is returned as a combined status value. The value has the same definition type as DellStatus.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 54. System State Temperature Status Details**

<b>Name</b>	systemStateTemperatureStatusDetailsly
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.25
<b>Description</b>	Defines the status of all temperature probes in this chassis. The first byte returned represents the status of the first temperature probe, the second byte returned represents the status of the second temperature probe, and so on.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 55. System State Memory Device State Details**

<b>Name</b>	systemStateMemoryDeviceStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.26
<b>Description</b>	Defines the state of all memory devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of the specific memory device. The first byte returned represents the state of the first memory device, the second byte returned represents the status of the second memory device, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 56. System State Memory Device Status Combined**

<b>Name</b>	systemStateMemoryDeviceStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.27
<b>Description</b>	Defines the status of all memory devices in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 57. System State Memory Device Status Details**

<b>Name</b>	systemStateMemoryDeviceStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.28
<b>Description</b>	Defines the status of all memory devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific memory device. The first byte returned represents the status of the first memory device, the second byte returned represents the status of the second memory device, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 58. System State Chassis Intrusion State Details**

<b>Name</b>	systemStateChassisIntrusionStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.29
<b>Description</b>	Defines the intrusion state of all intrusion detection devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific intrusion detection device. The first byte returned represents the status of the first intrusion detection device, the second byte returned represents the status of the second intrusion detection device, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 59. System State Chassis Intrusion Status Combined**

<b>Name</b>	systemStateChassisIntrusionStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.30
<b>Description</b>	Defines the intrusion status of all intrusion detection devices in this chassis. The result is returned as a combined status value. The value has the same definition type as DellStatus.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 60. System State Chassis Intrusion Status Details**

<b>Name</b>	systemStateChassisIntrusionStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.31
<b>Description</b>	Defines the intrusion status of all intrusion detection devices in this chassis. The first byte returned represents the status of the first intrusion detection device, the second byte returned represents the status of the second intrusion detection device, and so on.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 61. System State AC Power Switch State Details**

<b>Name</b>	systemStateACPowerSwitchStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.32
<b>Description</b>	Defines the individual state of all AC power switches in this chassis. The first byte returned represents the state of the first AC power switch, the second byte returned represents the state of the second AC power switch, and so on.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 62. System State AC Power Switch Status Redundancy**

<b>Name</b>	systemStateACPowerSwitchStatusRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.33
<b>Description</b>	Defines the overall redundancy status of the AC power switches in this chassis.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

**Table 63. System State AC Power Switch Status Details**

<b>Name</b>	systemStateACPowerSwitchStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.34
<b>Description</b>	Defines the individual status of all AC power switches in this chassis. The first byte returned represents the status of the first AC power switch, the second byte returned represents the status of the second AC power switch, and so on.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 64. System State AC Power Cord State Details**

<b>Name</b>	systemStateACPowerCordStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.35

<b>Description</b>	Defines the individual state of all AC power cords for any AC power switches in this chassis. The first byte returned represents the state of the first AC power cord, the second byte returned represents the state of the second AC power cord, and so on.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 65. System State AC Power Cord Status Combined**

<b>Name</b>	systemStateACPowerCordStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.36
<b>Description</b>	Defines the overall status of all AC power cords for any AC power switches in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 66. System State AC Power Cord Status Details**

<b>Name</b>	systemStateACPowerCordStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.37
<b>Description</b>	Defines the individual status of all AC power cords for any AC power switches in this chassis. The first byte returned represents the status of the first AC power cord, the second byte returned represents the status of the second AC power cord, and so on.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 67. System State Redundant Memory Unit State Details**

<b>Name</b>	systemStateRedundantMemoryUnitStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.38
<b>Description</b>	Defines the state of all redundant memory units in this chassis. The results are returned as a binary octet string, each byte of the octet string represents the state of the specific object. The first byte returned represents the state of the first object, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 68. System State Redundant Memory Unit Status Redundancy**

<b>Name</b>	systemStateRedundantMemoryUnitStatusRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.39
<b>Description</b>	Defines the overall redundancy status for redundant memory.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

**Table 69. System State Redundant Memory Unit Status Details**

<b>Name</b>	systemStateRedundantMemoryUnitStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.40
<b>Description</b>	Defines the status of all redundant memory units in this chassis. The results are returned as a binary octet string, each byte of the octet string represents the status of the specific object. The first byte returned represents the status of the first object, and so on. The bytes have the same definition type as DellStatusRedundancy.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 70. System State Event Log Status**

<b>Name</b>	systemStateEventLogStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.41
<b>Description</b>	Defines the overall status of this chassis (ESM) event log.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 71. System State Power Unit Status Combined**

<b>Name</b>	systemStatePowerUnitStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.42
<b>Description</b>	Defines the combined status of all power units of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 72. System State Power Unit Status List**

<b>Name</b>	systemStatePowerUnitStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.43
<b>Description</b>	Lists the status of each power unit of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a power unit. The first byte returned represents the status of the first power unit, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 73. System State Cooling Unit Status Combined**

<b>Name</b>	systemStateCoolingUnitStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.44
<b>Description</b>	Defines the combined status of all cooling units of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 74. System State Cooling Unit Status List**

<b>Name</b>	systemStateCoolingUnitStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.45
<b>Description</b>	Lists the status of each cooling unit of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a cooling unit. The first byte returned represents the status of the first cooling unit, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 75. System State AC Power Switch Status Combined**

<b>Name</b>	systemStateACPowerSwitchStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.46
<b>Description</b>	Defines the combined status of all AC power switches of this chassis.
<b>Syntax</b>	DellStatus

**Access** Read-only

#### Table 76. System State AC Power Switch Status List

**Name** systemStateACPowerSwitchStatusList  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.47  
**Description** Lists the status of each AC power switch of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of an AC power switch. The first byte returned represents the status of the first AC power switch, and so on. The bytes have the same definition type as DellStatus.  
**Syntax** Octet String  
**Access** Read-only

#### Table 77. System State Redundant Memory Unit Status Combined

**Name** systemStateRedundantMemoryUnitStatusCombined  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.48  
**Description** Defines the combined status of all redundant memory units of this chassis.  
**Syntax** DellStatus  
**Access** Read-only

#### Table 78. System State Redundant Memory Unit Status List

**Name** systemStateRedundantMemoryUnitStatusList  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.49  
**Description** Lists the status of each redundant memory unit of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a redundant memory unit. The first byte returned represents the status of the first redundant memory unit, and so on. The bytes have the same definition type as DellStatus.  
**Syntax** Octet String  
**Access** Read-only

#### Table 79. System State Processor Device Status Combined

**Name** systemStateProcessorDeviceStatusCombined  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.50  
**Description** Defines the combined status of all processor devices of this chassis.  
**Syntax** DellStatus  
**Access** Read-only

#### Table 80. System State Processor Device Status List

**Name** systemStateProcessorDeviceStatusList  
**Object ID** 1.3.6.1.4.1.674.10892.1.200.10.1.51  
**Description** Lists the status of each processor device of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a processor device. The first byte returned represents the status of the first processor device, and so on. The bytes have the same definition type as DellStatus.  
**Syntax** Octet String  
**Access** Read-only

#### Table 81. System State Battery Status Combined

**Name** systemStateBatteryStatusCombined

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.52
<b>Description</b>	Defines the combined status of all batteries of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 82. System State Battery Status List**

<b>Name</b>	systemStateBatteryStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.53
<b>Description</b>	Lists the status of each battery of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a battery. The first byte returned represents the status of the first battery, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 83. System State SD Card Unit Status Combined**

<b>Name</b>	systemStateSDCardUnitStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.54
<b>Description</b>	Defines the combined status of all SD Card units of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 84. System State SD Card Unit Status List**

<b>Name</b>	systemStateSDCardUnitStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.55
<b>Description</b>	Lists the status of each SD Card unit of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a SD Card unit. The first byte returned represents the status of the first SD Card unit, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 85. System State SD Card Device Status Combined**

<b>Name</b>	systemStateSDCardDeviceStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.56
<b>Description</b>	Defines the combined status of all SD Card devices of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 86. System State SD Card Device Status List**

<b>Name</b>	systemStateSDCardDeviceStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.57
<b>Description</b>	Lists the status of each SD Card device of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a SD Card device. The first byte returned represents the status of the first SD Card device, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	Octet String

## Chassis Information Group

The Chassis Information Group provides information about the type or types of chassis in your system, as well as information about the light-emitting diode (LED) indicators and settings for devices on each chassis. Information is also available about the current date and time displayed on the chassis, intrusion warnings, watchdog timer, systems management basic input/output system (SMBIOS), and so on.

## Chassis Information Group Tables

The following management information base (MIB) tables define the objects in the Chassis Information Group:

- [Chassis Information Table](#)
- [UUID Table](#)
- [POST Log Table](#)
- [Event Log Table](#)
- [System BIOS Table](#)
- [Firmware Table](#)
- [Intrusion Table](#)
- [Baseboard Table](#)

## Chassis Information Table

The following object sets up the Chassis Information Table.

**Table 87. Chassis Information Table**

<b>Name</b>	chassisInformationTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10
<b>Description</b>	Defines the chassis information table.
<b>Syntax</b>	SEQUENCE OF ChassisInformationTableEntry
<b>Access</b>	Not accessible

**Table 88. Chassis Information Table Entry**

<b>Name</b>	chassisInformationTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1
<b>Description</b>	Defines the chassis information table entry.
<b>Syntax</b>	ChassisInformationTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	chassisIndexChassisInformation

**Table 89. Chassis Index Chassis Information**

<b>Name</b>	chassisIndexChassisInformation
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis. The first chassis is numbered one.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 90. Chassis State Capabilities**

<b>Name</b>	chassisStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.2

<b>Description</b>	Defines the capabilities of the chassis.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 91. Chassis State Settings**

<b>Name</b>	chassisStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.3
<b>Description</b>	Defines the state settings for the chassis.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 92. Chassis Status**

<b>Name</b>	chassisStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.4
<b>Description</b>	Defines the status of the chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 93. Chassis Parent Index Reference**

<b>Name</b>	chassisparentIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.4
<b>Description</b>	Defines the index (one-based) of the parent chassis of this chassis, if any. A zero (0) means that this chassis is the parent of all other chassis managed by the Server Administrator.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 94. Chassis Type**

<b>Name</b>	chassisType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.6
<b>Description</b>	Defines the chassis type.
<b>Syntax</b>	DellChassisType (See <a href="#">Chassis Type</a> )
<b>Access</b>	Read-only

**Table 95. Chassis Name**

<b>Name</b>	chassisName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.7
<b>Description</b>	Defines the user-assigned chassis name of the chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 96. Chassis Manufacturer Name**

<b>Name</b>	chassisManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.8
<b>Description</b>	Defines the manufacturer's name for this chassis.
<b>Syntax</b>	DellString

**Access** Read-only

**Table 97. Chassis Model Name**

**Name** chassisModelName  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.9  
**Description** Defines the system model type for this chassis.  
**Syntax** DellString  
**Access** Read-only

**Table 98. Chassis Asset Tag Name**

**Name** chassisAssetTagName  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.10  
**Description** Defines the user-assigned asset tag name for this chassis.  
**Syntax** DisplayString  
**Access** Read-only

**Table 99. Chassis Service Tag Name**

**Name** chassisServiceTagName  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.11  
**Description** Defines the service tag name for this chassis.  
**Syntax** DisplayString  
**Access** Read-only

**Table 100. Chassis ID**

**Name** chassisID  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.12  
**Description** Defines the asset tag name for this chassis.  
**Syntax** DellUnsigned8BitRange  
**Access** Read-only

**Table 101. Chassis ID Extension**

**Name** chassisIDExtension  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.13  
**Description** Defines the SMBIOS machine ID of this chassis.  
**Syntax** DellUnsigned16BitRange  
**Access** Read-only

**Table 102. Chassis System Class**

**Name** chassisSystemClass  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.14  
**Description** Defines the chassis class of this chassis.  
**Syntax** DellChassisSystemClass (See [Chassis Type](#))  
**Access** Read-only

### Table 103. Chassis System Name

<b>Name</b>	chassisSystemName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.15
<b>Description</b>	Defines the system name of this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Table 104. Chassis System Boot Date Name

<b>Name</b>	chassisSystemBootDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.16
<b>Description</b>	Defines the boot time of this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

### Table 105. Chassis System Date Name

<b>Name</b>	chassisSystemDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.17
<b>Description</b>	Defines the current time on this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

### Table 106. Chassis System Location Name

<b>Name</b>	chassisSystemLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.18
<b>Description</b>	Defines the user-assigned location for this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Table 107. Chassis System Primary User Name

<b>Name</b>	chassisSystemPrimaryUserName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.19
<b>Description</b>	Defines the user-assigned primary user name for this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Table 108. Chassis System User Phone Number Name

<b>Name</b>	chassisSystemUserPhoneNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.20
<b>Description</b>	Defines the user-assigned phone number of the primary user of the system.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Table 109. Chassis Connection Status Unique

<b>Name</b>	chassisConnectionStatusUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.21

<b>Description</b>	Defines the status of the connection from the system chassis to an expansion chassis.
<b>Syntax</b>	DellConnectionStatus (See <a href="#">Connection Status</a> )
<b>Access</b>	Read-only

**Table 110. Chassis Fan Control Capabilities Unique**

<b>Name</b>	chassisFanControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.22
<b>Description</b>	Defines the capabilities of the fan control function in this chassis.
<b>Syntax</b>	DellFanControlCapabilities (See <a href="#">Fan Control Capabilities</a> )
<b>Access</b>	Read-only

**Table 111. Chassis Fan Control Settings Unique**

<b>Name</b>	chassisFanControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.23
<b>Description</b>	Defines the readings and settings of the fan control hardware in the chassis.
<b>Syntax</b>	DellFanControlSettings
<b>Access</b>	Read-only

**Table 112. Chassis LED Control Capabilities Unique**

<b>Name</b>	chassisLEDControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.24
<b>Description</b>	Defines the capabilities of the LED control function in the chassis.
<b>Syntax</b>	DellLEDControlCapabilities (See <a href="#">Front-Panel LED Control CapabilitiesVariable</a> )
<b>Access</b>	Read-only

**Table 113. Chassis LED Control Settings Unique**

<b>Name</b>	chassisLEDControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.25
<b>Description</b>	Defines the readings and settings of the LED control hardware in the chassis.
<b>Syntax</b>	DellLEDControlSettings (See <a href="#">Front-Panel LED Control Settings</a> )
<b>Access</b>	Read-only

**Table 114. Chassis Hard-Drive (HD) Fault Clear Control Capabilities**

<b>Name</b>	chassisHDFaultClearControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.26
<b>Description</b>	Specifies whether the chassis allows reset of the chassis hard-drive fault LED.
<b>Syntax</b>	DellHDFaultLEDControlCapabilities (See <a href="#">Hard-Drive Fault LED Control Capabilities</a> )
<b>Access</b>	Read-only

**Table 115. Chassis HD Fault Clear Control Settings**

<b>Name</b>	chassisHDFaultClearControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.27
<b>Description</b>	Allows reset of the chassis hard-drive fault LED.
<b>Syntax</b>	DellHDFaultLEDControlSettings (See <a href="#">Hard-Drive Fault LED Control Settings</a> )

**Access** Read-only

**Table 116. Chassis Identify Flash Control Capabilities**

**Name** chassisIdentifyFlashControlCapabilities  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.28  
**Description** Specifies whether the chassis front-panel LED can be set to flash.  
**Syntax** DellChassisIdentifyControlCapabilities (See [Chassis Identification Control Capabilities](#))  
**Access** Read-only

**Table 117. Chassis Identify Flash Control Settings**

**Name** chassisIdentifyFlashControlSettings  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.29  
**Description** Causes the chassis front-panel LED to flash.  
**Syntax** DellChassisIdentifyControlSettings (See [Chassis Identification Control Capabilities](#))  
**Access** Read-only

**Table 118. Chassis Lock Present**

**Name** chassisLockPresent  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.30  
**Description** Specifies whether a chassis lock is present on the chassis.  
**Syntax** DellBoolean  
**Access** Read-only

**Table 119. Chassis Host Control Capabilities Unique**

**Name** chassisHostControlCapabilitiesUnique  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.31  
**Description** Defines the capabilities of the host control object.  
**Syntax** DellHostControlCapabilities (See [Host Control Capabilities](#))  
**Access** Read-only

**Table 120. Chassis Host Control Settings Unique**

**Name** chassisHostControlSettingsUnique  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.32  
**Description** Defines the current settings of the host control object.  
**Syntax** DellHostControlSettings (See [Host Control Settings](#))  
**Access** Read-only

**Table 121. Chassis Watchdog Control Capabilities Unique**

**Name** chassisWatchDogControlCapabilitiesUnique  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.10.1.33  
**Description** Defines the capabilities of the watchdog timer object.  
**Syntax** DellWatchDogControlCapabilities (See [Watchdog Control Capabilities](#))  
**Access** Read-only

**Table 122. Chassis Watchdog Control Settings Unique**

<b>Name</b>	chassiswatchDogControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.34
<b>Description</b>	Defines the current settings and the values allowed to be set for the watchdog timer object.
<b>Syntax</b>	DellWatchDogControlCapabilities (See <a href="#">Watchdog Control Capabilities</a> )
<b>Access</b>	Read-only

**Table 123. Chassis Watchdog Control Expiry Time Capabilities Unique**

<b>Name</b>	chassiswatchDogControlExpiryTimeCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.35
<b>Description</b>	Defines the capabilities of the watchdog expiry timer object.
<b>Syntax</b>	DellWatchDogTimerCapabilities (See <a href="#">Watchdog Timer Capabilities</a> )
<b>Access</b>	Read-only

**Table 124. Chassis Watchdog Control Expiry Time**

<b>Name</b>	chassiswatchDogControlExpiryTime
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.36
<b>Description</b>	Defines the current reading and allows setting of the nonrecoverable watchdog expiry timer object.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

**Table 125. Chassis Allow Set Commands From SNMP**

<b>Name</b>	chassisallowSETCommandsfromSNMP
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.37
<b>Description</b>	Specifies whether Simple Network Management Protocol (SNMP) Set type commands are allowed by Server Administrator. This attribute does not reflect whether SNMP Set type commands are allowed by the SNMP master agent.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

**Table 126. Chassis Power Button Control Capabilities Unique**

<b>Name</b>	chassisPowerButtonControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.38
<b>Description</b>	Defines the capabilities of the power button control function.
<b>Syntax</b>	DellPowerButtonControlCapabilities (See <a href="#">Power Button Control Capabilities</a> )
<b>Access</b>	Read-only

**Table 127. Chassis Power Button Control Settings Unique**

<b>Name</b>	chassisPowerButtonControlSettingsUnique
<b>Object ID .</b>	1.3.6.1.4.1.674.10892.1.300.10.1.39
<b>Description</b>	Defines the current reading and allows setting of the power button control hardware
<b>Syntax</b>	DellPowerButtonControlSettings (See <a href="#">Power Button Control Settings</a> )
<b>Access</b>	Read-only

**Table 128. Chassis Reseller Name**

<b>Name</b>	chassisResellerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.40
<b>Description</b>	Defines the name of the chassis reseller.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 129. Chassis Reseller Contact Information Name**

<b>Name</b>	chassisResellerContactInformationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.41
<b>Description</b>	Defines the chassis reseller contact information name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 130. Chassis Reseller Product Name**

<b>Name</b>	chassisResellerProductName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.42
<b>Description</b>	Defines the chassis reseller product name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 131. Chassis Reseller System ID**

<b>Name</b>	chassisResellerSystemID
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.43
<b>Description</b>	Defines the chassis reseller system ID.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

**Table 132. Chassis NMI Button Control Capabilities Unique**

<b>Name</b>	chassisNMIButtonControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.44
<b>Description</b>	Defines the capabilities of the NMI button control function.
<b>Syntax</b>	DellNMIButtonControlCapabilities (See <a href="#">NMI Button Control Capabilities</a> )
<b>Access</b>	Read-only

**Table 133. Chassis NMI Button Control Settings Unique**

<b>Name</b>	chassisNMIButtonControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.45
<b>Description</b>	Defines the current reading and allows setting of the NMI button control hardware.
<b>Syntax</b>	DellNMIButtonControlSettings (See <a href="#">NMI Button Control Settings</a> )
<b>Access</b>	Read-only

**Table 134. Chassis System Properties**

<b>Name</b>	chassisSystemProperties
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.46

<b>Description</b>	Defines the properties of the system.
<b>Syntax</b>	DellSystemProperties (See <a href="#">System Properties</a> )
<b>Access</b>	Read-only

**Table 135. Chassis System Revision Number**

<b>Name</b>	chassisSystemRevisionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.47
<b>Description</b>	Defines the revision number of the system where zero indicates the original version of the system. The revision number is not available on all systems.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

**Table 136. Chassis System Revision Name**

<b>Name</b>	chassisSystemRevisionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.48
<b>Description</b>	Defines the revision name of the system, if applicable.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 137. Chassis Express Service Code Name**

<b>Name</b>	chassisExpressServiceCodeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.49
<b>Description</b>	Defines the express service code of the chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 138. Chassis Node ID**

<b>Name</b>	chassisNodeIDName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.50
<b>Description</b>	Defines the NodeID of the chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## UUID Table

These objects comprise the server administrator definitions for the Universal Unique Identifier (UUID).

**Table 139. UUID Table**

<b>Name</b>	uUIDTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20
<b>Description</b>	Defines the UUID table.
<b>Syntax</b>	SEQUENCE OF UUIDTableEntry
<b>Access</b>	Not accessible

**Table 140. UUID Table Entry**

<b>Name</b>	uUIDTableEntry
-------------	----------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1
<b>Description</b>	Defines the UUID table entry.
<b>Syntax</b>	UUIDTableEntry
<b>Access</b>	Not accessible

Index

```
uUUIDIndex
```

```
uUUIDchassisIndex
```

**Table 141. UUID Chassis Index**

<b>Name</b>	uUUIDchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 142. UUID Index**

<b>Name</b>	uUUIDIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.2
<b>Description</b>	Defines the index of the UUID in a specified chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 143. UUID Type**

<b>Name</b>	uUUIDType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.3
<b>Description</b>	Defines the type of the UUID for this chassis.
<b>Syntax</b>	DellUUIDType
<b>Access</b>	Read-only

**Table 144. UUID Value**

<b>Name</b>	uUUIDValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.4
<b>Description</b>	Defines the value of the UUID for this chassis.
<b>Syntax</b>	Octet String (SIZE(16))
<b>Access</b>	Read-only

## POST Log Table

This section defines attributes for the power-on self-test (POST) log. When you turn on your computer, the POST checks various system components before the operating system loads. The POST tests the random-access memory (RAM), the hard drives, and the keyboard, for example. While the POST is running, it makes a log file that system administrators can view. The variables in this section also contribute to managing the POST log.

**Table 145. POST Log Table**

<b>Name</b>	postLogTable
-------------	--------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30
<b>Description</b>	Defines the POST Log Table.
<b>Syntax</b>	SEQUENCE OF PostLogTableEntry
<b>Access</b>	Not accessible

**Table 146. POST Log Table Entry**

<b>Name</b>	postLogTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1
<b>Description</b>	Defines the POST Log Table entry.
<b>Syntax</b>	PostLogTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

postLogchassisIndex

postLogRecordIndex

**Table 147. POST Log Chassis Index**

<b>Name</b>	postLogchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 148. POST Log Record Index**

<b>Name</b>	postLogRecordIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.2
<b>Description</b>	Defines the record number (one-based) of the POST log.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 149. POST Log State Capabilities Unique**

<b>Name</b>	postLogStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.3
<b>Description</b>	Defines the capabilities of the object that is writing the POST log.
<b>Syntax</b>	DellStateCapabilitiesLogUnique
<b>Access</b>	Read-only

**Table 150. POST Log State Settings Unique**

<b>Name</b>	postLogStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.4
<b>Description</b>	Defines the state of the object that is writing the POST log.
<b>Syntax</b>	DellStateSettingsLogUnique
<b>Access</b>	Read-only

### Table 151. POST Log Record

<b>Name</b>	postLogRecord
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.5
<b>Description</b>	Defines the data for the specified chassis and record index in the POST log being returned.
<b>Syntax</b>	DisplayString (SIZE (0..1024))
<b>Access</b>	Read-only

### Table 152. POST Log Format

<b>Name</b>	postLogFormat
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.5
<b>Description</b>	Defines format of the POST log.
<b>Syntax</b>	DellLogFormat (See <a href="#">Log Format</a> )
<b>Access</b>	Read-only

## Event Log Table

### Table 153. Event Log Table

<b>Name</b>	eventLogTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40
<b>Description</b>	Defines the Event Log Table.
<b>Syntax</b>	SEQUENCE OF EventLogTableEntry
<b>Access</b>	Not accessible

### Table 154. Event Log Table Entry

<b>Name</b>	eventLogTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1
<b>Description</b>	Defines the event Log Table Entry.
<b>Syntax</b>	EventLogTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

eventLogchassisIndex

,

eventLogRecordIndex

### Table 155. Event Log Chassis Index

<b>Name</b>	eventLogchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 156. Event Log Record Index

<b>Name</b>	eventLogRecordIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.2

<b>Description</b>	Defines the record index of the event log.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 157. Event Log State Capabilities Unique**

<b>Name</b>	eventLogStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.3
<b>Description</b>	Defines the capabilities of the object that is writing the event log.
<b>Syntax</b>	DellStateCapabilitiesLogUnique
<b>Access</b>	Read-only

**Table 158. Event Log State Settings Unique**

<b>Name</b>	eventLogStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.4
<b>Description</b>	Defines the state settings for the object that is writing the event log.
<b>Syntax</b>	DellStateSettingsLogUnique
<b>Access</b>	Read-only

**Table 159. Event Log Record**

<b>Name</b>	eventLogRecord
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.5
<b>Description</b>	Defines the data for the specified chassis and log record index in the event log being returned.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 160. Event Log Format**

<b>Name</b>	eventLogFormat
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.6
<b>Description</b>	Defines the format of the event log.
<b>Syntax</b>	DellLogFormat (See <a href="#">Log Format</a> )
<b>Access</b>	Read-only

**Table 161. Event Log Severity Status**

<b>Name</b>	eventLogSeverityStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.7
<b>Description</b>	Defines the severity of the event log record.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only
<b>Status</b>	Mandatory

**Table 162. Event Log Date Name**

<b>Name</b>	eventLogDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.8
<b>Description</b>	Defines the date and time of the event log record.

<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only
<b>Status</b>	Mandatory

## System BIOS Table

This table lists objects that define the system's basic input/output system (BIOS).

**Table 163. System BIOS Table**

<b>Name</b>	systemBIOSTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50
<b>Description</b>	Defines the System BIOS Table.
<b>Syntax</b>	SEQUENCE OF SystemBIOSTableEntry
<b>Access</b>	Not accessible

**Table 164. System BIOS Table Entry**

<b>Name</b>	systemBIOSTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1
<b>Description</b>	Defines the System BIOS Table entry.
<b>Syntax</b>	SystemBIOSTableEntry
<b>Access</b>	Not accessible

**Index**

systemBIOSchassisIndex

,

systemBIOSIndex

**Table 165. System BIOS Chassis Index**

<b>Name</b>	systemBIOSchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 166. System BIOS Index**

<b>Name</b>	systemBIOSIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.2
<b>Description</b>	Defines the index (one-based) of the system BIOS of this object.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 167. System BIOS State Capabilities**

<b>Name</b>	systemBIOSStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.3
<b>Description</b>	Defines the capabilities of the system BIOS of this object.
<b>Syntax</b>	DellStateCapabilities

**Access** Read-only

**Table 168. System BIOS State Settings**

**Name** systemBIOSStateSettings  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.50.1.4  
**Description** Defines the state of the system BIOS of this object.  
**Syntax** DellStateSettings  
**Access** Read-only

**Table 169. System BIOS Status**

**Name** systemBIOSStatus  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.50.1.5  
**Description** Defines the status of the system BIOS of this object.  
**Syntax** DellStatus  
**Access** Read-only

**Table 170. System BIOS Size**

**Name** systemBIOSSize  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.50.1.6  
**Description** Defines the image size of the system BIOS in kilobytes (KB). A zero (0) indicates that the image size of the BIOS is unknown.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

**Table 171. System BIOS Release Date Name**

**Name** systemBIOSReleaseDateName  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.50.1.7  
**Description** Defines the release date of the system BIOS.  
**Syntax** DellDateName  
**Access** Read-only

**Table 172. System BIOS Version Name**

**Name** systemBIOSVersionName  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.50.1.8  
**Description** Defines the version name of the system BIOS.  
**Syntax** DellString  
**Access** Read-only

**Table 173. System BIOS Starting Address**

**Name** systemBIOSStartingAddress  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.50.1.9  
**Description** Defines the starting address of the system BIOS. A zero (0) indicates that the address is unknown.  
**Syntax** DellUnsigned64BitRange  
**Access** Read-only

**Table 174. System BIOS Ending Address**

<b>Name</b>	systemBIOSEndingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.10
<b>Description</b>	Defines the ending address of the system BIOS. A zero (0) indicates that the address is unknown.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

**Table 175. System BIOS Manufacturer Name**

<b>Name</b>	systemBIOSManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.11
<b>Description</b>	Defines the system BIOS manufacturer's name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 176. System BIOS Characteristics**

<b>Name</b>	systemBIOSCharacteristics
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.12
<b>Description</b>	<p>Defines characteristics of the system BIOS. This attribute is a bit field where a bit has the meaning defined below when set to 1 (one). Bit 63 is the first bit in the value, and bit 0 is the last bit in the value. See the description of DellUnsigned64BitRange at the beginning of this file for more information on the format of the value.</p> <p>Bits 48-63 need to be examined in the context of the system ID. The system ID is available in the attribute chassisID. If the value for chassisID is non-zero, bits 48-63 have the meaning defined below</p>

<b>Bit Position</b>	<b>Meaning if Set</b>
Bit 0	Reserved
Bit 1	Reserved
Bit 2	Unknown
Bit 3	BIOS Characteristics Not Supported
Bit 4	ISA is supported
Bit 5	MCA is supported
Bit 6	EISA is supported
Bit 7	PCI is supported
Bit 8	PC Card (PCMCIA) is supported
Bit 9	Plug and Play is supported
Bit 10	APM is supported
Bit 11	BIOS is Upgradeable (Flash)
Bit 12	BIOS shadowing is allowed
Bit 13	VL-VESA is supported
Bit 14	ESCD support is available
Bit 15	Boot from CD is supported
Bit 16	Selectable Boot is supported
Bit 17	BIOS ROM is socketed

Bit 18	Boot From PC Card (PCMCIA) is supported
Bit 19	EDD (Enhanced Disk Drive) Specification is supported
Bit 20	Int 13h - Japanese Floppy for NEC 9800 1.2mb (3.5 in, 1k Bytes/Sector, 360 RPM) is supported
Bit 21	Int 13h - Japanese Floppy for Toshiba 1.2mb (3.5 in, 360 RPM) is supported
Bit 22	Int 13h - 5.25 in / 360 KB Floppy Services are supported
Bit 23	Int 13h - 5.25 in /1.2MB Floppy Services are supported
Bit 24	Int 13h - 3.5 in / 720 KB Floppy Services are supported
Bit 25	Int 13h - 3.5 in / 2.88 MB Floppy Services are supported
Bit 26	Int 5h, Print Screen Service is supported
Bit 27	Int 9h, 8042 Keyboard services are supported
Bit 28	Int 14h, Serial Services are supported
Bit 29	Int 17h, Printer Services are supported
Bit 30	Int 10h, CGA/Mono Video Services are supported
Bit 31	NEC PC-98
Bit 32	-47Reserved
Bit 48	Built-in NIC supports Magic Packet
Bit 49	System supports Wake-on-LAN
Bit 50	System supports chassis intrusion
Bit 51	Built-in NIC supports pattern-matching
Bit 52	System BIOS supports a 7-character service tag
Bit 53	-63 Reserved

**Syntax** DellUnsigned64BitRange

**Table 177. System BIOS Characteristics Ext 1**

**Name** systemBIOSCharacteristicsExt1  
**Object ID** 1.3.6.1.4.1.674.10892.1.300.50.1.13  
**Description** Defines additional characteristics of the system basic input/output system (BIOS). This attribute is a bit field where a bit has the meaning defined below when set to 1 (one).

Bit Position	Meaning if Set
Bit 0	ACPI supported
Bit 1	USB Legacy is supported
Bit 2	AGP is supported
Bit 3	I2O boot is supported
Bit 4	LS-120 boot is supported

	Bit 5	ATAPI ZIP Drive boot is supported
	Bit 6	1394 boot is supported
	Bit 7	Smart Battery supported
<b>Syntax</b>	DellUnsigned8BitRange	
<b>Access</b>	Read-only	

**Table 178. System BIOS Characteristics Ext 2**

<b>Name</b>	systemBIOSCharacteristicsExt2	
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.14	
<b>Description</b>	Defines additional characteristics of the system BIOS. This attribute is a bit field where a bit has the meaning defined below when set to 1 (one).	
	Bit Position	Meaning if Set
	Bit 0	BIOS Boot Specification supported
	Bit 1	Function key-initiated Network Service boot supported
	Bit 2	Targeted Content Distribution supported
	Bit 3	7Reserved
<b>Syntax</b>	DellUnsigned8BitRange	
<b>Access</b>	Read-only	

## Firmware Table

**Table 179. Firmware Table**

<b>Name</b>	firmwareTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60
<b>Description</b>	Defines the Firmware Table.
<b>Syntax</b>	SEQUENCE OF FirmwareTableEntry
<b>Access</b>	Not accessible

**Table 180. Firmware Table Entry**

<b>Name</b>	firmwareTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1
<b>Description</b>	Defines the Firmware Table entry
<b>Syntax</b>	FirmwareTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	firmwarechassisIndex
	,
	firmwareIndex

**Table 181. Firmware Chassis Index**

<b>Name</b>	firmwarechassisIndex
-------------	----------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 182. Firmware Index**

<b>Name</b>	firmwareIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.2
<b>Description</b>	Defines the index (one-based) of the firmware in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 183. Firmware State Capabilities**

<b>Name</b>	firmwareStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.3
<b>Description</b>	Defines the capabilities of the firmware states.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 184. Firmware State Capabilities**

<b>Name</b>	firmwareStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.4
<b>Description</b>	Defines the state of the firmware and allows for the setting of the firmware.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 185. Firmware Status**

<b>Name</b>	firmwareStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.5
<b>Description</b>	Defines the status of the firmware.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 186. Firmware Size**

<b>Name</b>	firmwareSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.6
<b>Description</b>	Defines the image size of the firmware in KB. A zero (0) indicates that the size is unknown.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

**Table 187. Firmware Type**

<b>Name</b>	firmwareType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.7
<b>Description</b>	Defines the type of the firmware.

<b>Syntax</b>	DellFirmwareType
<b>Access</b>	Read-only

**Table 188. Firmware Type Name**

<b>Name</b>	firmwareTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.8
<b>Description</b>	Defines the name of firmware type.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 189. Firmware Update Capabilities**

<b>Name</b>	firmwareUpdateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.9
<b>Description</b>	Defines the bitmap of supported methods for firmware update.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

**Table 190. Firmware Date Name**

<b>Name</b>	firmwareDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.10
<b>Description</b>	Defines the date of the firmware.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

**Table 191. Firmware Version Name**

<b>Name</b>	firmwareVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.11
<b>Description</b>	Defines the version name of the firmware.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Intrusion Table

The following objects and attributes describe the different forms of chassis intrusion, a situation that occurs when the cover of a computer is removed.

**Table 192. Intrusion Table**

<b>Name</b>	intrusionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70
<b>Description</b>	Defines the Intrusion Table.
<b>Syntax</b>	SEQUENCE OF IntrusionTableEntry
<b>Access</b>	Not accessible

**Table 193. Intrusion Table Entry**

<b>Name</b>	intrusionTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1

<b>Description</b>	Defines the Intrusion Table entry.
<b>Syntax</b>	IntrusionTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

```
intrusionchassisIndex
```

```
intrusionIndex
```

**Table 194. Intrusion Chassis Index**

<b>Name</b>	intrusionchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 195. Intrusion Index**

<b>Name</b>	intrusionIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.2
<b>Description</b>	Defines the index of the intrusion objects in this subgroup.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 196. Intrusion State Capabilities**

<b>Name</b>	intrusionStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.3
<b>Description</b>	Defines the capabilities of the intrusion object.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 197. Intrusion State Settings**

<b>Name</b>	intrusionStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.4
<b>Description</b>	Defines the settings of the intrusion object.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 198. Intrusion Status**

<b>Name</b>	intrusionStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.5
<b>Description</b>	Defines the status of the intrusion object.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Table 199. Intrusion Reading

<b>Name</b>	intrusionReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.6
<b>Description</b>	Defines the reading of the intrusion object.
<b>Syntax</b>	DellIntrusionReading
<b>Access</b>	Read-only

### Table 200. Intrusion Type

<b>Name</b>	intrusionType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.7
<b>Description</b>	Defines the type of the intrusion object.
<b>Syntax</b>	DellIntrusionType
<b>Access</b>	Read-only

### Table 201. Intrusion Location Name

<b>Name</b>	intrusionLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.8
<b>Description</b>	Defines the location name of the intrusion object in this subgroup.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Baseboard Table

This table lists objects that define the baseboard of a system.

### Table 202. Baseboard Table

<b>Name</b>	baseBoardTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80
<b>Description</b>	Defines the Baseboard Table.
<b>Syntax</b>	SEQUENCE OF BaseBoardTableEntry
<b>Access</b>	Not accessible

### Table 203. Baseboard Table Entry

<b>Name</b>	baseBoardTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1
<b>Description</b>	Defines the Baseboard Table entry.
<b>Syntax</b>	BaseBoardTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<code>baseBoardChassisIndex</code>
	,
	<code>baseBoardIndex</code>

### Table 204. Baseboard Chassis Index

<b>Name</b>	baseBoardchassisIndex
-------------	-----------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 205. Baseboard Index

<b>Name</b>	baseBoardIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.2
<b>Description</b>	Defines the index (one-based) of the base board.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 206. Baseboard State Capabilities

<b>Name</b>	baseBoardStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.3
<b>Description</b>	Defines the state capabilities of the baseboard.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 207. Baseboard State Settings

<b>Name</b>	baseBoardStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.4
<b>Description</b>	Defines the state settings of the baseboard.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 208. Baseboard Status

<b>Name</b>	baseBoardStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.5
<b>Description</b>	Defines the status of the baseboard.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 209. Baseboard Feature Flags

<b>Name</b>	baseBoardFeatureFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.6
<b>Description</b>	Defines the features of the baseboard..
<b>Syntax</b>	DellBaseBoardFeatureFlags
<b>Access</b>	Read-only

#### Table 210. Baseboard Type

<b>Name</b>	baseBoardType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.7
<b>Description</b>	Defines the type of the baseboard.

<b>Syntax</b>	DellBaseBoardType
<b>Access</b>	Read-only

**Table 211. Baseboard Type Name**

<b>Name</b>	baseBoardTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.8
<b>Description</b>	Defines the name of the type of baseboard.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 212. Baseboard Location Name**

<b>Name</b>	baseBoardLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.9
<b>Description</b>	Defines the location name of the baseboard.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 213. Baseboard Manufacturer Name**

<b>Name</b>	baseBoardManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.10
<b>Description</b>	Defines the baseboard manufacturer's name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 214. Baseboard Product Name**

<b>Name</b>	baseBoardProductName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.11
<b>Description</b>	Defines the baseboard product's name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 215. Baseboard Version Name**

<b>Name</b>	baseBoardVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.12
<b>Description</b>	Defines the baseboard version name..
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 216. Baseboard Service Tag Name**

<b>Name</b>	baseBoardServiceTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.13
<b>Description</b>	Defines the baseboard service tag name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 217. Baseboard Piece Part ID (PPID) Name**

<b>Name</b>	baseBoardPiecePartIDName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.14
<b>Description</b>	Defines the baseboard PPID.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 218. Baseboard Asset Tag Name**

<b>Name</b>	baseBoardAssetTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.15
<b>Description</b>	Defines the baseboard asset tag name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 219. Baseboard Express Service Code Name**

<b>Name</b>	baseBoardExpressServiceCodeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.16
<b>Description</b>	Defines the express service code of the baseboard.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Chassis Information Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 220. Log Format**

**Variable Name :** DellLogFormat

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
raw (1)	The log is in the format received from the firmware.
ascii (2)	The log is in ASCII format.
uniCode (3)	The log is in Unicode format.

**Table 221. Chassis Type**

**Variable Name :** DellChassisType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other (1)	The chassis type is not one of the following:
unknown (2)	The chassis type is unknown.
desktop (3)	The chassis type is a desktop.
lowProfileDesktop (4)	The chassis type is a low-profile desktop.
pizzaBox (5)	The chassis type is a pizza box.
miniTower (6)	The chassis type is a minitower.
tower (7)	The chassis type is a tower.

portable (8)	The chassis type is a portable.
lapTop (9)	The chassis type is a laptop.
noteBook (10)	The chassis type is a notebook.
handHeld (11)	The chassis type is a handheld.
dockingStation (12)	The chassis type is a docking station.
allInOne (13)	The chassis type is an all-in-one.
subNoteBook (14)	The chassis type is a subnotebook.
spaceSaving (15)	The chassis type is a spacesaver.
lunchBox (16)	The chassis type is a lunch box.
mainSystemChassis (17 )	The chassis type is the main system chassis.
expansionChassis (18)	The chassis type is an expansion chassis.
subChassis (19)	The chassis type is a subchassis.
busExpansionChassis (20 )	The chassis type is a bus-expansion chassis.
peripheralChassis (21 )	The chassis type is a peripheral chassis.
raidChassis (22)	The chassis type is a disk RAID chassis.
rackMountChassis (23)	The chassis type is a rack-mounted chassis.
sealedCasePC (24)	The chassis type is a sealed-case chassis.
multiSystemChassis (25 )	The chassis type is a multisystem chassis.

#### Table 222. Connection Status

**Variable Name :** DellConnectionStatus

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown (2)	The status of the chassis connection is unknown.
ok (3)	The status of the chassis connection is OK.
failure (4)	The status of the chassis connection is failure.

#### Table 223. Fan Control Capabilities

**Variable Name :** DellFanControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown (1)	The fan's capabilities are unknown.
lowSpeedCapable (2)	The fan can be set to low speed.
highSpeedCapable (4)	The fan can be set to high speed.
lowOrhighSpeedCapable (6)	The fan can be set to low or high speed.

#### Table 224. Front-Panel LED Control Capabilities

**Variable Name :** DellLEDControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown (1)	The LED control capabilities are unknown.
alertOnErrorCapable (2)	The LED control can be set to alert on an error condition.
alertOnWarningAndErrorCapable (4)	The LED control can be set to alert on an error and a warning condition.
alertOnWarningOrErrorCapable (6)	The LED control can be set to alert on an error or a warning condition.

**Table 225. Front-Panel LED Control Settings**

**Variable Name :** DellLEDControlSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown (1)	The LED control setting is unknown.
alertOnError (2)	The LED control is set to alert on an error condition.
alertOnWarningAndError (4)	The LED control is set to alert on an error or a warning condition.

**Table 226. Hard-Drive Fault LED Control Capabilities**

**Variable Name :** DellHDFaultLEDControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none (0)	The hard drive has no fault LED capabilities.
unknownCapabilities (1)	The hard-drive fault LED capabilities are unknown.
enableCapable (2)	The hard-drive fault LED can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReadyCapable (4)	The hard-drive fault LED can indicate not ready.
resetCapable (8)	The hard-drive fault LED can be reset.

**Table 227. Hard-Drive Fault LED Control Settings**

**Variable Name :** DellHDFaultLEDControlSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none (0)	The LEDs do not have any fault settings capabilities.
unknown (1)	The hard-drive fault LEDs' state is unknown.
enabled (2)	The hard-drive fault LEDs' state is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReady (4)	The hard-drive fault LEDs' state is not ready.
reset (8)	The hard-drive fault LEDs have been reset.
resetAndEnable (10)	The hard-drive fault LEDs have been reset and enabled.

**Table 228. Chassis Identification Control Capabilities**

**Variable Name :** DellChassisIdentifyControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none (0)	The LEDs do not have any chassis identification capabilities.
unknownCapabilities (1)	The chassis identification control's capabilities are unknown.
enableCapable (2)	The chassis identification controls can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReadyCapable (4)	The chassis identification control's capabilities are not ready.
identifyCapable (8)	The chassis identification control's LEDs can be made to identify the chassis.
resetAndEnable (10)	The hard-drive fault LEDs have been reset and enabled.

**NOTE:** Chassis identification capabilities allow system administrators to set front panel light-emitting diodes (LEDs) to blink when the chassis has malfunctioning components. When enabled, the blinking lights help administrators locate the problem chassis.

**Table 229. Chassis Identification Control Settings**

**Variable Name :** DellChassisIdentifyControlSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown (1)	The chassis identification control's state is unknown..
enabled (2)	The chassis identification control's state is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReady (4)	The chassis identification control's state is not ready.
identifyChassis (8)	The chassis identification control's LEDs may be returned to (normal) 0, or (identify chassis) 1.
identifyChassisAndEnabled (10)	The chassis identification control's LEDs may be returned to normal (a binary 0 value), or identify chassis and enabled (a binary 1 value).

**Table 230. Host Control Capabilities**

**Variable Name :** DellHostControlCapabilities

**NOTE:** An operator can manually enable these actions using SNMP.

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
manualRebootCapable (1)	The operator can reboot capable host.
manualPowerOFFCapable (2)	The operator can power off capable host.
manualPowerCycleCapable (4)	The operator can power-cycle capable host.
manualAllExceptOperatingSystemShutdownCapable (7)	The operator can reboot and power off capable host.
manualOperatingSystemShutdownCapable (8)	The operator can shut down the operating-system-shutdown capable host.

manualFullyCapable (15)	The operator can reboot, power on and off the power-cycle capable host, and shut down the operating-system-shutdown capable host.
manualRebootWithOSShutdownCapable (16)	The operator can reboot with operating system shutdown.
manualRebootWithoutOSShutdownCapable (32)	The operator can reboot without operating system shutdown.
manualPowerOffWithOSShutdownCapable (64)	The operator can power off with operating system shutdown.
manualPowerOffWithoutOSShutdownCapable (128)	The operator can power off without operating system shutdown.
manualPowerCycleWithOSShutdownCapable (256)	The operator can power cycle with operating system shutdown.
manualPowerCycleWithoutOSShutdownCapable (512)	The operator can power cycle without operating system shutdown.

**Table 231. Host Control Settings**

**Variable Name :** DellHostControlSettings

 **NOTE: An operator can manually cause these actions using SNMP.**

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
manualReboot (1)	The operator can reboot the host.
manualPowerOFF (2)	The operator can power off the host.
manualPowerCycle (4)	Power cycle the host.
manualOperatingSystemShutdown (8)	The operator can shut down the operating system on the host.
manualOperatingSystemShutdownThenPowerCycle (12)	The operator can shut down the operating system on the host then power cycle machine.

**Table 232. Watchdog Control Capabilities**

**Variable Name :** DellWatchDogControlCapabilities

 **NOTE: When the system determines that the operating system is not responding, it automatically performs the selected action without operator intervention.**

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
automaticRebootCapable (1)	Watchdog controls can be set to reboot capable host.
automaticPowerCycleCapable (2)	Watchdog controls can be set to power cycleable capable host.
automaticNotificationCapable (4)	Watchdog controls can be set to notify capable host
automaticWatchDogTimerCapable (8)	Watchdog controls can be set to function automatically.

automaticPowerOffCapable (16)	Watchdog controls can be set to automatically power off host.
automaticAllExceptNotificationCapable (27)	Watchdog controls can be set to automatically perform all functions except notification capable.
automaticFullyCapable (31)	Watchdog controls can be set to automatically perform all functions.

### Table 233. Watchdog Control Settings

**Variable Name :** DellWatchControlSettings

**NOTE:** The watchdog timer is the mechanism used by a chassis to determine if the operating system has stopped responding.

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
automaticRebootEnabled (1)	Automatic reboot is enabled for this host.
automaticPowerCycleEnabled (2)	Automatic power cycleable is enabled for this host.
automaticNotificationEnabled (4)	Automatic notification is enabled for this host.
automaticPowerOffEnabled (8)	Automatic power off is enabled for this host.

### Table 234. Watchdog Timer Capabilities

**Variable Name :** DellWatchDogTimerCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
type1Capable (1)	Watchdog timer can time in intervals from 20–480 seconds.
type2Capable (2)	Watchdog timer can time in 30-, 60-, 120-, and 480-second intervals.
type3Capable (4)	Watchdog timer can time in 60-second intervals.

### Table 235. Power Button Control Capabilities

**Variable Name :** DellPowerButtonControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none (0)	The power button has no capabilities.
unknownCapabilities (1)	The power button capabilities are unknown.
enableCapable (2)	The power button can be enabled (online) or disabled (offline).

### Table 236. Power Button Control Settings

**Variable Name :** DellPowerButtonControlSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
----------------------	-----------------------

none (0)	The power button has no settings capabilities.
unknown (1)	The power button settings are unknown.
enabled (2)	The power button state is enabled.
disabled (4)	The power button state is disabled.

**Table 237. NMI Button Control Capabilities**

**Variable Name :** DellNMIButtonControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none (0)	The NMI button has no capabilities.
unknownCapabilities (1)	The NMI button capabilities are unknown.
enableCapable (2)	The NMI button can be enabled (online) or disabled (offline).

**Table 238. System Properties**

**Variable Name :** DellSystemProperties

 **NOTE:** These values are bit masks, so combination values are possible.

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none (0)	No properties.
energySmart (1)	The system is an Energy Smart System.

**Table 239. NMI Button Control Settings**

**Variable Name :** DellNMIButtonControlSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none (0)	The NMI button has no settings capabilities.
unknown (1)	The NMI button settings are unknown.
enabled (2)	The NMI button state is enabled.
disabled (4)	The NMI button state is disabled.

**Table 240. Baseboard Type**

**Variable Name :** DellBaseBoardType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown (1)	The baseboard type is unknown.
other (2)	The baseboard type is not one of the following types.
serverBlade (3)	The baseboard type is a server blade.
connectivitySwitch (4)	The baseboard type is a connectivity switch.
systemManagementModule (5)	The baseboard type is a system management module.

processorModule (6)	The baseboard type is a processor module.
ioModule (7)	The baseboard type is an I/O module.
memoryModule (8)	The baseboard type is a memory module
daughterBoard (9)	The baseboard type is a daughter board.
motherboard (10)	The baseboard type is a mother board.
processorMemoryModule (11)	The baseboard type is a processor or memory module
processorIOModule (12)	The baseboard type is a processor or I/O module
interconnectBoard (13)	The baseboard type is an interconnect board.

**Table 241. Chassis System Class**

**Variable Name :** DellChassisSystemClass

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
other (1)	The chassis system class is not one of the following:
unknown (2)	The chassis system class is unknown.
workstationClass (3)	The chassis system class is a workstation.
serverClass (4)	The chassis system class is a server.
desktopClass (5)	The chassis system class is a desktop.
portableClass (6)	The chassis system class is a portable.
netPCClass (7)	The chassis system class is a Net PC.
storageClass (8)	The chassis system class is storage.

**Table 242. Firmware Type**

**Variable Name :** DellFirmwareType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
other (1)	The firmware type is other than following values.
unknown (2)	The firmware type is unknown.
systemBIOS (3)	The firmware type is System BIOS
embeddedSystemManagementController (4)	The firmware type is Embedded System Management Controller.
powerSupplyParallelingBoard (5)	The firmware type is Power Supply Paralleling Board.
systemBackPlane (6)	The firmware type is System (Primary) Backplane.
powerVault2XXSKernel (7)	The firmware type is Dell PowerVault 2XXS Kernel.
powerVault2XXSApplication (8)	The firmware type is PowerVault 2XXS Application.
frontPanel (9)	The firmware type is Front Panel Controller.
baseboardManagementController (10)	The firmware type is Baseboard Management Controller.

hotPlugPCI (11)	The firmware type is Hot Plug Peripheral Component Interconnect (PCI) Controller.
sensorData (12)	The firmware type is Sensor Data Records.
peripheralBay (13)	The firmware type is Peripheral Bay Backplane.
secondaryBackPlane (14)	The firmware type is Secondary Backplane for ESM 2 systems.
secondaryBackPlaneESM3And4 (15)	The firmware type is Secondary Backplane for ESM 3 and 4 systems.
rac (16)	The firmware type is Remote Access Controller.
iDRAC (17)	The firmware type is Integrated Dell Remote Access Controller.
unifiedServerConfigurator (19)	The firmware type is Unified Server Configurator.
lifecycleController (20)	The firmware type is Lifecycle Controller.
iDRAC7 (21)	The firmware type is Integrated Dell Remote Access Controller 7.
iDRAC8 (22)	The firmware type is Integrated Dell Remote Access Controller 8.

**Table 243. Baseboard Feature Flags**

**Variable Name :** DellBaseBoardFeatureFlags

**Data Type:** Integer

**Possible Data Values      Meaning of Data Value**

 **NOTE: These values are bit fields, so combination values are possible.**

no features (0)	This baseboard has no feature flags.
boardIsHostingBoard (1)	This baseboard is a hosting board.
boardRequiresDaughterBoard (2)	This baseboard requires at least one daughter board or auxiliary card.
boardIsRemovable (4)	This baseboard is removable.
boardIsReplaceable (8)	This baseboard is replaceable.
boardIsHotSwappable (16)	This baseboard is hot swappable.

## Operating System Group

The Operating System Group provides status and identifying information about a system's operating system. Identifying information includes the name, version, service pack, and patch level of the installed operating system.

## Operating System Memory Table

**Table 244. Operating System Memory Table**

<b>Name</b>	operatingSystemMemoryTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20
<b>Description</b>	Defines the Operating System Memory Table.

<b>Syntax</b>	SEQUENCE OF OperatingSystemMemoryTableEntry
<b>Access</b>	Not accessible

**Table 245. Operating System Memory Table Entry**

<b>Name</b>	operatingSystemTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1
<b>Description</b>	Defines the Operating System Memory Table entry.
<b>Syntax</b>	OperatingSystemMemoryTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	operatingSystemMemorychassisIndex

**Table 246. Operating System Memory Chassis Index**

<b>Name</b>	operatingSystemMemorychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 247. Operating System Memory State Capabilities**

<b>Name</b>	operatingSystemMemoryStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.2
<b>Description</b>	Defines the capabilities of the operating system memory.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 248. Operating System Memory State Settings**

<b>Name</b>	operatingSystemMemoryStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.3
<b>Description</b>	Defines the state and allows the setting of the operating system memory.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 249. Operating System Memory Status**

<b>Name</b>	operatingSystemMemoryStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.4
<b>Description</b>	Defines the status of the operating system memory.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 250. Operating System Memory Total Physical Size**

 **NOTE:** `operatingSystemMemoryTotalPhysicalSize` is no more used. This attribute is deprecated and replaced by `operatingSystemMemoryExtTotalPhysicalSize`.

<b>Name</b>	operatingSystemMemoryTotalPhysicalSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.5

<b>Description</b>	Defines the total physical memory size in kilobytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 251. Operating System Memory Available Physical Size**

<b>Name</b>	operatingSystemMemoryAvailablePhysicalSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.6
<b>Description</b>	Defines the available physical memory size in kilobytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 252. Operating System Memory Total Page File Size**

<b>Name</b>	operatingSystemMemoryTotalPageFileSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.7
<b>Description</b>	Defines the total page file memory size in kilobytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 253. Operating System Memory Available Page File Size**

<b>Name</b>	operatingSystemMemoryAvailablePageFileSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.8
<b>Description</b>	Defines the available page file memory size in kilobytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 254. Operating System Memory Total Virtual Size**

<b>Name</b>	operatingSystemMemoryTotalVirtualSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.9
<b>Description</b>	Defines the total virtual memory size in kilobytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 255. Operating System Memory Available Virtual Size**

<b>Name</b>	operatingSystemMemoryAvailableVirtualSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.10
<b>Description</b>	Defines the available virtual memory size in kilobytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 256. Operating System Memory Ext Total Physical Size**

 **NOTE:** This attribute replaces `operatingSystemMemoryTotalPhysicalSize`.

<b>Name</b>	operatingSystemMemoryExtTotalPhysicalSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.11
<b>Description</b>	This attribute defines the total physical memory for the operating system memory in KBytes.

<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

## System Resource Group

The Management Information Base (MIB) variables presented in this section enable you to track various attributes of your system resources. This section includes System Resource Group Tables that track variables such as the owner, ports, system memory, interrupts, and direct memory access.

## System Resource Group Tables

The following MIB tables define objects for the System Resource Group:

- [System Resource Map Table](#)
- [System Resource Owner Table](#)
- [System Resource Input/Output \(I/O\) Port Table](#)
- [System Resource Memory Table](#)
- [System Resource Interrupt Table](#)
- [System Resource Direct Memory Access \(DMA\) Table](#)

## System Resource Map Table

**Table 257. System Resource Map Table**

<b>Name</b>	systemResourceMapTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10
<b>Description</b>	Defines the System Resource Map Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceMapTableEntry
<b>Access</b>	Not accessible

**Table 258. System Resource Map Table Entry**

<b>Name</b>	systemResourceMapTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1
<b>Description</b>	Defines the System Resource Map Table entry.
<b>Syntax</b>	SystemResourceMapTableEntry
<b>Access</b>	Not accessible

### Index

```
systemResourceMapchassisIndex
```

,

```
systemResourceMapIndex
```

**Table 259. System Resource Map Chassis Index**

<b>Name</b>	systemResourceMapChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 260. System Resource Map Index**

<b>Name</b>	systemResourceMapIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.2
<b>Description</b>	Defines the index of system resource maps in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 261. System Resource Map State Capabilities**

<b>Name</b>	systemResourceMapStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.3
<b>Description</b>	Defines the capabilities of this system map.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 262. System Resource Map State Settings**

<b>Name</b>	systemResourceMapStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.4
<b>Description</b>	Defines the state and allows the setting of this system map.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 263. System Resource Map Status**

<b>Name</b>	systemResourceMapStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.5
<b>Description</b>	Defines the status of this system map.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 264. System Resource Map Type**

<b>Name</b>	systemResourceMapType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.6
<b>Description</b>	Defines the type of this system map.
<b>Syntax</b>	DellSystemResourceMapType ( <a href="#">System Resource Map Type</a> )
<b>Access</b>	Read-only

## System Resource Owner Table

**Table 265. System Resource Owner Table**

<b>Name</b>	systemResourceOwnerTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20
<b>Description</b>	Defines the System Resource Owner Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceOwnerTableEntry
<b>Access</b>	Not accessible

**Table 266. System Resource Owner Table Entry**

<b>Name</b>	systemResourceOwnerTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1
<b>Description</b>	Defines the System Resource Owner Table entry. Variables in this group reference the System Resource Map index.
<b>Syntax</b>	SystemResourceOwnerTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	<pre>systemResourceOwnerchassisIndex</pre> <pre>systemResourceOwnerIndex</pre>

**Table 267. System Resource Owner Chassis Index**

<b>Name</b>	systemResourceOwnerchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 268. System Resource Owner Index**

<b>Name</b>	systemResourceOwnerIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.2
<b>Description</b>	Defines the index of system resource owners for this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 269. System Resource Owner State Capabilities**

<b>Name</b>	systemResourceOwnerStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.3
<b>Description</b>	Defines the capabilities of this system resource owner.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 270. System Resource Owner State Settings**

<b>Name</b>	systemResourceOwnerStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.4
<b>Description</b>	Defines the state settings of this system resource owner.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 271. System Resource Owner Status**

<b>Name</b>	systemResourceOwnerStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.5
<b>Description</b>	Defines the status of this system resource owner.

<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 272. System Resource Owner Interface Type**

<b>Name</b>	systemResourceOwnerInterfaceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.6
<b>Description</b>	Defines the interface type for this system resource owner.
<b>Syntax</b>	DellResourceOwnerInterfaceType ( <a href="#">Resource Owner Interface Type</a> )
<b>Access</b>	Read-only

**Table 273. System Resource Map Index Reference**

<b>Name</b>	systemResourceMapIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.7
<b>Description</b>	Defines the index to the associated system resource map in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 274. System Resource Owner Description Name**

<b>Name</b>	systemResourceOwnerDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.8
<b>Description</b>	Defines the description name of the system resource owner.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 275. System Resource Owner Interface Instance**

<b>Name</b>	systemResourceOwnerInterfaceInstance
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.9
<b>Description</b>	Defines the associated system resource owner interface instance in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## System Resource Input/Output (I/O) Port Table

**Table 276. System Resource Input/Output (I/O) Port Table**

<b>Name</b>	systemResourceIOPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30
<b>Description</b>	Defines the System Resource I/O Port Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceIOPortTableEntry
<b>Access</b>	Not accessible

**Table 277. System Resource I/O Port Table Entry**

<b>Name</b>	systemResourceIOPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1
<b>Description</b>	Defines the System Resource I/O Port Table entry.
<b>Syntax</b>	SystemResourceIOPortTableEntry

<b>Access</b>	Not accessible
<b>Index</b>	systemResourceIOPortchassisIndex
	,
	systemResourceIOPortIndex

**Table 278. System Resource I/O Port Chassis Index**

<b>Name</b>	systemResourceIOPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 279. System Resource I/O Port Index**

<b>Name</b>	systemResourceIOPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.2
<b>Description</b>	Defines the index (one-based) of the system resource I/O ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 280. System Resource I/O Port State Capabilities**

<b>Name</b>	systemResourceIOPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.3
<b>Description</b>	Defines the capabilities of the system resource I/O port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 281. System Resource I/O Port State Settings**

<b>Name</b>	systemResourceIOPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.4
<b>Description</b>	Defines the state and allows the setting of the system resource I/O port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 282. System Resource I/O Port Status**

<b>Name</b>	systemResourceIOPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.5
<b>Description</b>	Defines the status of the system resource I/O port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 283. System Resource I/O Port Owner Index Reference**

<b>Name</b>	systemResourceIOPortOwnerIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.6

<b>Description</b>	Defines the index to the associated system resource owner in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 284. System Resource I/O Port Share Disposition**

<b>Name</b>	systemResourceIOPortShareDisposition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.7
<b>Description</b>	Defines the share disposition of the system resource I/O port.
<b>Syntax</b>	DellResourceShareDisposition ( <a href="#">Resource Share Disposition</a> )
<b>Access</b>	Read-only

**Table 285. System Resource I/O Port Starting Address**

<b>Name</b>	systemResourceIOPortStartingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.8
<b>Description</b>	Defines the 64 bits of the starting address of the system resource I/O port.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

**Table 286. System Resource I/O Port Ending Address**

<b>Name</b>	systemResourceIOPortEndingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.9
<b>Description</b>	Defines the 64 bits of the ending address of the system resource I/O port.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

## System Resource Memory Table

**Table 287. System Resource Memory Table**

<b>Name</b>	systemResourceMemoryTable
<b>Object</b>	1.3.6.1.4.1.674.10892.1.500.40
<b>Description</b>	Defines the System Resource Memory Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceMemoryTableEntry
<b>Access</b>	Not accessible

**Table 288. System Resource Memory Table Entry**

<b>Name</b>	systemResourceMemoryTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1
<b>Description</b>	Defines the System Resource Memory Table entry.
<b>Syntax</b>	SystemResourceMemoryTableEntry
<b>Access</b>	Not accessible

**Index**

```
systemResourceMemorychassisIndex
```

```
systemResourceMemoryIndex
```

**Table 289. System Resource Memory Chassis Index**

<b>Name</b>	systemResourceMemorychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 290. System Resource Memory Index**

<b>Name</b>	systemResourceMemoryIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.2
<b>Description</b>	Defines the index of system resource memory in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 291. System Resource Memory State Capabilities**

<b>Name</b>	systemResourceMemoryStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.3
<b>Description</b>	Defines the capabilities of this system resource memory.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 292. System Resource Memory State Settings**

<b>Name</b>	systemResourceMemoryStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.4
<b>Description</b>	Defines the state of this system resource memory.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 293. System Resource Memory Status**

<b>Name</b>	systemResourceMemoryStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.5
<b>Description</b>	Defines the status of this system resource memory.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

<b>Name</b>	systemResourceMemoryOwnerIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.6
<b>Description</b>	Defines the index to the associated system resource owner in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 294. System Resource Memory Share Disposition**

<b>Name</b>	systemResourceMemoryShareDisposition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.7

<b>Description</b>	Defines the share disposition of the system resource memory.
<b>Syntax</b>	DellResourceShareDisposition ( <a href="#">Resource Share Disposition</a> )
<b>Access</b>	Read-only

**Table 295. System Resource Memory Starting Address**

<b>Name</b>	systemResourceMemoryStartingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.8
<b>Description</b>	Defines the 64 bits of the starting address of the system resource memory.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

**Table 296. System Resource Memory Ending Address**

<b>Name</b>	systemResourceMemoryEndingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.9
<b>Description</b>	Defines the 64 bits of the ending address of the system resource memory.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

**Table 297. System Resource Memory Flags**

<b>Name</b>	systemResourceMemoryFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.10
<b>Description</b>	Defines the permission flags for the system resource memory.
<b>Syntax</b>	DellResourceMemoryFlags ( <a href="#">Resource Memory Flags</a> )
<b>Access</b>	Read-only

## System Resource Interrupt Table

**Table 298. System Resource Interrupt Table**

<b>Name</b>	systemResourceInterruptTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50
<b>Description</b>	Defines the System Resource Interrupt Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceInterruptTableEntry
<b>Access</b>	Not accessible

**Table 299. System Resource Interrupt Table Entry**

<b>Name</b>	systemResourceInterruptTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1
<b>Description</b>	Defines the System Resource Interrupt Table entry.
<b>Syntax</b>	SystemResourceInterruptTableEntry
<b>Access</b>	Not accessible

**Index**

```
systemResourceInterruptchassisIndex
```

```
systemResourceInterruptIndex
```

**Table 300. System Resource Interrupt Chassis Index**

<b>Name</b>	systemResourceInterruptchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Not accessible

**Table 301. System Resource Interrupt Index**

<b>Name</b>	systemResourceInterruptIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.2
<b>Description</b>	Defines the index (one-based) of this interrupt resource.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 302. System Resource Interrupt State Capabilities**

<b>Name</b>	systemResourceInterruptStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.3
<b>Description</b>	Defines the capabilities of this system resource interrupt.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 303. System Resource Interrupt State Settings**

<b>Name</b>	systemResourceInterruptStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.4
<b>Description</b>	Defines the state of this system resource interrupt.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 304. System Resource Interrupt Status**

<b>Name</b>	systemResourceInterruptStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.5
<b>Description</b>	Defines the status of this system resource interrupt.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 305. System Resource Interrupt Owner Index Reference**

<b>Name</b>	systemResourceInterruptOwnerIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.6
<b>Description</b>	Defines the index for the associated system resource owner in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 306. System Resource Interrupt Owner Share Disposition**

<b>Name</b>	systemResourceInterruptShareDisposition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.7

<b>Description</b>	Defines the share disposition of the system resource interrupt.
<b>Syntax</b>	DellResourceShareDisposition ( <a href="#">Resource Share Disposition</a> )
<b>Access</b>	Read-only

**Table 307. System Resource Interrupt Level**

<b>Name</b>	systemResourceInterruptLevel
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.8
<b>Description</b>	Defines the interrupt request (IRQ) level of the system resource interrupt.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 308. System Resource Interrupt Type**

<b>Name</b>	systemResourceInterruptType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.9
<b>Description</b>	Defines the interrupt type of the system resource interrupt.
<b>Syntax</b>	DellResourceInterruptType ( <a href="#">Resource Interrupt Type</a> )
<b>Access</b>	Read-only

**Table 309. System Resource Interrupt Trigger**

<b>Name</b>	systemResourceInterruptTrigger
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.10
<b>Description</b>	Defines the interrupt trigger of the system resource interrupt.
<b>Syntax</b>	DellResourceInterruptTrigger ( <a href="#">Resource Interrupt Trigger</a> )
<b>Access</b>	Read-only

## System Resource Direct Memory Access (DMA) Table

**Table 310. System Resource Direct Memory Access (DMA) Table**

<b>Name</b>	systemResourceDMATable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60
<b>Description</b>	Defines the System Resource DMA Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceDMATableEntry
<b>Access</b>	Not accessible

**Table 311. System Resource DMA Table Entry**

<b>Name</b>	systemResourceDMATable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1
<b>Description</b>	Defines the System Resource DMA Table entry.
<b>Syntax</b>	SystemResourceDMATableEntry
<b>Access</b>	Not accessible

**Index**

```
systemResourceDMAchassisIndex
```

```
systemResourceDMAIndex
```

**Table 312. System Resource DMA Chassis Index**

<b>Name</b>	systemResourceDMAchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 313. System Resource DMA Index**

<b>Name</b>	systemResourceDMAIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.2
<b>Description</b>	Defines the index of system resource DMAs in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 314. System Resource DMA State Capabilities**

<b>Name</b>	systemResourceDMAStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.3
<b>Description</b>	Defines the capabilities of this system resource DMA.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 315. System Resource DMA State Settings**

<b>Name</b>	systemResourceDMAStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.4
<b>Description</b>	Defines the state and setting of this system resource DMA.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 316. System Resource DMA Status**

<b>Name</b>	systemResourceDMAStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.5
<b>Description</b>	Defines the status of this system resource DMA.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 317. System Resource DMA Owner Index Reference**

<b>Name</b>	systemResourceDMAOwnerIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.6
<b>Description</b>	Defines the index to the associated system resource owner in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 318. System Resource DMA Share Disposition**

<b>Name</b>	systemResourceDMAShareDisposition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.7

<b>Description</b>	Defines the share disposition of the system resource DMA.
<b>Syntax</b>	DellResourceShareDisposition ( <a href="#">Resource Share Disposition</a> )
<b>Access</b>	Read-only

**Table 319. System Resource DMA Maximum Transfer Size**

<b>Name</b>	systemResourceDMAMaximumTransferSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.8
<b>Description</b>	Defines the maximum size of a memory transfer in bytes for the system resource DMA.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 320. System Resource DMA Transfer Width**

<b>Name</b>	systemResourceDMATransferWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.9
<b>Description</b>	Defines the transfer width of the system resource DMA.
<b>Syntax</b>	DellResourceDMATransferWidth ( <a href="#">Resource DMA Transfer Width</a> )
<b>Access</b>	Read-only

**Table 321. System Resource DMA Bus Master**

<b>Name</b>	systemResourceDMABusMaster
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.10
<b>Description</b>	Defines the bus mastering capabilities of the system resource DMA.
<b>Syntax</b>	DellResourceDMABusMaster ( <a href="#">Resource DMA Bus Master</a> )
<b>Access</b>	Read-only

## System Resource Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 322. System Resource Map Type**

**Variable Name:** DellSystemResourceMapType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
other (1)	The system resource map type is not one of the following:
unknown (2)	The system resource map type is unknown (not known or not monitored).
typeOne (3)	The system resource map is type 1 (one).

**Table 323. Resource Owner Interface Type**

**Variable Name:** DellResourceOwnerInterfaceType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
typeIsOther (1)	The interface type is not one of the following:
typeIsUnknown (2)	The interface type is unknown.
typeIsInternal (3)	The interface type is internal.
typeIsISA (4)	The interface type is an Industry Standard Architecture (ISA) bus.

typeIsEISA (5)	The interface type is an Extended Industry Standard Architecture (EISA) bus.
typeIsMCA (6)	The interface type is a microchannel architecture (MCA) bus.
typeIsTurboChannel (7)	The interface type is a turbo-channel bus.

**Table 324. Resource Share Disposition**

**Variable Name:** DellResourceShareDisposition

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
shareIsOther (1)	The share disposition is not one of the following:
shareIsUnknown (2)	The share disposition is unknown (not known or not monitored).
shareIsDeviceExclusive (3)	The share disposition is device exclusive.
shareIsDriverExclusive (4)	The share disposition is driver exclusive.
shareIsShared (5)	The share disposition is shared.

**Table 325. Resource Memory Flags**

**Variable Name:** DellResourceMemoryFlags

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
memoryIsReadOnly (1)	The resource memory is read-only.
memoryIsWriteOnly (2)	The resource memory is write-only.
memoryIsPreFetchable (4)	The resource memory is prefetchable.
memoryIsCombinedWritable (8)	The resource memory is read-write.
memoryIsF24 (16)	The resource memory is F24.

**Table 326. Resource Interrupt Type**

**Variable Name:** DellResourceInterruptType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
interruptIsLevelSensitive (1)	The interrupt type is level sensitive.
)	
interruptIsLatched (2)	The interrupt type is latched.

**Table 327. Resource Interrupt Trigger**

**Variable Name:** DellResourceInterruptTrigger

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
interruptIsActiveWhenLow (1)	The interrupt trigger is active on a low signal.
interruptIsActiveWhenHigh (2)	The interrupt trigger is active on a high signal.
)	

**Table 328. Resource DMA Bus Master**

**Variable Name:** DellResourceDMABusMaster

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
----------------------	-----------------------

<code>dmaIsOther (1)</code>	The DMA bus master capability is not one of the following:
<code>dmaIsUnknown (2)</code>	The DMA bus master capability is unknown.
<code>dmaIsNotABusmaster (3)</code>	The DMA does not have bus master capability.

**Table 329. Resource DMA Transfer Width**

**Variable Name:** `DellResourceDMATransferWidth`

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
<code>dmaTransferWidthIsOther (1)</code>	The DMA transfer width is not one of the following:
<code>dmaTransferWidthIsunknown (2)</code>	The DMA transfer width is unknown.
<code>dmaTransferWidthIs8Bits (3)</code>	The DMA transfer width is 8 bits.
<code>dmaTransferWidthIs16Bits (4)</code>	The DMA transfer width is 16 bits.
<code>dmaTransferWidthIs32Bits (5)</code>	The DMA transfer width is 32 bits.
<code>dmaTransferWidthIs64Bits (6)</code>	The DMA transfer width is 64 bits.
<code>dmaTransferWidthIs128Bits (7)</code>	The DMA transfer width is 128 bits.

## Power Group

The Power Group provides information about power units (a group of power supplies in a system chassis), power supplies, and voltage and amperage probes.

 **NOTE: Power Management features are only available for PowerEdge systems that have hot-swappable power supplies and not systems that have a fixed, nonredundant power supply installed.**

## Power Group Tables

The following management information base (MIB) tables define objects for the Power Group:

- [Power Unit Table](#)
- [Power Supply Table](#)
- [Voltage Probe Table](#)
- [Amperage Probe Table](#)
- [AC Power Switch Table](#)
- [AC Power Cord Table](#)
- [Battery Table](#)
- [Power Usage Table](#)
- [Power ProfileTable](#)

## Power Unit Table

**Table 330. Power Unit Table**

<b>Name</b>	<code>powerUnitTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10
<b>Description</b>	Defines the Power Unit Table.
<b>Syntax</b>	<code>PowerUnitTableEntry</code>
<b>Access</b>	Not accessible

### Table 331. Power Unit Table Entry

<b>Name</b>	powerUnitTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1
<b>Description</b>	Defines the Power Unit Table entry.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only
<b>Index</b>	powerUnitChassisIndex, powerUnitIndex

### Table 332. Power Unit Chassis Index

<b>Name</b>	powerUnitChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 333. Power Unit Index

<b>Name</b>	powerUnitIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.2
<b>Description</b>	Defines the index of the power unit in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 334. Power Unit State Capabilities

<b>Name</b>	powerUnitStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.3
<b>Description</b>	Defines the capabilities of the power unit.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Table 335. Power Unit State Settings

<b>Name</b>	powerUnitStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.4
<b>Description</b>	Defines the state and settings of the power unit.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### Table 336. Power Unit Redundancy Status

<b>Name</b>	powerUnitRedundancyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.5
<b>Description</b>	Defines the redundancy status of the power unit.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

### Table 337. Power Supply Count for Redundancy

<b>Name</b>	powerSupplyCountForRedundancy
-------------	-------------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.6
<b>Description</b>	Defines the total number of power supplies required for this power unit to have redundancy.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 338. Power Unit Name

<b>Name</b>	powerUnitName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.7
<b>Description</b>	Defines the name of the power unit in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 339. Power Unit Status

<b>Name</b>	powerUnitStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.8
<b>Description</b>	Defines the status of the power unit in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Power Supply Table

#### Table 340. Power Supply Table

<b>Name</b>	powerSupplyTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12
<b>Description</b>	Defines the Power Supply Table.
<b>Syntax</b>	PowerSupplyTableEntry
<b>Access</b>	Not accessible

#### Table 341. Power Supply Table Entry

<b>Name</b>	powerSupplyTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1
<b>Description</b>	Defines the Power Supply Table entry.
<b>Syntax</b>	PowerSupplyTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	powerSupplychassisIndex, powerSupplyIndex

#### Table 342. Power Supply Chassis Index

<b>Name</b>	powerSupplychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 343. Power Supply Index

<b>Name</b>	powerSupplyIndex
-------------	------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.2
<b>Description</b>	Defines the index of power supply.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 344. Power Supply State Capabilities Unique**

<b>Name</b>	powerSupplyStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.3
<b>Description</b>	Defines the capabilities of the power supply.
<b>Syntax</b>	DellPowerSupplyStateCapabilitiesUnique ( <a href="#">Power Supply State Capabilities Unique</a> )
<b>Access</b>	Read-only

**Table 345. Power Supply State Settings Unique**

<b>Name</b>	powerSupplyStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.4
<b>Description</b>	Defines the state and settings of the power supply.
<b>Syntax</b>	DellPowerSupplyStateSettingsUnique ( <a href="#">Power Supply State Settings Unique</a> )
<b>Access</b>	Read-only

**Table 346. Power Supply Status**

<b>Name</b>	powerSupplyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.5
<b>Description</b>	Defines the status of the power supply.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 347. Power Supply Output Watts**

<b>Name</b>	powerSupplyOutputWatts
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.6
<b>Description</b>	Defines the maximum sustained output wattage of the power supply in tenths of watts.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 348. Power Supply Type**

<b>Name</b>	powerSupplyType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.7
<b>Description</b>	Defines the type of power supply.
<b>Syntax</b>	DellPowerSupplyType ( <a href="#">Power Supply Type Definitions</a> )
<b>Access</b>	Read-only

**Table 349. Power Supply Location Name**

<b>Name</b>	powerSupplyLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.8
<b>Description</b>	Defines the location name of the power supply.

<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 350. Power Supply Maximum Input Voltage

<b>Name</b>	powerSupplyMaximumInputVoltage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.9
<b>Description</b>	This attribute defines the maximum input voltage of the power supply (in Volts).
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

#### Table 351. Power Supply Power Unit Index Reference

<b>Name</b>	powerSupplyPowerUnitIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.10
<b>Description</b>	Defines the index to the associated system power unit in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 352. Power Supply Sensor State

<b>Name</b>	powerSupplySensorState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.11
<b>Description</b>	Defines the state reported by the power supply sensor, and supplements the state and settings of the power supply.
<b>Syntax</b>	DellPowerSupplySensorState ( <a href="#">Power Supply Sensor State</a> )
<b>Access</b>	Read-only

#### Table 353. Power Supply Configuration Error Type

<b>Name</b>	powerSupplyConfigurationErrorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.12
<b>Description</b>	Defines the type of configuration error reported by the power supply sensor.
<b>Syntax</b>	DellPowerSupplyConfigurationErrorType ( <a href="#">Power Supply Configuration Error Type</a> )
<b>Access</b>	Read-only

#### Table 354. Power Supply Power Monitor Capable

<b>Name</b>	powerSupplyPowerMonitorCapable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.13
<b>Description</b>	Defines a boolean value that reports whether the power supply is capable of monitoring power consumption.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

#### Table 355. Power Supply Rated Input Wattage

<b>Name</b>	powerSupplyRatedInputWattage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.14
<b>Description</b>	Defines the rated input wattage of the power supply (in tenths of Watts.)
<b>Syntax</b>	DellSigned32BitRange

**Access** Read-only

#### Table 356. Power Supply FQDD

**Name** powerSupplyFQDD  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.12.1.15  
**Description** Fully qualified device descriptor (FQDD) of the power supply.  
**Syntax** FQDDString  
**Access** Read-only

#### Table 357. Power Supply Current Input Voltage

**Name** powerSupplyCurrentInputVoltage  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.12.1.16  
**Description** This attribute defines the current input voltage to the power supply (in Volts).  
**Syntax** DellSigned32BitRange  
**Access** Read-only

## Voltage Probe Table

#### Table 358. Voltage Probe Table

**Name** voltageProbeTable  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20  
**Description** Defines the Voltage Probe Table.  
**Syntax** VoltageProbeTableEntry  
**Access** Not accessible

#### Table 359. Voltage Probe Table Entry

**Name** voltageProbeTableEntry  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20.1  
**Description** Defines the Voltage Probe Table entry.  
**Syntax** VoltageProbeTableEntry  
**Access** Not accessible  
**Index** voltageProbeChassisIndex, voltageProbeIndex

#### Table 360. Voltage Probe Chassis Index

**Name** voltageProbeChassisIndex  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20.1.1  
**Description** Defines the index (one-based) of this chassis.  
**Syntax** DellObjectRange  
**Access** Read-only

#### Table 361. Voltage Probe Index

**Name** voltageProbeIndex  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20.1.2  
**Description** Defines the index of voltage probes in this chassis.  
**Syntax** DellObjectRange

**Access** Read-only

#### Table 362. Voltage Probe State Capabilities

**Name** voltageProbeStateCapabilities  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20.1.3  
**Description** Defines the capabilities of the voltage probe.  
**Syntax** DellStateCapabilities  
**Access** Read-only

#### Table 363. Voltage Probe State Settings

**Name** voltageProbeStateSettings  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20.1.4  
**Description** Defines the state and settings of the voltage probe.  
**Syntax** DellStateSettings  
**Access** Read-only

#### Table 364. Voltage Probe Status

**Name** voltageProbeStatus  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20.1.5  
**Description** Defines the status of the voltage probe.  
**Syntax** DellStatusProbe  
**Access** Read-only

#### Table 365. Voltage Probe Reading

**Name** voltageProbeReading  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20.1.6  
**Description** Defines the value of the voltage probe reading. The value is an integer representing the voltage in millivolts that the probe is reading. When the value for voltageProbeType is voltageProbeTypesDiscrete, a value is not returned for this attribute.  
**Syntax** DellSigned32BitRange  
**Access** Read-only

#### Table 366. Voltage Probe Type

**Name** voltageProbeType  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20.1.7  
**Description** Defines the type of the voltage probe.  
**Syntax** DellVoltageType  
**Access** Read-only

#### Table 367. Voltage Probe Location Name

**Name** voltageProbeLocationName  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.20.1.8  
**Description** Defines the location of the voltage probe in this chassis.  
**Syntax** DellString  
**Access** Read-only

**Table 368. Voltage Probe Upper Nonrecoverable Threshold**

<b>Name</b>	voltageProbeUpperNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.9
<b>Description</b>	Defines the value of the voltage probe's upper nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 369. Voltage Probe Upper Critical Threshold**

<b>Name</b>	voltageProbeUpperCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.10
<b>Description</b>	Defines the value of the voltage probe's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 370. Voltage Probe Upper Noncritical Threshold**

<b>Name</b>	voltageProbeUpperNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.11
<b>Description</b>	Defines the user-assigned value of the voltage probe's upper noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 371. Voltage Probe Lower Noncritical Threshold**

<b>Name</b>	voltageProbeLowerNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.12
<b>Description</b>	Defines the user-assigned value of the voltage probe's lower noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 372. Voltage Probe Lower Critical Threshold**

<b>Name</b>	voltageProbeLowerCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.13
<b>Description</b>	Defines the value of the voltage probe's lower critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 373. Voltage Probe Lower Nonrecoverable Threshold**

<b>Name</b>	voltageProbeLowerNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.14
<b>Description</b>	Defines the value of the voltage probe's lower nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 374. Voltage Probe Capabilities**

<b>Name</b>	voltageProbeProbeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.15

<b>Description</b>	Defines the probe capabilities of the voltage probe.
<b>Syntax</b>	DellProbeCapabilities
<b>Access</b>	Read-only

**Table 375. Voltage Probe Discrete Reading**

<b>Name</b>	voltageProbeDiscreteReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.16
<b>Description</b>	Defines the reading for a voltage probe of type voltageProbeTypelsDiscrete.  When the value for voltageProbeType is other than voltageProbeTypelsDiscrete, a value is not returned for this attribute. When the value for voltageProbeType is voltageProbeTypelsDiscrete, the value returned for this attribute is the discrete reading for the probe.
<b>Syntax</b>	DellVoltageDiscreteReading
<b>Access</b>	Read-only

## Amerage Probe Table

**Table 376. Amerage Probe Table**

<b>Name</b>	amperageProbeTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30
<b>Description</b>	Defines the Amperage Probe Table.
<b>Syntax</b>	SEQUENCE OF AmperageProbeTableEntry
<b>Access</b>	Not accessible

**Table 377. Amperage Probe Table Entry**

<b>Name</b>	amperageProbeTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1
<b>Description</b>	Defines the Amperage Probe Table entry.
<b>Syntax</b>	AmperageProbeTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

amperageProbechassisIndex

,

amperageProbeIndex

**Table 378. Amperage Probe Chassis Index**

<b>Name</b>	amperageProbechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 379. Amperage Probe Index**

<b>Name</b>	amperageProbeIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.2

<b>Description</b>	Defines the index of amperage probes in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 380. Amperage Probe State Capabilities**

<b>Name</b>	amperageProbeStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.3
<b>Description</b>	Defines the capabilities of the amperage probe.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 381. Amperage Probe State Settings**

<b>Name</b>	amperageProbeStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.4
<b>Description</b>	Defines the state and settings of the amperage probe.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 382. Amperage Probe Status**

<b>Name</b>	amperageProbeStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.5
<b>Description</b>	Defines the status of the amperage probe.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 383. Amperage Probe Reading**

<b>Name</b>	amperageProbeReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.6
<b>Description</b>	<p>Defines the reading for an amperage probe of type other than amperageProbeTypelsDiscrete.</p> <p>When the value for amperageProbeType is amperageProbeTypelsPowerSupplyAmps or amperageProbeTypelsSystemAmps, the value returned for this attribute is the power usage that the probe is reading in tenths of Amperes.</p> <p>When the value for amperageProbeType is amperageProbeTypelsPowerSupplyWatts or amperageProbeTypelsSystemWatts, the value returned for this attribute is the power usage that the probe is reading in Watts.</p> <p>When the value for amperageProbeType is other than amperageProbeTypelsDiscrete, amperageProbeTypelsPowerSupplyAmps, amperageProbeTypelsPowerSupplyWatts, amperageProbeTypelsSystemAmps, or amperageProbeTypelsSystemWatts, the value returned for this attribute is the amperage that the probe is reading in Milliamps.</p> <p>When the value for amperageProbeType is amperageProbeTypelsDiscrete, a value is not returned for this attribute.</p>
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 384. Amperage Probe Type**

<b>Name</b>	amperageProbeType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.7

<b>Description</b>	Defines the type of the amperage probe.
<b>Syntax</b>	DellAmperageProbeType
<b>Access</b>	Read-only

**Table 385. Amperage Probe Location Name**

<b>Name</b>	amperageProbeLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.8
<b>Description</b>	Defines the location name of the amperage probe in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 386. Amperage Probe Upper Nonrecoverable Threshold**

<b>Name</b>	amperageProbeUpperNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.9
<b>Description</b>	Defines the value of the amperage probe's upper nonrecoverable threshold. The value is an integer representing the amperage in milliamperes that the probe is reading.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 387. Amperage Probe Upper Critical Threshold**

<b>Name</b>	amperageProbeUpperCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.10
<b>Description</b>	Defines the value of the amperage probe's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 388. Amperage Probe Upper Noncritical Threshold**

<b>Name</b>	amperageProbeUpperNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.11
<b>Description</b>	Defines the user-assigned value of the amperage probe's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 389. Amperage Probe Lower Noncritical Threshold**

<b>Name</b>	amperageProbeLowerNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.12
<b>Description</b>	Defines the user-assigned value of the amperage probe's lower noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 390. Amperage Probe Lower Critical Threshold**

<b>Name</b>	amperageProbeLowerCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.13
<b>Description</b>	Defines the value of the amperage probe's lower critical threshold.
<b>Syntax</b>	DellSigned32BitRange

**Access** Read-only

**Table 391. Amperage Probe Lower Nonrecoverable Threshold**

**Name** amperageProbeLowerNonRecoverableThreshold  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.30.1.14  
**Description** Defines the value of the amperage probe's lower nonrecoverable threshold.  
**Syntax** DellSigned32BitRange  
**Access** Read-only

**Table 392. Amperage Probe Probe Capabilities**

**Name** amperageProbeProbeCapabilities  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.30.1.15  
**Description** Defines the probe capabilities of the amperage probe.  
**Syntax** DellProbeCapabilities  
**Access** Read-only

**Table 393. Amperage Probe Discrete Reading**

**Name** amperageProbeDiscreteReading  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.30.1.16  
**Description** Defines the reading for a amperage probe of type amperageProbeTypelsDiscrete.  
When the value for amperageProbeType is other than amperageProbeTypelsDiscrete, a value is not returned for this attribute. When the value for amperageProbeType is amperageProbeTypelsDiscrete, the value returned for this attribute is the discrete reading for the probe.  
**Syntax** DellAmperageDiscreteReading ([Amperage Probe Discrete Reading](#))  
**Access** Read-only

## AC Power Switch Table

**Table 394. AC Power Switch Table**

**Name** aCPowerSwitchTable  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.40  
**Description** Defines the AC Power Switch Table.  
**Syntax** SEQUENCE OF ACPowerSwitchTableEntry  
**Access** Not accessible

**Table 395. AC Power Switch Table Entry**

**Name** aCPowerSwitchTableEntry  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.40.1  
**Description** Defines the AC Power Switch Table entry.  
**Syntax** ACPowerSwitchTableEntry  
**Access** Not accessible  
**Index** aCPowerSwitchchassisIndex

aCPowerSwitchIndex

**Table 396. AC Power Switch Chassis Index**

<b>Name</b>	aCPowerSwitchChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing this AC power switch.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 397. AC Power Switch Index**

<b>Name</b>	aCPowerSwitchIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.2
<b>Description</b>	Defines the index (one-based) of this AC power switch.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 398. AC Power Switch Capabilities**

<b>Name</b>	aCPowerSwitchCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.3
<b>Description</b>	Defines the capabilities of this AC power switch.
<b>Syntax</b>	DellACPowerSwitchCapabilities
<b>Access</b>	Read-only

**Table 399. AC Power Switch Settings**

<b>Name</b>	aCPowerSwitchSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.4
<b>Description</b>	Defines the settings of this AC power switch.
<b>Syntax</b>	DellACPowerSwitchSettings
<b>Access</b>	Read-only

**Table 400. AC Power Switch Redundancy Status**

<b>Name</b>	aCPowerSwitchRedundancyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.5
<b>Description</b>	Defines the redundancy status of this AC power switch.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

**Table 401. AC Power Cord Count for Redundancy**

<b>Name</b>	aCPowerCordCountForRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.6
<b>Description</b>	Defines the total number of AC power cords required for this AC power switch to have redundancy.
<b>Syntax</b>	DellObjectRange

**Access** Read-only

#### Table 402. AC Power Switch Name

**Name** aCPowerSwitchName  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.40.1.7  
**Description** Defines the name of this AC power switch.  
**Syntax** DellString  
**Access** Read-only

#### Table 403. AC Power Switch Redundancy Mode

**Name** aCPowerSwitchRedundancyMode  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.40.1.8  
**Description** Defines the redundancy mode of this AC power switch.  
**Syntax** DellACPowerSwitchRedundancyMode  
**Access** Read-only

#### Table 404. AC Power Switch Status

**Name** aCPowerSwitchStatus  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.40.1.9  
**Description** Defines the status of this AC power switch.  
**Syntax** DellStatus  
**Access** Read-only

## AC Power Cord Table

#### Table 405. AC Power Cord Table

**Name** aCPowerCordTable  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.42  
**Description** Defines the AC Power Cord Table.  
**Syntax** SEQUENCE OF ACPowerCordTableEntry  
**Access** Not accessible

#### Table 406. AC Power Cord Table Entry

**Name** aCPowerCordTableEntry  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.42.1  
**Description** Defines the AC Power Cord Table entry.  
**Syntax** ACPowerCordTableEntry  
**Access** Not accessible

**Index**

aCPowerCordchassisIndex
,
aCPowerCordIndex

**Table 407. AC Power Cord Chassis Index**

<b>Name</b>	aCPowerCordChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing this AC power cord.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 408. AC Power Cord Index**

<b>Name</b>	aCPowerCordIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.2
<b>Description</b>	Defines the index (one-based) of this AC power cord.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 409. AC Power Cord State Capabilities**

<b>Name</b>	aCPowerCordStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.3
<b>Description</b>	Defines the capabilities of this AC power cord.
<b>Syntax</b>	DellACPowerCordStateCapabilities
<b>Access</b>	Read-only

**Table 410. AC Power Cord State Settings**

<b>Name</b>	aCPowerCordStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.4
<b>Description</b>	Defines the settings of this AC power cord.
<b>Syntax</b>	DellACPowerCordStateSettings
<b>Access</b>	Read-only

**Table 411. AC Power Cord Status**

<b>Name</b>	aCPowerCordStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.5
<b>Description</b>	Defines the status of this AC power cord.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 412. AC Power Cord AC Power Switch Index Reference**

<b>Name</b>	aCPowerCordACPowerSwitchIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.6
<b>Description</b>	Defines the index (one-based) to the associated AC power switch for this AC power cord.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 413. AC Power Cord Location Name**

<b>Name</b>	aCPowerCordLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.7

<b>Description</b>	Defines the location name of this AC power cord.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Battery Table

**Table 414. Battery Table**

<b>Name</b>	batteryTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50
<b>Description</b>	Defines the Battery Table.
<b>Syntax</b>	SEQUENCE OF BatteryTableEntry
<b>Access</b>	Not accessible

**Table 415. Battery Table Entry**

<b>Name</b>	batteryTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1
<b>Description</b>	Defines the Battery Table Entry.
<b>Syntax</b>	BatteryTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	batteryChassisIndex , batteryIndex

**Table 416. Battery Chassis Index**

<b>Name</b>	batteryChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.1
<b>Description</b>	Defines the index (one-based) of the chassis that contains the battery.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 417. Battery Index**

<b>Name</b>	batteryIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.2
<b>Description</b>	Defines the index (one-based) of the battery.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 418. Battery State Capabilities**

<b>Name</b>	batteryStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.3
<b>Description</b>	Defines the state capabilities of the battery.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 419. Battery State Settings**

<b>Name</b>	batteryStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.4

<b>Description</b>	Defines the state settings of the battery.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 420. Battery Status**

<b>Name</b>	batteryStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.5
<b>Description</b>	Defines the status of the battery.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 421. Battery Reading**

<b>Name</b>	batteryReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.6
<b>Description</b>	Defines the reading of the battery.
<b>Syntax</b>	DellBatteryReading ( <a href="#">Battery Reading</a> )
<b>Access</b>	Read-only

**Table 422. Battery Location Name**

<b>Name</b>	batteryLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.7
<b>Description</b>	Defines the location of the battery.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Power Usage Table

**Table 423. Power Usage Table**

<b>Name</b>	powerUsageTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60
<b>Description</b>	Defines the Power Usage Table.
<b>Syntax</b>	SEQUENCE OF PowerUsageTableEntry
<b>Access</b>	Not accessible

**Table 424. Power Usage Table Entry**

<b>Name</b>	powerUsageTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1
<b>Description</b>	Defines the Power Usage Table Entry.
<b>Syntax</b>	PowerUsageTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	powerUsageChassisIndex , powerUsageIndex

**Table 425. Power Usage Chassis Index**

<b>Name</b>	powerUsageChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.1

<b>Description</b>	Defines the index (one-based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 426. Power Usage Index**

<b>Name</b>	powerUsageIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.2
<b>Description</b>	Defines the index (one-based) of the power usage information.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 427. Power Usage State Capabilities**

<b>Name</b>	powerUsageStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.3
<b>Description</b>	Defines the state capabilities of the power usage information.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 428. Power Usage State Settings**

<b>Name</b>	powerUsageStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.4
<b>Description</b>	Defines the state settings of the power usage information.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 429. Power Usage Status**

<b>Name</b>	powerUsageStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.5
<b>Description</b>	Defines the status of the power usage information.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 430. Power Usage Entity Name**

<b>Name</b>	powerUsageEntityName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.6
<b>Description</b>	Defines the name of the entity associated with this power usage information.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 431. Power Usage Cumulative Wattage**

<b>Name</b>	powerUsageCumulativeWattage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.7
<b>Description</b>	Defines the total wattage used (in Watt-hours) by this entity since the date and time specified by the powerUsageCumulativeWattageStartDateName attribute.
<b>Syntax</b>	DellUnsigned32BitRange

**Access** Read-only

#### Table 432. Power Usage Cumulative Wattage Start Date Name

**Name** powerUsageCumulativeWattageStartDateName  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.60.1.8  
**Description** Defines the date and time at which the data collection started for the value reported by the powerUsageCumulativeWattage attribute.  
**Syntax** DellDateName  
**Access** Read-only

#### Table 433. Power Usage Peak Watts

**Name** powerUsagePeakWatts  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.60.1.9  
**Description** Defines the peak wattage reading (in Watts) for this entity since the date and time specified by the powerUsagePeakWattsStartDateName attribute.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

#### Table 434. Power Usage Peak Watts Start Date Name

**Name** powerUsagePeakWattsStartDateName  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.60.1.10  
**Description** Defines the date and time at which the data collection started for the value reported by the powerUsagePeakWatts attribute.  
**Syntax** DellDateName  
**Access** Read-only

#### Table 435. Power Usage Peak Watts Reading Date Name

**Name** powerUsagePeakWattsReadingDateName  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.60.1.11  
**Description** Defines the date and time at which the value reported by the powerUsagePeakWatts attribute was measured.  
**Syntax** DellDateName  
**Access** Read-only

#### Table 436. Power Usage Peak Amps

**Name** powerUsagePeakAmps  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.60.1.12  
**Description** Defines the peak amperage reading (in tenths of Amps) for this entity since the date and time specified by the powerUsagePeakAmpsStartDateName attribute.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

#### Table 437. Power Usage Peak Amps Start Date Name

**Name** powerUsagePeakAmpsStartDateName  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.60.1.13  
**Description** Defines the date and time at which the data collection started for the value reported by the powerUsagePeakAmps attribute.

<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

#### Table 438. Power Usage Peak Amps Reading Date Name

<b>Name</b>	powerUsagePeakAmpsReadingDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.14
<b>Description</b>	Defines the date and time at which the value reported by the powerUsagePeakAmps attribute was measured.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

#### Table 439. Power Usage Idle Power

<b>Name</b>	powerUsageIdlePower
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.15
<b>Description</b>	Defines the system idle power (in Watts). This is the minimum power the system can consume based on the current hardware configuration.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 440. Power Usage Max Potential Power

<b>Name</b>	powerUsageMaxPotentialPower
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.16
<b>Description</b>	Defines the maximum potential power (in Watts) of the system. This is the maximum power the system can consume based on the current hardware configuration.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 441. Power Usage Power Cap Capabilities

<b>Name</b>	powerUsagePowerCapCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.17
<b>Description</b>	Defines the system power cap capabilities.
<b>Syntax</b>	DellPowerCapCapabilities
<b>Access</b>	Read-only

#### Table 442. Power Usage Power Cap Setting

<b>Name</b>	powerUsagePowerCapSetting
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.18
<b>Description</b>	Defines the system power cap setting.
<b>Syntax</b>	DellPowerCapSetting
<b>Access</b>	Read-only

#### Table 443. Power Usage Power Cap Value

<b>Name</b>	powerUsagePowerCapValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.60.1.19
<b>Description</b>	Defines the system power cap value (in Watts).
<b>Syntax</b>	DellUnsigned32BitRange

**Access** Read-only

#### Table 444. Power Usage Instantaneous Headroom

**Name** powerUsageInstantaneousHeadroom  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.60.1.20  
**Description** Defines the system instantaneous headroom (in Watts). This is the theoretical maximum power drawn by the power supply minus instantaneous power draw.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

#### Table 445. Power Usage Peak Headroom

**Name** powerUsagePeakHeadroom  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.60.1.21  
**Description** Defines the system peak headroom (in Watts). This is the theoretical maximum power drawn by the power supply minus peak power draw.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

## Power Profile Table

#### Table 446. Power Profile Table

**Name** powerProfileTable  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.70  
**Description** Defines the Power Profile Table.  
**Syntax** SEQUENCE OF PowerProfileTableEntry  
**Access** Not accessible

#### Table 447. Power Profile Table Entry

**Name** powerProfileTableEntry  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.70.1  
**Description** Defines the Power Profile Table Entry.  
**Syntax** PowerProfileTableEntry  
**Access** Not accessible  
**Index** powerProfileChassisIndex , powerProfileIndex

#### Table 448. Power Profile Chassis Index

**Name** powerProfileChassisIndex  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.70.1.1  
**Description** Defines the index (one-based) of the associated chassis.  
**Syntax** DellObjectRange  
**Access** Read-only

#### Table 449. Power Profile Index

**Name** powerProfileIndex  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.70.1.2

<b>Description</b>	Defines the index (one-based) of the power profile information.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 450. Power Profile Supported Profiles**

<b>Name</b>	powerProfileSupportedProfiles
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.70.1.3
<b>Description</b>	Defines the supported power profiles.
<b>Syntax</b>	DellPowerProfileType
<b>Access</b>	Read-only

**Table 451. Power Profile Setting**

<b>Name</b>	powerProfileSetting
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.70.1.4
<b>Description</b>	Defines the power profile setting.
<b>Syntax</b>	DellPowerProfileType
<b>Access</b>	Read-only

**Table 452. Power Profile Custom CPU Management Capabilities**

<b>Name</b>	powerProfileCustomCPUManagementCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.70.1.5
<b>Description</b>	Defines the custom CPU power and performance management capabilities that are available for the Custom power profile.
<b>Syntax</b>	DellCPUPowerPerformanceManagementType
<b>Access</b>	Read-only

**Table 453. Power Profile Custom CPU Management Setting**

<b>Name</b>	powerProfileCustomCPUManagementSetting
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.70.1.6
<b>Description</b>	Defines the custom CPU power and performance management setting for the Custom power profile.
<b>Syntax</b>	DellCPUPowerPerformanceManagementType
<b>Access</b>	Read-only

**Table 454. Power Profile Custom Memory Management Capabilities**

<b>Name</b>	powerProfileCustomMemoryManagementCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.70.1.7
<b>Description</b>	Defines the custom memory power and performance management capabilities that are available for the Custom power profile.
<b>Syntax</b>	DellMemoryPowerPerformanceManagementType
<b>Access</b>	Read-only

**Table 455. Power Profile Custom Memory Management Capabilities**

<b>Name</b>	powerProfileCustomMemoryManagementSetting
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.70.1.8

<b>Description</b>	Defines the custom memory power and performance management setting for the Custom power profile.
<b>Syntax</b>	DellMemoryPowerPerformanceManagementType
<b>Access</b>	Read-only

**Table 456. Power Profile Custom Fan Management Capabilities**

<b>Name</b>	powerProfileCustomFanManagementCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.70.1.9
<b>Description</b>	Defines the custom fan power and performance management capabilities that are available for the Custom power profile.
<b>Syntax</b>	DellFanPowerPerformanceManagementType
<b>Access</b>	Read-only

**Table 457. Power Profile Custom Fan Management Setting**

<b>Name</b>	powerProfileCustomFanManagementSetting
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.70.1.10
<b>Description</b>	Defines the custom fan power and performance management setting for the Custom power profile.
<b>Syntax</b>	DellFanPowerPerformanceManagementType
<b>Access</b>	Read-only

## Power Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 458. Power Supply State Capabilities Unique**

**Variable Name:** DellPowerSupplyStateCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

unknown (1)

onlineCapable (2)

notReadyCapable (4)

**Meaning of Data Value**

The power supply's capabilities are unknown.

The power supply can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).

The power supply's capabilities are not ready.

**Table 459. Power Supply State Settings Unique**

**Variable Name:** DellPowerSupplyStateSettingsUnique

**Data Type:** Integer

**Possible Data Values**

unknown (1)

onLine (2)

notReady (4)

fanFailure (8)

onlineAndFanFailure (10)

powerSupplyIsON (16)

powerSupplyIsOk (32)

**Meaning of Data Value**

The power supply's capabilities are unknown.

The power supply's state is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).

The power supply's state is not ready.

The power supply fan has failed.

The power supply is online and indicating that its fan is not working.

The power supply is indicating that it is on.

The power supply is indicating that it is OK.

acSwitchIsON (64)	The power supply is indicating that the AC power switch is on.
onlineandAcSwitchIsON (66)	The power supply is online and indicating that the AC power supply switch capability is activated.
acPowerIsON (128)	The power supply is indicating that the AC power is on.
onlineAndAcPowerIsON (130)	The power supply is online and indicating that the AC power is on.
onlineAndPredictiveFailure (210)	The power supply is online and indicating that it has a problem.
acPowerAndSwitchAreOn PowerSupplyIsOnIsOkAnd Online (242)	The power supply is online and OK.

**Table 460. Power Supply Type Definitions**

**Variable Name:** DellPowerSupplyType

**Data Type:** Integer

**Possible Data Values**

- powerSupplyTypeIsOther (1)
- powerSupplyTypeIsUnknown (2)
- powerSupplyTypeIsLinear (3)
- powerSupplyTypeIsSwitching (4)
- powerSupplyTypeIsBattery (5)
- powerSupplyTypeIsUPS (6)
- powerSupplyTypeIsConverter (7)
- powerSupplyTypeIsRegulator (8)
- powerSupplyTypeIsAC (9)
- powerSupplyTypeIsDC (10)
- powerSupplyTypeIsVRM (11)

**Meaning of Data Value**

- The power supply type is not one of the following:
- The power supply type is unknown (not known or not monitored).
- The power supply type is a linear power supply.
- The power supply type is a switching power supply.
- The power supply type is a battery.
- The power supply type is an uninterruptable power supply.
- The power supply type is a power converter power supply.
- The power supply type is a regulator power supply.
- The power supply type is an AC power supply.
- The power supply type is a DC power supply.
- The power supply type is a voltage regulator module (VRM) power supply.

**Table 461. Power Supply Sensor State**

**Variable Name:** DellPowerSupplySensorState

**Data Type:** Integer

**Possible Data Values**

- presenceDetected (1)
- psFailureDetected (2)
- predictiveFailure (4)
- psACLost (8)
- acLostOrOutOfRange (16)
- acOutOfRangeButPresent (32)
- configurationError (64)

**Meaning of Data Value**

- The power supply's presence is detected.
- The power supply failure is detected.
- The power supply sensor detects predictive failure
- The power supply's AC power is lost.
- The power supply's AC power is lost or out of range.
- The power supply's AC power is present, but it is out of range.
- The power supply sensor detects a configuration error.

**Table 462. Power Supply Configuration Error Type**

**Variable Name:** DellPowerSupplyConfigurationErrorType

**Data Type:** Integer

**Possible Data Values**

- vendorMismatch (1)
- revisionMismatch (2)

**Meaning of Data Value**

- The power supply configuration error type is vendor mismatch.
- The power supply configuration error type is revision mismatch.

processorMissing (3)

The power supply configuration error type is processor missing.

**Table 463. Voltage Probe Type**

**Variable Name:** DellVoltageType

**Data Type:** Integer

**Possible Data Values**

- voltageProbeTypeIsOther (1)
- voltageProbeTypeIsUnknown (2)
- voltageProbeTypeIs1Point5Volt (3)
- voltageProbeTypeIs3Point3Volt (4)
- voltageProbeTypeIs5Volt (5)
- voltageProbeTypeIsMinus5Volt (6)
- voltageProbeTypeIs12Volt (7)
- voltageProbeTypeIsMinus12Volt (8)
- voltageProbeTypeIsIO (9)
- voltageProbeTypeIsCore (10)
- voltageProbeTypeIsFLEA (11)
- voltageProbeTypeIsBattery (12)
- voltageProbeTypeIsTerminator (13)
- voltageProbeTypeIs2Point5Volt (14)
- voltageProbeTypeIsGTL (15)
- voltageProbeTypeIsDiscrete (16)

**Meaning of Data Value**

- The voltage probe type is not one of the following:
- The voltage probe type is unknown (not known or not monitored).
- The voltage probe type is a 1.5-volt (V) probe.
- The voltage probe type is a 3.3-V probe.
- The voltage probe type is a 5-V probe.
- The voltage probe type is a -5-V probe.
- The voltage probe type is a 12-V probe.
- The voltage probe type is a -12-V probe.
- The voltage probe type is an I/O volt probe.
- The voltage probe type is a core volt probe.
- The voltage probe type is a FLEA (standby) volt probe.
- The voltage probe type is a battery volt probe.
- The voltage probe type is a SCSI termination volt probe.
- The voltage probe type is a 2.5-V probe.
- The voltage probe type is a ground termination logic (GTL) probe.
- The voltage probe type is a voltage probe with discrete reading.

**Table 464. Voltage Probe Discrete Reading**

**Variable Name:** DellVoltageDiscreteReading

**Data Type:** Integer

**Possible Data Values**

- voltageIsGood (1)
- voltageIsBad (2)

**Meaning of Data Value**

- The voltage probe discrete reading is good.
- The voltage probe discrete reading is bad.

**Table 465. Amperage Probe Definitions**

**Variable Name:** DellAmperageType

**Data Type:** Integer

**Possible Data Values**

- amperageProbeTypeIsOther (1)
- amperageProbeTypeIsUnknown (2)
  
- amperageProbeTypeIs1Point5Volt (3)
- amperageProbeTypeIs3Point3volt (4)
- amperageProbeTypeIs5Volt (5)
- amperageProbeTypeIsMinus5Volt (6)
- amperageProbeTypeIs12Volt (7)
- amperageProbeTypeIsMinus12Volt (8)

**Meaning of Data Value**

- The amperage probe type is not one of the following:
- The amperage probe type is unknown (not known or not monitored).
- The amperage probe type is a 1.5-ampere (A) probe.
- The amperage probe type is a 3.3-A probe.
- The amperage probe type is a 5-A probe.
- The amperage probe type is a -5-A probe.
- The amperage probe type is a 12-A probe.
- The amperage probe type is a -12-A probe.

amperageProbeTypeIsIO (9)	The amperage probe type is an I/O amperage probe.
amperageProbeTypeIsCore (10)	The amperage probe type is a core amperage probe.
amperageProbeTypeIsFLEA (11)	The amperage probe type is a FLEA (standby) amperage probe.
amperageProbeTypeIsBattery (12)	The amperage probe type is a battery amperage probe.
amperageProbeTypeIsTerminator (13)	The amperage probe type is a Small Computer System Interface (SCSI) termination amperage probe.
amperageProbeTypeIs2Point5Volt (14)	The amperage probe type is a 2.5-V amperage probe.
amperageProbeTypeIsGTL (15)	The amperage probe type is a Gunning Transceiver Logic (GTL) probe.
amperageProbeTypeIsDiscrete (16)	The amperage probe type is an amperage probe with discrete reading.
amperageProbeTypeIsPowerSupplyAmps (23)	The amperage probe type is power supply probe with reading in Amperes.
amperageProbeTypeIsPowerSupplyWatts (24)	The amperage probe type is power supply probe with reading in Watts.
amperageProbeTypeIsSystemAmps (25)	The amperage probe type is system probe with reading in Amperes.
amperageProbeTypeIsSystemWatts (26)	The amperage probe type is system probe with reading in Watts.

**Table 466. Amperage Probe Discrete Reading**

**Variable Name:** DellAmperageDiscreteReading

**Data Type:** Integer

**Possible Data Values**

amperageIsGood (1)

amperageIsBad (2)

**Meaning of Data Value**

The amperage probe discrete reading is good.

The amperage probe discrete reading is bad.

**Table 467. AC Power Switch Capabilities**

**Variable Name:** DellACPowerSwitchCapabilities

**Data Type:** Integer

**Possible Data Values**

unknownCapabilities (1)

inputSourceCord1NoReturnCapable (2)

inputSourceCord1ReturnCapable (4)

inputSourceCord2NoReturnCapable (8)

inputSourceCord2ReturnCapable (16)

inputSourceSharedCapable (32)

**Meaning of Data Value**

The AC power switch's capabilities are unknown.

Input source is AC power cord 1, with no return.

Input source is AC power cord 1, with return.

Input source is AC power cord 2, with no return.

Input source is AC power cord 2, with return.

Input source is shared.

**Table 468. AC Power Switch Settings**

**Variable Name:** DellACPowerSwitchSettings

**Data Type:** Integer

**Possible Data Values**

unknown (1)

inputSourceCord1NoReturn (2)

inputSourceCord1Return (4)

inputSourceCord2NoReturn (8)

**Meaning of Data Value**

The AC power switch's settings are unknown.

Input source is AC power cord 1, with no return.

Input source is AC power cord 1, with return.

Input source is AC power cord 2, with no return.

inputSourceCord2Return (16)

Input source is AC power cord 2, with return.

inputSourceShared (32)

Input source is shared.

#### Table 469. AC Power Switch Redundancy Mode

**Variable Name:** DellACPowerSwitchRedundancyMode

**Data Type:** Integer

**Possible Data Values**

nonRedundant (1)

redundant (2)

**Meaning of Data Value**

The AC power switch is not expecting redundancy.

The AC power switch is expecting redundancy.

#### Table 470. AC Power Cord State Capabilities

**Variable Name:** DellACPowerCordStateCapabilities

**Data Type:** Integer

**Possible Data Values**

unknown (1)

onlineCapable (2)

notReadyCapable (4)

**Meaning of Data Value**

The AC power cord's capabilities are unknown.

The AC power cord can be disabled (offline) or enabled (online).

The AC power cord's capabilities are not ready.

#### Table 471. AC Power Cord State Settings

**Variable Name:** DellACPowerCordStateSettings

**Data Type:** Integer

**Possible Data Values**

unknown (1)

online (2)

notReady (4)

acPowerCordHasPower (8)

acPowerCordIsActive Source (16)

**Meaning of Data Value**

The AC power cord's state is unknown.

The AC power cord's state is disabled (offline) 0 or enabled (online) 1.

The AC power cord's state is not ready.

The AC power cord has power.

The AC power cord is the active source of AC power.

#### Table 472. Battery Reading

**Variable Name:** DellBatteryReading

**Data Type:** Integer

 **NOTE: These values are bit masks, so combination values are possible.**

**Possible Data Values**

predictiveFailure (1)

failed (2)

presenceDetected (4)

**Meaning of Data Value**

Battery sensor detects predictive failure.

Battery has failed.

Battery presence is detected.

#### Table 473. Power Cap Capabilities

**Variable Name:** DellPowerCapCapabilities

**Data Type:** Integer

 **NOTE: These values are bit masks, so combination values are possible.**

**Possible Data Values**

none (0)

**Meaning of Data Value**

No power cap capabilities are available.

enable (1)	Power cap can be enabled.
disable (2)	Power cap can be disabled.

#### Table 474. Power Cap Setting

**Variable Name:** DellPowerCapSetting

**Data Type:** Integer

**Possible Data Values**

- disabled (0)
- enabled (1)

**Meaning of Data Value**

- Power cap is disabled.
- Power cap is enabled.

#### Table 475. Power Profile Type

**Variable Name:** DellPowerProfileType

**Data Type:** Integer

 **NOTE:** These values are bit masks, so combination values are possible.

**Possible Data Values**

- maxPerformance (1)
- osControl (2)
- activePowerController (4)
- custom (8)

**Meaning of Data Value**

- Power profile type is Maximum Performance.
- Power profile type is OS control.
- Power profile type is Active Power Controller.
- Power profile type is Custom.

#### Table 476. CPU Power Performance Management Type

**Variable Name:** DellCPUPowerPerformanceManagementType

**Data Type:** Integer

 **NOTE:**

These values are bit masks, so combination values are possible.

**Possible Data Values**

- maxPerformance (1)
- minPower (2)
- osDBPM (4)
- systemDBPM (8)

**Meaning of Data Value**

- CPU power and performance management type is Maximum Performance.
- CPU power and performance management type is Minimum Power.
- CPU power and performance management type is OS Demand Based Power Management.
- CPU power and performance management type is System Demand Based Power Management.

#### Table 477. Memory Power Performance Management Type

**Variable Name:** DellMemoryPowerPerformanceManagementType

**Data Type:** Integer

 **NOTE:**

These values are bit masks, so combination values are possible.

**Possible Data Values**

- maxPerformance (1)
- mhz1333 (2)
- mhz1067 (4)

**Meaning of Data Value**

- Memory power and performance management type is Maximum Performance.
- Memory power and performance is 1333 MHz. .
- Memory power and performance is 1067 MHz.

mhz800 (8)  
minPower (16)

Memory power and performance is 800 MHz.  
Memory power and performance management type is Minimum Power.

#### Table 478. Fan Power Performance Management Type

**Variable Name:** DellFanPowerPerformanceManagementType

**Data Type:** Integer

 **NOTE:**

These values are bit masks, so combination values are possible.

#### Possible Data Values

maxPerformance (1)

minPower (2)

#### Meaning of Data Value

Fan power and performance management type is Maximum Performance.

Fan power and performance management type is Minimum Power.

## Thermal Group

The Thermal Group provides information about cooling units, cooling devices, and temperature probes. Cooling units are sets of fans or other cooling devices in a system chassis. Thermal Group variables include threshold values and types of cooling devices and temperature probes.

## Thermal Group Tables

The following management information base (MIB) tables define the objects in the Thermal Group:

- [Cooling Unit Table](#)
- [Cooling Device Table](#)
- [Temperature Probe Table](#)

## Cooling Unit Table

#### Table 479. Cooling Unit Table

<b>Name</b>	coolingUnitTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10
<b>Description</b>	Defines the Cooling Unit Table.
<b>Syntax</b>	TableEntry
<b>Access</b>	Not accessible

#### Table 480. Cooling Unit Table Entry

<b>Name</b>	coolingUnitTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1
<b>Description</b>	Defines the Cooling Unit Table entry.
<b>Syntax</b>	TableEntry
<b>Access</b>	Not accessible

#### Index

coolingUnitchassisIndex

,

coolingUnitIndex

**Table 481. Cooling Unit Chassis Index**

<b>Name</b>	coolingUnitChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	TableEntry
<b>Access</b>	Read-only

**Table 482. Cooling Unit Index**

<b>Name</b>	coolingUnitIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.2
<b>Description</b>	Defines the index (one-based) of cooling units.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 483. Cooling Unit State Capabilities**

<b>Name</b>	coolingUnitStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.3
<b>Description</b>	Defines the capabilities of the cooling unit.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 484. Cooling Unit State Settings**

<b>Name</b>	coolingUnitStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.4
<b>Description</b>	Defines the state and settings of the cooling unit.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 485. Cooling Unit Redundancy Status**

<b>Name</b>	coolingUnitRedundancyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.5
<b>Description</b>	Defines the redundancy status of the cooling unit.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

**Table 486. Cooling Device Count For Redundancy**

<b>Name</b>	coolingDeviceCountForRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.6
<b>Description</b>	Defines the total number of cooling devices required for this cooling unit to have redundancy.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 487. Cooling Unit Name**

<b>Name</b>	coolingUnitName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.7

<b>Description</b>	Defines the cooling unit name in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 488. Cooling Unit Status**

<b>Name</b>	coolingUnitStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.8
<b>Description</b>	Defines the status of the cooling unit in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Cooling Device Table

**Table 489. Cooling Device Table**

<b>Name</b>	coolingDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12
<b>Description</b>	Defines the Cooling Device Table.
<b>Syntax</b>	CoolingDeviceTableEntry
<b>Access</b>	Not accessible

**Table 490. Cooling Device Table Entry**

<b>Name</b>	coolingDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1
<b>Description</b>	Defines the Cooling Device Table entry.
<b>Syntax</b>	CoolingDeviceTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<pre>cooling DevicechassisIndex</pre> <p>,</p> <pre>coolingDeviceIndex</pre>
--------------	--

**Table 491. Cooling Device Chassis Index**

<b>Name</b>	coolingDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 492. Cooling Device Index**

<b>Name</b>	coolingDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.2
<b>Description</b>	Defines the index of cooling devices in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 493. Cooling Device State Capabilities**

<b>Name</b>	coolingDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.3
<b>Description</b>	Defines the capabilities of the cooling device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 494. Cooling Device State Settings**

<b>Name</b>	coolingDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.4
<b>Description</b>	Defines the state and settings of the cooling device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 495. Cooling Device Status**

<b>Name</b>	coolingDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.5
<b>Description</b>	Defines the status of the cooling device.
<b>Syntax</b>	DellStatusProbe
<b>Access</b>	Read-only

**Table 496. Cooling Device Reading**

<b>Name</b>	coolingDeviceReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.6
<b>Description</b>	Defines either the cooling device's speed in revolutions per minute (RPM), or the off/on value of the fan.  When the value for coolingDeviceSubType is other than coolingDeviceSubTypesDiscrete, the value returned for this attribute is the speed in RPM or the OFF/ON value of the cooling device. When the value for coolingDeviceSubType is coolingDeviceSubTypesDiscrete, a value is not returned for this attribute.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 497. Cooling Device Type**

<b>Name</b>	coolingDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.7
<b>Description</b>	Defines the cooling device type.
<b>Syntax</b>	DellCoolingDeviceType ( <a href="#">Cooling Device Type</a> )
<b>Access</b>	Read-only

**Table 498. Cooling Device Location Name**

<b>Name</b>	coolingDeviceLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.8
<b>Description</b>	Defines the location of the cooling device in this chassis.
<b>Syntax</b>	DellString

**Access** Read-only

#### Table 499. Cooling Device Upper Nonrecoverable Threshold

**Name** coolingDeviceUpperNonrecoverableThreshold  
**Object ID** 1.3.6.1.4.1.674.10892.1.700.12.1.9  
**Description** Defines the value of the fan's upper nonrecoverable threshold.  
**Syntax** DellSigned32BitRange  
**Access** Read-only

#### Table 500. Cooling Device Upper Critical Threshold

**Name** coolingDeviceUpperCriticalThreshold  
**Object ID** 1.3.6.1.4.1.674.10892.1.700.12.1.10  
**Description** Defines the value of the fan's upper critical threshold.  
**Syntax** DellSigned32BitRange  
**Access** Read-only

#### Table 501. Cooling Device Upper Noncritical Threshold

**Name** coolingDeviceUpperNonCriticalThreshold  
**Object ID** 1.3.6.1.4.1.674.10892.1.700.12.1.11  
**Description** Defines the user-assigned value of the fan's upper noncritical threshold.  
**Syntax** DellSigned32BitRange  
**Access** Read-only

#### Table 502. Cooling Device Lower Noncritical Threshold

**Name** coolingDeviceLowerNonCriticalThreshold  
**Object ID** 1.3.6.1.4.1.674.10892.1.700.12.1.12  
**Description** Defines the user-assigned value of the fan's lower noncritical threshold.  
**Syntax** DellSigned32BitRange  
**Access** Read-only

#### Table 503. Cooling Device Lower Critical Threshold

**Name** coolingDeviceLowerCriticalThreshold  
**Object ID** 1.3.6.1.4.1.674.10892.1.700.12.1.13  
**Description** Defines the value of the fan's lower critical threshold.  
**Syntax** DellSigned32BitRange  
**Access** Read-only

#### Table 504. Cooling Device Lower Nonrecoverable Threshold

**Name** coolingDeviceLowerNonRecoverableThreshold  
**Object ID** 1.3.6.1.4.1.674.10892.1.700.12.1.14  
**Description** Defines the value of the fan's lower nonrecoverable threshold.  
**Syntax** DellSigned32BitRead-onlyRange  
**Access** Read-only

**Table 505. Cooling Device Cooling Unit Index Reference**

<b>Name</b>	coolingDeviceCoolingUnitIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.15
<b>Description</b>	Defines the index for the associated system cooling unit in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 506. Cooling Device Subtype**

<b>Name</b>	coolingDeviceSubType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.16
<b>Description</b>	Defines the cooling device subtype.
<b>Syntax</b>	DellCoolingDeviceSubType ( <a href="#">Cooling Device Subtype</a> )
<b>Access</b>	Read-only

**Table 507. Cooling Device Probe Capabilities**

<b>Name</b>	coolingDeviceProbeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.17
<b>Description</b>	Defines the probe capabilities of the cooling device.
<b>Syntax</b>	DellProbeCapabilities
<b>Access</b>	Read-only

**Table 508. Cooling Device Discrete Reading**

<b>Name</b>	coolingDeviceDiscreteReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.18
<b>Description</b>	Defines the reading for a voltage probe of type coolingDeviceSubTypesDiscrete.  When the value for coolingDeviceSubType is other than coolingDeviceSubTypesDiscrete, a value is not returned for this attribute. When the value for coolingDeviceSubType is coolingDeviceSubTypesDiscrete, the value returned for this attribute is the discrete reading for the cooling device.
<b>Syntax</b>	DellCoolingDeviceDiscreteReading ( <a href="#">Cooling Device Discrete Reading</a> )
<b>Access</b>	Read-only

## Temperature Probe Table

**Table 509. Temperature Probe Table**

<b>Name</b>	temperatureProbeTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20
<b>Description</b>	Defines the Temperature Probe Table.
<b>Syntax</b>	TemperatureProbeTableEntry
<b>Access</b>	Not accessible

**Table 510. Temperature Probe Table Entry**

<b>Name</b>	temperatureProbeTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1
<b>Description</b>	Defines the Temperature Probe Table entry.

<b>Syntax</b>	TemperatureProbeTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	<pre>temperatureProbechassisIndex</pre> <pre>,</pre> <pre>temperatureProbeIndex</pre>

#### Table 511. Temperature Probe Chassis Index

<b>Name</b>	temperatureProbechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 512. Temperature Probe Index

<b>Name</b>	temperatureProbeIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.2
<b>Description</b>	Defines the index of temperature probes in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 513. Temperature Probe State Capabilities

<b>Name</b>	temperatureProbeStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.3
<b>Description</b>	Defines the capabilities of the temperature probe.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 514. Temperature Probe State Settings

<b>Name</b>	temperatureProbeStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.4
<b>Description</b>	Defines the state and settings of the temperature probe.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 515. Temperature Probe Status

<b>Name</b>	temperatureProbeStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.5
<b>Description</b>	Defines the status of the temperature probe in tenths of degrees Celsius.
<b>Syntax</b>	DellStatusProbe
<b>Access</b>	Read-only

#### Table 516. Temperature Probe Reading

<b>Name</b>	temperatureProbeReading
-------------	-------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.6
<b>Description</b>	Defines the value of the temperature probe.  When the value for temperatureProbeType is other than temperatureProbeTypesDiscrete, the value returned for this attribute is the temperature that the probe is reading in tenths of degrees Centigrade. When the value for temperatureProbeType is temperatureProbeTypesDiscrete, a value is not returned for this attribute.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 517. Temperature Probe Type**

<b>Name</b>	temperatureProbeType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.7
<b>Description</b>	Defines the temperature probe type.
<b>Syntax</b>	DellTemperatureProbeType ( <a href="#">Temperature Probe Type</a> )
<b>Access</b>	Read-only

**Table 518. Temperature Probe Location Name**

<b>Name</b>	temperatureProbeLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.8
<b>Description</b>	Defines the location of the temperature probe in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 519. Temperature Probe Upper Nonrecoverable Threshold**

<b>Name</b>	temperatureProbeUpperNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.9
<b>Description</b>	Defines the value of the temperature probe's upper nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 520. Temperature Probe Upper Critical Threshold**

<b>Name</b>	temperatureProbeUpperCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.10
<b>Description</b>	Defines the value of the temperature probe's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 521. Temperature Probe Upper Noncritical Threshold**

<b>Name</b>	temperatureProbeUpperNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.11
<b>Description</b>	Defines the user-assigned value of the temperature probe's upper noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 522. Temperature Probe Lower Noncritical Threshold**

<b>Name</b>	temperatureProbeLowerNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.12
<b>Description</b>	Defines the user-assigned value of the temperature probe's lower noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 523. Temperature Probe Lower Critical Threshold**

<b>Name</b>	temperatureProbeLowerCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.13
<b>Description</b>	Defines the value of the temperature probe's lower critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 524. Temperature Probe Lower Nonrecoverable Threshold**

<b>Name</b>	temperatureProbeLowerNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.14
<b>Description</b>	Defines the value of the temperature probe's lower nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 525. Temperature Probe Probe Capabilities**

<b>Name</b>	temperatureProbeProbeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.15
<b>Description</b>	Defines the probe capabilities of the temperature probe.
<b>Syntax</b>	DellProbeCapabilities
<b>Access</b>	Read-only

**Table 526. Temperature Probe Discrete Reading**

<b>Name</b>	temperatureProbeDiscreteReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.16
<b>Description</b>	Defines the reading for a temperature probe of type temperatureProbeTypesDiscrete.  When the value for temperatureProbeType is other than temperatureProbeTypesDiscrete, a value is not returned for this attribute. When the value for temperatureProbeType is temperatureProbeTypesDiscrete, the value returned for this attribute is the discrete reading for the probe.
<b>Syntax</b>	DellTemperatureDiscreteReading ( <a href="#">Temperature Probe Discrete Reading</a> )
<b>Access</b>	Read-only

## Thermal Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 527. Cooling Device Type**

<b>Variable Name:</b>	DellCoolingDeviceType
<b>Data Type:</b>	Integer

### Possible Data Values

coolingDeviceTypeIsOther (1)  
coolingDeviceTypeIsUnknown (2)  
coolingDeviceTypeIsAFan (3)  
coolingDeviceTypeIsABlower (4)  
coolingDeviceTypeIsAChipFan (5)  
coolingDeviceTypeIsACabinetFan (6)  
coolingDeviceTypeIsAPowerSupplyFan (7)  
coolingDeviceTypeIsAHeatPipe (8)  
coolingDeviceTypeIsRefrigeration (9)  
coolingDeviceTypeIsActiveCooling (10)  
coolingDeviceTypeIsPassiveCooling (11)

**Table 528. Cooling Device Subtype**

**Variable Name:** DellCoolingDeviceSubType

**Data Type:** Integer

### Possible Data Values

coolingDeviceSubTypeIsOther (1)  
coolingDeviceSubTypeIsUnknown (2)  
  
coolingDeviceSubTypeIsAFanThatReads InRPM (3)  
coolingDeviceSubTypeIsAFanReadsONor OFF (4)  
coolingDeviceSubTypeIsAPowerSupply FanThatReadsinRPM (5)  
coolingDeviceSubTypeIsAPowerSupply FanThatReads- ONorOFF (6)  
coolingDeviceSubTypeIsDiscrete (16)

**Table 529. Cooling Device Discrete Reading**

**Variable Name:** DellCoolingDeviceDiscreteReading .

**Data Type:** Integer

### Possible Data Values

coolingDeviceIsGood (1)  
coolingDeviceIsBad (2)

**Table 530. Temperature Probe Type**

**Variable Name:** DellTemperatureProbeType

**Data Type:** Integer

### Possible Data Values

temperatureProbeTypeIsOther (1)  
temperatureProbeTypeIsUnknown (2)  
  
temperatureProbeTypeIsAmbientESM (3)

### Meaning of Data Value

The cooling device type is not one of the following:  
The cooling device type is unknown (not known or not monitored).  
The cooling device type is a fan.  
The cooling device type is a centrifugal blower.  
The cooling device type is a fan on an integrated circuit.  
The cooling device type is a cabinet fan.  
The cooling device type is a power supply fan.  
The cooling device type is a heat pipe.  
The cooling device type is an integrated refrigeration unit.  
The cooling device type is an active cooling device.  
The cooling device type is a passive cooling device.

### Meaning of Data Value

The cooling device subtype is not one of the following:  
The cooling device subtype is unknown (not known or not monitored).  
The cooling device subtype is a fan that reads in RPMs.  
The cooling device subtype is a fan that reads 0 (off) or 1 (on).  
The cooling device subtype is a power supply fan that reads in RPMs.  
The cooling device subtype is a power supply fan that reads 0 (off) or 1 (on).  
The cooling device subtype is a cooling device with discrete reading.

### Meaning of Data Value

The cooling device discrete reading is good.  
The cooling device discrete reading is bad

### Meaning of Data Value

The temperature probe subtype is not one of the following:  
The temperature probe subtype is unknown (not known or not monitored).  
The temperature probe is for ambient Embedded Systems Management (ESM).

<code>temperatureProbeTypeIsDiscrete(16)</code>	The temperature probe subtype is a temperature probe with discrete reading.
---	---

### Table 531. Temperature Probe Discrete Reading

**Variable Name:** `DellTemperatureDiscreteReading`

**Data Type:** Integer

**Possible Data Values**

`temperatureIsGood(1)`

`temperatureIsBad(2)`

**Meaning of Data Value**

The temperature probe discrete reading is good.

The temperature probe discrete reading is bad.

## Remote Flash BIOS Group

The Remote Flash Basic Input/Output System (BIOS) Table defines the variables used to remotely update the BIOS in a system. The variables also define the capabilities of BIOS updates on the system.

## Remote Flash BIOS Group Table

The Remote Flash BIOS Group defines objects in the Remote Flash BIOS MIB table.

### Remote Flash BIOS Table

The following object sets up the Remote Flash BIOS Table:

#### Table 532. Remote Flash BIOS Table

<b>Name</b>	<code>remoteFlashBIOSTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10
<b>Description</b>	Defines the Remote Flash BIOS Table.
<b>Syntax</b>	<code>RemoteFlashBIOSTableEntry</code>
<b>Access</b>	Not accessible

#### Table 533. Remote Flash BIOS Table Entry

<b>Name</b>	<code>remoteFlashBIOSTableEntry</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1
<b>Description</b>	Defines the Remote Flash BIOS Table entry.
<b>Syntax</b>	<code>RemoteFlashBIOSTableEntry</code>
<b>Access</b>	Not accessible
<b>Index</b>	<code>remoteFlashBIOSchassisIndex</code> , <code>remoteFlashBIOSIndex</code>

#### Table 534. Remote Flash BIOS Chassis Index

<b>Name</b>	<code>remoteFlashBIOSchassisIndex</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	<code>DellObjectRange</code>
<b>Access</b>	Read-only

#### Table 535. Remote Flash BIOS Index

<b>Name</b>	<code>remoteFlashBIOSIndex</code>
-------------	-----------------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.2
<b>Description</b>	Defines the index to the remote BIOS update hardware on this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 536. Remote Flash BIOS State Capabilities Unique**

<b>Name</b>	remoteFlashBIOSStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.3
<b>Description</b>	Defines the capabilities of the remote BIOS update hardware on this system.
<b>Syntax</b>	DellRemoteFlashBIOSStateCapabilitiesUnique ( <a href="#">Remote Flash BIOS State Capabilities Unique</a> )
<b>Access</b>	Read-only

**Table 537. Remote Flash BIOS State Settings Unique**

<b>Name</b>	remoteFlashBIOSStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.4
<b>Description</b>	Defines the state and settings of the remote BIOS update hardware on this system.
<b>Syntax</b>	DellRemoteFlashBIOSStateSettingsUnique ( <a href="#">Remote Flash BIOS State Settings</a> )
<b>Access</b>	Read-only

**Table 538. Remote Flash BIOS Status**

<b>Name</b>	remoteFlashBIOSStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.5
<b>Description</b>	Defines the status of the remote BIOS update hardware on this system.
<b>Syntax</b>	DellRemoteFlashBIOSStateStatus
<b>Access</b>	Read-only

**Table 539. Remote Flash BIOS Last BIOS Date Name**

<b>Name</b>	remoteFlashBIOSLastBIOSDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.6
<b>Description</b>	Defines the date of the last BIOS update.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

**Table 540. Remote Flash BIOS Completion Code**

<b>Name</b>	remoteFlashBIOSCompletionCode
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.7
<b>Description</b>	Defines the completion code of the last BIOS update.
<b>Syntax</b>	DellRemoteFlashBIOSCompletionCode ( <a href="#">Remote Flash BIOS Completion Code</a> )
<b>Access</b>	Read-only

**Table 541. Remote Flash BIOS Minimum Contiguous Memory**

<b>Name</b>	remoteFlashBIOSMinimumContiguousMemory
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.8
<b>Description</b>	Defines the minimum size of contiguous memory required for remote BIOS update in kilobytes.

<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## Remote Flash BIOS Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 542. Remote Flash BIOS State Capabilities Unique**

**Variable Name:** DellRemoteFlashBIOSStateCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

- unknown (1)
- enableCapable (2)
- notReadyCapable (4)
- cancelCapable (8)
- enableAndCancelCapable (10)

**Meaning of Data Value**

- The remote flash BIOS's capabilities are unknown.
- The remote flash BIOS can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
- The remote flash BIOS can be set to indicate not ready.
- Flash of BIOS can be canceled.
- Flash of BIOS can be enabled or canceled.

**Table 543. Remote Flash BIOS State Settings**

**Variable Name:** DellRemoteFlashBIOSStateSettingsUnique

**Data Type:** Integer

**Possible Data Values**

- unknown (1)
- enabled (2)
- notReady (4)
- canceled (8)
- pending (16)
- other (32)

**Meaning of Data Value**

- The remote flash BIOS's capabilities are unknown.
- The remote flash BIOS update is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
- The remote flash BIOS's state is not ready.
- The remote flash BIOS has been canceled.
- The remote flash BIOS update is pending.
- The remote flash BIOS state/setting is not one of the previous values.

**Table 544. Remote Flash BIOS Completion Code**

**Variable Name:** DellRemoteFlashBIOSCompletionCode

**Data Type:** Integer

**Possible Data Values**

- completionCodeIsOther (1)
- completionCodeIsUnknown (2)
- completionCodeIsOK (3)
- completionCodeIsBadImage (4)
- completionCodeIsNoFileAccess (5)
- completionCodeIsNotReady (6)
- completionCodeIsDisabled (7)
- completionCodeIsNoBattery (8)
- completionCodeIsNoChargedBattery (9)

**Meaning of Data Value**

- The completion code status is not one of the following:
- The completion code is unknown (not known or not monitored).
- This completion code completed successfully.
- This completion code is a bad flash BIOS image.
- Flash BIOS could not be accessed.
- Flash BIOS memory not ready.
- Flash BIOS is currently disabled.
- A battery must be installed.
- A fully charged battery must be installed.

<code>completionCodeIsNoExternalPower (10)</code>	An external power adapter must be connected.
<code>completionCodeIsNo12VoltSet (11)</code>	12 volts (V) could not be set.
<code>completionCodeIsNo12VoltRemoval (12)</code>	12 V could not be removed.
<code>completionCodeIsFlashMemoryFailed (13)</code>	A flash memory failure occurred.
<code>completionCodeIsGeneralFailure (14)</code>	A general failure occurred.
<code>completionCodeIsDataMiscompare (15)</code>	A data miscompare error occurred.
<code>completionCodeIsNoImageFound (16)</code>	The flash BIOS image could not be found in memory.
<code>completionCodeIsNoUpdatePerformed (17)</code>	No update operation has been performed.

## Port Group

The Port Group provides information about the different types of ports that may be present in your system. This management information base (MIB) group also provides information about the capabilities, states, and settings that are possible for each port.

## Port Group Tables

The following MIB tables define objects in the Port Group:

- [Pointing Port Table](#)
- [Keyboard Port Table](#)
- [Processor Port Table](#)
- [Memory Device Port Table](#)
- [Monitor Port Table](#)
- [Small Computer System Interface \(SCSI\) Port Table](#)
- [Parallel Port Table](#)
- [Serial Port Table](#)
- [Universal Serial Bus \(USB\) Port Table](#)

## Pointing Port Table

**Table 545. Pointing Port Table**

<b>Name</b>	<code>pointingPortTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10
<b>Description</b>	Defines the Pointing Port Table.
<b>Syntax</b>	<code>IntegerPointingPortTableEntry</code>
<b>Access</b>	Not accessible

**Table 546. Pointing Port Table Entry**

<b>Name</b>	<code>pointingPortTableEntry</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.1
<b>Description</b>	Defines the Pointing Port Table entry.
<b>Syntax</b>	<code>PointingPortTableEntry</code>
<b>Access</b>	Not accessible

<b>Index</b>	<code>pointingPortchassisIndex</code>
	,
	<code>pointingPortIndex</code>

**Table 547. Pointing Port Chassis Index**

<b>Name</b>	pointingPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 548. Pointing Port Index**

<b>Name</b>	pointingPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.1.2
<b>Description</b>	Defines the index of the pointing ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 549. Pointing Port State Capabilities**

<b>Name</b>	pointingPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.3
<b>Description</b>	Defines the capabilities of the pointing port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 550. Pointing Port State Settings**

<b>Name</b>	pointingPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.4
<b>Description</b>	Defines the state and settings of the pointing port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 551. Pointing Port Status**

<b>Name</b>	pointingPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.5
<b>Description</b>	Defines the status of the pointing port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 552. Pointing Port Security State**

<b>Name</b>	pointingPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.6
<b>Description</b>	Defines the security settings of the pointing port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

**Table 553. Pointing Port Connector Type**

<b>Name</b>	pointingPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.7

<b>Description</b>	Defines the connector type of the pointing port.
<b>Syntax</b>	DellPointingPortConnectorType (See <a href="#">Pointing Port Connector Type</a> )
<b>Access</b>	Read-only

**Table 554. Pointing Port Name**

<b>Name</b>	pointingPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.8
<b>Description</b>	Defines the name of the pointing port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 555. Pointing Port BIOS Connector Type**

<b>Name</b>	pointingPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.9
<b>Description</b>	Defines the basic input/output system (BIOS) connector type of the pointing port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

## Keyboard Port Table

**Table 556. Keyboard Port Table**

<b>Name</b>	keyboardPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20
<b>Description</b>	Defines the Keyboard Port Table.
<b>Syntax</b>	IntegerKeyboardPortTableEntry
<b>Access</b>	Not accessible

**Table 557. Keyboard Port Table Entry**

<b>Name</b>	keyboardPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1
<b>Description</b>	Defines the Keyboard Port Table entry.
<b>Syntax</b>	KeyboardPortTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	keyboardPortchassisIndex
	,
	keyboardPortIndex

**Table 558. Keyboard Port Chassis Index**

<b>Name</b>	keyboardPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 559. Keyboard Port Index**

<b>Name</b>	keyboardPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.2
<b>Description</b>	Defines the index of the keyboard ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 560. Keyboard Port State Capabilities**

<b>Name</b>	keyboardPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.3
<b>Description</b>	Defines the capabilities of the keyboard port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 561. Keyboard Port State Settings**

<b>Name</b>	keyboardPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.4
<b>Description</b>	Defines the state and settings of the keyboard port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 562. Keyboard Port Status**

<b>Name</b>	keyboardPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.5
<b>Description</b>	Defines the status of the keyboard port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 563. Keyboard Port Security State**

<b>Name</b>	keyboardPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.6
<b>Description</b>	Defines the security settings of the keyboard port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

**Table 564. Keyboard Port Connector Type**

<b>Name</b>	keyboardPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.7
<b>Description</b>	Defines the connector type of the keyboard port.
<b>Syntax</b>	DellKeyboardPortConnectorType (See <a href="#">Keyboard Port Connector Types</a> )
<b>Access</b>	Read-only

**Table 565. Keyboard Port Name**

<b>Name</b>	keyboardPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.8

<b>Description</b>	Defines the name of the keyboard port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 566. Keyboard Port BIOS Connector Type**

<b>Name</b>	keyboardPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.9
<b>Description</b>	Defines the BIOS connector type of the keyboard port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

## Processor Port Table

**Table 567. Processor Port Table**

<b>Name</b>	processorPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30
<b>Description</b>	Defines the Processor Port Table.
<b>Syntax</b>	IntegerProcessorPortTableEntry
<b>Access</b>	Not accessible

**Table 568. Processor Port Table Entry**

<b>Name</b>	processorPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1
<b>Description</b>	Defines the Processor Port Table entry.
<b>Syntax</b>	ProcessorPortTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<code>processorPortchassisIndex</code>
	,
	<code>processorPortIndex</code>

**Table 569. Processor Port Chassis Index**

<b>Name</b>	processorPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 570. Processor Port Index**

<b>Name</b>	processorPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.2
<b>Description</b>	Defines the index of the processor ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 571. Processor Port State Capabilities**

<b>Name</b>	processorPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.3
<b>Description</b>	Defines the capabilities of the processor port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 572. Processor Port State Settings**

<b>Name</b>	processorPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.4
<b>Description</b>	Defines the state and settings of the processor port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 573. Processor Port Status**

<b>Name</b>	processorPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.5
<b>Description</b>	Defines the status of the processor port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 574. Processor Port Security State**

<b>Name</b>	processorPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.6
<b>Description</b>	Defines the security settings of the processor port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

**Table 575. Processor Port Connector Type**

<b>Name</b>	processorPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.7
<b>Description</b>	Defines the connector type of the processor port.
<b>Syntax</b>	DellProcessorPortConnectorType (See <a href="#">Processor Port Connector Types</a> )
<b>Access</b>	Read-only

**Table 576. Processor Port Name**

<b>Name</b>	processorPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.8
<b>Description</b>	Defines name of the processor port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 577. Processor Port BIOS Connector Type**

<b>Name</b>	processorPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.9

<b>Description</b>	Defines the BIOS connector type of the processor port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

## Memory Device Port Table

**Table 578. Memory Device Port Table**

<b>Name</b>	memoryDevicePortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40
<b>Description</b>	Defines the Memory Device Port Table.
<b>Syntax</b>	IntegerMemoryDevicePortTableEntry
<b>Access</b>	Not accessible

**Table 579. Memory Device Port Table Entry**

<b>Name</b>	memoryDevicePortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1
<b>Description</b>	Defines the Memory Device Port Table entry.
<b>Syntax</b>	MemoryDevicePortTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	memoryDevicePortchassisIndex
	,
	memoryDevicePortIndex

**Table 580. Memory Device Port Chassis Index**

<b>Name</b>	memoryDevicePortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 581. Memory Device Port Index**

<b>Name</b>	memoryDevicePortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.2
<b>Description</b>	Defines the index of the memory device port in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 582. Memory Device Port State Capabilities**

<b>Name</b>	memoryDevicePortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.3
<b>Description</b>	Defines the capabilities of the memory device port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 583. Memory Device Port State Settings**

<b>Name</b>	memoryDevicePortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.4
<b>Description</b>	Defines the state and settings of the memory device port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 584. Memory Device Port Status**

<b>Name</b>	memoryDevicePortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.5
<b>Description</b>	Defines the status of the memory device port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 585. Memory Device Port Security State**

<b>Name</b>	memoryDevicePortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.6
<b>Description</b>	Defines the security settings of the memory device port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

**Table 586. Memory Device Port Connector Type**

<b>Name</b>	memoryDevicePortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.7
<b>Description</b>	Defines the connector type of the memory device port.
<b>Syntax</b>	DellMemoryDevicePortConnectorType (See <a href="#">Memory Device Port Connector Types</a> )
<b>Access</b>	Read-only

**Table 587. Memory Device Port Name**

<b>Name</b>	memoryDevicePortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.8
<b>Description</b>	Defines the name of the memory device port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 588. Memory Device Port BIOS Connector Type**

<b>Name</b>	memoryDevicePortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.9
<b>Description</b>	Defines the BIOS connector type of the memory device port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

**Table 589. Memory Device Port Physical Memory Array Index Reference**

<b>Name</b>	memoryDevicePortPhysicalMemoryArrayIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.10

<b>Description</b>	Defines the index to the associated physical memory array.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 590. Memory Device Port Physical Memory Card Index Reference**

<b>Name</b>	memoryDevicePortPhysicalMemoryCardIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.11
<b>Description</b>	Defines the index (one-based) of the Physical Memory Card Table entry for the physical memory card with the same chassis index that this memory device port is associated with (if any).
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## Monitor Port Table

**Table 591. Monitor Port Table**

<b>Name</b>	monitorPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50
<b>Description</b>	Defines the Monitor Port Table.
<b>Syntax</b>	IntegerMonitorPortTableEntry
<b>Access</b>	Not accessible

**Table 592. Monitor Port Table Entry**

<b>Name</b>	monitorPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1
<b>Description</b>	Defines the Monitor Port Table entry.
<b>Syntax</b>	MonitorPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

```
monitorPortchassisIndex
```

,

```
monitorPortIndex
```

**Table 593. Monitor Port Chassis Index**

<b>Name</b>	monitorPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 594. Monitor Port Index**

<b>Name</b>	monitorPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.2
<b>Description</b>	Defines the index of the monitor ports in this chassis.

<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 595. Monitor Port State Capabilities

<b>Name</b>	monitorPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.3
<b>Description</b>	Defines the capabilities of the monitor port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 596. Monitor Port State Settings

<b>Name</b>	monitorPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.4
<b>Description</b>	Defines the state of the monitor port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 597. Monitor Port Status

<b>Name</b>	monitorPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.5
<b>Description</b>	Defines the status of the monitor port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 598. Monitor Port Security State

<b>Name</b>	monitorPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.6
<b>Description</b>	Defines the security settings of the monitor port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

#### Table 599. Monitor Port Connector Type

<b>Name</b>	monitorPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.7
<b>Description</b>	Defines the connector type of the monitor port.
<b>Syntax</b>	DellMonitorPortConnectorTypes (See <a href="#">Monitor Port Connector Types</a> )
<b>Access</b>	Read-only

#### Table 600. Monitor Port Name

<b>Name</b>	monitorPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.8
<b>Description</b>	Defines the name of the monitor port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Table 601. Monitor Port BIOS Connector Type

<b>Name</b>	monitorPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.9
<b>Description</b>	Defines the name of the BIOS connector type of the monitor port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

## Small Computer System Interface (SCSI) Port Table

### Table 602. Small Computer System Interface (SCSI) Port Table

<b>Name</b>	sCSIPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60
<b>Description</b>	Defines the SCSI Port Table.
<b>Syntax</b>	IntegerSCSIPortTableEntry
<b>Access</b>	Not accessible

### Table 603. SCSI Port Table Entry

<b>Name</b>	sCSIPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1
<b>Description</b>	Defines the SCSI Port Table entry.
<b>Syntax</b>	SCSIPortTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	sCSIPortchassisIndex
	,
	sCSIPortIndex

### Table 604. SCSI Port Chassis Index

<b>Name</b>	sCSIPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 605. SCSI Port Index

<b>Name</b>	sCSIPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.2
<b>Description</b>	Defines the index of the SCSI ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 606. SCSI Port State Capabilities

<b>Name</b>	sCSIPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.3

<b>Description</b>	Defines the capabilities of the SCSI port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 607. SCSI Port State Settings**

<b>Name</b>	DellStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.4
<b>Description</b>	Defines the state and settings of the SCSI port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 608. SCSI Port Status**

<b>Name</b>	sCSIPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.5
<b>Description</b>	Defines the status of the SCSI port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 609. SCSI Port Security State**

<b>Name</b>	sCSIPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.6
<b>Description</b>	Defines the security settings of the SCSI port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

**Table 610. SCSI Port Connector Type**

<b>Name</b>	sCSIPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.7
<b>Description</b>	Defines the connector type of the SCSI port.
<b>Syntax</b>	DellSCSIPortConnectorType (See <a href="#">SCSI Port Connector Types</a> )
<b>Access</b>	Read-only

**Table 611. SCSI Port Name**

<b>Name</b>	sCSIPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.8
<b>Description</b>	Defines the name of the SCSI port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 612. SCSI Port BIOS Connector Type**

<b>Name</b>	sCSIPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.9
<b>Description</b>	Defines the BIOS connector type of the SCSI port.
<b>Syntax</b>	DellGenericPortConnectorType

**Access** Read-only

## Parallel Port Table

**Table 613. Parallel Port Table**

<b>Name</b>	parallelPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70
<b>Description</b>	Defines the Parallel Port Table.
<b>Syntax</b>	IntegerParallelPortTableEntry
<b>Access</b>	Not accessible

**Table 614. Parallel Port Table Entry**

<b>Name</b>	parallelPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1
<b>Description</b>	Defines the Parallel Port Table entry.
<b>Syntax</b>	ParallelPortTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<code>parallelPortchassisIndex</code>
--------------	---------------------------------------

	<code>parallelPortIndex</code>
--	--------------------------------

**Table 615. Parallel Port Chassis Index**

<b>Name</b>	parallelPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 616. Parallel Port Index**

<b>Name</b>	parallelPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.2
<b>Description</b>	Defines the index of the parallel ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 617. Parallel Port State Capabilities**

<b>Name</b>	parallelPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.3
<b>Description</b>	Defines the capabilities of the parallel port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 618. Parallel Port State Settings**

<b>Name</b>	parallelPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.4
<b>Description</b>	Defines the state and settings of the parallel port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 619. Parallel Port Status**

<b>Name</b>	parallelPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.5
<b>Description</b>	Defines the status of the parallel port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 620. Parallel Port Security State**

<b>Name</b>	DellPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.6
<b>Description</b>	Defines the security state of the parallel port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 621. Parallel Port Connector Type**

<b>Name</b>	parallelPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.7
<b>Description</b>	Defines the connector type of the parallel port.
<b>Syntax</b>	DellParallelPortConnectorType
<b>Access</b>	Read-only

**Table 622. Parallel Port Name**

<b>Name</b>	parallelPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.8
<b>Description</b>	Defines the name of the parallel port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 623. Parallel Port Connector Pin Out**

<b>Name</b>	parallelPortConnectorPinOut
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.9
<b>Description</b>	Defines the pinout of the parallel port.
<b>Syntax</b>	DellParallelPortConnectorPinout
<b>Access</b>	Read-only

**Table 624. Parallel Port Capabilities Unique**

<b>Name</b>	parallelPortCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.10

<b>Description</b>	Defines the capabilities of the parallel port.
<b>Syntax</b>	DellParallelPortConnectorPinout
<b>Access</b>	Read-only

**Table 625. Parallel Port Base I/O Address**

<b>Name</b>	parallelPortBaseIOAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.11
<b>Description</b>	Defines the Base Input/Output (I/O) address of the parallel port.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

**Table 626. Parallel Port IRQ Level**

<b>Name</b>	parallelPortIRQLevel
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.12
<b>Description</b>	Defines the Interrupt Request Level (IRQ) of the parallel port.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

**Table 627. Parallel Port DMA Support**

<b>Name</b>	parallelPortDMASupport
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.13
<b>Description</b>	Defines if direct memory access (DMA) is supported by the parallel port.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

## Serial Port Table

**Table 628. Serial Port**

<b>Name</b>	serialPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80
<b>Description</b>	Defines the Serial Port Table.
<b>Syntax</b>	IntegerSerialPortTableEntry
<b>Access</b>	Not accessible

**Table 629. Serial Port Table Entry**

<b>Name</b>	serialPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1
<b>Description</b>	Defines the Serial Port Table entry.
<b>Syntax</b>	SerialPortTableEntry
<b>Access</b>	Not accessible

**Index**

```
serialPortchassisIndex
```

```
serialPortIndex
```

**Table 630. Serial Port Chassis Index**

<b>Name</b>	serialPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 631. Serial Port Index**

<b>Name</b>	serialPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.2
<b>Description</b>	Defines the index of the serial ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 632. Serial Port State Capabilities**

<b>Name</b>	serialPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.3
<b>Description</b>	Defines the capabilities of the serial port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 633. Serial Port State Settings**

<b>Name</b>	serialPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.4
<b>Description</b>	Defines the state and settings of the serial port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 634. Serial Port Status**

<b>Name</b>	serialPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.5
<b>Description</b>	Defines the status of the serial port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 635. Serial Port Security State**

<b>Name</b>	serialPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.6
<b>Description</b>	Defines the security settings of the serial port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

**Table 636. Serial Port Connector Type**

<b>Name</b>	serialPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.7

<b>Description</b>	Defines connector type of the serial port.
<b>Syntax</b>	DellSerialPortConnectorType
<b>Access</b>	Read-only

**Table 637. Serial Port Name**

<b>Name</b>	serialPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.8
<b>Description</b>	Defines the name of the serial port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 638. Serial Port Maximum Speed**

<b>Name</b>	serialPortMaximumSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.9
<b>Description</b>	Defines the maximum speed the serial interface can support in bits per second (bps).
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 639. Serial Port Capabilities Unique**

<b>Name</b>	serialPortCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.10
<b>Description</b>	Defines additional capabilities of the serial port.
<b>Syntax</b>	DellSerialPortCapabilitiesUnique
<b>Access</b>	Read-only

**Table 640. Serial Port Base I/O Address**

<b>Name</b>	serialPortBaseIOAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.11
<b>Description</b>	Defines the base I/O address of the serial port.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

**Table 641. Serial Port IRQ Level**

<b>Name</b>	serialPortIRQLevel
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.12
<b>Description</b>	Defines the IRQ of the serial port.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

## Universal Serial Bus (USB) Port Table

**Table 642. Universal Serial Bus (USB) Port**

<b>Name</b>	uSBPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90
<b>Description</b>	Defines the USB Port Table.

<b>Syntax</b>	IntegerUSBPortTableEntry
<b>Access</b>	Not accessible

#### Table 643. USB Port Table Entry

<b>Name</b>	uSBPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1
<b>Description</b>	Defines the USB Port Table entry.
<b>Syntax</b>	USBPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	uSBPortchassisIndex , uSBPortIndex

#### Table 644. USB Port Chassis Index

<b>Name</b>	uSBPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 645. USB Port Index

<b>Name</b>	uSBPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.2
<b>Description</b>	Defines the index of the USB ports in this chassis
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 646. USB Port State Capabilities

<b>Name</b>	uSBPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.3
<b>Description</b>	Defines the capabilities of the USB port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 647. USB Port State Settings

<b>Name</b>	uSBPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.4
<b>Description</b>	Defines the state and settings of the USB port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 648. USB Port Status

<b>Name</b>	uSBPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.5
<b>Description</b>	Defines the state of the USB port.
<b>Syntax</b>	DellStatus

**Access** Read-only

**Table 649. USB Port Security State**

**Name** uSBPortSecurityState  
**Object ID** 1.3.6.1.4.1.674.10892.1.1000.90.1.6  
**Description** Defines the security settings of the USB port.  
**Syntax** DellPortSecurityState  
**Access** Read-only

**Table 650. USB Port Connector Type**

**Name** uSBPortConnectorType  
**Object ID** 1.3.6.1.4.1.674.10892.1.1000.90.1.7  
**Description** Defines the connector type of the USB port.  
**Syntax** DellUSBPortConnectorType  
**Access** Read-only

**Table 651. USB Port Name**

**Name** uSBPortName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1000.90.1.8  
**Description** Defines the name of the USB port.  
**Syntax** DellString  
**Access** Read-only

## Port Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 652. Pointing Port Connector Type**

**Variable Name:** DellPointingPortConnectorType

**Data Type :** Integer

Possible Data Values	Meaning of Data Value
connectorPortTypeIsOther (1)	The pointing port connector type is not one of the following:
connectorPortTypeIsUnknown (2)	The pointing port connector type is unknown.
connectorPortTypeIsSerial (3)	The pointing port connector type is serial.
connectorPortTypeIsPS2 (4)	The pointing port connector type is a Personal System/2 (PS/2).
connectorPortTypeIsInfrared (5)	The pointing port connector type is infrared.
connectorPortTypeIsHPHIL (6)	The pointing port connector type is HP-HIL.
connectorPortTypeIsBusMouse (7)	The pointing port connector type is a bus mouse.
connectorPortTypeIsADB (8)	The pointing port connector type is ADB.
connectorPortTypeIsDB9 (9)	The pointing port connector type is nine-pin DB-9.

connectorPortTypeIsMicroDIN (10)	The pointing port connector type is micro Deutsche Industrie Norm (DIN).
connectorPortTypeIsAccessBusUSB (11)	The pointing port connector type is Access Bus USB.
connectorPortTypeIsPC98 (12)	The port connector type is a PC-98.

**Table 653. Keyboard Port Connector Types**

**Variable Name :** DellKeyboardPortConnectorType

**Data Type:** Integer

**Possible Data Values**

connectorPortTypeIsOther (1)
connectorPortTypeIsUnknown (2)
connectorPortTypeIsMiniDIN (3)
connectorPortTypeIsMicroDIN (4)
connectorPortTypeIsPS2 (5)
connectorPortTypeIsInfrared (6)
connectorPortTypeIsHPHIL (7)
connectorPortTypeIsDB9 (8)
connectorPortTypeIsAccessBusUSB (9)
connectorPortTypeIsPC98 (10)

**Meaning of Data Value**

The keyboard port connector type is not one of the following:
The keyboard port connector type is unknown.
The keyboard port connector type is a mini DIN.
The keyboard port connector type is a MicroDIN.
The keyboard port connector type is PS/2.
The keyboard port connector type is infrared.
The keyboard port connector type is HP-HIL.
The keyboard port connector type is DB-9.
The keyboard port connector type is bus USB.
The keyboard port connector type is PC-98.

**Table 654. Processor Port Connector Types**

**Variable Name :** DellProcessorPortConnectorType

**Data Type:** Integer

**Possible Data Values**

connectorPortTypeIsOther (1)
connectorPortTypeIsUnknown (2)
connectorPortTypeIsDaughterdBoard (3)
connectorPortTypeIsZIFSocket (4)
connectorPortTypeIsAPiggyBackBoard (5)
connectorPortTypeIsNone (6)
connectorPortTypeIsLIFSocket (7)
connectorPortTypeIsSlot1 (8)
connectorPortTypeIsSlot2 (9)
connectorPortTypeIs370PinSocket (10)

**Meaning of Data Value**

The processor port connector type is not one of the following:
The processor port connector type is unknown.
The processor port connector type is a daughter board.
The processor port connector type is a zero insertion force (ZIF) socket.
The processor port connector type is a replacement piggyback board.
There is no processor port connector; processor is soldered in place.
The processor port connector type is a low insertion force (LIF) socket.
The processor port connector type is a slot one.
The processor port connector type is a slot two.
The processor port connector type is a 370 pin socket.

**Table 655. Memory Device Port Connector Types**

**Variable Name :** DellMemoryDevicePortConnectorType

**Data Type:** Integer

**Possible Data Values**

connectorPortTypeIsOther (1)
------------------------------

**Meaning of Data Value**

The memory device port connector type is not one of the following:
--

connectorPortTypeIsUnknown (2)	The memory device port connector type is unknown.
connectorPortTypeIsSIMM (3)	The memory device port connector type is a single in-line memory module (SIMM).
connectorPortTypeIsSIP (4)	The memory device port connector type is a SIP.
connectorPortTypeIsAChip (5)	The memory device port connector type is a chip.
connectorPortTypeIsDIP (6)	The memory device port connector type is a dual in-line package (DIP).
connectorPortTypeIsZIP (7)	The memory device port connector type is a ZIP.
connectorPortTypeIsAProprietaryCard (8)	The memory device port connector type is a proprietary card.
connectorPortTypeIsDIMM (9)	The memory device port connector type is a dual in-line memory module (DIMM).
connectorPortTypeIsTSOP (10)	The memory device port connector type is a TSOP.
connectorPortTypeIsARowOfChips (11)	The memory device port connector type is a row of chips.
connectorPortTypeIsRIMM (12)	The memory device port connector type is a Rambus Inline Memory Module (RIMM).
connectorPortTypeIsSODIMM (13)	The memory device port connector type is a small outline, dual in-line memory module (SODIMM).
connectorPortTypeIsSRIMM (14)	The memory device port connector type is a SRIMM.

**Table 656. Monitor Port Connector Types**

**Variable Name :** DellMonitorPortConnectorType

**Data Type:** Integer

**Possible Data Values**

- connectorPortTypeIsOther (1)
- connectorPortTypeIsUnknown (2)
- connectorPortTypeIsDB15PinMale (3)
- connectorPortTypeIsDB15PinFemale (4)

**Meaning of Data Value**

- The monitor port connector type is not one of the following:
- The monitor port connector type is unknown.
- The monitor port connector type is a male DB-15.
- The monitor port connector type is a female DB-15.

**Table 657. SCSI Port Connector Types**

**Variable Name :** DellSCSIPortConnectorType

**Data Type:** Integer

**Possible Data Values**

- connectorPortTypeIsOther (1)
- connectorPortTypeIsUnknown (2)
- connectorPortTypeIsDIN25pin (3)
- connectorPortTypeIsDIN50pin (4)
- connectorPortTypeIsDIN68pin (5)

**Meaning of Data Value**

- The SCSI port connector type is not one of the following:
- The SCSI port connector type is unknown.
- The SCSI port connector type is a DIN 25-pin.
- The SCSI port connector type is a DIN 50-pin.
- The SCSI port connector type is a DIN 68-pin.

## Device Group

The Device Group provides information about different types of pointing, keyboard, processor, cache, memory, and peripheral component interconnect (PCI) devices. Variables in this group cover information about type, settings, configuration, manufacturer, address or location, and if applicable, the speed of the device.

# Device Tables

The following management information base (MIB) tables define objects in the Device Group:

- [Pointing Device Table](#)
- [Keyboard Device Table](#)
- [Processor Device Table](#)
- [Processor Device Status Table](#)
- [Cache Device Table](#)
- [Memory Device Table](#)
- [Memory Device Mapped Address Table](#)
- [Generic Device Table](#)
- [PCI Device Table](#)
- [PCI Device Configuration Space Table](#)
- [Network Device Table](#)
- [Managed System Services Device Table](#)
- [SD Card Unit Table](#)
- [SD Card Device Table](#)

## Pointing Device Table

**Table 658. Pointing Device Table**

<b>Name</b>	pointingDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10
<b>Description</b>	Defines the Pointing Device Table. This group of objects references the Pointing Port Index ( <a href="#">Pointing Port Index</a> ).
<b>Syntax</b>	SEQUENCE OF PointingDeviceTableEntry
<b>Access</b>	Not accessible

**Table 659. Pointing Device Table Entry**

<b>Name</b>	pointingDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1
<b>Description</b>	Defines the Pointing Device Table entry.
<b>Syntax</b>	PointingDeviceTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<code>pointingDevicechassisIndex</code>
	,
	<code>pointingDeviceIndex</code>

**Table 660. Pointing Device Chassis Index**

<b>Name</b>	pointingDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 661. Pointing Device Index**

<b>Name</b>	pointingDeviceIndex
-------------	---------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.2
<b>Description</b>	Defines the index of the pointing device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 662. Pointing Device State Capabilities

<b>Name</b>	pointingDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.3
<b>Description</b>	Defines the capabilities of the pointing device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 663. Pointing Device State Settings

<b>Name</b>	pointingDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.4
<b>Description</b>	Defines the state of the pointing device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 664. Pointing Device Status

<b>Name</b>	pointingDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.5
<b>Description</b>	Defines the status of the pointing device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 665. Pointing Port Index Reference

<b>Name</b>	pointingPortIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.6
<b>Description</b>	Defines the index to the pointing port in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 666. Pointing Device Type

<b>Name</b>	pointingDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.7
<b>Description</b>	Defines the type of the pointing device.
<b>Syntax</b>	DellPointingDeviceType (See <a href="#">Pointing Device Type</a> )
<b>Access</b>	Read-only

#### Table 667. Pointing Device Number of Buttons

<b>Name</b>	pointingDeviceNumberOfButtons
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.8
<b>Description</b>	Defines the number of buttons on the pointing device.

<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

## Keyboard Device Table

**Table 668. Keyboard Device Table**

<b>Name</b>	keyboardDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20
<b>Description</b>	Defines the Keyboard Device Table. This table references the Keyboard Port Index ( <a href="#">Keyboard Port Index</a> ).
<b>Syntax</b>	SEQUENCE OF KeyboardDeviceTableEntry
<b>Access</b>	Not accessible

**Table 669. Keyboard Device Table Entry**

<b>Name</b>	keyboardDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1
<b>Description</b>	Defines the Keyboard Device Table entry.
<b>Syntax</b>	KeyboardDeviceTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	keyboardDevicechassisIndex
	,
	keyboardDeviceIndex

**Table 670. Keyboard Device Chassis Index**

<b>Name</b>	keyboardDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 671. Keyboard Device Index**

<b>Name</b>	keyboardDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.2
<b>Description</b>	Defines the index of the keyboard device for this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 672. Keyboard Device State Capabilities**

<b>Name</b>	keyboardDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.3
<b>Description</b>	Defines the capabilities of the keyboard device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 673. Keyboard Device State Settings**

<b>Name</b>	keyboardDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.4
<b>Description</b>	Defines the state of the keyboard device.
<b>Syntax</b>	DellStatesSettings
<b>Access</b>	Read-only

**Table 674. Keyboard Device Status**

<b>Name</b>	keyboardDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.5
<b>Description</b>	Defines the status of the keyboard device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 675. Keyboard Port Index Reference**

<b>Name</b>	keyboardPortIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.6
<b>Description</b>	Defines the index to the associated the keyboard port in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 676. Keyboard Device Type Name**

<b>Name</b>	keyboardDeviceTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.7
<b>Description</b>	Defines the name of the keyboard type.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 677. Keyboard Device Layout Name**

<b>Name</b>	keyboardDeviceLayoutName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.8
<b>Description</b>	Defines the name of the keyboard layout.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Processor Device Table

**Table 678. Processor Device Table**

<b>Name</b>	processorDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30
<b>Description</b>	Defines the Processor Device Table.
<b>Syntax</b>	SEQUENCE OF ProcessorDeviceTableEntry
<b>Access</b>	Not accessible

**Table 679. Processor Device Table Entry**

<b>Name</b>	processorDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1
<b>Description</b>	Defines the Processor Device Table entry.
<b>Syntax</b>	ProcessorDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	<code>processorDevicechassisIndex</code> , <code>processorDeviceIndex</code>

**Table 680. Processor Device Chassis Index**

<b>Name</b>	processorDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 681. Processor Device Index**

<b>Name</b>	processorDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.2
<b>Description</b>	Defines the index of the processor device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 682. Processor Device State Capabilities**

<b>Name</b>	processorDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.3
<b>Description</b>	Defines the capabilities of the processor device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 683. Processor Device State Settings**

<b>Name</b>	processorDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.4
<b>Description</b>	Defines the state of the processor device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 684. Processor Device Status**

<b>Name</b>	processorDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.5
<b>Description</b>	Defines the status of the processor device.
<b>Syntax</b>	DellStatus

**Access** Read-only

#### Table 685. Processor Port Index Reference

**Name** processorPortIndexReference  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.30.1.6  
**Description** Defines the index to the associated processor port in this chassis.  
**Syntax** DellObjectRange  
**Access** Read-only

#### Table 686. Processor Device Type

**Name** processorDeviceType  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.30.1.7  
**Description** Defines the type of processor device.  
**Syntax** DellProcessorDeviceType (See [Processor Device Type](#))  
**Access** Read-only

#### Table 687. Processor Device Manufacturer Name

**Name** processorDeviceManufacturerName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.30.1.8  
**Description** Defines the name of manufacturer of the processor device.  
**Syntax** DellString  
**Access** Read-only

#### Table 688. Processor Device Status State

**Name** processorDeviceStatusState  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.30.1.9  
**Description** Defines the status state of the processor device.  
**Syntax** DellProcessorDeviceStatusState (See [Processor Device Status State](#))  
**Access** Read-only

#### Table 689. Processor Device Family

**Name** processorDeviceFamily  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.30.1.10  
**Description** Defines the family of the processor device.  
**Syntax** DellProcessorDeviceFamily (See [Processor Device Family](#))  
**Access** Read-only

#### Table 690. Processor Device Maximum Speed

**Name** processorDeviceMaximumSpeed  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.30.1.11  
**Description** Defines the maximum speed of the processor device in megahertz (MHz). A zero (0) indicates that the speed is unknown.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

**Table 691. Processor Device Current Speed**

<b>Name</b>	processorDeviceCurrentSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.12
<b>Description</b>	Defines the current speed of the processor device in MHz. A zero (0) indicates that the speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 692. Processor Device External Clock Speed**

<b>Name</b>	processorDeviceExternalClockSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.13
<b>Description</b>	Defines the speed of the external clock (the front-side bus speed) for the processor device in MHz. A zero (0) indicates that the speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 693. Processor Device Voltage**

<b>Name</b>	processorDeviceVoltage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.14
<b>Description</b>	Defines the voltage powering the processor device in millivolts. A zero (0) indicates the speed is unknown.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 694. Processor Device Upgrade Information**

<b>Name</b>	processorDeviceUpgradeInformation
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.15
<b>Description</b>	Defines the processor upgrade information for the processor device.
<b>Syntax</b>	DellProcessorUpgradeInformation (See <a href="#">Processor Upgrade Information</a> )
<b>Access</b>	Read-only

**Table 695. Processor Device Version Name**

<b>Name</b>	processorDeviceVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.16
<b>Description</b>	Defines the version name of the processor device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 696. Processor Device Core Count**

<b>Name</b>	processorDeviceCoreCount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.17
<b>Description</b>	Defines the number of processor cores detected for the processor device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 697. Processor Device Core Enabled Count**

<b>Name</b>	processorDeviceCoreEnabledCount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.18
<b>Description</b>	Defines the number of processor cores enabled for the processor device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 698. Processor Device Thread Count**

<b>Name</b>	processorDeviceThreadCount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.19
<b>Description</b>	Defines the number of processor threads detected for the processor device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 699. Processor Device Characteristics**

<b>Name</b>	processorDeviceCharacteristics										
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.20										
<b>Description</b>	This attribute defines characteristics of the processor device. This attribute is a bit field where a bit has the meaning defined below when set to 1 (one). <b>NOTE: Bits 2-15 need to be examined in the context of bit 1. If bit 1 is set, the processor characteristics are unknown and bits 2-15 cannot be used to determine if the functions associated with the bits are supported.</b>										
	<table><thead><tr><th>Bit Position</th><th>Meaning if Set</th></tr></thead><tbody><tr><td>Bit 0</td><td>Reserved</td></tr><tr><td>Bit 1</td><td>Unknown</td></tr><tr><td>Bit 2</td><td>64-bit capable</td></tr><tr><td>Bit 3-15</td><td>Reserved</td></tr></tbody></table>	Bit Position	Meaning if Set	Bit 0	Reserved	Bit 1	Unknown	Bit 2	64-bit capable	Bit 3-15	Reserved
Bit Position	Meaning if Set										
Bit 0	Reserved										
Bit 1	Unknown										
Bit 2	64-bit capable										
Bit 3-15	Reserved										
<b>Syntax</b>	DellUnsigned16BitRange										
<b>Access</b>	Read-only										

**Table 700. Processor Device Extended Capabilities**

<b>Name</b>	processorDeviceExtendedCapabilities										
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.21										
<b>Description</b>	This attribute defines extended capabilities of the processor device. This attribute is a bit field where a bit has the meaning defined below when set to 1 (one).										
	<table><thead><tr><th>Bit Position</th><th>Meaning if Set</th></tr></thead><tbody><tr><td>Bit 0</td><td>Virtualization Technology (VT) supported</td></tr><tr><td>Bit 1</td><td>Demand-Based Switching (DBS) supported</td></tr><tr><td>Bit 2</td><td>eXecute Disable (XD) supported</td></tr><tr><td>Bit 3</td><td>Hyper-Threading (HT) supported</td></tr></tbody></table>	Bit Position	Meaning if Set	Bit 0	Virtualization Technology (VT) supported	Bit 1	Demand-Based Switching (DBS) supported	Bit 2	eXecute Disable (XD) supported	Bit 3	Hyper-Threading (HT) supported
Bit Position	Meaning if Set										
Bit 0	Virtualization Technology (VT) supported										
Bit 1	Demand-Based Switching (DBS) supported										
Bit 2	eXecute Disable (XD) supported										
Bit 3	Hyper-Threading (HT) supported										
<b>Syntax</b>	DellUnsigned16BitRange										
<b>Access</b>	Read-only										

### Table 701. Processor Device Extended Settings

<b>Name</b>	processorDeviceExtendedSettings										
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.22										
<b>Description</b>	This attribute defines extended settings of the processor device. This attribute is a bit field where a bit has the meaning defined below when set to 1 (one).										
	<table><thead><tr><th>Bit Position</th><th>Meaning if Set</th></tr></thead><tbody><tr><td>Bit 0</td><td>Virtualization Technology (VT) supported</td></tr><tr><td>Bit 1</td><td>Demand-Based Switching (DBS) supported</td></tr><tr><td>Bit 2</td><td>eXecute Disable (XD) supported</td></tr><tr><td>Bit 3</td><td>Hyper-Threading (HT) supported</td></tr></tbody></table>	Bit Position	Meaning if Set	Bit 0	Virtualization Technology (VT) supported	Bit 1	Demand-Based Switching (DBS) supported	Bit 2	eXecute Disable (XD) supported	Bit 3	Hyper-Threading (HT) supported
Bit Position	Meaning if Set										
Bit 0	Virtualization Technology (VT) supported										
Bit 1	Demand-Based Switching (DBS) supported										
Bit 2	eXecute Disable (XD) supported										
Bit 3	Hyper-Threading (HT) supported										
<b>Syntax</b>	DellUnsigned16BitRange										
<b>Access</b>	Read-only										

### Table 702. Processor Device Brand Name

<b>Name</b>	processorDeviceBrandName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.23
<b>Description</b>	Defines the brand of the processor device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Table 703. Processor Device Model Name

<b>Name</b>	processorDeviceModelName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.24
<b>Description</b>	Defines the model of the processor device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Table 704. Processor Device Stepping Name

<b>Name</b>	processorDeviceSteppingName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.25
<b>Description</b>	Defines the stepping of the processor device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Processor Device Status Table

### Table 705. Processor Device Status Table

<b>Name</b>	processorDeviceStatusTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32
<b>Description</b>	Defines the Processor Device Status Table.
<b>Syntax</b>	SEQUENCE OF ProcessorDeviceStatusTableEntry
<b>Access</b>	Not accessible

### Table 706. Processor Device Status Table Entry

<b>Name</b>	processorDeviceStatusTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1
<b>Description</b>	Defines the Processor Device Status Table Entry.
<b>Syntax</b>	ProcessorDeviceStatusTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	<pre>processorDeviceStatusChassisIndex</pre> <pre>processorDeviceStatusIndex</pre>

### Table 707. Processor Device Status Chassis Index

<b>Name</b>	processorDeviceStatusChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.1
<b>Description</b>	Defines the index (one-based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 708. Processor Device Status Index

<b>Name</b>	processorDeviceStatusIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.2
<b>Description</b>	Defines the index (one-based) of the processor device status probe.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 709. Processor Device Status State Capabilities

<b>Name</b>	processorDeviceStatusStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.3
<b>Description</b>	Defines the state capabilities of the processor device status probe.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Table 710. Processor Device Status State Settings

<b>Name</b>	processorDeviceStatusStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.4
<b>Description</b>	Defines the state settings of the processor device status probe.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### Table 711. Processor Device Status Status

<b>Name</b>	processorDeviceStatusStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.5
<b>Description</b>	Defines the status of the processor device status probe. This status is joined into the processorDeviceStatus attribute.

<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 712. Processor Device Status Reading

<b>Name</b>	processorDeviceStatusReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.6
<b>Description</b>	Defines the reading of the processor device status probe.
<b>Syntax</b>	DellProcessorDeviceStatusReading
<b>Access</b>	Read-only

#### Table 713. Processor Device Status Location Name

<b>Name</b>	processorDeviceStatusLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.7
<b>Description</b>	Defines the location name of the processor device status probe.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 714. Processor Device Status Port Index Reference

<b>Name</b>	processorDeviceStatusPortIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.8
<b>Description</b>	Defines the index (one-based) of the associated processor port in the same chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Cache Device Table

#### Table 715. Cache Device Table

<b>Name</b>	cacheDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40
<b>Description</b>	Defines the Cache Device Table.
<b>Syntax</b>	SEQUENCE OF CacheDeviceTableEntry
<b>Access</b>	Not accessible

#### Table 716. Cache Device Table Entry

<b>Name</b>	cacheDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1
<b>Description</b>	Defines the Cache Device Table entry.
<b>Syntax</b>	CacheDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

cacheDevicechassisIndex

,

cacheDeviceIndex

**Table 717. Cache Device Chassis Index**

<b>Name</b>	cacheDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 718. Cache Device Index**

<b>Name</b>	cacheDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.2
<b>Description</b>	Defines the index of the cache device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 719. Cache Device State Capabilities**

<b>Name</b>	cacheDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.3
<b>Description</b>	Description Defines the capabilities of the cache device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 720. Cache Device State Settings**

<b>Name</b>	cacheDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.4
<b>Description</b>	Description Defines the state of the cache device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 721. Cache Device Status**

<b>Name</b>	cacheDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.5
<b>Description</b>	Defines the status of the cache device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 722. Cache Device Processor Device Index Reference**

<b>Name</b>	cacheDeviceprocessorDeviceIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.6
<b>Description</b>	Defines the index number of the processor device with which this cache device is associated.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 723. Cache Device Type**

<b>Name</b>	cacheDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.7

<b>Description</b>	Defines the type of cache device.
<b>Syntax</b>	DellCacheDeviceType (See <a href="#">Cache Device Type</a> )
<b>Access</b>	Read-only

**Table 724. Cache Device Location**

<b>Name</b>	cacheDeviceLocation
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.8
<b>Description</b>	Defines the location of the cache device.
<b>Syntax</b>	DellCacheDeviceLocation (See <a href="#">Cache Device Location</a> )
<b>Access</b>	Read-only

**Table 725. Cache Device Status State**

<b>Name</b>	cacheDeviceStatusState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.9
<b>Description</b>	Defines the status state of the cache device.
<b>Syntax</b>	DellCacheDeviceStatusState (See <a href="#">Cache Device Status State</a> )
<b>Access</b>	Read-only

**Table 726. Cache Device External Socket Name**

<b>Name</b>	cacheDeviceExternalSocketName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.10
<b>Description</b>	Defines the external socket name of the cache device, if the cache is socketed.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 727. Cache Device Level**

<b>Name</b>	cacheDeviceLevel
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.11
<b>Description</b>	Defines the level of the cache device.
<b>Syntax</b>	DellCacheDeviceLevel (See <a href="#">Cache Device Level</a> )
<b>Access</b>	Read-only

**Table 728. Cache Device Maximum Size**

<b>Name</b>	cacheDeviceMaximumSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.12
<b>Description</b>	Defines the maximum size of the cache device in kilobytes (KB). A zero (0) indicates that the size is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 729. Cache Device Current Size**

<b>Name</b>	cacheDeviceCurrentSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.13
<b>Description</b>	Defines the current size of the cache device in KB. A zero (0) indicates that the size is unknown.

<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 730. Cache Device Speed

<b>Name</b>	cacheDeviceSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.14
<b>Description</b>	Defines the speed of the cache device in nanoseconds. A zero (0) indicates that the speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 731. Cache Device Write Policy

<b>Name</b>	cacheDeviceWritePolicy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.15
<b>Description</b>	Defines the write policy of the cache device.
<b>Syntax</b>	DellCacheDeviceWritePolicy (See <a href="#">Cache Device Write Policy</a> )
<b>Access</b>	Read-only

#### Table 732. Cache Device Is Socketed

<b>Name</b>	cacheDeviceIsSocketed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.16
<b>Description</b>	Defines if the cache device is socketed.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

#### Table 733. Cache Device Error Checking and Correction (ECC) Type

<b>Name</b>	cacheDeviceECCType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.17
<b>Description</b>	Defines the type of error correction in use by the cache device.
<b>Syntax</b>	DellCacheDeviceECCType (See <a href="#">Cache Device ECC Type</a> )
<b>Access</b>	Read-only

#### Table 734. Cache Device Associativity

<b>Name</b>	cacheDeviceAssociativity
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.18
<b>Description</b>	Defines the type of associativity in use by the cache device.
<b>Syntax</b>	DellCacheDeviceAssociativity (See <a href="#">Cache Device Associativity</a> )
<b>Access</b>	Read-only

#### Table 735. Cache Device Supported Type

<b>Name</b>	cacheDeviceSupportedType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.19
<b>Description</b>	Defines the type of static random-access memory (SRAM) that the cache device can support.
<b>Syntax</b>	DellCacheDeviceSupportedType
<b>Access</b>	Read-only

**Table 736. Cache Device Current Type**

<b>Name</b>	cacheDeviceCurrentType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.20
<b>Description</b>	Defines the current type of SRAM for the cache device.
<b>Syntax</b>	DellCacheDeviceSRAMType (See <a href="#">Cache Device Static Random-Access Memory (SRAM) Type</a> )
<b>Access</b>	Read-only

## Memory Device Table

**Table 737. Memory Device Table**

<b>Name</b>	memoryDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50
<b>Description</b>	Defines the Memory Device Table.
<b>Syntax</b>	SEQUENCE OF MemoryDeviceTableEntry
<b>Access</b>	Not accessible

**Table 738. Memory Device Table Entry**

<b>Name</b>	memoryDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1
<b>Description</b>	Defines the Memory Device Table entry.
<b>Syntax</b>	MemoryDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

`memoryDevicechassisIndex`

,

`memoryDeviceIndex`

**Table 739. Memory Device Chassis Index**

<b>Name</b>	memoryDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 740. Memory Device Index**

<b>Name</b>	memoryDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.2
<b>Description</b>	Defines the index of the memory device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 741. Memory Device State Capabilities**

<b>Name</b>	memoryDeviceStateCapabilities
-------------	-------------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.3
<b>Description</b>	Defines the capabilities of the memory device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 742. Memory Device State Settings**

<b>Name</b>	memoryDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.4
<b>Description</b>	Defines the state of the memory device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 743. Memory Device Status**

<b>Name</b>	memoryDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.5
<b>Description</b>	Defines the status of the memory device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 744. Memory Device Memory Port Index Reference**

<b>Name</b>	memoryDeviceMemoryPortIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.6
<b>Description</b>	Defines the index of the memory port of which this memory device is part.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 745. Memory Device Type**

<b>Name</b>	memoryDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.7
<b>Description</b>	Defines the type of the memory device.
<b>Syntax</b>	DellMemoryDeviceType (See <a href="#">Memory Device Type</a> )
<b>Access</b>	Read-only

**Table 746. Memory Device Location Name**

<b>Name</b>	memoryDeviceLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.8
<b>Description</b>	Defines the location name of the memory device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 747. Memory Device Error Count**

 **NOTE: [Memory Device Failure Modes](#) has now replaced this attribute. Memory Device Error Count is no longer in use. If you use the Memory Device Error Count attribute, the value returned is always zero, and using the attribute has no effect.**

<b>Name</b>	memoryDeviceErrorCount
-------------	------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.9
<b>Description</b>	Defines the total number of Error Checking and Correction (ECC) errors detected by the memory device. Writing a 0 (zero) to this variable resets the devices error counts.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 748. Memory Device Bank Location Name**

<b>Name</b>	memoryDeviceBankLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.10
<b>Description</b>	Defines the bank location name of the memory device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 749. Memory Device Type Details**

<b>Name</b>	memoryDeviceTypeDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.11
<b>Description</b>	Defines the detailed type of the memory device.
<b>Syntax</b>	DellMemoryDeviceTypeDetails (See <a href="#">Memory Device Type Details</a> )
<b>Access</b>	Read-only

**Table 750. Memory Device Form Factor**

<b>Name</b>	memoryDeviceFormFactor
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.12
<b>Description</b>	Defines the form factor of the memory device.
<b>Syntax</b>	DellMemoryDeviceFormFactor (See <a href="#">Memory Device Type Form Factor</a> )
<b>Access</b>	Read-only

**Table 751. Memory Device Set**

<b>Name</b>	memoryDeviceSet
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.13
<b>Description</b>	Defines if the memory device is a part of a set. A zero (0) indicates that this device is not part of a set.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 752. Memory Device Size**



**NOTE:** `memoryDeviceSize` is no longer in use. This attribute is deprecated and replaced by `memoryDeviceExtendedSize`.

<b>Name</b>	memoryDeviceSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.14
<b>Description</b>	Defines the size in KB of the memory device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 753. Memory Device Speed**

<b>Name</b>	memoryDeviceSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.15
<b>Description</b>	Defines the attribute defines the maximum capable speed in megahertz (MHz) of the memory device. Zero indicates an unknown speed.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 754. Memory Device Total Bus Width**

<b>Name</b>	memoryDeviceTotalBusWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.16
<b>Description</b>	Defines the total number of bits, including ECC, used by the memory device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 755. Memory Device Total Data Bus Width**

<b>Name</b>	memoryDeviceTotalDataBusWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.17
<b>Description</b>	Defines the total number of data bits used by the memory device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 756. Memory Device Correctable Memory Event Count**

**i** **NOTE: Memory Device Failure Modes has now replaced this attribute. Memory Device Correctable Memory Event Count is no longer used. If you use the Memory Device Correctable Memory Event Count attribute, the value returned is always zero, and using the attribute has no effect.**

<b>Name</b>	memoryDeviceSingleBitErrorCount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.18
<b>Description</b>	Defines the total number of Correctable Memory Events detected by the memory device.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 757. Memory Device Uncorrectable Memory Event Count**

**i** **NOTE: Memory Device Failure Modes has now replaced this attribute. Memory Device Uncorrectable Memory Event Count is no longer used. If you use the Memory Device Uncorrectable Memory Event Count attribute, the value returned is always zero, and using the attribute has no effect.**

<b>Name</b>	memoryDeviceMultiBitErrorCount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.19
<b>Description</b>	Defines the total number of Uncorrectable Memory Events detected by the memory device.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 758. Memory Device Failure Modes**

<b>Name</b>	memoryDeviceFailureModes
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.20

<b>Description</b>	Defines the failure modes of the memory device when the memoryDeviceStatus attribute is not OK. It is a bit field that can be used to report more than one type of failure mode by using a combination of the defined bit masks.
<b>Syntax</b>	DellMemoryDeviceFailureModes
<b>Access</b>	Read-only

#### Table 759. Memory Device Manufacturer Name

<b>Name</b>	memoryDeviceManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.21
<b>Description</b>	Defines the manufacturer of the memory device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 760. Memory Device Part Number Name

<b>Name</b>	memoryDevicePartNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.22
<b>Description</b>	Defines the manufacturer's part number for the memory device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 761. Memory Device Serial Number Name

<b>Name</b>	memoryDeviceSerialNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.23
<b>Description</b>	Defines the serial number of the memory device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 762. Memory Device Asset Tag Name

<b>Name</b>	memoryDeviceAssetTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.24
<b>Description</b>	Defines the asset tag of the memory device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 763. Memory Device Speed Name

<b>Name</b>	memoryDeviceSpeedName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.25
<b>Description</b>	This attribute defines the speed of the memory device in string format with units specified in string.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 764. Memory Device Rank

<b>Name</b>	memoryDeviceRank
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.26
<b>Description</b>	1100.0050.0001.0026 — This attribute defines the Rank of the memory device (DIMM).

Value	Meaning
deviceRankIsUnknown (1)	Rank is unknown
deviceRankIsSingle (2)	Rank is Single
deviceRankIsDual (4)	Rank is Dual
deviceRankIsQuad (8)	Rank is Quad
deviceRankIsOctal (16)	Rank is Octal
deviceRankIsHexa (32)	Rank is Hexa

<b>Syntax</b>	DellMemoryDeviceRank
<b>Access</b>	Read-only

**Table 765. Memory Device Extended Size**

 **NOTE:** This attribute replaces the `memoryDeviceSize`.

<b>Name</b>	memoryDeviceExtendedSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.27
<b>Description</b>	This attribute defines the size in MBytes of the memory device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 766. Memory Device FQDD**

<b>Name</b>	memoryDeviceFQDD
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.26
<b>Description</b>	Fully qualified device descriptor (FQDD) of the memory device.
<b>Syntax</b>	FQDDString
<b>Access</b>	Read-only

**Table 767. Memory Device Current Operating Speed**

<b>Name</b>	memoryDeviceCurrentOperatingSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.27
<b>Description</b>	This attribute defines the current operating speed in megahertz (MHz) of the memory device. Zero indicates an unknown speed.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## Memory Device Mapped Address Table

**Table 768. Memory Device Mapped Address Table**

<b>Name</b>	memoryDeviceMappedAddressTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60
<b>Description</b>	Defines the Memory Device Mapped Address Table.
<b>Syntax</b>	SEQUENCE OF MemoryDeviceMappedAddressTableEntry
<b>Access</b>	Not accessible

**Table 769. Memory Device Mapped Address Table Entry**

<b>Name</b>	memoryDeviceMappedAddressTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1
<b>Description</b>	Defines the Memory Device Mapped Address Table entry.
<b>Syntax</b>	MemoryDeviceMappedAddressTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	memoryDeviceMappedAddresschassisIndex , memoryDeviceMappedAddressIndex

**Table 770. Memory Device Mapped Address Chassis Index**

<b>Name</b>	memoryDeviceMappedAddresschassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 771. Memory Device Mapped Address Index**

<b>Name</b>	memoryDeviceMappedAddressIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.2
<b>Description</b>	Defines the index (one-based) of the memory device mapped address in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 772. Memory Device Mapped Address State Capabilities**

<b>Name</b>	memoryDeviceMappedAddressStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.3
<b>Description</b>	Defines the capabilities of the memory device mapped address.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 773. Memory Device Mapped Address State Settings**

<b>Name</b>	memoryDeviceMappedAddressStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.4
<b>Description</b>	Defines the state of the memory device mapped address.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 774. Memory Device Mapped Address Status**

<b>Name</b>	memoryDeviceMappedAddressStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.5
<b>Description</b>	Defines the status of the memory device mapped address.

<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 775. Memory Device Index Reference

<b>Name</b>	memoryDeviceIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.6
<b>Description</b>	Defines the index of the memory device(s) associated with this memory device mapped address.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 776. Memory Device Mapped Address Row Position

<b>Name</b>	memoryDeviceMappedAddressRowPosition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.7
<b>Description</b>	Defines the position of the referenced memory in a row of the memory device mapped address.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 777. Memory Device Mapped Address Interleave Position

<b>Name</b>	memoryDeviceMappedAddressInterleavePosition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.8
<b>Description</b>	Defines the position of the referenced memory in an interleave of the memory device mapped address.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 778. Memory Device Mapped Address Interleave Depth

<b>Name</b>	memoryDeviceMappedAddressInterleaveDepth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.9
<b>Description</b>	Defines the maximum number of consecutive rows from the referenced memory device that are accessed in a single interleaved transfer in the memory device mapped address.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 779. Memory Device Mapped Address Starting Address

<b>Name</b>	memoryDeviceMappedAddressStartingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.10
<b>Description</b>	Defines the physical starting address in KB of the memory device mapped address.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

#### Table 780. Memory Device Mapped Address Ending Address

<b>Name</b>	memoryDeviceMappedAddressEndingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.11
<b>Description</b>	Defines the physical ending address in KB of the memory device mapped address.

<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

## Generic Device Table

**Table 781. Generic Device Table**

<b>Name</b>	genericDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70
<b>Description</b>	Defines the Generic Device Table.
<b>Syntax</b>	SEQUENCE OF GenericDeviceTableEntry
<b>Access</b>	Not accessible

**Table 782. Generic Device Table Entry**

<b>Name</b>	genericDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1
<b>Description</b>	Defines the Generic Device Table entry.
<b>Syntax</b>	GenericDeviceTableEntry
<b>Access</b>	Not accessible

**Index**

genericDevicechassisIndex

genericDeviceIndex

**Table 783. Generic Device Chassis Index**

<b>Name</b>	genericDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 784. Generic Device Index**

<b>Name</b>	genericDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.2
<b>Description</b>	Defines the index of the generic device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 785. Generic Device State Capabilities**

<b>Name</b>	genericDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.3
<b>Description</b>	Defines the capabilities of the generic device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 786. Generic Device State Settings**

<b>Name</b>	genericDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.4
<b>Description</b>	Defines the state of the generic device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 787. Generic Device Status**

<b>Name</b>	genericDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.5
<b>Description</b>	Defines the status of the generic device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 788. Generic Device System Slot Index Reference**

<b>Name</b>	genericDeviceSystemSlotIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.6
<b>Description</b>	Defines the index of the system slot into which this generic device is plugged.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 789. Generic Device Type**

<b>Name</b>	genericDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.7
<b>Description</b>	Defines the type of the generic device.
<b>Syntax</b>	DellGenericDeviceType (See <a href="#">Generic Device Type</a> )
<b>Access</b>	Read-only

**Table 790. Generic Device Name**

<b>Name</b>	genericDeviceName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.8
<b>Description</b>	Defines the name of the generic device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## PCI Device Table

**Table 791. PCI Device Table**

<b>Name</b>	pCIDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80
<b>Description</b>	Defines the PCI Device Detail Table.
<b>Syntax</b>	SEQUENCE OF PCIDeviceTableEntry
<b>Access</b>	Not accessible

### Table 792. PCI Device Table Entry

<b>Name</b>	pCIDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1
<b>Description</b>	Defines the PCI Device Table entry.
<b>Syntax</b>	PCIDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

pCIDevicechassisIndex

pCIDeviceIndex

### Table 793. PCI Device Chassis Index

<b>Name</b>	pCIDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 794. PCI Device Index

<b>Name</b>	pCIDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.2
<b>Description</b>	Defines the index (one-based) of the PCI device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 795. PCI Device State Capabilities

<b>Name</b>	pCIDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.3
<b>Description</b>	Defines the capabilities of the PCI device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Table 796. PCI Device State Settings

<b>Name</b>	pCIDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.4
<b>Description</b>	Defines the state of the PCI device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### Table 797. PCI Device Status

<b>Name</b>	pCIDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.5
<b>Description</b>	Defines the status of the PCI device.
<b>Syntax</b>	DellStatus

**Access** Read-only

#### Table 798. PCI Device System Slot Index Reference

**Name** pCIDeviceSystemSlotIndexReference  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.80.1.6  
**Description** Defines the index number of the system slot that this PCI device is in.  
**Syntax** DellObjectRange  
**Access** Read-only

#### Table 799. PCI Device Data Bus Width

**Name** pCIDeviceDataBusWidth  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.80.1.7  
**Description** Defines the bus width of the PCI device in this chassis.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

#### Table 800. PCI Device Manufacturer Name

**Name** pCIDeviceManufacturerName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.80.1.8  
**Description** Defines the name of the PCI device manufacturer.  
**Syntax** DellString  
**Access** Read-only

#### Table 801. PCI Device Description Name

**Name** pCIDeviceDescriptionName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.80.1.9  
**Description** Defines the descriptive name of the PCI device.  
**Syntax** DellString  
**Access** Read-only

#### Table 802. PCI Device Speed

**Name** pCIDeviceSpeed  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.80.1.10  
**Description** Defines the bus speed in MHz of the PCI device in this chassis. A zero (0) indicates that the speed is unknown.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

#### Table 803. PCI Device Adapter Fault

**Name** pCIDeviceAdapterFault  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.80.1.11  
**Description** Defines whether the PCI device in this chassis has detected a fault.  
**Syntax** DellBoolean  
**Access** Read-only

# PCI Device Configuration Space Table

**Table 804. PCI Device Configuration Space Table**

<b>Name</b>	pCIDeviceConfigurationSpaceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82
<b>Description</b>	Defines the PCI Device Configuration Table.
<b>Syntax</b>	SEQUENCE OF PCIDeviceConfigurationSpaceTableEntry
<b>Access</b>	Not accessible

**Table 805. PCI Device Configuration Space Table Entry**

<b>Name</b>	pCIDeviceConfigurationSpaceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1
<b>Description</b>	Defines the PCI Device Configuration Table entry.
<b>Syntax</b>	PCIDeviceConfigurationSpaceTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<pre>pCIDeviceConfigurationSpacechassisIndex</pre>
	,
	<pre>pCIDeviceConfigurationSpaceIndex</pre>

**Table 806. PCI Device Configuration Space Chassis Index**

<b>Name</b>	pCIDeviceConfigurationSpacechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 807. PCI Device Configuration Space Index**

<b>Name</b>	pCIDeviceConfigurationSpaceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.2
<b>Description</b>	Defines the index (one-based) of the PCI device configuration in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 808. PCI Device Configuration Space State Capabilities**

<b>Name</b>	pCIDeviceConfigurationSpaceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.3
<b>Description</b>	Defines the capabilities of the PCI device configuration.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 809. PCI Device Configuration Space State Settings**

<b>Name</b>	pCIDeviceConfigurationSpaceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.4

<b>Description</b>	Defines the state of the PCI device configuration.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 810. PCI Device Configuration Space Status**

<b>Name</b>	pCIDeviceConfigurationSpaceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.5
<b>Description</b>	Defines the status of the PCI device configuration.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 811. PCI Device Index Reference**

<b>Name</b>	pCIDeviceIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.6
<b>Description</b>	Defines the index number of PCI device that this configuration applies to.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 812. PCI Device Configuration Space Bus Number**

<b>Name</b>	pCIDeviceConfigurationSpaceBusNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.7
<b>Description</b>	Defines the bus number of the PCI device configuration in this chassis.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 813. PCI Device Configuration Space Device Number**

<b>Name</b>	pCIDeviceConfigurationSpaceDeviceNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.8
<b>Description</b>	Defines the device number of the PCI device in this chassis.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 814. PCI Device Configuration Space Function Number**

<b>Name</b>	pCIDeviceConfigurationSpaceFunctionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.9
<b>Description</b>	Defines the function number of the PCI device in this chassis.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 815. PCI Device Configuration Space Header**

<b>Name</b>	pCIDeviceConfigurationSpaceHeader
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.10
<b>Description</b>	Defines the common configuration space header of the PCI device.
<b>Syntax</b>	Octet String (SIZE(0.1025))

**Access** Read-only

## Network Device Table

**Table 816. Network Device Table**

<b>Name</b>	networkDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90
<b>Description</b>	Defines the Network Device Table.
<b>Syntax</b>	SEQUENCE OF NetworkDeviceTableEntry
<b>Access</b>	Not accessible

**Table 817. Network Device Table Entry**

<b>Name</b>	networkDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1
<b>Description</b>	Defines the Network Device Table Entry.
<b>Syntax</b>	NetworkDeviceTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	networkDeviceChassisIndex
--------------	---------------------------

	networkDeviceIndex
--	--------------------

**Table 818. Network Device Chassis Index**

<b>Name</b>	networkDeviceChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.1
<b>Description</b>	Defines the index (one-based) of the chassis that contains the network device.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 819. Network Device Index**

<b>Name</b>	networkDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.2
<b>Description</b>	Defines the index (one-based) of the network device.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 820. Network Device Status**

<b>Name</b>	networkDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.3
<b>Description</b>	Defines the status of the network device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 821. Network Device Connection Status**

<b>Name</b>	networkDeviceConnectionStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.4
<b>Description</b>	Defines the connection status of the network device.
<b>Syntax</b>	DellNetworkDeviceConnectionStatus (See <a href="#">Network Device Connection Status</a> )
<b>Access</b>	Read-only

**Table 822. Network Device Description Name**

<b>Name</b>	networkDeviceDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.5
<b>Description</b>	Defines the description of the network device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 823. Network Device Product Name**

<b>Name</b>	networkDeviceProductName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.6
<b>Description</b>	Defines the product name of the network device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 824. Network Device Vendor Name**

<b>Name</b>	networkDeviceVendorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.7
<b>Description</b>	Defines the name of the vendor of the network device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 825. Network Device Service Name**

<b>Name</b>	networkDeviceServiceName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.8
<b>Description</b>	Defines the service name of the network device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 826. Network Device Driver Image Path Name**

<b>Name</b>	networkDeviceDriverImagePathName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.9
<b>Description</b>	Defines the path to the binary image of the driver for the network device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 827. Network Device Driver Version Name**

<b>Name</b>	networkDeviceDriverVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.10

<b>Description</b>	Defines the version of the driver for the network device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 828. Network Device IP Address**

<b>Name</b>	networkDeviceIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.11
<b>Description</b>	Defines the IP address of the network device.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

**Table 829. Network Device IP Subnet Mask**

<b>Name</b>	networkDeviceIPSubnetMask
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.12
<b>Description</b>	Defines the IP subnet mask for the IP address currently assigned to the network device.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

**Table 830. Network Device Default Gateway IP Address**

<b>Name</b>	networkDeviceDefaultGatewayIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.13
<b>Description</b>	Defines the IP address of the default gateway for the network device.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

**Table 831. Network Device DHCP Server IP Address**

<b>Name</b>	networkDeviceDHCPServerIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.14
<b>Description</b>	Defines the IP address of the DHCP server that was used to obtain the IP address of the network device if DHCP was used to configure the network device.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

**Table 832. Network Device Current MAC Address**

<b>Name</b>	networkDeviceCurrentMACAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.15
<b>Description</b>	Defines the current MAC address of the network device.
<b>Syntax</b>	DellMACAddress
<b>Access</b>	Read-only

**Table 833. Network Device Permanent MAC Address**

<b>Name</b>	networkDevicePermanentMACAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.16
<b>Description</b>	Defines the permanent MAC address of the network device.
<b>Syntax</b>	DellMACAddress

**Access** Read-only

#### Table 834. Network Device PCI Bus Number

**Name** networkDevicePCIBusNumber  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.90.1.17  
**Description** Defines the PCI bus number of the network device.  
**Syntax** DellUnsigned8BitRange  
**Access** Read-only

#### Table 835. Network Device PCI Device Number

**Name** networkDevicePCIDeviceNumber  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.90.1.18  
**Description** Defines the PCI device number of the network device.  
**Syntax** DellUnsigned8BitRange  
**Access** Read-only

#### Table 836. Network Device PCI Function Number

**Name** networkDevicePCIFunctionNumber  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.90.1.19  
**Description** Defines the PCI function number of the network device.  
**Syntax** DellUnsigned8BitRange  
**Access** Read-only

#### Table 837. Network Device IRQ

**Name** networkDeviceIRQ  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.90.1.20  
**Description** Defines the interrupt request number of the network device.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

#### Table 838. Network Device Base IO Port Address

**Name** networkDeviceBaseIOPortAddress  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.90.1.21  
**Description** Defines the base input/output port address of the network device.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

#### Table 839. Network Device Teaming Flags

**Name** networkDeviceTeamingFlags  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.90.1.22  
**Description** Defines the teaming features of the network device.  
**Syntax** DellNetworkDeviceTeamingFlags (See [Network Device Teaming Flags](#))  
**Access** Read-only

**Table 840. Network Device TOE Capability Flags**

<b>Name</b>	networkDeviceTOECapabilityFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.23
<b>Description</b>	Defines the TCP/IP Offload Engine (TOE) capability flags of the network device.
<b>Syntax</b>	DellNetworkDeviceTOECapabilityFlags (See <a href="#">Network Device TOE Capability Flags</a> )
<b>Access</b>	Read-only

**Table 841. Network Device TOE Enabled**

<b>Name</b>	networkDeviceTOEEnabled
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.24
<b>Description</b>	Defines if TOE is enabled for the network device.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

**Table 842. Network Device RDMA Capability Flags**

<b>Name</b>	networkDeviceRDMACapabilityFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.25
<b>Description</b>	Defines the Remote Direct Memory Access (RDMA) capability flags of the network device.
<b>Syntax</b>	DellNetworkDeviceRDMACapabilityFlags (See <a href="#">Network Device RDMA Capability Flags</a> )
<b>Access</b>	Read-only

**Table 843. Network Device RDMA Enabled**

<b>Name</b>	networkDeviceRDMAEnabled
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.26
<b>Description</b>	Defines if RDMA is enabled for the network device.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

**Table 844. Network Device iSCSI Capability Flags**

<b>Name</b>	networkDeviceiSCSICapabilityFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.27
<b>Description</b>	Defines the Internet Small Computer System Interface (iSCSI) capability flags of the network device.
<b>Syntax</b>	DellNetworkDeviceiSCSICapabilityFlags (See <a href="#">Network Device iSCSI Capability Flags</a> )
<b>Access</b>	Read-only

**Table 845. Network Device iSCSI Enabled**

<b>Name</b>	networkDeviceiSCSIEnabled
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.28
<b>Description</b>	Defines if iSCSI is enabled for the network device.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

**Table 846. Network Device Capabilities**

<b>Name</b>	networkDeviceCapabilities
-------------	---------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.29
<b>Description</b>	Defines the capabilities of the network device.
<b>Syntax</b>	DellNetworkDeviceCapabilities (See <a href="#">Network Device Capabilities</a> )
<b>Access</b>	Read-only

**Table 847. Network Device NParEP Enabled**

<b>Name</b>	networkDeviceNParEPEnabled
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.90.1.30
<b>Description</b>	Defines if NParEP mode is enabled for the network device. The values for the NParEPEnabled are: 1 - Disabled 2 - Enabled 3 - Unknown
<b>Syntax</b>	DellNetworkDeviceNParEPEnabled
<b>Access</b>	Read-only

## Managed System Services Device Table

**Table 848. Managed System Services Device Table**

<b>Name</b>	
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.100
<b>Description</b>	Defines the Managed System Services Device Table.
<b>Syntax</b>	Sequence of ManagedSystemServicesDeviceTable
<b>Access</b>	Not accessible

**Table 849. Managed System Services Device Table Entry**

<b>Name</b>	managedSystemServicesDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.100.1
<b>Description</b>	Defines the managed system services device table entry.
<b>Syntax</b>	ManagedSystemServicesDeviceTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<code>managedSystemServicesDeviceChassisIndex</code>
	,
	<code>managedSystemServicesDeviceIndex</code>

**Table 850. Managed System Services Device Chassis Index**

<b>Name</b>	managedSystemServicesDeviceChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.100.1.1
<b>Description</b>	Defines the index (one-based) of the chassis that contains the managed system services device.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 851. Managed System Services Device Index**

<b>Name</b>	managedSystemServicesDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.100.1.2
<b>Description</b>	Defines the index (one-based) of the managed system services device.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 852. Managed System Services Device Status**

<b>Name</b>	managedSystemServicesDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.100.1.3
<b>Description</b>	Defines the status of the managed system services device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 853. Managed System Services Device Type**

<b>Name</b>	managedSystemServicesDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.100.1.4
<b>Description</b>	Defines the type of the managed system services device.
<b>Syntax</b>	DellManagedSystemServicesDeviceType (See <a href="#">Managed System Services Device Type</a> )
<b>Access</b>	Read-only

**Table 854. Managed System Services Device Storage Present**

<b>Name</b>	managedSystemServicesDeviceStoragePresent
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.100.1.5
<b>Description</b>	Defines whether storage is present on the managed system services device.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

**Table 855. Managed System Services Device Storage Size**

<b>Name</b>	managedSystemServicesDeviceStorageSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.100.1.6
<b>Description</b>	Defines the size in Megabytes (MB) of the storage present on the managed system services device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## SD Card Unit Table

**Table 856. SD Card Unit Table**

<b>Name</b>	sdCardUnitTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.110
<b>Description</b>	Defines the SD Card Unit Table.
<b>Syntax</b>	SEQUENCE OF SdCardUnitTableEntry
<b>Access</b>	Not accessible

**Table 857. SD Card Unit Table Entry**

<b>Name</b>	sdCardUnitTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.110.1
<b>Description</b>	Defines the SD Card Unit Table Entry.
<b>Syntax</b>	SdCardUnitTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

sdCardUnitChassisIndex

sdCardUnitIndex

**Table 858. SD Card Unit Chassis Index**

<b>Name</b>	sdCardUnitChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.110.1.1
<b>Description</b>	Defines the index (one-based) of the chassis that contains the SD Card unit.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 859. SD Card Unit Index**

<b>Name</b>	sdCardUnitIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.110.1.2
<b>Description</b>	Defines the index (one-based) of the SD Card unit.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 860. SD Card Unit State Capabilities**

<b>Name</b>	sdCardUnitStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.110.1.3
<b>Description</b>	Defines the state capabilities of the SD Card unit.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 861. SD Card Unit State Settings**

<b>Name</b>	sdCardUnitStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.110.1.4
<b>Description</b>	Defines the state settings of the SD Card unit.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 862. SD Card Unit Redundancy Status**

<b>Name</b>	sdCardUnitRedundancyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.110.1.5
<b>Description</b>	Defines the redundancy status of the SD Card unit.
<b>Syntax</b>	DellStatusRedundancy

**Access** Read-only

#### Table 863. SD Card Unit Count For Redundancy

**Name** sdCardUnitCountForRedundancy  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.110.1.6  
**Description** Defines the total number of SD Card devices required for this SD Card unit to have full redundancy.  
**Syntax** DellObjectRange  
**Access** Read-only

#### Table 864. SD Card Unit Name

**Name** sdCardUnitName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.110.1.7  
**Description** Defines the name of the SD Card unit.  
**Syntax** DellString  
**Access** Read-only

#### Table 865. SD Card Unit Status

**Name** sdCardUnitStatus  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.110.1.8  
**Description** Defines the status of the SD Card unit.  
**Syntax** DellStatus  
**Access** Read-only

## SD Card Device Table

#### Table 866. SD Card Device Table

**Name** sdCardDeviceTable  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.112  
**Description** Defines the SD Card Device Table.  
**Syntax** SEQUENCE OF SdCardDeviceTableEntry  
**Access** Not accessible

#### Table 867. SD Card Device Table Entry

**Name** sdCardDeviceTableEntry  
**Object ID** 1.3.6.1.4.1.674.10892.1.1100.112.1  
**Description** Defines the SD Card Device Table Entry.  
**Syntax** SdCardDeviceTableEntry  
**Access** Not accessible

**Index** sdCardDeviceChassisIndex

sdCardDeviceIndex

**Table 868. SD Card Device Chassis Index**

<b>Name</b>	sdCardDeviceChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.1
<b>Description</b>	Defines the index (one-based) of the chassis that contains the SD Card device.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 869. SD Card Device Index**

<b>Name</b>	sdCardDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.2
<b>Description</b>	Defines the index (one-based) of the SD Card device.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 870. SD Card Device Status**

<b>Name</b>	sdCardDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.3
<b>Description</b>	Defines the status of the SD Card device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 871. SD Card Device Type**

<b>Name</b>	sdCardDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.4
<b>Description</b>	Defines the type of the SD Card device.
<b>Syntax</b>	DellSDCardDeviceType
<b>Access</b>	Read-only

**Table 872. SD Card Device Config Capabilities**

<b>Name</b>	sdCardDeviceConfigCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.5
<b>Description</b>	Defines the configuration capabilities of the SD Card device.
<b>Syntax</b>	DellSDCardDeviceConfigCapabilities
<b>Access</b>	Read-only

**Table 873. SD Card Device Config Settings**

<b>Name</b>	sdCardDeviceConfigSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.6
<b>Description</b>	Defines the configuration settings of the SD Card device.
<b>Syntax</b>	DellSDCardDeviceConfigSettings
<b>Access</b>	Read-only

**Table 874. SD Card Device Location Name**

<b>Name</b>	sdCardDeviceLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.7

<b>Description</b>	Defines the location of the SD Card device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 875. SD Card Device Card Present**

<b>Name</b>	sdCardDeviceCardPresent
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.8
<b>Description</b>	Defines whether the SD Card is present for the SD Card device.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

**Table 876. SD Card Device Card State**

<b>Name</b>	sdCardDeviceCardState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.9
<b>Description</b>	Defines the state of the SD Card.
<b>Syntax</b>	DellSDCardDeviceCardState
<b>Access</b>	Read-only

**Table 877. SD Card Device Card Storage Size**

<b>Name</b>	sdCardDeviceCardStorageSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.10
<b>Description</b>	Defines the storage size in MB (megabytes) of the SD card for the SD Card device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 878. SD Card Device Unit Index Reference**

<b>Name</b>	sdCardDeviceUnitIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.11
<b>Description</b>	Defines the index to the associated SD Card unit if the SD Card device is part of a SD Card unit.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 879. SD Card Device Card Available Storage Size**

<b>Name</b>	sdCardDeviceCardAvailableStorageSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.12
<b>Description</b>	Defines the available storage size in MB (megabytes) of the SD card for the SD card device.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 880. SD Card Device Card Licensed**

<b>Name</b>	sdCardDeviceCardLicensed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.112.1.13
<b>Description</b>	Defines whether the SD card is licensed by the system vendor.
<b>Syntax</b>	DellSDCardDeviceCardLicensed

## Device Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 881. Pointing Device Type**

**Variable Name:** DellPointingDeviceType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsOther (1)	Device type is not one of the following:
deviceTypeIsUnknown (2)	Device type is unknown.
deviceTypeIsAMouse (3)	Device type is a mouse.
deviceTypeIsATrackBall (4)	Device type is a track ball.
deviceTypeIsATrackPoint (5)	Device type is a track point.
deviceTypeIsAGlidePoint (6)	Device type is a glide point.
deviceTypeIsATouchPad (7)	Device type is a touch pad.

**Table 882. Processor Device Status State**

**Variable Name:** DellProcessorDeviceStatusState

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
other (1)	Processor device type is not one of the following:
unknown (2)	Device type is unknown.
enabled (3)	Device is enabled.
userDisabled (4)	Device is disabled by the user.
biosDisabled (5)	Device has its BIOS disabled.
idle (6)	Device is idle.

**Table 883. Processor Device Status Reading**

**Variable Name:** DellProcessorDeviceStatusReading

**Data Type:** Integer

 **NOTE:** These values are bit masks, so combination values are possible.

Possible Data Values	Meaning of Data Value
internalError (1)	The processor experienced an internal error
thermalTrip (2)	The processor experienced a thermal trip
configurationError (32)	The processor experienced a configuration error
processorPresent (128)	The processor is present

processorDisabled (256)	The processor is disabled
terminatorPresent (512)	The terminator is Present
processorThrottled (1024)	The processor is throttled

**Table 884. Processor Device Type**

**Variable Name:**DellProcessorDeviceType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsOther (1)	The processor device type is not one of the following values:
deviceTypeIsUnknown (2)	The processor device type is unknown.
deviceTypeIsCPU (3)	The processor device type is a central processing unit.
deviceTypeIsMathProcessor (4)	The processor device type is a math processor.
deviceTypeIsDSP (5)	The processor device type is a digital signal processor.
deviceTypeIsAVideoProcessor (6)	The processor device is a video processor.

**Table 885. Processor Upgrade Information**

**Variable Name:**DellProcessorUpgradeInformation

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsOther (1)	The upgrade device type is not one of the following:
processorUpgradeIsUnknown (2)	Upgrade device type is unknown.
processorUpgradeIsByDaughterBoard (3)	Upgrade device is on a daughter board.
processorUpgradeIsByZIFSocket (4)	Upgrade device is in a zero insertion force (ZIF) socket.
processorUpgradeIsByReplacement (5)	Upgrade device is a replacement.
processorUpgradeIsNone (6)	There is no upgrade device.
processorUpgradeIsByLIFSocket (7)	Upgrade device is in a low insertion force (LIF) socket.
processorUpgradeIsBySlot1 (8)	Upgrade device is a SLOT 1 processor.
processorUpgradeIsBySlot2 (9)	Upgrade device is a SLOT 2 processor.
processorUpgradeIsBy370PinSocket (10)	Upgrade device is a 370 pin socket.
processorUpgradeIsBySlotA (11)	Upgrade is by Slot A.

processorUpgradeIsBySlotM(12)	Upgrade is by Slot M.
processorUpgradeIsBySocket423(13)	Upgrade is by Socket 423.
processorUpgradeIsBySocketA(14)	Upgrade is by Socket A (Socket 462).
processorUpgradeIsBySocket478(15)	Upgrade is by Socket 478.
processorUpgradeIsBySocket754(16)	Upgrade is by Socket 754.
processorUpgradeIsBySocket940(17)	Upgrade is by Socket 940.
processorUpgradeIsBySocket939(18)	Upgrade is by Socket 939.
processorUpgradeIsBySocketmPGA604(19)	Upgrade is by Socket mPGA604.
processorUpgradeIsBySocketLGA771(20)	Upgrade is by Socket LGA771.
processorUpgradeIsBySocketLGA775(21)	Upgrade is by Socket LGA775.
processorUpgradeIsBySocketS1(22)	Upgrade is by Socket S1.
processorUpgradeIsBySocketAM2(23)	Upgrade is by Socket AM2.
processorUpgradeIsBySocketF(24)	Upgrade is by Socket F (1207).
processorUpgradeIsBySocketLGA1366(25)	Upgrade is by Socket LGA1366.

**Table 886. Processor Device Family**

**Variable Name:**DellProcessorDeviceFamily

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceFamilyIsOther (1)	The processor family is not one of the following values.
deviceFamilyUnknown (2)	The processor family is unknown.
deviceFamilyIs8086 (3)	The processor family is 8086.
deviceFamilyIs80286 (4)	The processor family is 80286.
deviceFamilyIs80386 (5)	The processor family is 80386.
deviceFamilyIs80486 (6)	The processor family is 80486.
deviceFamilyIs8087 (7)	The processor family is 8087.
deviceFamilyIs80287 (8)	The processor family is 80287.

deviceFamilyIs80387 (9) The processor family is 80387.

deviceFamilyIs80487 (10) The processor family is 80487.

deviceFamilyIsPentium (11) The processor family is Intel Pentium.

deviceFamilyIsPentiumPro (12) The processor family is Pentium Pro.

deviceFamilyIsPentium2 (13) The processor family is Pentium II.

deviceFamilyIsPentiumMMX (14) The processor family is Pentium MMX.

deviceFamilyIsCeleron (15) The processor family is Celeron.

deviceFamilyIsXeon (16) The processor family is Xeon.

deviceFamilyIsPentium3 (17) The processor family is Pentium III.

deviceFamilyIsPentium3Xeon (18) The processor family is Pentium III Xeon.

deviceFamilyIsPentium3Step (19) The processor family is Pentium III Speed Step.

deviceFamilyIsPentiumItanium (20) The processor family is Itanium.

deviceFamilyIsIntelXeon (21) The processor family is Intel Xeon.

deviceFamilyIsPentium4 (22) The processor family is Pentium 4.

deviceFamilyIsIntelXeonMP (23) The processor family is Intel Xeon MP.

deviceFamilyIsIntelItanium2 (24) The processor family is Intel Itanium 2.

deviceFamilyIsK5 (25) The processor family is K5.

deviceFamilyIsK6 (26) The processor family is K6.

deviceFamilyIsK6-2 (27) The processor family is K6-2.

deviceFamilyIsK6-3 (28) The processor family is K6-3.

deviceFamilyIsAMDAthlon (29) The processor family is AMD Athlon.

deviceFamilyIsAMD2900 (30) The processor family is AMD2900.

deviceFamilyIsK6-2Plus (31) The processor family is K6-2+.

deviceFamilyIsPowerPC (32) The processor family is Power PC.

deviceFamilyIsPowerPC601 (33) The processor family is Power PC 601.

deviceFamilyIsPowerPC603 (34) The processor family is Power PC 603.

deviceFamilyIsPowerPC603Plus (35)	The processor family is Power PC 603+.
deviceFamilyIsPowerPC604 (36)	The processor family is Power PC 604.
deviceFamilyIsPowerPC620 (37)	The processor family is Power PC 620.
deviceFamilyIsPowerPCx704 (38)	The processor family is Power PC x704.
deviceFamilyIsPowerPC750 (39)	The processor family is Power PC 750.
deviceFamilyIsIntelCoreDuo (40)	The processor family is Intel Core Duo.
deviceFamilyIsIntelCoreDuoMobile (41)	The processor family is Intel Core Duo mobile.
deviceFamilyIsIntelCoreSoloMobile (42)	The processor family is Intel Core Solo mobile.
deviceFamilyIsIntelAtom (43)	The processor family is Intel Atom.
deviceFamilyIsAlpha (48)	The processor family is Alpha.
deviceFamilyIsAlpha21064 (49)	The processor family is Alpha 21064.
deviceFamilyIsAlpha21066 (50)	The processor family is Alpha 21066.
deviceFamilyIsAlpha21164 (51)	The processor family is Alpha 21164.
deviceFamilyIsAlpha21164PC (52)	The processor family is Alpha 21164PC.
deviceFamilyIsAlpha21164a (53)	The processor family is Alpha 21164a.
deviceFamilyIsAlpha21264 (54)	The processor family is Alpha 21264.
deviceFamilyIsAlpha21364 (55)	The processor family is Alpha 21364.
deviceFamilyIsAMDTurionIIUltraDualMobileM (56)	The processor family is AMD Turion II Ultra Dual-Core Mobile M Processor Family.
deviceFamilyIsAMDTurionIIDualMobileM (57)	The processor family is AMD Turion II Dual-Core Mobile M Processor Family. .
deviceFamilyIsAMDAthlonIIDualMobileM (58)	The processor family is AMD Athlon II Dual-Core Mobile M Processor Family.
deviceFamilyIsAMDOpteron6100 (59)	The processor family is AMD Opteron 6100 Series Processor.
deviceFamilyIsAMDOpteron4100 (60)	The processor family is AMD Opteron 4100 Series Processor.
deviceFamilyIsAMDOpteron6200 (61)	The processor family is AMD Opteron 6200 Series Processor.
deviceFamilyIsAMDOpteron4200 (62)	The processor family is AMD Opteron 4200 Series Processor.

deviceFamilyIsMIPS (64)	The processor family is MIPS
deviceFamilyIsMIPSR4000 (65)	The processor family is MIPS R4000.
deviceFamilyIsMIPSR4200 (66)	The processor family is MIPS R4200.
deviceFamilyIsMIPSR4400 (67)	The processor family is MIPS R4400.
deviceFamilyIsMIPSR4600 (68)	The processor family is MIPS R4600.
deviceFamilyIsMIPSR10000 (69)	The processor family is MIPS R10000.
deviceFamilyIsSPARC (80)	The processor family is SPARC.
deviceFamilyIsSuperSPARC (81)	The processor family is SuperSPARC.
deviceFamilyIsmicroSPARCI (82)	The processor family is microSPARC II.
deviceFamilyIsmicroSPARCIep (83)	The processor family is microSPARC IIep.
deviceFamilyIsUltraSPARC (84)	The processor family is UltraSPARC.
deviceFamilyIsUltraSPARCI (85)	The processor family is UltraSPARC II.
deviceFamilyIsUltraSPARCIi (86)	The processor family is UltraSPARC III.
deviceFamilyIsUltraSPARCIii (87)	The processor family is UltraSPARC III.
deviceFamilyIsUltraSPARCIiii (88)	The processor family is UltraSPARC IIIi.
deviceFamilyIs68040 (96)	The processor family is 68040 Family.
deviceFamilyIs68xxx (97)	The processor family is 68xxx.
deviceFamilyIs68000 (98)	The processor family is 6800.
deviceFamilyIs68010 (99)	The processor family is 68010.
deviceFamilyIs68020 (100)	The processor family is 68020.
deviceFamilyIs68030 (101)	The processor family is 68030.
deviceFamilyIsHobbit (112)	The processor family is Hobbit.
deviceFamilyIsCrusoe5000 (120)	The processor family is Crusoe 5000.
deviceFamilyIsCrusoe3000 (121)	The processor family is Crusoe 3000.
deviceFamilyIsEfficeon8000 (122)	The processor family is Efficeon 8000.

deviceFamilyIsWeitek(128)	The processor family is Weitek.
deviceFamilyIsIntelCeleronM(130)	The processor family is Intel Celeron M.
deviceFamilyIsAMDAthlon64(131)	The processor family is AMD Athlon 64.
deviceFamilyIsAMDOpteron(132)	The processor family is AMD Opteron.
deviceFamilyIsAMDSempron(133)	The processor family is AMD Sempron.
deviceFamilyIsAMDTurion64Mobile(134)	The processor family is AMD Turion 64 Mobile Technology.
deviceFamilyIsDualCoreAMDOpteron(135)	The processor family is Dual-Core AMD Opteron.
deviceFamilyIsAMDAthlon64X2DualCore(136)	The processor family is AMD Athlon 64 X2 Dual-Core.
deviceFamilyIsAMDTurion64X2Mobile(137)	The processor family is AMD Turion 64 X2 Mobile Technology.
deviceFamilyIsQuadCoreAMDOpteron(138)	The processor family is Quad-Core AMD Opteron.
deviceFamilyIsThirdGenerationAMDOpteron(139)	The processor family is thirdgeneration AMD Opteron.
deviceFamilyIsAMDPhenomFXQuadCore(140)	The processor family is AMD Phenom FX Quad-Core.
deviceFamilyIsAMDPhenomX4QuadCore(141)	The processor family is AMD Phenom X4 Quad-Core.
deviceFamilyIsAMDPhenomX2DualCore(142)	The processor family is AMD Phenom X2 Dual-Core.
deviceFamilyIsAMDAthlonX2DualCore(143)	The processor family is AMD Athlon X2 Dual-Core.
deviceFamilyIsPA-RISC(144)	The processor family is PA-RISC.
deviceFamilyIsPA-RISC8500(145)	The processor family is PA-RISC 8500.
deviceFamilyIsPA-RISC8000(146)	The processor family is PA-RISC 8000.
deviceFamilyIsPARISC7300LC(147)	The processor family is PA-RISC 7300LC.
deviceFamilyIsPA-RISC7200(148)	The processor family is PA-RISC 7200.
deviceFamilyIsPARISC7100LC(149)	The processor family is PA-RISC 7100LC.
deviceFamilyIsPA-RISC7100(150)	The processor family is PA-RISC 7100.
deviceFamilyIsV30(160)	The processor family is V30.
deviceFamilyIsQuadCoreIntelXeon3200(161)	The processor family is Quad-Core Intel Xeon processor 3200 Series.

deviceFamilyIsDualCoreIntelXeon3000 (162)	The processor family is Dual-Core Intel Xeon processor 3000 Series.
deviceFamilyIsQuadCoreIntelXeon5300 (163)	The processor family is Quad-Core Intel Xeon processor 5300 Series.
deviceFamilyIsDualCoreIntelXeon5100 (164)	The processor family is Dual-Core Intel Xeon processor 5100 Series.
deviceFamilyIsDualCoreIntelXeon5000 (165)	The processor family is Dual-Core Intel Xeon processor 5000 Series.
deviceFamilyIsDualCoreIntelXeonLV (166)	The processor family is Dual-Core Intel Xeon processor LV.
deviceFamilyIsDualCoreIntelXeonULV (167)	The processor family is Dual-Core Intel Xeon processor ULV.
deviceFamilyIsDualCoreIntelXeon7100 (168)	The processor family is Dual-Core Intel Xeon processor 7100 Series.
deviceFamilyIsQuadCoreIntelXeon5400 (169)	The processor family is Quad-Core Intel Xeon processor 5400 Series.
deviceFamilyIsQuadCoreIntelXeon (170)	The processor family is Quad-Core Intel Xeon.
deviceFamilyIsDualCoreIntelXeon5200 (171)	The processor family is Dual-Core Intel Xeon processor 5200 Series.
deviceFamilyIsDualCoreIntelXeon7200 (172)	The processor family is Dual-Core Intel Xeon processor 7200 Series.
deviceFamilyIsQuadCoreIntelXeon7300 (173)	The processor family is Quad-Core Intel Xeon processor 7300 Series.
deviceFamilyIsQuadCoreIntelXeon7400 (174)	The processor family is Quad-Core Intel Xeon processor 7400 Series.
deviceFamilyIsMultiCoreIntelXeon7400 (175)	The processor family is Multi-Core Intel Xeon processor 7400 Series.
deviceFamilyIsM1 (176)	The processor family is M1.
deviceFamilyIsM2 (177)	The processor family is M2.
deviceFamilyIsIntelPentium4HT (179)	The processor family is Intel Pentium 4 HT processor.
deviceFamilyIsAS400 (180)	The processor family is AS400.
deviceFamilyIsAMDAthlonXP (182)	The processor family is AMD Athlon XP.
deviceFamilyIsAMDAthlonMP (183)	The processor family is AMD Athlon MP.
deviceFamilyIsAMDDuron (184)	The processor family is AMD Duron.
deviceFamilyIsIntelPentiumM (185)	The processor family is Intel Pentium M.
deviceFamilyIsIntelCeleronD (186)	The processor family is Intel Celeron D.
deviceFamilyIsIntelPentiumD (187)	The processor family is Intel Pentium D.
deviceFamilyIsIntelPentiumExtreme (188)	The processor family is Intel Pentium Processor Extreme Edition.

deviceFamilyIsIntelCoreSolo (189)	The processor family is Intel Core Solo processor.
deviceFamilyIsIntelCore2 (190)	The processor family is Intel Core 2 processor.
deviceFamilyIsIntelCore2Duo (191)	The processor family is Intel Core 2 Duo processor.
deviceFamilyIsIntelCore2Solo (192)	The processor family is Intel Core2 Solo processor.
deviceFamilyIsIntelCore2Extreme (193)	The processor family is Intel Core2 Extreme processor.
deviceFamilyIsIntelCore2Quad (194)	The processor family is Intel Core2 Quad processor.
deviceFamilyIsIntelCore2ExtremeMobile (195)	The processor family is Intel Core2 Extreme mobile processor.
deviceFamilyIsIntelCore2DuoMobile (196)	The processor family is Intel Core2 Duo mobile processor.
deviceFamilyIsIntelCore2SoloMobile (197)	The processor family is Intel Core2 Solo mobile processor.
deviceFamilyIsIntelCorei7 (198)	The processor family is Intel Core i7 processor.
deviceFamilyIsDualCoreIntelCeleron (199)	The processor family is Dual-Core Intel Celeron Processor.
deviceFamilyIsIBM390 (200)	The processor family is IBM390.
deviceFamilyIsG4 (201)	The processor family is G4.
deviceFamilyIsG5 (202)	The processor family is G5.
deviceFamilyIsESA390G6 (203)	The processor family is ESA/390 G6.
deviceFamilyIszArchitecture (204)	The processor family is z/Architecture base.
deviceFamilyIsIntelCorei5 (205)	The processor family is Intel Core i5 processor.
deviceFamilyIsIntelCorei3 (206)	The processor family is Intel Core i3 processor.
deviceFamilyIsVIAC7-M (210)	The processor family is VIA C7-M.
deviceFamilyIsVIAC7-D (211)	The processor family is family is VIA C7-D.
deviceFamilyIsVIAC7 (212)	The processor family is VIA C7.
deviceFamilyIsVIAEden (213)	The processor family is VIA Eden.
deviceFamilyIsMultiCoreIntelXeon (214)	The processor family is Multi-Core Intel Xeon processor.
deviceFamilyIsDualCoreIntelXeon3xxx (215)	The processor family is Dual-Core Intel Xeon processor 3xxx Series.

deviceFamilyIsQuadCoreIntelXeon3xxx (216)	The processor family is Quad-Core Intel Xeon processor 3xxx Series.
deviceFamilyIsVIANano (217)	The processor family is VIA Nano.
deviceFamilyIsDualCoreIntelXeon5xxx (218)	The processor family is Dual-Core Intel Xeon processor 5xxx Series.
deviceFamilyIsQuadCoreIntelXeon5xxx (219)	The processor family is Quad-Core Intel Xeon processor 5xxx Series.
deviceFamilyIsDualCoreIntelXeon7xxx (221)	The processor family is Dual-Core Intel Xeon processor 7xxx Series.
deviceFamilyIsQuadCoreIntelXeon7xxx (222)	The processor family is Quad-Core Intel Xeon processor 7xxx Series.
deviceFamilyIsMultiCoreIntelXeon7xxx (223)	The processor family is Multi-Core Intel Xeon processor 7xxx Series.
deviceFamilyIsMultiCoreIntelXeon3400 (224)	The processor family is Multi-Core Intel Xeon processor 3400 Series.
deviceFamilyIsEmbeddedAMDOpteronQuadCore (230)	The processor family is Embedded AMD Opteron Quad-Core.
deviceFamilyIsAMDPheonTripleCore (231)	The processor family is AMD Phenom Triple-Core.
deviceFamilyIsAMDTurionUltraDualCoreMobile (232)	The processor family is AMD Turion Ultra Dual-Core mobile processor.
deviceFamilyIsAMDTurionDualCoreMobile (233)	The processor family is AMD Turion Dual-Core mobile processor.
deviceFamilyIsAMDATHlonDualCore (234)	The processor family is AMD Athlon Dual-Core.
deviceFamilyIsAMDSEmpronSI (235)	The processor family is AMD Sempron SI.
deviceFamilyIsAMDPheonII (236)	The processor family is AMD Phenom II.
deviceFamilyIsAMDATHlonII (237)	The processor family is AMD Athlon II.
deviceFamilyIsSixCoreAMDOpteron (238)	The processor family is Six-Core AMD Opteron.
deviceFamilyIsAMDSEmpronM (239)	The processor family is AMD Sempron M.
deviceFamilyIsi860 (250)	The processor family is i860.
deviceFamilyIsi960 (251)	The processor family is i960.
deviceFamilyIsAMDOpteron6200 (261)	The processor family family is AMD Opteron 6200 Series Processor.

deviceFamilyIsAMDOpteron4200 (61) The processor family family is AMD Opteron 4200 Series Processor.

**Table 887. Cache Device Type**

**Variable Name:**DellCacheDeviceType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsOther (1)	System cache type is not one of the following:
deviceTypeIsUnknown (2)	System cache type is unknown.
deviceTypeIsInstruction (3)	System cache type is instruction.
deviceTypeIsData (4)	System cache type is data.
deviceTypeIsUnified (5)	System cache type is both instruction and data.

**Table 888. Cache Device Level**

**Variable Name:**DellCacheDeviceLevel

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceLevelIsOther (1)	Device level is not one of the following:
deviceLevelIsUnknown (2)	Device level is unknown.
deviceLevelIsPrimary (3)	Device level is primary.
deviceLevelIsSecondary (4)	Device level is secondary.
deviceLevelIsTertiary (5)	Device level is tertiary.

**Table 889. Cache Device Write Policy**

**Variable Name:**DellCacheDeviceWritePolicy

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceWritePolicyIsOther (1)	Device write policy is not one of the following:
deviceWritePolicyIsUnknown (2)	Device write policy is unknown.
deviceWritePolicyIsWriteBack (3)	Device write policy is write back.
deviceWritePolicyIsWriteThrough (4)	Device write policy is write through.
deviceWritePolicyIsVariesByAddress (5)	Device write policy varies by address.
deviceWritePolicyIsDeterminedByIO (6)	Device write policy is determined by I/O query.

**Table 890. Cache Device Status State**

**Variable Name:**DellCacheDeviceStatusState

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
other (1)	Device state is not one of the following:
unknown (2)	Device state is unknown.
enabled (3)	Device is enabled.
userDisabled (4)	Device is disabled by the user.
biosDisabled (5)	Device basic input/output system (BIOS) is disabled.

**Table 891. Cache Device ECC Type**

**Variable Name:**DellPointingDeviceType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsOther (1)	Device type is not one of the following:
deviceTypeIsUnknown (2)	Device type is unknown.
deviceTypeIsAMouse (3)	Device type is a mouse.
deviceTypeIsATrackBall (4)	Device type is a track ball.
deviceTypeIsATrackPoint (5)	Device type is a track point.
deviceTypeIsAGlidePoint (6)	Device type is a glide point.
deviceTypeIsATouchPad (7)	Device type is a touch pad.

**Table 892. Cache Device Associativity**

**Variable Name:**DellCacheDeviceAssociativity

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceAssociativityIsOther (1)	Device associativity is not one of the following:
deviceAssociativityIsUnknown (2)	Device associativity is unknown.
deviceAssociativityIsDirectMapped (3)	Device is direct mapped.
deviceAssociativityIsTwoWaySetAssociative (4)	Device is two-way set associative.
deviceAssociativityIsFourWaySetAssociative (5)	Device is four-way set associative.
deviceAssociativityIsFullyAssociative (6)	Device is fully associative.

deviceAssociativityIsEightWaySetAssociative (7)	Device is eight-way set associative.
deviceAssociativityIsSixteenWaySetAssociative (8)	Device is sixteen-way set associative.
deviceAssociativityIs12WaySetAssociative (9)	Device is 12-way Set-Associative.
deviceAssociativityIs24WaySetAssociative (10)	Device is 24-way Set-Associative.
deviceAssociativityIs32WaySetAssociative (11)	Device is 32-way Set-Associative.
deviceAssociativityIs48WaySetAssociative (12)	Device is 48-way Set-Associative.
deviceAssociativityIs64WaySetAssociative (13)	Device is 64-way Set-Associative.

**Table 893. Cache Device Location**

**Variable Name:**DellCacheDeviceLocation

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceLocationIsOther (1)	Device location is not one of the following:
deviceLocationIsUnknown (2)	Device location is unknown.
deviceLocationIsInternal (3)	Device location is internal.
deviceLocationIsExternal (4)	Device location is external.

**Table 894. Cache Device Static Random-Access Memory (SRAM) Type**

**Variable Name:**DellCacheDeviceSRAMType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceSRAMTypeIsOther (1)	Device SRAM type is not one of the following:
deviceSRAMTypeIsUnknown (2)	Device SRAM type is unknown.
deviceSRAMTypeIsNonBurst (3)	Device SRAM type is nonburst.
deviceSRAMTypeIsBurst (4)	Device SRAM type is burst.
deviceSRAMTypeIsPipeBurst (5)	Device SRAM type is pipeburst.
deviceSRAMTypeIsSynchronous (6)	Device SRAM type is synchronous.

deviceSRAMTypeIsAsyn  
chronous (7) Device SRAM type is asynchronous.

**Table 895. Memory Device Type Form Factor**

**Variable Name:**DellMemoryDeviceFormFactor

**Data Type:**Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
deviceFormFactorIsOther (1)	Device form factor is not one of the following:
deviceFormFactorIsUnknown (2)	Device form factor is unknown.
deviceFormFactorIsSIMM (3)	Device form factor is SIMM.
deviceFormFactorIsSIP (4)	Device form factor is SIP.
deviceFormFactorIsChip (5)	Device form factor is a chip.
deviceFormFactorIsDIP (6)	Device form factor is DIP.
deviceFormFactorIsZIP (7)	Device form factor is ZIP.
deviceFormFactorIsProprietaryCard (8)	Device form factor is a proprietary card.
deviceFormFactorIsDIMM (9)	Device form factor is DIMM.
deviceFormFactorIsTSOP (10)	Device form factor is TSOP.
deviceFormFactorIsRowOfChips (11)	Device form factor is a row of chips.
deviceFormFactorIsRIMM (12)	Device form factor is RIMM.
deviceFormFactorIsSODIMM (13)	Device form factor is SODIMM.
deviceFormFactorIsSRIMM (14)	Device form factor is SRIMM.
deviceFormFactorIsFB-DIMM (15)	Device form factor is FB-DIMM.

**Table 896. Memory Device Type**

**Variable Name:**DellMemoryDeviceType

**Data Type:**Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
deviceTypeIsOther (1)	Device type is not one of the following:
deviceTypeIsUnknown (2)	Device type is unknown.
deviceTypeIsDRAM (3)	Device type is DRAM.
deviceTypeIsEDRAM (4)	Device type is EDRAM.
deviceTypeIsVRAM (5)	Device type is VRAM.

deviceTypeIsSRAM (6)	Device type is SRAM.
deviceTypeIsRAM (7)	Device type is RAM.
deviceTypeIsROM (8)	Device type is ROM.
deviceTypeIsFLASH (9)	Device type is FLASH.
deviceTypeIsEEPROM (10)	Device type is EEPROM.
deviceTypeIsFEPR0M (11)	Device type is FEPR0M.
deviceTypeIsEPROM (12)	Device type is EPROM.
deviceTypeIsCDRAM (13)	Device type is CDRAM.
deviceTypeIs3DRAM (14)	Device type is 3DRAM.
deviceTypeIsSDRAM (15)	Device type is SDRAM.
deviceTypeIsSGRAM (16)	Device type is SGRAM.
deviceTypeIsRDRAM (17)	Device type is RDRAM.
deviceTypeIsDDR (18)	Device type is DDR.
deviceTypeIsDDR2 (19)	Device type is DDR2.
deviceTypeIsDDR2FBDIMM (20)	Device type is DDR2 FB-DIMM.
deviceTypeIsDDR3 (24)	Device type is DDR3.
deviceTypeIsFBD2 (25)	Device type is FBD2.
deviceTypeIsDDR4 (26)	Device type is DDR4.

**Table 897. Memory Device Type Details**

**Variable Name:**DellMemoryDeviceTypeDetails

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceTypeDetailIsOther (2)	The detailed device type is not one of the following:
deviceTypeDetailIsUnknown (4)	The detailed device type is unknown.
deviceTypeDetailIsFastPaged (8)	The detailed device type is fast paged.
deviceTypeDetailIsStaticColumn (16)	The detailed device type is static column.
deviceTypeDetailIsPseudoStatic (32)	The detailed device type is pseudo-static.
deviceTypeDetailIsRAMBUS (64)	The detailed device type is RAMBUS.
deviceTypeDetailIsSynchronous (128)	The detailed device type is synchronous.
deviceTypeDetailIsCMOS (256)	The detailed device type is CMOS.

deviceTypeDetailIsEDO (512)	The detailed device type is EDO.
deviceTypeDetailIsWindowDRAM (1024)	The detailed device type is Window DRAM.
deviceTypeDetailIsCacheDRAM (2048)	The detailed device type is Cache DRAM.
deviceTypeDetailIsNonVolatile (4096)	The detailed device type is Non-volatile.
deviceTypeDetailIsRegistered (8192)	The detailed device type is registered.
deviceTypeDetailIsNonRegistered (16384)	The detailed device type is nonregistered.

**Table 898. Generic Device Type**

**Variable Name:**DellGenericDeviceType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsOther (1)	Device type is not one of the following:
deviceTypeIsUnknown (2)	Device type is unknown.
deviceTypeIsAVideoDevice (3)	Device type is a video.
deviceTypeIsASCSIController (4)	Device type is a SCSI controller.
deviceTypeIsAnEthernetDevice (5)	Device type is Ethernet.
deviceTypeIsTokenRingDevice (6)	Device type is token ring.
deviceTypeIsASoundDevice (7)	Device type is sound.

**Table 899. Memory Device Failure Modes**

**Variable Name:**DellMemoryDeviceFailureModes

**Data Type:**Integer

 **NOTE:** These values are bit masks, so combination values are possible.

Possible Data Values	Meaning of Data Value
(0)	Memory device has no faults.
eccSingleBitCorrectionWarningRate (1)	Memory device has exceeded the Correctable Memory Event warning rate.
eccSingleBitCorrectionFailureRate (2)	Memory device has exceeded the Correctable Memory Event failure rate.
eccMultiBitFault (4)	Memory device has encountered an Uncorrectable Memory Event.
eccSingleBitCorrectionLoggingDisabled (8)	Correctable Memory Event logging for memory device has been disabled.
deviceDisabledBySpareActivation (16)	Memory device is disabled because of spare memory activation.

**Table 900. Network Device Connection Status**

**Variable Name:**DellNetworkDeviceConnectionStatus

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
unknown (0)	Unable to determine connection status.
connected (1)	Media reports that device is connected.
disconnected (2)	Media reports that device is disconnected.
driverBad (3)	Driver cannot be opened to determine status.
driverDisabled (4)	Driver is disabled.
hardwareInitalizing (10)	Hardware is initializing.
hardwareResetting (11)	Hardware is resetting.
hardwareClosing (12)	Hardware is closing down.
hardwareNotReady (13)	Hardware is not ready.

**Table 901. Network Device Teaming Flags**

**Variable Name:**DellNetworkDeviceTeamingFlags

**Data Type:**Integer

 **NOTE: These values are bit fields, so combination values are possible.**

Possible Data Values	Meaning of Data Value
undefined (0)	Teaming flags are undefined.
noTeam (1)	Device is not part of any team.
teamingEnabled (2)	Teaming is enabled.
adapterFaultToleranceMode (4)	Adapter fault tolerance teaming mode.
loadBalancingMode (8)	Load balancing teaming mode.

**Table 902. Network Device TOE Capability Flags**

**Variable Name:**DellNetworkDeviceTOECapabilityFlags

**Data Type:**Integer

 **NOTE: These values are bit fields, so combination values are possible.**

Possible Data Values	Meaning of Data Value
none (0)	Querying for TOE capability is not supported.
unknown (1)	Querying for TOE capability is supported but query returned an error.
available (2)	Device has TOE capability.
notAvailable (4)	Device does not have TOE capability.
cannotBeDetermined (8)	Querying for TOE capability is supported but an error prevented querying.
driverNotResponding (16)	Querying for TOE capability is supported but driver did not respond to query.

### Table 903. Network Device RDMA Capability Flags

**Variable Name:**DellNetworkDeviceRDMACapabilityFlags

**Data Type:**Integer

 **NOTE: These values are bit fields, so combination values are possible.**

Possible Data Values	Meaning of Data Value
none (0)	Querying for RDMA capability is not supported.
unknown (1)	Querying for RDMA capability is supported but query returned an error.
available (2)	Device has RDMA capability.
notAvailable (4)	Device does not have RDMA capability.
cannotBeDetermined (8)	Querying for RDMA capability is supported but an error prevented querying.
driverNotResponding (16)	Querying for RDMA capability is supported but driver did not respond to query.

### Table 904. Network Device iSCSI Capability Flags

**Variable Name:**DellNetworkDeviceiSCSICapabilityFlags

**Data Type:**Integer

 **NOTE: These values are bit fields, so combination values are possible.**

Possible Data Values	Meaning of Data Value
none (0)	Querying for iSCSI capability is not supported.
unknown (1)	Querying for iSCSI capability is supported but query returned an error.
available (2)	Device has iSCSI capability.
notAvailable (4)	Device does not have iSCSI capability.
cannotBeDetermined (8)	Querying for iSCSI capability is supported but an error prevented querying.
driverNotResponding (16)	Querying for iSCSI capability is supported but driver did not respond to query.

### Table 905. Network Device Capabilities

**Variable Name:**DellNetworkDeviceCapabilities

**Data Type:**Integer

 **NOTE: These values are bit fields, so combination values are possible.**

Possible Data Values	Meaning of Data Value
notSupported (0)	Device does not support reporting capabilities through this attribute.
supported (1)	Device supports reporting capabilities through this attribute.
toe (2)	Device has TOE capability.
iscsiOffload (4)	Device has iSCSI Offload capability.
fcoeOffload (8)	Device has FCoE Offload capability.

### Table 906. Network Device NParEPEnabled

**Variable Name:**DellNetworkDeviceNParEPEnabled

**Data Type:**Integer

 **NOTE:** These values are bit fields, so combination values are possible.

Possible Data Values	Meaning of Data Value
Disabled (1)	Device does not support NParEP mode.
enabled (2)	Device supports NParEP mode.
unknown (3)	Device does not recognize NParEP mode.

### Table 907. Managed System Services Device Type

**Variable Name:**DellManagedSystemServicesDeviceType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
baseDevice (0)	Device type is base device.
optionalDevice (1)	Device type is optional device.

### Table 908. SD Card Device Type

**Variable Name:**DellSDCardDeviceType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
other (1)	Device type is other.
unknown (2)	Device type is unknown.
hypervisor (3)	Device type is Hypervisor.
vFlash (4)	Device type is Virtual Flash (vFlash.)

### Table 909. SD Card Device Config Capabilities

**Variable Name:**DellSDCardDeviceConfigCapabilities

**Data Type:**Integer

 **NOTE:** These values are bit fields, so combination values are possible.

Possible Data Values	Meaning of Data Value
none (0)	SD card device has none of the following capabilities.
sdCapable (1)	SD media can be enabled.
vFlashCapable (2)	Virtual Flash (vFlash) can be enabled.

### Table 910. SD Card Device Config Settings

**Variable Name:**DellSDCardDeviceConfigSettings

**Data Type:**Integer

 **NOTE:** These values are bit fields, so combination values are possible.

Possible Data Values	Meaning of Data Value
none (0)	SD card device has none of the following settings.
sdEnabled (1)	SD media is enabled.
vFlashEnabled (2)	Virtual Flash (vFlash) is enabled.

**Table 911. SD Card Device Card State**

**Variable Name:**DellSDCardDeviceCardState

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
none (0)	SD card state is none of the following states.
present (1)	Device is present.
ipmiReady (2)	Device is IPMI ready.
fullReady (4)	Device is full ready.
offline (8)	Device is offline.
failed (16)	Device is failed.
active (32)	Device is active.
bootable (64)	Device is bootable.
writeProtect (128)	Device is write-protected.
standby (256)	Device is in standby mode.

**Table 912. SD Card Device Card Licensed**

**Variable Name:**DellSDCardDeviceCardLicensed

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
unlicensed (0)	SD card is not licensed by system vendor.
licensed (1)	SD card is licensed by system vendor.
ipmiReady (2)	Device is IPMI ready.
fullReady (4)	Device is full ready.
offline (8)	Device is offline.
failed (16)	Device is failed.
active (32)	Device is active.
bootable (64)	Device is bootable.
writeProtect (128)	Device is write-protected.
standby (256)	Device is in standby mode.

## Slot Group

The Slot Group provides information about the types of slots that your system supports. This management information base (MIB) group also provides information about the voltages, capabilities, states, and settings that are possible for these slots.

## System Slot Group Table

The System Slot Group defines objects in the System Slot MIB table.

The following object sets up the System Slot Table:

**Table 913. System Slot Table**

<b>Name</b>	systemSlotTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10
<b>Description</b>	Defines the System Slot Table.

<b>Syntax</b>	IntegerSystemStateTableEntry
<b>Access</b>	Not accessible

**Table 914. System Slot Table Entry**

<b>Name</b>	systemSlotTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1
<b>Description</b>	Defines the System Slot Table entry.
<b>Syntax</b>	IntegerSystemSlotTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	systemSlotchassisIndex
--------------	------------------------

,	systemSlotIndex
---	-----------------

**Table 915. System Slot Chassis Index**

<b>Name</b>	systemSlotchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 916. System Slot Index**

<b>Name</b>	systemSlotIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.2
<b>Description</b>	Defines the index (one-based) of the system slot in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 917. System Slot State Capabilities Unique**

<b>Name</b>	systemSlotStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.3
<b>Description</b>	Defines the capabilities of the system slot.
<b>Syntax</b>	DellSystemSlotStateCapabilities ( <a href="#">System Slot State Capabilities</a> )
<b>Access</b>	Read-only

**Table 918. System Slot State Settings Unique**

<b>Name</b>	systemSlotStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.4
<b>Description</b>	Defines the state of the system slot.
<b>Syntax</b>	DellSystemSlotStateSettings ( <a href="#">System Slot State Settings</a> )
<b>Access</b>	Read-only

**Table 919. System Slot Status**

<b>Name</b>	systemSlotStatus
-------------	------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.5
<b>Description</b>	Defines the status of the system slot.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 920. System Slot Current Usage

<b>Name</b>	systemSlotCurrentUsage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.6
<b>Description</b>	Defines the current usage of the system slot.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 921. System Slot Type

<b>Name</b>	systemSlotType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.7
<b>Description</b>	Defines the type of the system slot.
<b>Syntax</b>	DellSystemSlotType ( <a href="#">System Slot Type</a> )
<b>Access</b>	Read-only

#### Table 922. System Slot External Slot Name

<b>Name</b>	systemSlotSlotExternalSlotName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.8
<b>Description</b>	Defines the external connector name of the system slot.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 923. System Slot Length

<b>Name</b>	systemSlotLength
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.9
<b>Description</b>	Defines the length of the system slot.
<b>Syntax</b>	DellSystemSlotLength ( <a href="#">System Slot Length</a> )
<b>Access</b>	Read-only

#### Table 924. System Slot Slot ID

<b>Name</b>	systemSlotSlotID
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.10
<b>Description</b>	Defines the slot identification number of the system slot. A zero (0) indicates that the slot is embedded on the motherboard.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 925. System Slot Category

<b>Name</b>	systemSlotCategory
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.11
<b>Description</b>	Defines the system slot category.

<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 926. System Slot Hot-Plug Bus Width**

<b>Name</b>	systemSlotHotPlugBusWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.12
<b>Description</b>	Defines the bus width of the hot-plug system slot.
<b>Syntax</b>	DellSystemSlotHotPlugBusWidth ( <a href="#">Hot-Plug Bus Width</a> )
<b>Access</b>	Read-only

**Table 927. System Slot Hot-Plug Slot Speed**

<b>Name</b>	systemSlotHotPlugSlotSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.13
<b>Description</b>	Defines the slot speed in megahertz of the hot-plug system slot. A zero (0) indicates that the slot speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 928. System Slot Hot-Plug Adapter Speed**

<b>Name</b>	systemSlotHotPlugAdapterSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.14
<b>Description</b>	Defines the adapter speed in megahertz of the hot-plug system slot. A zero (0) indicates that the slot speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## System Slot Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 929. System Slot State Capabilities**

**Variable Name:** DellSystemSlotStateCapabilities

**Data Type:** Integer

**Possible Data Values**

systemSlotHotPlugIsUnknown (1)

systemSlotHotPlugIsHotPlug gableCapable (2)

systemSlotHotPlugCanBePower edOn (4)

systemSlotHotPlugCanSignal Attention (8)

systemSlotHotPlugCanSignal PowerFault (16)

systemSlotHotPlugCanSignal AdapterPresent (32)

systemSlotHotPlugCanSignal PowerButtonPressed (64)

canSupportAllHotPlugCapabi lities (126)

**Meaning of Data Value**

The system slot's capabilities are unknown.

The system slot supports hot-plug.

The system slot power (and corresponding light-emitting diode [LED]) can be powered on.

The system slot attention state (and corresponding LED) can be set.

Power on fault (and corresponding LED) can be detected due to a short or overcurrent.

Adapter (card) present in slot (may not be powered) can be detected.

The system slot power button can be pressed to signal a toggle of the power state.

The system slot can support all hot-plug capabilities.

<code>systemSlotHotPlugIsUnknown (1)</code>	The system slot's capabilities are unknown.
<code>systemSlotCanProvide5Volts (128)</code>	The system slot can provide a 5-volt (V) supply.
<code>systemSlotCanProvide3Point3Volts (256)</code>	The system slot can provide a 3.3-V supply.
<code>systemSlotCanSignalIfShared (512)</code>	The system slot's opening, if shared with another slot, can be detected.
<code>systemSlotCanSupportCard16 (1024)</code>	The system slot can support PC Card-16.
<code>systemSlotCanSupportCardBus (2048)</code>	The system slot can support CardBus.
<code>systemSlotCanSupportZoomVideo (4096)</code>	The system slot can support Zoom Video.
<code>systemSlotCanSupportModemRingResume (8192)</code>	The system slot can support modem ring resume.
<code>systemSlotCanSupportPMESignal (16384)</code>	The system slot can support Power Management Enable (PME#) signal.
<code>canSupportAllSlotCapabilities (32640)</code>	The system slot can support all slot capabilities.

**Table 930. System Slot State Settings**

**Variable Name:** `DellSystemSlotStateSettings`

**Data Type:** Integer

**Possible Data Values**

<code>systemSlotHotPlugIsUnknown (1)</code>
<code>systemSlotHotPlugIsHotPluggable (2)</code>
<code>systemSlotHotPlugIsPoweredOn (4)</code>
<code>systemSlotHotPlugIsAtAttention (8)</code>
<code>systemSlotHotPlugIsHotPluggable (2)</code>
<code>systemSlotHotPlugIsPoweredOn (4)</code>
<code>systemSlotHotPlugIsAtAttention (8)</code>
<code>systemSlotHotPlugHasPowerFaulted (16)</code>
<code>systemSlotHotPlugAdapterIsPresent (32)</code>
<code>systemSlotHotPlugAdapterPresentAndPoweredOn (36)</code>
<code>systemSlotHotPlugPowerButtonPressed (64)</code>
<code>systemSlotProvides5Volts (128)</code>
<code>systemSlotProvides3Point3Volts (256)</code>
<code>systemSlotIsShared (512)</code>
<code>systemSlotSupportsCard16 (1024)</code>
<code>systemSlotSupportsCardBus (2048)</code>
<code>systemSlotSupportsZoomVideo (4096)</code>
<code>systemSlotSupportsModemRingResume (8192)</code>
<code>systemSlotSupportsPMESignal (16384)</code>
<code>supportsPMEand3P3Vand5VandHotPluggable (16770)</code>
<code>supportsPMEand3P3Vand5VhasAdapterOn (16804)</code>

**Meaning of Data Value**

The system slot's capabilities are unknown.
The system slot supports hot-plug.
The system slot power (and corresponding LED) can be powered on.
The system slot attention state (and corresponding LED) can be set.
The system slot supports hot-plug.
The system slot power (and corresponding LED) is on.
The system slot attention state (and corresponding LED) is on.
Power on fault (and corresponding LED) was detected due to a short or overcurrent.
Adapter (card) present in slot (may not be powered).
Adapter (card) present in slot and powered.
The system slot power button pressed to signal a toggle of the power state.
The system slot provides a 5-V supply.
The system slot provides a 3.3-V supply.
The slot's opening is shared with another slot.
The system slot supports PC Card-16.
The system slot supports CardBus.
The system slot supports zoom video.
The system slot supports modem ring resume.
The system slot supports power management enable (PME#) signal.
The system slot supports power management enable.
The system slot supports power management event (PME), supplies 3.3 V, and supplies 5 V. The adapter is on.

supportsPMEand3P3Vand5VhasAdapterOnandisHotPluggable (16806)

supportsPMEand3P3VIsSharedand5VhasAdapterOnandisHotPluggable (17316)

The system slot supports PME, supplies 3.3 V, and supplies 5 V. The adapter is on and the system slot is hot pluggable.

The system slot supports PME, supplies 3.3 V, supplies 5 V, and shares a slot opening. The adapter is on and the system slot is hot pluggable.

**Table 931. System Slot Type**

**Variable Name:** DellSystemSlotType

**Data Type:** Integer

**Possible Data Values**

- systemSlotIsOther (1)
- systemSlotIsUnknown (2)
- systemSlotIsISA (3)
- systemSlotIsMCA (4)
- systemSlotIsEISA (5)
- systemSlotIsPCI (6)
- systemSlotIsPCMCIA (7) .
- systemSlotIsVLVESAs (8)
- systemSlotIsProprietary (9)
- systemSlotIsProcessorCard (10)
- systemSlotIsProprietaryMemory (11)
- systemSlotIsIORiserCard (12)
- systemSlotIsNuBUS (13)
- systemSlotIsPCI66MHz (14) T
- systemSlotIsAGP (15)
- systemSlotIsAGP2X (16)
- systemSlotIsAGP4X (17)
- systemSlotIsPC98C20 (18)
- systemSlotIsPC98C24 (19)
- systemSlotIsPC98E (20)
- systemSlotIsPC98LocalBus (21)
- systemSlotIsPC98Card (22)
- systemSlotIsPCIX (23)
- systemSlotIsPCIExpress (24)
- systemSlotIsAGP8X (25)
- systemSlotIsPCIExpressX1 (166)
- systemSlotIsPCIExpressX2 (167)
- systemSlotIsPCIExpressX4 (168)
- systemSlotIsPCIExpressX8 (169)
- systemSlotIsPCIExpressX16 (170)
- systemSlotIsPCIExpressGen2 (171)
- systemSlotIsPCIExpressGen2X1 (172)

**Meaning of Data Value**

- The system slot type is not one of following:
- The system slot type is unknown.
- The system slot is Industry Standard Architecture (ISA).
- The system slot is Micro Channel Architecture (MCA).
- The system slot is Extended Industry Standard Architecture (EISA).
- The system slot is Peripheral Component Interconnect (PCI).
- The system slot is compliant with the Personal Computer Memory Card International Association (PCMCIA) standards
- The system slot is Very Low Voltage Enterprise System Architecture (VLVESAs).
- The system slot is proprietary.
- The system slot is a processor card.
- The system slot is proprietary memory.
- The system slot is an I/O riser card.
- The system slot is a NuBus.
- he system slot is a PCI66MHz.
- The system slot is an Advanced Graphics Port (AGP).
- The system slot is an AGP 2x card.
- The system slot is an AGP 4x card.
- The system slot is a PC-98/C20.
- The system slot is a PC-98/C24.
- The system slot type is PC-98/E.
- The system slot type is a PC-98 local bus.
- The system slot type is a PC-98 card.
- The system slot type is a PCIX card.
- The system slot type is a PCI Express card.
- The system slot type is an AGP 8x card.
- The system slot type is a PCI Express x1.
- The system slot type is a PCI Express x2.
- The system slot type is a PCI Express x4.
- The system slot type is a PCI Express x8.
- The system slot type is a PCI Express x16.
- The system slot type is PCI Express Gen2.
- The system slot type is PCI Express Gen 2 x1.

systemSlotIsPCIExpressGen2X2 (173) .  
systemSlotIsPCIExpressGen2X4 (174)  
systemSlotIsPCIExpressGen2X8 (175)  
systemSlotIsPCIExpressGen2X16 (176)

The system slot type is PCI Express Gen 2 x2.  
The system slot type is PCI Express Gen 2 x4.  
The system slot type is PCI Express Gen 2 x8.  
The system slot type is PCI Express Gen 2 x16.

### Table 932. System Slot Usage

**Variable Name:** DellSystemSlotUsage

**Data Type:** Integer

#### Possible Data Values

systemSlotUsagelsOther(1)  
systemSlotUsagelsUnknown(2)  
systemSlotUsagelsAvailable(3)  
systemSlotUsagelsInUse(4)

#### Meaning of Data Value

The system slot usage is not one of following:  
The system slot usage is unknown.  
The system slot is available.  
The system slot is in use.

### Table 933. System Slot Length

**Variable Name:** DellSystemSlotLength

**Data Type:** Integer

#### Possible Data Values

systemSlotLengthsOther(1)  
systemSlotLengthsUnknown(2)  
systemSlotLengthsShort(3)  
systemSlotLengthsLong(4)

#### Meaning of Data Value

The system slot length is not one of following:  
The system slot length is unknown.  
The system slot length is short.  
The system slot length is long.

### Table 934. System Slot Category

**Variable Name:** DellSystemSlotCategory

**Data Type:** Integer

#### Possible Data Values

systemSlotCategorylsOther(1)  
systemSlotCategorylsUnknown(2)  
systemSlotCategorylsBusConnector(3)  
systemSlotCategorylsPCMCIA(4)  
systemSlotCategorylsMotherboard(5)

#### Meaning of Data Value

The system slot category is not one of following:  
The system slot category is unknown.  
The system slot is a bus connector.  
The system slot category is PCMCIA.  
The system slot is a motherboard.

### Table 935. Hot-Plug Bus Width

**Variable Name:** DellSystemSlotHotPlugBusWidth

**Data Type:** Integer

#### Possible Data Values

busWidthsOther(1)  
busWidthsUnknown(2)  
busWidths8bits(3)  
busWidths16bits(4)  
busWidths32bits(5)  
busWidths64bits(6)

#### Meaning of Data Value

The system slot bus width is not one of following:  
The system slot bus width is unknown.  
The system slot bus width is 8 bits.  
The system slot bus width is 16 bits.  
The system slot bus width is 32 bits.  
The system slot bus width is 64 bits.

busWidths128bits(7)	The system slot bus width is 128 bits.
busWidths1xOrx1(8)	The system slot bus width is 1x or x1.
busWidths2xOrx2(9)	The system slot bus width is 2x or x2.
busWidths4xOrx4(10)	The system slot bus width is 4x or x4.
busWidths8xOrx8(11)	The system slot bus width is 8x or x8.
busWidths12xOrx12(12)	The system slot bus width is 12x or x12.
busWidths16xOrx16(13)	The system slot bus width is 16x or x16.
busWidths32xOrx32(14)	The system slot bus width is 32x or x32.

**NOTE:** System slot bus width of type n bits are for parallel buses such as PCI.

**NOTE:** System slot bus width of type nx or xn are for serial buses such as PCI Express.

## Memory Group

The Memory Group provides information about the physical memory in your system. Variables in this group include error correction type, location, and different types of memory use, such as cache, flash, system, video, and nonvolatile memory.

## Physical Memory Tables

The following management information base (MIB) tables define the objects in the Memory Group:

- [Physical Memory Array Table](#)
- [Physical Memory Array Mapped Table](#)
- [Physical Memory Configuration Table](#)
- [Physical Memory Logging Table](#)
- [Redundant Memory Unit Table](#)
- [Physical Memory Card Table](#)

## Physical Memory Array Table

The physical memory array is the entire physical memory of a system. The example that follows shows variable values for a system that has one 128-megabyte (MB) dual in-line memory module (DIMM):

- `physicalMemoryArrayMaximumSize` = 2,097,152 kilobytes (KB) or 2 gigabytes (GB)
- `physicalMemoryArrayTotalNumberSockets` = 4 (the example system has four DIMM slots on the motherboard)
- `physicalMemoryArrayInUseNumberSockets` = 1 (there is only one DIMM installed)

The Rank of the DIMM are :

- **0** — Unknown
- **1** — Single
- **2** — Dual
- **4** — Quad
- **8** — Octal
- **16** — Hexa

The following object sets up the Physical Memory Array Table:

**Table 936. Physical Memory Array Table**

<b>Name</b>	<code>physicalMemoryArrayTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10
<b>Description</b>	Defines the Physical Memory Array Table.
<b>Syntax</b>	<code>PhysicalMemoryArrayTableEntry</code>

**Access** Not accessible

### Table 937. Physical Memory Array Table Entry

**Name** physicalMemoryArrayTableEntry  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.10.1  
**Description** Defines the Physical Memory Array Table entry.  
**Syntax** PhysicalMemoryArrayTableEntry  
**Access** Not accessible

**Index** physicalMemoryArraychassisIndex

physicalMemoryArrayIndex

### Table 938. Physical Memory Array Chassis Index

**Name** physicalMemoryArraychassisIndex  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.10.1.1  
**Description** Defines the index (one-based) of this chassis.  
**Syntax** DellObjectRange  
**Access** Read-only

### Table 939. Physical Memory Array Index

**Name** physicalMemoryArrayIndex  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.10.1.2  
**Description** Defines the index (one-based) of the physical memory array in this chassis.  
**Syntax** DellObjectRange  
**Access** Read-only

### Table 940. Physical Memory Array State Capabilities

**Name** physicalMemoryArrayStateCapabilities  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.10.1.3  
**Description** Defines the capabilities of the physical memory array.  
**Syntax** DellStateCapabilities  
**Access** Read-only

### Table 941. Physical Memory Array State Settings

**Name** physicalMemoryArrayStateSettings  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.10.1.4  
**Description** Defines the state of the physical memory array.  
**Syntax** DellStateSettings  
**Access** Read-only

### Table 942. Physical Memory Array Status

**Name** physicalMemoryArrayStatus  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.10.1.5

<b>Description</b>	Defines the status of the physical memory array.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 943. Physical Memory Array Use

<b>Name</b>	physicalMemoryArrayUse
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.6
<b>Description</b>	Defines the use of the physical memory array.
<b>Syntax</b>	DellPhysicalMemoryArrayUse (See <a href="#">Physical Memory Array ECC Type Definitions</a> )
<b>Access</b>	Read-only

#### Table 944. Physical Memory Array Error Checking and Correcting (ECC) Type

<b>Name</b>	physicalMemoryArrayECCType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.7
<b>Description</b>	Defines the ECC type used by the physical memory array.
<b>Syntax</b>	DellPhysicalMemoryArrayECCType (See <a href="#">Physical Memory Array ECC Type Definitions</a> )
<b>Access</b>	Read-only

#### Table 945. Physical Memory Array Location

<b>Name</b>	physicalMemoryArrayLocation
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.8
<b>Description</b>	Defines the location of the physical memory array.
<b>Syntax</b>	DellPhysicalMemoryArrayLocation (See <a href="#">Physical Memory Array Location</a> )
<b>Access</b>	Read-only

#### Table 946. Physical Memory Array Maximum Size

 **NOTE:** `physicalMemoryArrayMaximumSize` is no longer in use. This attribute is deprecated and replaced by `physicalMemoryArrayExtendedMaximumSize`.

<b>Name</b>	physicalMemoryArrayMaximumSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.9
<b>Description</b>	Defines the size in KB of the physical memory array.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 947. Physical Memory Array Total Number Sockets

<b>Name</b>	physicalMemoryArrayTotalNumberSockets
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.10
<b>Description</b>	Defines the total number of memory sockets available for the physical memory array.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 948. Physical Memory Array In Use Number Sockets

<b>Name</b>	physicalMemoryArrayInUseNumberSockets
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.11

<b>Description</b>	Defines the total number of memory sockets in use by the physical memory array.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 949. Physical Memory Array ECC Error Nonrecoverable Threshold**

<b>Name</b>	physicalMemoryArrayECCErrorNonRecoverbeThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.12
<b>Description</b>	Defines the value of the physical memory array Error Checking and Correction (ECC) error nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 950. Physical Memory Array ECC Error Critical Threshold**

<b>Name</b>	physicalMemoryArrayECCErrorCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.13
<b>Description</b>	Defines the value of the physical memory array ECC error critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 951. Physical Memory Array ECC Error Noncritical Threshold**

<b>Name</b>	physicalMemoryArrayECCErrorNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.14
<b>Description</b>	Defines the value of the physical memory array ECC error noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 952. Physical Memory Array Redundant Memory Unit Index Reference**

<b>Name</b>	physicalMemoryArrayRedundantMemoryUnitIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.15
<b>Description</b>	Defines the index to the associated Redundant Memory Unit in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 953. Physical Memory Array Extended Maximum Size**

 **NOTE:** This attribute replaces the `physicalMemoryArrayMaximumSize`.

<b>Name</b>	physicalMemoryArrayExtendedMaximumSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.16
<b>Description</b>	This attribute defines the maximum size in Bytes of the physical memory array.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

## Physical Memory Array Mapped Table

The physical memory array is divided into memory array mapped addresses.

The following object sets up the Physical Memory Array Mapped Table:

#### Table 954. Physical Memory Array Mapped Table

<b>Name</b>	physicalMemoryArrayMappedTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20
<b>Description</b>	Defines the Physical Memory Array Mapped Table.
<b>Syntax</b>	PhysicalMemoryArrayMappedTableEntry
<b>Access</b>	Not accessible

#### Table 955. Physical Memory Array Mapped Table Entry

<b>Name</b>	PhysicalMemoryArrayMappedTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1
<b>Description</b>	Defines the Physical Memory Array Mapped Table entry.
<b>Syntax</b>	PhysicalMemoryArrayMappedTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<code>physicalMemoryArrayMappedchassisIndex</code>
	,
	<code>physicalMemoryArrayMappedIndex</code>

#### Table 956. Physical Memory Array Mapped Chassis Index

<b>Name</b>	physicalMemoryArrayMappedchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 957. Physical Memory Array Mapped Index

<b>Name</b>	physicalMemoryArrayMappedIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.2
<b>Description</b>	Defines the index (one-based) of the memory array mapped address in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 958. Physical Memory Array Mapped State Capabilities

<b>Name</b>	physicalMemoryArrayMappedStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.3
<b>Description</b>	Defines the capabilities of the memory array mapped address.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 959. Physical Memory Array Mapped State Settings

<b>Name</b>	physicalMemoryArrayMappedStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.4
<b>Description</b>	Defines the state of the memory array mapped address.
<b>Syntax</b>	DellStateSettings

**Access** Read-only

**Table 960. Physical Memory Array Mapped Status**

**Name** physicalMemoryArrayMappedStatus  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.20.1.5  
**Description** Defines the status of the memory array mapped address.  
**Syntax** DellStatus  
**Access** Read-only

**Table 961. Physical Memory Array Index Reference**

**Name** physicalMemoryArrayIndexReference  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.20.1.6  
**Description** Defines the index to the associated physical memory array in this chassis.  
**Syntax** DellObjectRange  
**Access** Read-only

**Table 962. Physical Memory Array Mapped Starting Address**

**Name** physicalMemoryArrayMappedStartingAddress  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.20.1.7  
**Description** Defines the physical starting address in KB of the memory array mapped address.  
**Syntax** DellUnsigned64BitRange  
**Access** Read-only

**Table 963. Physical Memory Array Mapped Ending Address**

**Name** physicalMemoryArrayMappedEndingAddress  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.20.1.8  
**Description** Defines the physical ending address in KB of the memory array mapped address.  
**Syntax** DellUnsigned64BitRange  
**Access** Read-only

**Table 964. Physical Memory Array Mapped Partition Width**

**Name** physicalMemoryArrayMappedPartitionWidth  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.20.1.9  
**Description** Defines the number of memory devices that form a single row in the memory array mapped address. A zero (0) indicates that the number is unknown.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

## Physical Memory Configuration Table

This table defines how the physical memory of a system chassis is set up, for example, which redundant memory types are supported and whether redundant memory is active.

The following object sets up the Physical Memory Configuration Table:

**Table 965. Physical Memory Configuration Table**

**Name** physicalMemoryConfigTable  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.30

<b>Description</b>	Defines the Physical Memory Configuration Table.
<b>Syntax</b>	SEQUENCE OF PhysicalMemoryConfigTableEntry
<b>Access</b>	Not accessible

#### Table 966. Physical Memory Configuration Table Entry

<b>Name</b>	physicalMemoryConfigTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1
<b>Description</b>	Defines the Physical Memory Configuration Table entry.
<b>Syntax</b>	PhysicalMemoryConfigTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

```
physicalMemoryConfigChassisIndex
```

```
physicalMemoryConfigIndex
```

#### Table 967. Physical Memory Configuration Chassis Index

<b>Name</b>	physicalMemoryConfigChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.1
<b>Description</b>	Defines the index (one-based) of the chassis associated with the physical memory configuration.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 968. Physical Memory Configuration Index

<b>Name</b>	physicalMemoryConfigIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.2
<b>Description</b>	Defines the index (one-based) of the physical memory configuration.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 969. Physical Memory Configuration State Capabilities

<b>Name</b>	physicalMemoryConfigStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.3
<b>Description</b>	Defines the state capabilities of the physical memory configuration.
<b>Syntax</b>	DellPhysicalMemoryConfigStateCapabilities
<b>Access</b>	Read-only

#### Table 970. Physical Memory Configuration State Settings

<b>Name</b>	physicalMemoryConfigStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.4
<b>Description</b>	Defines the state settings of the physical memory configuration.
<b>Syntax</b>	DellPhysicalMemoryConfigStateSettings
<b>Access</b>	Read-only

**Table 971. Physical Memory Configuration Status**

<b>Name</b>	physicalMemoryConfigStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.5
<b>Description</b>	Defines the status of the physical memory configuration.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 972. Physical Memory Configuration Redundant Capabilities**

<b>Name</b>	physicalMemoryConfigRedundantCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.6
<b>Description</b>	Defines the redundant capabilities of the physical memory.
<b>Syntax</b>	DellPhysicalMemoryConfigRedundantCapabilities
<b>Access</b>	Read-only

**Table 973. Physical Memory Configuration Redundant Settings**

<b>Name</b>	physicalMemoryConfigRedundantSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.7
<b>Description</b>	Defines the redundant settings of the physical memory.
<b>Syntax</b>	DellPhysicalMemoryConfigRedundantSettings
<b>Access</b>	Read-only

**Table 974. Physical Memory Configuration MOM Capabilities**

<b>Name</b>	physicalMemoryConfigMOMCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.8
<b>Description</b>	Defines the Memory Operating Mode capabilities of the physical memory.
<b>Syntax</b>	DellPhysicalMemoryConfigMOMCapabilities
<b>Access</b>	Read-only

**Table 975. Physical Memory Configuration MOM Settings**

<b>Name</b>	physicalMemoryConfigMOMSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.9
<b>Description</b>	Defines the Memory Operating Mode settings of the physical memory.
<b>Syntax</b>	DellPhysicalMemoryConfigMOMSettings
<b>Access</b>	Read-only

## Physical Memory Logging Table

This table defines the conditions for logging system memory events.

The following object sets up the Physical Memory Logging Table:

**Table 976. Physical Memory Logging Table**

<b>Name</b>	physicalMemoryLoggingTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.40
<b>Description</b>	Defines the Physical Memory Logging Table.
<b>Syntax</b>	SEQUENCE OF PhysicalMemoryLoggingTableEntry

**Access** Not accessible

#### Table 977. Physical Memory Logging Table Entry

**Name** physicalMemoryLoggingTableEntry  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.40.1  
**Description** Defines the Physical Memory Logging Table entry.  
**Syntax** PhysicalMemoryLoggingTableEntry  
**Access** Not accessible

**Index** physicalMemoryLoggingChassisIndex

physicalMemoryLoggingIndex

#### Table 978. Physical Memory Logging Chassis Index

**Name** physicalMemoryLoggingChassisIndex  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.40.1.1  
**Description** Defines the index (one-based) of the chassis associated with the physical memory logging.  
**Syntax** DellObjectRange  
**Access** Read-only

#### Table 979. Physical Memory Logging Index

**Name** physicalMemoryLoggingIndex  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.40.1.2  
**Description** Defines the index (one-based) of the physical memory logging.  
**Syntax** DellObjectRange  
**Access** Read-only

#### Table 980. Physical Memory Logging Capabilities

**Name** physicalMemoryLoggingCapabilities  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.40.1.3  
**Description** Defines the capabilities of the physical memory logging.  
**Syntax** DellPhysicalMemoryLoggingCapabilities  
**Access** Read-only

#### Table 981. Physical Memory Logging Settings

**Name** physicalMemoryLoggingSettings  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.40.1.4  
**Description** Defines the settings of the physical memory logging.  
**Syntax** DellPhysicalMemoryLoggingSettings  
**Access** Read-only

#### Table 982. Physical Memory Logging Status

**Name** physicalMemoryLoggingStatus  
**Object ID** 1.3.6.1.4.1.674.10892.1.1300.40.1.5

<b>Description</b>	Defines the status of the physical memory logging.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Redundant Memory Unit Table

This table reports the status of redundant memory within a particular system chassis.

The following object sets up the Redundant Memory Unit Table:

**Table 983. Redundant Memory Unit Table**

<b>Name</b>	redundantMemoryUnitTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50
<b>Description</b>	Defines the Redundant Memory Unit Table.
<b>Syntax</b>	SEQUENCE OF RedundantMemoryUnitTableEntry
<b>Access</b>	Not accessible

**Table 984. Redundant Memory Unit Table Entry**

<b>Name</b>	redundantMemoryUnitTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1
<b>Description</b>	Defines the Redundant Memory Unit Table entry.
<b>Syntax</b>	RedundantMemoryUnitTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	redundantMemoryUnitChassisIndex
	,
	redundantMemoryUnitIndex

**Table 985. Redundant Memory Unit Chassis Index**

<b>Name</b>	redundantMemoryUnitChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.1
<b>Description</b>	Defines the index (one-based) of the chassis associated with the redundant memory unit.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 986. Redundant Memory Unit Index**

<b>Name</b>	redundantMemoryUnitIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.2
<b>Description</b>	Defines the index (one-based) of the redundant memory unit.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 987. Redundant Memory Unit State Capabilities**

<b>Name</b>	redundantMemoryUnitStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.3
<b>Description</b>	Defines the state capabilities of the redundant memory unit.

<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 988. Redundant Memory Unit State Settings**

<b>Name</b>	redundantMemoryUnitStatesettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.4
<b>Description</b>	Defines the state settings of the redundant memory unit.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 989. Redundant Memory Unit Redundancy Status**

<b>Name</b>	redundantMemoryUnitRedundancyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.5
<b>Description</b>	Defines the redundancy status of the redundant memory unit.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

**Table 990. Redundant Memory Unit Name**

<b>Name</b>	redundantMemoryUnitName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.6
<b>Description</b>	Defines the name of the redundant memory unit.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 991. Redundant Memory Unit Status**

<b>Name</b>	redundantMemoryUnitStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.7
<b>Description</b>	Defines the status of the redundant memory unit.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Physical Memory Card Table

This table defines the name of the memory card, the total number of device slots present on the memory card, and the number of memory device slots in use on the memory card.

The following objects set up the Physical Memory Card Table:

**Table 992. Physical Memory Card Table**

<b>Name</b>	physicalMemoryCardTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60
<b>Description</b>	Defines the Physical Memory Card Table.
<b>Syntax</b>	SEQUENCE OF PhysicalMemoryCardTableEntry
<b>Access</b>	Not accessible

**Table 993. Physical Memory Card Table Entry**

<b>Name</b>	physicalMemoryCardTableEntry
-------------	------------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1
<b>Description</b>	Defines the Physical Memory Card Table Entry.
<b>Syntax</b>	PhysicalMemoryCardTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

```
physicalMemoryCardChassisIndex
```

```
physicalMemoryCardIndex
```

**Table 994. Physical Memory Card Chassis Index**

<b>Name</b>	physicalMemoryCardChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.1
<b>Description</b>	Defines the index (one-based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 995. Physical Memory Card Index**

<b>Name</b>	physicalMemoryCardIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.2
<b>Description</b>	Defines the index (one-based) of the Physical Memory Card.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 996. Physical Memory Card State Capabilities**

<b>Name</b>	physicalMemoryCardStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.3
<b>Description</b>	Defines the state capabilities of the Physical Memory Card.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 997. Physical Memory Card State Settings**

<b>Name</b>	physicalMemoryCardStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.4
<b>Description</b>	Defines the state settings of the Physical Memory Card.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 998. Physical Memory Card Status**

<b>Name</b>	physicalMemoryCardStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.5
<b>Description</b>	Defines the status of the Physical Memory Card.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 999. Physical Memory Card Name**

<b>Name</b>	physicalMemoryCardName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.6
<b>Description</b>	Defines the name of the Physical Memory Card.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1000. Physical Memory Card Total Number Sockets**

<b>Name</b>	physicalMemoryCardTotalNumberSockets
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.7
<b>Description</b>	Defines the total number of memory sockets available on the Physical Memory Card. 2,147,483,647 indicates an unknown number of sockets.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 1001. Physical Memory Card In Use Number Sockets**

<b>Name</b>	physicalMemoryCardInUseNumberSockets
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.8
<b>Description</b>	Defines the number of memory sockets in use on the Physical Memory Card. Zero indicates that the Physical Memory Card is not installed or has a configuration error.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 1002. Physical Memory Card Physical Memory Array Index Reference**

<b>Name</b>	physicalMemoryCardPhyMemArrayIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.9
<b>Description</b>	Defines the index (one-based) of the Physical Memory Array Table entry for the physical memory array with the same chassis index that this physical memory card is associated with.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Memory Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 1003. Physical Memory Array Location**

**Variable Name:** DellPhysicalMemoryArrayLocation

**Data Type:** Integer

**Possible Data Values**

- memoryArrayLocationIsOther (1)
- memoryArrayUseIsUnknown (2)
- memoryArrayUseIsSystemMemory (3)
- memoryArrayUseIsVideoMemory (4)
- memoryArrayUseIsFLASHMemory (5)
- memoryArrayUseIsNonVolatileRAMMemory (6)

**Meaning of Data Value**

- The memory array location is not one of the following:
- The memory array use is unknown.
- The memory array is system memory.
- The memory array is video memory.
- The memory array is FLASH memory.
- The memory array is nonvolatile RAM.

memoryArrayUseIsCacheMemory (7)	The memory array is cache memory.
memoryArrayLocationIsPCMCIA (8)	The memory array location is a Personal Computer Memory Card International Association (PCMCIA) option card.
memoryArrayLocationIsProprietary (9)	The memory array location is a proprietary option card.
memoryArrayLocationIsNUBUS (10)	The memory array location is a NuBus bus.
memoryArrayLocationIsPC98C20 (11)	The memory array location is a PC-98/C20 option card.
memoryArrayLocationIsPC98C24 (12)	The memory array location is a PC-98/C24 option card.
memoryArrayLocationIsPC98E (13)	The memory array location is a PC-98/E option card.
memoryArrayLocationIsPC98LocalBus (14)	The memory array location is a PC-98/Local bus option card.
memoryArrayLocationIsPC98Card (15)	The memory array location is a PC-98/Card slot option card.

**Table 1004. Physical Memory Array ECC Type Definitions**

**Variable Name:** DellPhysicalMemoryArrayECCType

**Data Type:** Integer

**Possible Data Values**

- memoryArrayECCTypeIsOther (1)
- memoryArrayECCTypeIsUnknown (2)
- memoryArrayECCTypeIsNone (3)
- memoryArrayECCTypeIsParity (4)
- memoryArrayECCTypeIsSingleBitECC (5)
- memoryArrayECCTypeIsMultiBitECC (6)
- memoryArrayECCTypeIsCRC (7)

**Meaning of Data Value**

- There is not one of the following:
- The memory array ECC type is unknown.
- The memory array ECC type is none.
- The memory array ECC type is parity.
- The memory array ECC type is Correctable Memory Event ECC.
- The memory array ECC type is Uncorrectable Memory Event ECC.
- The memory array ECC type is CRC.

**Table 1005. Physical Memory Configuration State Capabilities**

**Variable Name:** DellPhysicalMemoryConfigStateCapabilities

**Data Type:** Integer

**Possible Data Values**

- If set to 0 (zero)
- unknownCapabilities (1)
- enableCapable (2)
- notReadyCapable (4)

**Meaning of Data Value**

- There are no state capabilities.
- State capabilities are unknown.
- Object enable/disable is supported.
- Object not ready is supported.

**Table 1006. Physical Memory Configuration State Settings**

**Variable Name:** DellPhysicalMemoryConfigStateSettings

**Data Type:** Integer

**Possible Data Values**

- If set to 0 (zero)
- unknown (1)
- enabled (2)
- notReady (4)
- redundantMemoryIsActive (8)
- enabledAndRedundantMemoryIsActive (10)

**Meaning of Data Value**

- There are no state settings.
- State settings are unknown.
- Object is disabled (offline) 0, or enabled (online) 1.
- Object *not ready*.
- Redundant memory is active (in use).
- Redundant memory is enabled and in use.

### Table 1007. Physical Memory Configuration Redundant Capabilities

**Variable Name:** DellPhysicalMemoryConfigRedundantCapabilities

**Data Type:** Integer

**Possible Data Values**

If set to 0 (zero)

unknownCapabilities (1)

The redundant capabilities are:

spareCapable (2)

mirrorCapable (4)

spareAndMirrorCapable (6)

raidCapable (8)

dddcCapable (16)

**Meaning of Data Value**

There are no redundant memory capabilities.

Redundant capabilities are unknown.

Spare redundant memory feature is supported.

Mirror redundant memory feature is supported.

Spare and mirror redundant memory features are supported.

Redundant Array of Independent disks (RAID) redundant memory feature is supported.

DDDC redundancy is supported.

### Table 1008. Physical Memory Configuration Redundant Settings

**Variable Name:** DellPhysicalMemoryConfigRedundantSettings

**Data Type:** Integer

**Possible Data Values**

If set to 0 (zero)

unknown (1)

The following redundant settings are mutually exclusive:

spareEnabled (2)

mirrorEnabled (4)

raidEnabled (8)

dddcCapable (16)

**Meaning of Data Value**

There are no redundant memory settings enabled.

Redundant settings are unknown.

Spare redundant memory feature is enabled.

Mirror redundant memory feature is enabled.

RAID redundant memory feature is enabled.

DDDC redundancy is enabled.

### Table 1009. Physical Memory Logging Capabilities

**Variable Name:** DellPhysicalMemoryLoggingCapabilities

**Data Type:** Integer

**Possible Data Values**

If set to 0 (zero)

unknown Capabilities (1)

The logging capabilities are:

enableCapable (2)

**Meaning of Data Value**

There are no logging capabilities.

Logging capabilities are unknown.

Logging enable/disable using Simple Network Management Protocol (SNMP) is supported.

### Table 1010. Physical Memory Logging Settings

**Variable Name:** DellPhysicalMemoryLoggingSettings

**Data Type:** Integer

**Possible Data Values**

If set to 0 (zero)

Capabilities (1)

The logging settings are:

enabled (2)

**Meaning of Data Value**

There are no logging settings enabled. unknown

Logging capabilities are unknown.

Logging is disabled (0), or enabled (1).

# BIOS Setup Control Group

Basic Input/Output System (BIOS) Setup Control Group variables provide information about the functions that the BIOS performs in your system. This management information base (MIB) group includes variables for the boot sequence, speakers, diskettes, ports, network interface controllers (NICs), and the Wakeup on local area network (LAN) feature.

## BIOS Setup Control Group Tables

The MIB tables in this group define the BIOS control of devices and controller cards that are typically present in a system.

- [BIOS Setup Control Table](#)
- [SCSI Control Table](#)
- [Parallel Port Control Table](#)
- [Serial Port Control Table](#)
- [USB Control Table](#)
- [IDE Control Table](#)
- [Diskette Control Table](#)
- [Network Interface Control Table](#)

The following MIB table in the BIOS Setup Control Group is supported on Dell PowerEdge xx2x (12G) systems:

- [BIOS Setting Table](#)

## BIOS Setup Control Group Tables

### Table 1011. BIOS Setup Control Table

<b>Name</b>	biosSetUpControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10
<b>Description</b>	Defines the set of single devices in a chassis controlled by the BIOS.
<b>Syntax</b>	BiosSetUpControlTableEntry
<b>Access</b>	Not accessible

### Table 1012. BIOS Setup Control Table Entry

<b>Name</b>	biosSetUpControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1
<b>Description</b>	Defines the BIOS Control Device Table entry.
<b>Syntax</b>	BiosSetUpControlTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	biosSetUpControlchassisIndex

### Table 1013. BIOS Setup Control Chassis Index

<b>Name</b>	biosSetUpControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 1014. BIOS Setup Control (BSUC) Pointing Device Control Capabilities

<b>Name</b>	bSUCpointingDeviceControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.2
<b>Description</b>	Defines the capabilities of the pointing device.

<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 1015. BIOS Setup Control Pointing Device Control Settings**

<b>Name</b>	bSUCpointingDeviceControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.3
<b>Description</b>	Defines the state of the pointing device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 1016. BIOS Setup Control Pointing Device Control Status**

<b>Name</b>	bSUCpointingDeviceControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.4
<b>Description</b>	Defines the status of the pointing device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1017. BIOS Setup Control Pointing Device Control Name**

<b>Name</b>	bSUCpointingDeviceControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.5
<b>Description</b>	Defines the setup BIOS name of the pointing device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1018. BIOS Setup Control Numeric Lock Control Capabilities**

<b>Name</b>	bSUCnumLockControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.6
<b>Description</b>	Defines the capabilities of the numeric lock.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 1019. BIOS Setup Control Numeric Lock Control Settings**

<b>Name</b>	bSUCnumLockControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.7
<b>Description</b>	Defines the state of the numeric lock.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 1020. BIOS Setup Control Numeric Lock Control Status**

<b>Name</b>	bSUCnumLockControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.8
<b>Description</b>	Defines the status of the numeric lock.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1021. BIOS Setup Control Numeric Lock Control Name**

<b>Name</b>	bSUCnumLockControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.9
<b>Description</b>	Defines the setup BIOS name of the numeric lock.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1022. BIOS Setup Control Processor Serial Number Control Capabilities**

<b>Name</b>	bSUCprocessorSerialNumberControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.10
<b>Description</b>	Defines if the processor serial number can be returned.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 1023. BIOS Setup Control Processor Serial Number Control Settings**

<b>Name</b>	bSUCprocessorSerialNumberControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.11
<b>Description</b>	Defines the state of the processor serial number.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 1024. BIOS Setup Control Processor Serial Number Control Status**

<b>Name</b>	bSUCprocessorSerialNumberControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.12
<b>Description</b>	Defines the status of the processor serial number.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1025. BIOS Setup Control Processor Serial Number Control Name**

<b>Name</b>	bSUCprocessorSerialNumberControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.13
<b>Description</b>	Defines the setup BIOS name of the processor serial number.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1026. BIOS Setup Control Speaker Control Capabilities Unique**

<b>Name</b>	bSUCspeakerControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.14
<b>Description</b>	Defines the capabilities of the speaker control.
<b>Syntax</b>	DellSpeakerControlCapabilitiesUnique (See <a href="#">Speaker Control Capabilities Unique</a> )
<b>Access</b>	Read-only

**Table 1027. BIOS Setup Control Speaker Control Settings Unique**

<b>Name</b>	bSUCspeakerControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.15

<b>Description</b>	Defines the settings available for speaker control.
<b>Syntax</b>	DellSpeakerControlSettingsUnique (See <a href="#">Speaker Control Settings Unique</a> )
<b>Access</b>	Read-only

**Table 1028. BIOS Setup Control Speaker Control Status**

<b>Name</b>	bSUCspeakerControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.16
<b>Description</b>	Defines the status of speaker control.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1029. BIOS Setup Control Speaker Control Name**

<b>Name</b>	bSUCspeakerControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.17
<b>Description</b>	Defines the setup BIOS name of the speaker control.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1030. BIOS Setup Control NIF Wakeup on LAN Control Capabilities Unique**

<b>Name</b>	bSUCnIFwakeonLanControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.18
<b>Description</b>	Defines the defines the capabilities of the network interface function (NIF) Wakeup on LAN.
<b>Syntax</b>	DellNIFwakeonLanControlCapabilitiesUnique (See <a href="#">Network Interface (NIF) Wakeup on LAN Capabilities Unique</a> )
<b>Access</b>	Read-only

**Table 1031. BIOS Setup Control NIF Wakeup on LAN Control Settings Unique**

<b>Name</b>	bSUCnIFwakeonLanControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.19
<b>Description</b>	Defines the state of the NIF Wakeup on LAN.
<b>Syntax</b>	DellNIFwakeonLanControlSettingsUnique (See <a href="#">NIF Wakeup on LAN Control Settings Unique</a> )
<b>Access</b>	Read-only

**Table 1032. BIOS Setup Control NIF Wakeup on LAN Control Status**

<b>Name</b>	bSUCnIFwakeonLanControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.20
<b>Description</b>	Defines the status of the NIF Wakeup on LAN.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1033. BIOS Setup Control NIF Wakeup on LAN Control Name**

<b>Name</b>	bSUCnIFwakeonLanControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.21
<b>Description</b>	Defines the setup BIOS name of the NIF Wakeup on LAN.
<b>Syntax</b>	DellString

**Access** Read-only

**Table 1034. BIOS Setup Control Boot Sequence Control Capabilities Unique**

**Name** bSUCbootSequenceControlCapabilitiesUnique  
**Object ID** 1.3.6.1.4.1.674.10892.1.1400.10.1.22  
**Description** Defines the capabilities of the boot sequence.  
**Syntax** DellBootSequenceControlCapabilitiesUnique (See [Boot Sequence Control Capabilities Unique](#))  
**Access** Read-only

**Table 1035. BIOS Setup Control Boot Sequence Control Settings Unique**

**Name** DellBootSequenceControlSettingsUnique  
**Object ID** 1.3.6.1.4.1.674.10892.1.1400.10.1.23  
**Description** Defines the state of the boot sequence.  
**Syntax** DellBootSequenceControlSettingsUnique (See [Boot Sequence Control Settings Unique](#))  
**Access** Read-only

**Table 1036. BIOS Setup Control Boot Sequence Control Status**

**Name** bSUCbootSequenceControlStatus  
**Object ID** 1.3.6.1.4.1.674.10892.1.1400.10.1.24  
**Description** Defines the status of the boot sequence.  
**Syntax** DellStatus  
**Access** Read-only

**Table 1037. BIOS Setup Control Boot Sequence Control Name**

**Name** bSUCbootSequenceControlName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1400.10.1.25  
**Description** Defines the control name of the boot sequence.  
**Syntax** DellString  
**Access** Read-only

**Table 1038. BIOS Setup Control Administrator Password Control Capabilities Unique**

**Name** bSUCadministratorPasswordControlCapabilities Unique  
**Object ID** 1.3.6.1.4.1.674.10892.1.1400.10.1.26  
**Description** Defines the capabilities of the administrator password control.  
**Syntax** DellBIOSPasswordControlCapabilitiesUnique  
**Access** Read-only

**Table 1039. BIOS Setup Control Administrator Password Control Settings Unique**

**Name** bSUCadministratorPasswordControlSettingsUnique  
**Object ID** 1.3.6.1.4.1.674.10892.1.1400.10.1.27  
**Description** Defines the settings for administrator password control.  
**Syntax** DellBIOSPasswordControlSettingsUnique (See [BIOS Password Control Settings Unique](#))  
**Access** Read-only

**Table 1040. BIOS Setup Control Administrator Password Control Status**

<b>Name</b>	bSUCadministratorPasswordControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.28
<b>Description</b>	Defines the status for administrator password control.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1041. BIOS Setup Control Administrator Password Verify Name**

<b>Name</b>	bSUCadministratorPasswordVerifyName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.29
<b>Description</b>	Defines the setup BIOS name for the current administrator password.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1042. BIOS Setup Control Administrator Password New Password Name**

<b>Name</b>	bSUCadministratorPasswordNewPasswordName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.30
<b>Description</b>	Defines the setup BIOS name of the new administrator password. To set a new administrator password, you must have successfully set the current administrator password immediately preceding this password change.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1043. BIOS Setup Control User Password Control Capabilities Unique**

<b>Name</b>	bSUCuserPasswordControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.31
<b>Description</b>	Defines the capabilities of user password control.
<b>Syntax</b>	DellBIOSPasswordControlCapabilitiesUnique
<b>Access</b>	Read-only

**Table 1044. BIOS Setup Control User Password Control Settings Unique**

<b>Name</b>	bSUCuserPasswordControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.32
<b>Description</b>	Defines the control settings for user password control.
<b>Syntax</b>	DellBIOSPasswordControlSettingsUnique (See <a href="#">BIOS Password Control Settings</a> )
<b>Access</b>	Read-Only

**Table 1045. BIOS Setup Control User Password Control Status**

<b>Name</b>	bSUCuserPasswordControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.33
<b>Description</b>	Defines the status of the user password control.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1046. BIOS Setup Control User Password Verify Name**

<b>Name</b>	bSUCuserPasswordVerifyName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.34
<b>Description</b>	Defines the setup BIOS name of the current user password.
<b>Syntax</b>	DellString
<b>Access</b>	Read-Only

**Table 1047. BIOS Setup Control User Password New Password Name**

<b>Name</b>	bSUCuserPasswordNewPasswordName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.35
<b>Description</b>	Defines the setup BIOS name of the new user password. To set a new user password, a you must have successfully set the current user password immediately preceding this password change.
<b>Syntax</b>	DellString
<b>Access</b>	Read-Only

**Table 1048. BIOS Setup Control TPM Security Control Capabilities**

<b>Name</b>	bSUCtpmSecurityControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.36
<b>Description</b>	Defines the BIOS setup control capabilities of Trusted Platform Module (TPM) security.
<b>Syntax</b>	DellTPMSecurityControlCapabilities
<b>Access</b>	Read-only

**Table 1049. BIOS Setup Control TPM Security Control Setting**

<b>Name</b>	bSUCtpmSecurityControlSetting
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.37
<b>Description</b>	Defines the BIOS setup control setting of Trusted Platform Module (TPM) security.
<b>Syntax</b>	DellTPMSecurityControlSetting
<b>Access</b>	Read-only

**Table 1050. BIOS Setup Control TPM Security Control Status**

<b>Name</b>	bSUCtpmSecurityControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.38
<b>Description</b>	Defines the BIOS setup control status of Trusted Platform Module (TPM) security.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1051. BIOS Setup Control TPM Security Control Name**

<b>Name</b>	bSUCtpmSecurityControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.39
<b>Description</b>	Defines the BIOS setup control name of Trusted Platform Module (TPM) security.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

# SCSI Control Table

## Table 1052. SCSI Control Table

<b>Name</b>	sSCSIControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20
<b>Description</b>	Defines the Small Computer System Interface (SCSI) Control Table.
<b>Syntax</b>	SCSIControlTableEntry
<b>Access</b>	Not accessible

## Table 1053. SCSI Control Table Entry

<b>Name</b>	sSCSIControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1
<b>Description x</b>	Defines the SCSI Control Table entry.
<b>Syntax</b>	SCSIControlTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	sSCSIControlchassisIndex
	,
	sSCSIControlIndex

## Table 1054. SCSI Control Chassis Index

<b>Name</b>	sSCSIControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Table 1055. SCSI Control Index

<b>Name</b>	sSCSIControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.2
<b>Description</b>	Defines the index (one-based) of the SCSI controller in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Table 1056. SCSI Control Capabilities

<b>Name</b>	sSCSIControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.3
<b>Description</b>	Defines the capabilities of the SCSI controller.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Table 1057. SCSI Control Settings

<b>Name</b>	sSCSIControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.4

<b>Description</b>	Defines the state of the SCSI controller.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1058. SCSI Control Status

<b>Name</b>	sSCSIControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.5
<b>Description</b>	Defines the status of the SCSI controller.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1059. SCSI Control Name

<b>Name</b>	sSCSIControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.6
<b>Description</b>	Defines the setup BIOS name of the SCSI controller.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Parallel Port Control Table

#### Table 1060. Parallel Port Control Table

<b>Name</b>	parallelPortControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30
<b>Description</b>	Defines the Parallel Port Control Table.
<b>Syntax</b>	ParallelPortControlTableEntry
<b>Access</b>	Not accessible

#### Table 1061. Parallel Port Control Table Entry

<b>Name</b>	parallelPortControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1
<b>Description</b>	Defines the Parallel Port Control Table entry.
<b>Syntax</b>	ParallelPortControlTableEntry
<b>Access</b>	Not accessible

**Index**

```
parallelPortControlchassisIndex
```

```
,
```

```
parallelPortControlIndex
```

#### Table 1062. Parallel Port Control Chassis Index

<b>Name</b>	parallelPortControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1063. Parallel Port Control Index**

<b>Name</b>	parallelPortControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.2
<b>Description</b>	Defines the index (one-based) of the parallel port in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1064. Parallel Port Control Capabilities Unique**

<b>Name</b>	parallelPortControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.3
<b>Description</b>	Defines the capabilities of the parallel port.
<b>Syntax</b>	DellParallelPortControlCapabilitiesUnique (See <a href="#">Parallel Port Control Capabilities</a> )
<b>Access</b>	Read-only

**Table 1065. Parallel Port Control Settings Unique**

<b>Name</b>	parallelPortControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.4
<b>Description</b>	Defines the state of the parallel port.
<b>Syntax</b>	DellParallelPortControlSettingsUnique (See <a href="#">Parallel Port Control Settings</a> )
<b>Access</b>	Read-only

**Table 1066. Parallel Port Control Status**

<b>Name</b>	parallelPortControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.5
<b>Description</b>	Defines the status of the parallel port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1067. Parallel Port Control Name**

<b>Name</b>	parallelPortControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.6
<b>Description</b>	Defines the setup BIOS name of the parallel port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1068. Parallel Port Control Mode Capabilities Unique**

<b>Name</b>	parallelPortControlModeCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.7
<b>Description</b>	Defines the mode capabilities of the parallel port.
<b>Syntax</b>	DellParallelPortControlModeCapabilitiesUnique
<b>Access</b>	Read-only

**Table 1069. Parallel Port Control Mode Settings Unique**

<b>Name</b>	parallelPortControlModeSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.8

<b>Description</b>	Defines the mode settings of the parallel port.
<b>Syntax</b>	DellParallelPortControlModeSettingsUnique (See <a href="#">Parallel Port Control Mode Settings</a> )
<b>Access</b>	Read-only

## Serial Port Control Table

**Table 1070. Serial Port Control Table**

<b>Name</b>	serialPortControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40
<b>Description</b>	Defines the Serial Port Control Table.
<b>Syntax</b>	SerialPortControlTableEntry
<b>Access</b>	Not accessible

**Table 1071. Serial Port Control Table Entry**

<b>Name</b>	serialPortControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1
<b>Description</b>	Defines the Serial Port Control Table entry.
<b>Syntax</b>	SerialPortControlTableEntry
<b>Access</b>	Not accessible

**Index**

```
serialPortControlchassisIndex
```

```
serialPortControlIndex
```

**Table 1072. Serial Port Control Chassis Index**

<b>Name</b>	serialPortControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.1
<b>Description</b>	Defines index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	read-only

**Table 1073. Serial Port Control Index**

<b>Name</b>	serialPortControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.2
<b>Description</b>	Defines the index (one-based) of the serial port in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	read-only

**Table 1074. Serial Port Control Capabilities Unique**

<b>Name</b>	serialPortControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.3
<b>Description</b>	Defines the capabilities of the serial port.
<b>Syntax</b>	DellSerialPortControlCapabilitiesUnique (See <a href="#">Serial Port Control Capabilities</a> )
<b>Access</b>	Read-only

### Table 1075. Serial Port Control Settings Unique

<b>Name</b>	serialPortControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.4
<b>Description</b>	Defines the settings of the serial port.
<b>Syntax</b>	DellSerialPortControlSettingsUnique (See <a href="#">Serial Port Control Settings</a> )
<b>Access</b>	Read-only

### Table 1076. Serial Port Control Status

<b>Name</b>	serialPortControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.5
<b>Description</b>	Defines the status of the serial port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Table 1077. Serial Port Control Name

<b>Name</b>	serialPortControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.6
<b>Description</b>	Defines the setup BIOS name of the serial port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## USB Control Table

These objects enable you to track the attributes of your Universal Serial Bus (USB).

### Table 1078. USB Control Table

<b>Name</b>	usbControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50
<b>Description</b>	Defines the USB Table.
<b>Syntax</b>	UsbControlTableEntry
<b>Access</b>	Not accessible

### Table 1079. USB Control Table Entry

<b>Name</b>	usbControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1
<b>Description</b>	Defines the USB Table entry.
<b>Syntax</b>	UsbControlTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<code>usbControlchassisIndex</code>
	,
	<code>usbControlIndex</code>

### Table 1080. USB Control Chassis Index

<b>Name</b>	usbControlchassisIndex
-------------	------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.1
<b>Description</b>	Defines index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1081. USB Control Index

<b>Name</b>	usbControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.2
<b>Description</b>	Defines the index (one-based) of the USB in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1082. USB Control Capabilities

<b>Name</b>	usbControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.3
<b>Description</b>	Defines the capabilities of the USB.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 1083. USB Control Settings

<b>Name</b>	usbControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.4
<b>Description</b>	Defines the control settings for the USB.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1084. USB Control Status

<b>Name</b>	usbControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.5
<b>Description</b>	Defines the status of the USB.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1085. USB Control Name

<b>Name</b>	usbControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.6
<b>Description</b>	Defines the setup BIOS name of the USB.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## IDE Control Table

These objects enable you to track the attributes of Integrated Device Electronics (IDE) controller cards in your system.

#### Table 1086. IDE Control Table

<b>Name</b>	ideControlTable
-------------	-----------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60
<b>Description</b>	Defines the IDE Control Table.
<b>Syntax</b>	IdeControlTableEntry
<b>Access</b>	Not accessible

#### Table 1087. IDE Control Table Entry

<b>Name</b>	ideControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1
<b>Description</b>	Defines the IDE Control Table entry.
<b>Syntax</b>	IdeControlTableEntry
<b>Access</b>	Not accessible

**Index**

```
ideControlchassisIndex
```

```
ideControlIndex
```

#### Table 1088. IDE Control Chassis Index

<b>Name</b>	ideControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1089. IDE Control Index

<b>Name</b>	ideControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.2
<b>Description</b>	Defines the index (one-based) of the IDE controller in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1090. IDE Control Capabilities Unique

<b>Name</b>	ideControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.3
<b>Description</b>	Defines the capabilities of the IDE controller.
<b>Syntax</b>	DellIdeControlCapabilitiesUnique (See <a href="#">IDE Control Capabilities</a> )
<b>Access</b>	Read-only

#### Table 1091. IDE Control Settings Unique

<b>Name</b>	ideControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.4
<b>Description</b>	Defines the settings for the IDE controller.
<b>Syntax</b>	DellIdeControlCapabilitiesUnique (See <a href="#">IDE Control Capabilities</a> )
<b>Access</b>	Read-only

### Table 1092. IDE Control Status

<b>Name</b>	ideControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.5
<b>Description</b>	Defines the status for the IDE controller.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Table 1093. IDE Control Name

<b>Name</b>	ideControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.6
<b>Description</b>	Defines the setup BIOS name for the IDE controller.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Diskette Control Table

### Table 1094. Diskette Control Table

<b>Name</b>	disketteControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70
<b>Description</b>	Defines the Diskette Control Table.
<b>Syntax</b>	DisketteControlTableEntry
<b>Access</b>	Not accessible

### Table 1095. Diskette Control Table Entry

<b>Name</b>	disketteControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1
<b>Description</b>	Defines the Diskette Control Table entry.
<b>Syntax</b>	DellStatus
<b>Access</b>	Not accessible
<b>Index</b>	

```
disketteControlchassisIndex
```

```
disketteControlIndex
```

### Table 1096. Diskette Control Chassis Index

<b>Name</b>	disketteControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 1097. Diskette Control Index

<b>Name</b>	disketteControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.2

<b>Description</b>	Defines the index of the diskette controllers in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1098. Diskette Control Capabilities Unique

<b>Name</b>	disketteControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.3
<b>Description</b>	Defines the capabilities of the diskette controller.
<b>Syntax</b>	DellDisketteControlCapabilitiesUnique
<b>Access</b>	Read-only

#### Table 1099. Diskette Control Settings Unique

<b>Name</b>	disketteControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.4
<b>Description</b>	Defines the control settings for the diskette controller.
<b>Syntax</b>	DellDisketteControlSettingsUnique (See <a href="#">Diskette Control Settings</a> )
<b>Access</b>	Read-only

#### Table 1100. Diskette Control Status

<b>Name</b>	disketteControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.5
<b>Description</b>	Defines the status of the diskette controller.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1101. Diskette Control Name

<b>Name</b>	disketteControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.6
<b>Description</b>	Defines the setup BIOS name of the diskette controller.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Network Interface Control Table

These MIB objects enable you to track the attributes of the NIC card for your system.

#### Table 1102. Network Interface Control Table

<b>Name</b>	networkInterfaceControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80
<b>Description</b>	Defines the Network Interface Control Table.
<b>Syntax</b>	NetworkInterfaceControlTableEntry
<b>Access</b>	Not accessible

#### Table 1103. Network Interface Control Table Entry

<b>Name</b>	networkInterfaceControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1

<b>Description</b>	Defines the Network Interface Control Table entry.
<b>Syntax</b>	NetworkInterfaceControlTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

```
networkInterfaceControlchassisIndex
```

```
networkInterfaceControlIndex
```

#### Table 1104. Network Interface Control Chassis Index

<b>Name</b>	networkInterfaceControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1105. Network Interface Control Index

<b>Name</b>	networkInterfaceControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.2
<b>Description</b>	Defines the index (one-based) of the network interface controller in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1106. Network Interface Control Capabilities Unique

<b>Name</b>	networkInterfaceControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.3
<b>Description</b>	Defines the capabilities of the NIC.
<b>Syntax</b>	DellNetworkInterfaceControlCapabilitiesUnique (See <a href="#">Network Interface Control Capabilities</a> )
<b>Access</b>	Read-only

#### Table 1107. Network Interface Control Settings Unique

<b>Name</b>	networkInterfaceControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.4
<b>Description</b>	Defines the control settings for the NIC.
<b>Syntax</b>	DellNetworkInterfaceControlSettingsUnique (See <a href="#">Network Interface Control Settings</a> )
<b>Access</b>	Read-only

#### Table 1108. Network Interface Control Status

<b>Name</b>	networkInterfaceControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.5
<b>Description</b>	Defines the status of the NIC.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1109. Network Interface Control Name**

<b>Name</b>	networkInterfaceControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.6
<b>Description</b>	Defines the setup BIOS name of the NIC.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## BIOS Setting Table

These MIB objects enable you to track the BIOS settings for your system.

 **NOTE: These MIB objects are supported on Dell PowerEdge xx2x systems.**

**Table 1110. BIOS Setting Table**

<b>Name</b>	biosSettingTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90
<b>Description</b>	Defines the BIOS Setting Table.
<b>Syntax</b>	SEQUENCE OF BiosSettingTableEntry
<b>Access</b>	Not accessible

**Table 1111. BIOS Setting Table Entry**

<b>Name</b>	biosSettingTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1
<b>Description</b>	Defines the BIOS Setting Table Entry.
<b>Syntax</b>	BiosSettingTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

biosSettingChassisIndex

biosSettingIndex

**Table 1112. BIOS Setting Chassis Index**

<b>Name</b>	biosSettingChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.1
<b>Description</b>	Defines the index (one based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1113. BIOS Setting Index**

<b>Name</b>	biosSettingIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.2
<b>Description</b>	Defines the index (one based) of the BIOS setting.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1114. BIOS Setting Name**

<b>Name</b>	biosSettingName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.3
<b>Description</b>	Defines the name of the BIOS setting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1115. BIOS Setting Display Name**

<b>Name</b>	biosSettingDisplayName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.4
<b>Description</b>	Defines the display name of the BIOS setting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1116. BIOS Setting Value Type**

<b>Name</b>	biosSettingValueType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.5
<b>Description</b>	Defines the type of the BIOS setting value.
<b>Syntax</b>	DellBIOSSettingValueType
<b>Access</b>	Read-only

**Table 1117. BIOS Setting Current Value**

<b>Name</b>	biosSettingCurrentValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.6
<b>Description</b>	Defines the current value of the BIOS setting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1118. BIOS Setting Pending Value**

<b>Name</b>	biosSettingPendingValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.7
<b>Description</b>	Defines the pending value of the BIOS setting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1119. BIOS Setting Default Value**

<b>Name</b>	biosSettingDefaultValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.8
<b>Description</b>	Defines the default value of the BIOS setting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1120. BIOS Setting Possible Values**

<b>Name</b>	biosSettingPossibleValues
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.9

<b>Description</b>	Defines the possible values of the BIOS setting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1121. BIOS Setting Display Order**

<b>Name</b>	biosSettingDisplayOrder
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.10
<b>Description</b>	Defines the recommended display order of the BIOS setting within its BIOS setting group.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 1122. BIOS Setting Group Display Name**

<b>Name</b>	biosSettingGroupDisplayName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.11
<b>Description</b>	Defines the display name of the BIOS setting group for the BIOS setting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1123. BIOS Setting FQDD**

<b>Name</b>	biosSettingFQDD
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.90.1.12
<b>Description</b>	Fully Qualified Device Descriptor (FQDD) for the BIOS setting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## BIOS Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 1124. Speaker Control Capabilities Unique**

**Variable Name:** DellSpeakerControlCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

unknown (1)  
 enableCapable (2)  
 lowCapable (4)  
 mediumCapable (8)  
 highCapable (16)  
 allVolumeCapable (30)

**Meaning of Data Value**

Speaker control capabilities are unknown.  
 Setup BIOS can enable speaker control.  
 Setup BIOS can set the speaker volume to low.  
 Setup BIOS can set the speaker volume to medium.  
 Setup BIOS can set the speaker volume to high.  
 Setup BIOS can set the speaker volume to any of the three settings.

**Table 1125. Speaker Control Settings Unique**

**Variable Name:** DellSpeakerControlSettingsUnique

**Data Type:** Integer

**Possible Data Values**

**Meaning of Data Value**

unknown (1)	Speaker control state is unknown.
enabled (2)	Speaker control is enabled.
low (4)	Speaker control volume is low.
medium (8)	Speaker control volume is medium.
high (16)	Speaker control volume is high.

**Table 1126. Network Interface (NIF) Wakeup on LAN Capabilities Unique**

**Variable Name:** DellNIFwakeonLanControlCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

- unknown (1)
- enableCapable (2)
- addInCardCapable (4)
- onBoardCapable (8)
- bothCapable (14)

**Meaning of Data Value**

- Setup BIOS Wakeup on LAN capabilities are unknown.
- Setup BIOS is capable of enabling the NIF Wakeup on LAN.
- Setup BIOS is capable of enabling Wakeup on LAN by option card.
- Setup BIOS is capable of enabling Wakeup on LAN by integrated NIF.
- Setup BIOS is capable of enabling Wakeup on LAN by either option card or integrated NIF.

**Table 1127. NIF Wakeup on LAN Control Settings Unique**

**Variable Name:** DellNIFwakeonLanControlSettingsUnique

**Data Type:** Integer

**Possible Data Values**

- unknown (1)
- enabled (2)
- addInCard (4)
- onBoard (8)
- addInCardOrOnBoard (12)

**Meaning of Data Value**

- NIF Wakeup on LAN state is unknown.
- NIF Wakeup on LAN is enabled.
- NIF Wakeup on LAN is by option card.
- NIF Wakeup on LAN is by integrated NIF.
- NIF Wakeup on LAN is by option card or integrated NIF.

**Table 1128. Boot Sequence Control Capabilities Unique**

**Variable Name:** DellBootSequenceControlCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

- bootSequenceUnknown (1)
- bootFromDisketteFirstCapable (2)
- bootFromhardDriveFirstCapable (4)
- bootFromDisketteORHardDrive FirstCapable (6)
- bootFromDeviceListCapable (8)
- bootFromCDROMFirstCapable (16)
- allFirstCapable (30)

**Meaning of Data Value**

- Boot sequence capabilities are unknown.
- Setup BIOS can boot from a diskette first.
- Setup BIOS can boot from an IDE hard drive first.
- Setup BIOS can boot from a diskette or an IDE hard drive first.
- Setup BIOS can boot from a device list.
- Setup BIOS can boot from a CD first.
- Setup BIOS can boot by any of the preceding methods first.

**Table 1129. Boot Sequence Control Settings Unique**

**Variable Name:** DellBootSequenceControlSettingsUnique

**Data Type:** Integer

**Possible Data Values**

**Meaning of Data Value**

bootSequenceUnknown (1)	Boot sequence state is unknown.
bootFromDisketteFirst (2)	Setup BIOS is set to boot by diskette first.
bootFromHardDriveFirst (4)	Setup BIOS is set to boot by IDE hard drive first.
bootFromDeviceList (8)	Setup BIOS is set to boot by a device list.
bootFromCDROMFirst (16)	Setup BIOS is set to boot by CD first.

**Table 1130. BIOS Password Control Capabilities**

**Variable Name:** DellBIOSPasswordControlCapabilities

**Data Type:** Integer

**Possible Data Values**

- passwordControlCapabilitiesUnknown (1)
- passwordControlEnableCapable (2)
- passwordControlJumperDisableCapable (4)
- passwordControlEnableANDJumperDisableCapable (6)

**Meaning of Data Value**

- BIOS password capabilities are unknown.
- Setup BIOS is capable of enabling password changes.
- Setup BIOS is capable of determining if password control can be jumper disabled.
- Setup BIOS is capable of enabling password changes and of determining if password control can be jumper disabled.

**Table 1131. BIOS Password Control Settings Unique**

**Variable Name:** DellBIOSPasswordControlSettingsUnique

**Data Type:** Integer

**Possible Data Values**

- passwordControlSettingsUnknown (1)
- passwordControlEnabled (2)
- passwordControlJumperDisabled (4)

**Meaning of Data Value**

- Setup BIOS password state is unknown.
- Setup BIOS has password changes enabled.
- Setup BIOS has determined that password control has been disabled by a jumper.

**Table 1132. BIOS Password Control Settings**

**Variable Name:** DellBIOSPasswordControlSettingsUnique

**Data Type:** Integer

**Possible Data Values**

- passwordControlSettingsUnknown (1)
- passwordControlEnabled (2)
- passwordControlJumperDisabled (4)

**Meaning of Data Value**

- Setup BIOS password state is unknown.
- Setup BIOS has password changes enabled.
- Setup BIOS has determined that password control has been disabled by a jumper.

**Table 1133. TPM Security Control Capabilities**

**Variable Name:** DellTPMSecurityControlCapabilities

**Data Type:** Integer

**Possible Data Values**

- offCapable (1)
- onWithPrebootMeasurementsCapable (2)
- onWithoutPrebootMeasurementsCapable (4)

**Meaning of Data Value**

- TPM security can be Off.
- TPM security can be On with Pre-boot Measurements.
- TPM security can be On without Pre-boot Measurements.

**Table 1134. TPM Security Control Setting**

**Variable Name:** DellTPMSecurityControlSetting

**Data Type:** Integer

**Possible Data Values**

off (0)

onWithPrebootMeasurements (1)

onWithoutPrebootMeasurements (2)

**Meaning of Data Value**

TPM security is **Off**.

TPM security is **On with Pre-boot Measurements**.

TPM security is **On without Pre-boot Measurements**.

**Table 1135. Parallel Port Control Capabilities**

**Variable Name:** DellParallelPortControlCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

unknown (1)

enableCapable (2)

lpt1Capable (4)

lpt1andEnableCapable (6)

lpt2Capable (8)

lpt2andEnableCapable (10)

lpt3Capable (16)

lpt3andEnableCapable (18)

allParallelPortCapable (30)

**Meaning of Data Value**

Setup BIOS parallel port capabilities are unknown.

Setup BIOS can enable the parallel port.

Setup BIOS can support parallel port 1.

Setup BIOS has enabled parallel port 1.

Setup BIOS can support parallel port 2.

Setup BIOS has enabled parallel port 2.

Setup BIOS can support parallel port 3.

Setup BIOS has enabled parallel port 3.

Setup BIOS can support any of the three parallel ports.

**Table 1136. Parallel Port Control Settings**

**Variable Name:** DellParallelPortControlSettingsUnique

**Data Type:** Integer

**Possible Data Values**

unknown (1)

enabled (2)

lpt1 (4)

lpt1Enabled (6)

lpt2 (8)

lpt2Enabled (10)

lpt3 (16)

**Meaning of Data Value**

Parallel port state is unknown.

Setup BIOS has enabled the parallel port.

Setup BIOS supports parallel port 1.

Setup BIOS has enabled parallel port 1.

Setup BIOS supports parallel port 2.

Setup BIOS has enabled parallel port 2.

Setup BIOS supports parallel port 3.

**Table 1137. Parallel Port Control Mode Settings**

**Variable Name:** DellParallelPortControlModeSettingsUnique

**Data Type:** Integer

**Possible Data Values**

unknown (1)

atModeEnabled (2)

ps2ModeEnabled (4)

ecpModeEnabled (8)

eppModeEnabled (16)

**Meaning of Data Value**

Parallel port mode is unknown.

Setup BIOS has set the parallel port to AT mode.

Setup BIOS has set the parallel port to Personal Systems/2 (PS/2) mode.

Setup BIOS has set the parallel port to Extended Capabilities Port (ECP) mode.

Setup BIOS has set the parallel port to Enhanced Parallel Port (EPP) mode.

**Table 1138. Serial Port Control Capabilities**

**Variable Name:** DellSerialPortControlCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

- unknown (1)
- enableCapable (2)
- com1Capable (4)
- enableAndCom1Capable (6)
- com2Capable (8)
- enableAndCom2Capable (10)
- com3Capable (16)
- enableAndCom3Capable (18)
- com4Capable (32)
- enableAndCom4Capable (34)
- autoConfigCapable (64)
- com1OrCom3CapableAndAuto ConfigCapable (86)
- com2OrCom4CapableAndAuto ConfigCapable (106)
- allcomCapable (126)

**Meaning of Data Value**

- Setup BIOS serial port capabilities are unknown.
- Setup BIOS can enable the serial port.
- Setup BIOS can support serial port 1.
- Setup BIOS can enable serial port 1.
- Setup BIOS can support serial port 2.
- Setup BIOS is capable of enabling serial port 2.
- Setup BIOS can support serial port 3.
- Setup BIOS is capable of enabling serial port 3.
- Setup BIOS can support serial port 4.
- Setup BIOS is capable of enabling serial port 4.
- Setup BIOS is capable of autoconfiguring all serial ports.
- Setup BIOS has enabled autoconfiguration of COM1 and COM3 serial ports.
- Setup BIOS has enabled autoconfiguration of COM2 and COM4 serial ports.
- Setup BIOS is capable of enabling or autoconfiguring all serial ports.

**Table 1139. Serial Port Control Settings**

**Variable Name:** DellSerialPortControlSettingsUnique

**Data Type:** Integer

**Possible Data Values**

- unknown (1)
- enabled (2)
- com1 (4)
- com1Enabled (6)
- com2 (8)
- com2Enabled (10)
- com3 (16)
- com3Enabled (18)
- com4 (32)
- com4Enabled (34)
- comPortsAutoConfig (64)
- enabledAndAutoConfig (66)

**Meaning of Data Value**

- Serial port state is unknown.
- Setup BIOS has enabled the serial port.
- Setup BIOS has selected serial port 1.
- Setup BIOS has enabled serial port 1.
- Setup BIOS has selected serial port 2.
- Setup BIOS has enabled serial port 2.
- Setup BIOS has selected serial port 3.
- Setup BIOS has enabled serial port 3.
- Setup BIOS has selected serial port 4.
- Setup BIOS has enabled serial port 4.
- Setup BIOS has selected autoconfiguration of serial ports.
- Setup BIOS has enabled autoconfiguration of serial ports.

**Table 1140. IDE Control Capabilities**

**Variable Name:** DellIdeControlCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

- unknown (1)

**Meaning of Data Value**

- IDE control capabilities are unknown.

ideControlAutoConfigOrEnable Capable(2) IDE controller is autoconfigurable or enable capable.

#### Table 1141. Diskette Control Settings

**Variable Name:** DellDisketteControlSettingsUnique

**Data Type:** Integer

**Possible Data Values**

unknown(1)

disketteControlAutoConfigEnabled OrEnabled(2)

**Meaning of Data Value**

Diskette control state is unknown.

Diskette control is set as autoconfigurable or enabled.

#### Table 1142. Network Interface Control Capabilities

**Variable Name:** DellNetworkInterfaceControlCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

unknown(1)

enableCapable(2)

enableWithoutPXEcapable(4)

**Meaning of Data Value**

Unknown setup BIOS network interface capabilities.

Setup BIOS is capable of enabling the network interface.

Setup BIOS is capable of enabling the NIF without Pre-boot eXecution Environment (PXE).

#### Table 1143. Network Interface Control Settings

**Variable Name:** DellNetworkInterfaceControlSettingsUnique

**Data Type:** Integer

**Possible Data Values**

unknown(1)

enabled(2)

enabledWithoutPXE(4)

**Meaning of Data Value**

Network interface state is unknown.

Network interface is enabled.

Network interface is enabled without PXE.

#### Table 1144. BIOS Setting Value Type

**Variable Name:** DellBIOSSettingValueType

**Data Type:** Integer

**Possible Data Values**

integer(1)

string(2)

enumeration(3)

orderedList(4)

**Meaning of Data Value**

Value type is integer.

Value type is string.

Value type is enumeration.

Value type is ordered list.

## Local Response Agent Group

The Local Response Agent Group provides information about various attributes of your system's local response agent (LRA). The LRA allows systems managers to predetermine how a system running the server administrator responds to a particular event type, such as the loss of redundancy in a specific component or the elevation of temperature in a chassis. Systems managers can configure the LRA to respond to an event type with a specific action. When the condition of the critical component worsens, the systems manager can escalate the response to make it more obvious to the operator.

For example, when a voltage probe on a monitored machine reaches a warning condition, the systems manager may want to notify the operator by causing the machine to beep. When the voltage probe reaches failure, the systems manager might want to have the system that has a failing component send a broadcast message to the management system and power off the troubled system.

# LRA Group Tables

The following management information base (MIB) tables define LRA variable attributes:

- [LRA Global Settings Table](#)
- [LRA Action Table](#)

## LRA Global Settings

The global settings table allows the systems manager to determine what LRA capabilities exist for a specific system that is running Server Administrator. Some machines may support all or some of the capabilities described in `DellLocalResponseAgentCapabilitiesUnique`. The LRA Global Settings Table also defines thermal shutdown capabilities and settings. In the event that a temperature probe determines the temperature is at or over the failure limit, the systems manager can set an action to be taken automatically.

**Table 1145. LRA Global Settings Table**

<b>Name</b>	<code>lRAGlobalSettingsTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10
<b>Description</b>	Defines the LRA Global Settings Table.
<b>Syntax</b>	SEQUENCE OF <code>lRAGlobalSettingsTableEntry</code>
<b>Access</b>	Not accessible

**Table 1146. LRA Global Settings Table Entry**

<b>Name</b>	<code>lRAGlobalSettingsTableEntry</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1
<b>Description</b>	Defines the LRA Global Settings Table entry.
<b>Syntax</b>	<code>lRAGlobalSettingsTableEntry</code>
<b>Access</b>	Not accessible
<b>Index</b>	<code>lRAGlobalChassisIndex</code>

**Table 1147. LRA Global Chassis Index**

<b>Name</b>	<code>lRAGlobalChassisIndex</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	<code>DellObjectRange</code>
<b>Access</b>	Read-only

**Table 1148. LRA Global State**

<b>Name</b>	<code>lRAGlobalState</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1.2
<b>Description</b>	Defines the state of the LRA global settings.
<b>Syntax</b>	<code>DellStateSettings</code>
<b>Access</b>	Read-only

**Table 1149. LRA Global Settings Disable Time-out Value**

<b>Name</b>	<code>lRAGlobalSettingsDisableTimeoutValue</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1.3
<b>Description</b>	Defines the time-out duration countdown, in seconds, that the LRA global settings are disabled after a system shutdown and reboot.
<b>Syntax</b>	<code>DellUnsigned32BitRange</code>

**Access** Read-only

#### Table 1150. LRA Global Settings Capabilities Unique

**Name** lRAGlobalSettingsCapabilitiesUnique  
**Object ID** 1.3.6.1.4.1.674.10892.1.1500.10.1.4  
**Description** Defines the set of global capabilities that all local response agents may or may not allow to be set or reset.  
**Syntax** DellLocalResponseAgentCapabilitiesUnique ([LRA Capabilities Definitions](#))  
**Access** Read-only

#### Table 1151. LRA Global Thermal Shutdown Capabilities Unique

**Name** lRAGlobalThermalShutdownCapabilitiesUnique  
**Object ID** 1.3.6.1.4.1.674.10892.1.1500.10.1.5  
**Description** Defines the set of thermal shutdown capabilities that are supported by the LRA.  
**Syntax** DellLRAThermalShutdownCapabilitiesUnique  
**Access** Read-only

#### Table 1152. LRA Global Thermal Shutdown State Settings Unique

**Name** lRAGlobalThermalShutdownStateSettingsUnique  
**Object ID** 1.3.6.1.4.1.674.10892.1.1500.10.1.6  
**Description** Defines the set of thermal shutdown state and settings that the local response agent supports.  
**Syntax** DellLRAThermalShutdownStateSettingsUnique  
**Access** Read-only

## LRA Action Table

The `DellLocalResponseAgentCapabilitiesUnique` variable in the global action table defines the capabilities that are allowed for a particular system. The LRA Action Table that follows selects which of the system's capabilities (global actions) are to be enabled.

#### Table 1153. LRA Action Table

**Name** lRAActionTableTable  
**Object ID** 1.3.6.1.4.1.674.10892.1.1500.20  
**Description** Defines the LRA Action Table.  
**Syntax** SEQUENCE OF lRAActionTableTableEntry  
**Access** Not accessible

#### Table 1154. LRA Action Table Entry

**Name** lRAActionTableTableEntry  
**Object ID** 1.3.6.1.4.1.674.10892.1.1500.20.1  
**Description** Defines the LRA Action Table entry.  
**Syntax** lRAActionTableTableEntry  
**Access** Not accessible

**Index** lRAActionTablechassisIndex

lRAActionTableActionNumberIndex

#### Table 1155. LRA Action Table Chassis Index

<b>Name</b>	lRAActionTablechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1156. LRA Action Table Action Number Index

<b>Name</b>	lRAActionTableActionNumberIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.20.1.2
<b>Description</b>	Defines the LRA action number index. The action number indexes are as follows: <ul style="list-style-type: none"><li>• 160 — temperature failure action definition</li><li>• 168 — cooling device failure action definition</li><li>• 172 — voltage failure action definition</li><li>• 200 — temperature warning action definition</li><li>• 202 — voltage warning action definition</li><li>• 204 — cooling device warning action definition</li><li>• 206 — amperage failure action definition</li><li>• 208 — amperage warning action definition</li><li>• 210 — a power or cooling unit redundancy lost action definition</li><li>• 212 — a power or cooling unit redundancy degraded action definition</li><li>• 214 — power supply failed action definition</li><li>• 220 — chassis intrusion action definition</li><li>• 228 — memory device warning action definition</li><li>• 474 — memory device failure action definition</li><li>• 1006 — automatic system recovery (ASR) action definition</li><li>• 1353 — power supply warning action definition</li><li>• 1553 — log near full action definition</li><li>• 1554 — log full action definition</li><li>• 1603 — processor warning action definition</li><li>• 1604 — processor failure action definition</li><li>• 1703 — battery warning action definition</li><li>• 1704 — battery failure action definition</li></ul>
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

#### Table 1157. LRA Action Table User Application Name

<b>Name</b>	lRAActionTableUserApplicationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.20.1.3
<b>Description</b>	When the execute application value is set, provides the following user-assignable LRA information: <ul style="list-style-type: none"><li>• Name of the user application executable path</li><li>• File name to execute</li></ul>
<b>Syntax</b>	DisplayString (SIZE (0..256))
<b>Access</b>	Read-only

**Table 1158. LRA Action Table Settings Unique**

<b>Name</b>	lRAActionTableSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.20.1.4
<b>Description</b>	Defines the LRA settings.
<b>Syntax</b>	DellLocalResponseAgentSettingsUnique ( <a href="#">Local Response Agent Settings Unique</a> )
<b>Access</b>	Read-only

## Local Response Agent Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 1159. LRA Capabilities Definitions**

**Variable Name:** DellLocalResponseAgentCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

speakerControlCapable (1)  
consoleAlertCapable (2)  
broadcastMessageCapable (4)  
osShutDownCapable (8)  
rebootCapable (16)  
powerCycleCapable (32)  
powerOFFCapable (64)  
executeApplicationCapable (256)  
lraFullyCapable (383)

**Meaning of Data Value**

The LRA can issue a speaker beep.  
The LRA can alert the console.  
The LRA can broadcast a message.  
The LRA can shut down the operating system.  
The LRA can reboot the system.  
The LRA is capable of a system power cycle.  
The LRA can shut the system power off.  
The LRA can execute a user mode application.  
The LRA has all of the preceding capabilities.

**Table 1160. LRA Thermal Shutdown Capabilities Unique**

**Variable Name:** DellLRAThermalShutdownCapabilitiesUnique

**Data Type:** Integer

**Possible Data Values**

none (0)  
Unknown capabilities (1)  
enableCapable (2)  
warningCapable (4)  
enableOnWarningCapable (6)  
failureCapable (8)  
enableOnFailureCapable (10)  
enableOnWarningOrFailure Capable (14)

**Meaning of Data Value**

The LRA has no thermal shutdown capabilities.  
The LRA's thermal shutdown capabilities are unknown.  
The LRA can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).  
The LRA can carry out chassis-determined action(s) when a warning condition is detected.  
The LRA enables activation of chassisdetermined action(s) when a warning condition is detected.  
The LRA can carry out chassis-determined action(s) when a failure condition is detected.  
The LRA enables activation of chassisdetermined action(s) when a failure condition is detected.  
The LRA enables activation of chassisdetermined action(s) when either a failure or a warning condition is detected.

**Table 1161. Local Response Agent Settings Unique**

**Variable Name:** DellLocalResponseAgentSettingsUnique

**Data Type:** Integer

**Possible Data Values**

speakerControl (1)  
consoleAlert (2)  
broadcastMessage (4)  
osShutDown (8)  
reboot (16)  
powerCycle (32)  
powerOFF (64)  
executeApplication (256)  
allLRASettingsUnique (383)

**Meaning of Data Value**

LRA is set to issue a speaker beep.  
LRA is set to issue a console alert.  
LRA is set to issue a broadcast message.  
LRA is set to issue an operating system shutdown.  
LRA is set to issue a system reboot.  
LRA is set to issue a system power cycle.  
LRA is set to issue a system power off.  
LRA is set to start a user mode application.  
LRA is set to all LRA settings combinations.

## Cost of Ownership Group

The Cost of Ownership (COO) Group provides a full set of cost-tracking objects, including fields for the computer's manufacturer, insurer, lessor, warranty, user, trouble tickets, and many others. You can use these management information base (MIB) objects to obtain accurate and complete measurements of the cost of each computer asset in your organization.

## Cost of Ownership Group Tables

The Cost of Ownership Group defines objects in the following MIB tables:

- [Cost of Ownership Table](#)
- [COO Service Contract Table](#)
- [COO Cost Event Log Table](#)
- [COO Warranty Table](#)
- [COO Lease Information Table](#)
- [COO Schedule Number Table](#)
- [COO Options Table](#)
- [COO Maintenance Table](#)
- [COO Repair Table](#)
- [COO Support Information Table](#)
- [COO Trouble Ticket Table](#)

## Cost of Ownership Table

The following MIB object sets up the Cost of Ownership Table.

### Table 1162. Cost of Ownership

<b>Name</b>	cooTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10
<b>Description</b>	Defines the Cost of Ownership Table.
<b>Syntax</b>	SEQUENCE OF CooTableEntry
<b>Access</b>	Not accessible

### Table 1163. Cost of Ownership Table Entry

<b>Name</b>	cooTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1
<b>Description</b>	Defines the Cost of Ownership Table entry.
<b>Syntax</b>	CooTableEntry

<b>Access</b>	Not accessible
<b>Index</b>	coochassisIndex

#### Table 1164. COO Chassis Index

<b>Name</b>	coochassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	CooTableEntry
<b>Access</b>	Read-only

#### Table 1165. COO State

<b>Name</b>	cooState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.2
<b>Description</b>	Defines the acquisition state of the system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1166. COO Acquisition Purchase Cost

<b>Name</b>	cooAquisitionPurchaseCost
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.3
<b>Description</b>	Defines the purchase cost of the system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 1167. COO Acquisition Waybill Number

<b>Name</b>	cooAquisitionWayBillNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.4
<b>Description</b>	Defines the waybill number of the system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 1168. COO Acquisition Install Date Name

<b>Name</b>	cooAquisitionInstallDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.5
<b>Description</b>	Defines the installation date and time for the system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

#### Table 1169. COO Acquisition Purchase Order

<b>Name</b>	cooAquisitionPurchaseOrder
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.6
<b>Description</b>	Defines the purchase order number of the system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 1170. COO Acquisition Purchase Date Name**

<b>Name</b>	cooAquisitionPurchaseDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.7
<b>Description</b>	Defines the purchase date and time of the system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

**Table 1171. COO Acquisition Signing Authority Name**

<b>Name</b>	cooAquisitionSigningAuthorityName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.8
<b>Description</b>	Defines the name of the authorized person who signs for the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1172. COO Original Machine Configuration Expensed**

<b>Name</b>	cooOriginalMachineConfigurationExpensed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.9
<b>Description</b>	Specifies whether the purchase of this system was expensed.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

**Table 1173. COO Original Machine Configuration Vendor Name**

<b>Name</b>	cooOriginalMachineConfigurationVendorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.10
<b>Description</b>	Defines the vendor name of the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1174. COO Cost Center Information Vendor Name**

<b>Name</b>	cooCostCenterInformationVendorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.11
<b>Description</b>	Defines the cost center name of the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1175. COO User Information User Name**

<b>Name</b>	cooUserInformationUserName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.12
<b>Description</b>	Defines the name of the user for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1176. COO Extended Warranty Start Date Name**

<b>Name</b>	cooExtendedWarrantyStartDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.13

<b>Description</b>	Defines the extended warranty start date for this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

**Table 1177. COO Extended Warranty End Date Name**

<b>Name</b>	cooExtendedWarrantyEndDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.14
<b>Description</b>	Defines the extended warranty end date for this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

**Table 1178. COO Extended Warranty Cost**

<b>Name</b>	cooExtendedWarrantyCost
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.15
<b>Description</b>	Defines the extended warranty cost date for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 1179. COO Extended Warranty Provider Name**

<b>Name</b>	cooExtendedWarrantyProviderName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.16
<b>Description</b>	Defines the name of the extended warranty provider for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1180. COO Ownership Code**

<b>Name</b>	cooOwnershipCode
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.17
<b>Description</b>	Defines the ownership code for this system.
<b>Syntax</b>	DellCooOwnershipCodes (See <a href="#">COO Ownership Codes</a> )
<b>Access</b>	Read-only

**Table 1181. COO Corporate Owner Name**

<b>Name</b>	cooCorporateOwnerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.18
<b>Description</b>	Defines the name of the corporation that owns this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1182. COO Hazardous Waste Code Name**

<b>Name</b>	cooHazardousWasteCodeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.19
<b>Description</b>	Defines the hazardous waste code for this system.
<b>Syntax</b>	DellCostofOwnershipString

**Access** Read-only

#### Table 1183. COO Deployment Date Length

**Name** cooDeploymentDateLength  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.10.1.20  
**Description** Defines the deployment time for this system.  
**Syntax** DellUnsigned32BitRange  
**Access** Read-only

#### Table 1184. COO Deployment Duration Type

**Name** cooDeploymentDurationType  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.10.1.21  
**Description** Defines the deployment time units for this system.  
**Syntax** DellCoolHourDayDurationType (See [COO Hour Day Duration Type](#))  
**Access** Read-only

#### Table 1185. COO Training Name

**Name** cooTrainingName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.10.1.22  
**Description** Defines the training that the user has for this system.  
**Syntax** DellCostofOwnershipString  
**Access** Read-only

#### Table 1186. COO Outsourcing Problem Description Name

**Name** cooOutsourcingProblemDescriptionName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.10.1.23  
**Description** Defines a problem encountered with the outsourcing service provider.  
**Syntax** DellCostofOwnershipString  
**Access** Read-only

#### Table 1187. COO Outsourcing Service Fee Name

**Name** cooOutsourcingServiceFeeName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.10.1.24  
**Description** Defines amount that the outsourcing vendor charges for service.  
**Syntax** DellCostofOwnershipString  
**Access** Read-only

#### Table 1188. COO Outsourcing Signing Authority Name

**Name** cooOutsourcingSigningAuthorityName  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.10.1.25  
**Description** Defines the name of the person who can sign the authorization for service.  
**Syntax** DellCostofOwnershipString  
**Access** Read-only

**Table 1189. COO Outsourcing Provider Fee Name**

<b>Name</b>	cooOutsourcingProviderFeeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.26
<b>Description</b>	Defines any additional outsourcing charge for service.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1190. COO Outsourcing Provider Service Level Name**

<b>Name</b>	cooOutsourcingProviderServiceLevelName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.27
<b>Description</b>	Defines the service level agreement for the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1191. COO Insurance Company Name**

<b>Name</b>	cooInsuranceCompanyName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.28
<b>Description</b>	Defines the name of the company that insures this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1192. COO Box Asset Tag Name**

<b>Name</b>	cooBoxAssetTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.29
<b>Description</b>	Defines the name of the asset tag.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1193. COO Box System Name**

<b>Name</b>	cooBoxSystemName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.30
<b>Description</b>	Defines the name of the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1194. COO Box Central Processing Unit (CPU) Serial Number Name**

<b>Name</b>	cooBoxCPUSerialNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.31
<b>Description</b>	Defines the name of the CPU serial number for the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1195. COO Operating System Upgrade Type Name**

<b>Name</b>	cooOperatingSystemUpgradeTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.32

<b>Description</b>	Defines the name of the operating system on this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1196. COO Operating System Upgrade Patch Level Name**

<b>Name</b>	cooOperatingSystemUpgradePatchLevelName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.33
<b>Description</b>	Defines the name of the operating system patch level for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1197. COO Operating System Upgrade Date**

<b>Name</b>	cooOperatingSystemUpgradeDate
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.34
<b>Description</b>	Defines the upgrade file date for this operating system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

**Table 1198. COO Depreciation Duration**

<b>Name</b>	cooDepreciationDuration
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.35
<b>Description</b>	Defines the length of depreciation for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 1199. COO Depreciation Duration Type**

<b>Name</b>	cooDepreciationDurationType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.36
<b>Description</b>	Defines the unit of time for the depreciation of this system.
<b>Syntax</b>	DellCooMonthYearDurationType
<b>Access</b>	Read-only

**Table 1200. COO Depreciation Percentage**

<b>Name</b>	cooDepreciationPercentage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.37
<b>Description</b>	Defines the percentage of depreciation for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 1201. COO Depreciation Method Name**

<b>Name</b>	cooDepreciationMethodName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.38
<b>Description</b>	Defines the name of the depreciation method for this system.
<b>Syntax</b>	DellCostofOwnershipString

**Access** Read-only

#### Table 1202. COO Registration Is Registered

**Name** `cooRegistrationIsRegistered`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.10.1.39  
**Description** Specifies whether this system is registered or not.  
**Syntax** `DellBoolean`  
**Access** Read-only

## COO Service Contract Table

The service contract table provides MIB objects that help you track the name, vendor, and type of service contract you have for your system.

#### Table 1203. COO Service Contract Table

**Name** `cooServiceContractTable`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.20  
**Description** Defines the COO Service Contract Table.  
**Syntax** SEQUENCE OF `CooServiceContractTableEntry`  
**Access** Not accessible

#### Table 1204. COO Service Contract Table Entry

**Name** `cooServiceContractTableEntry`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.20.1  
**Description** Defines the COO Service Contract Table entry.  
**Syntax** `CooServiceContractTableEntry`  
**Access** Not accessible

**Index**

```
cooServiceContractchassisIndex
```

,

```
cooServiceContractIndex
```

#### Table 1205. COO Service Contract Chassis Index

**Name** `cooServiceContractchassisIndex`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.20.1.1  
**Description** Defines the index (one-based) of this chassis.  
**Syntax** `DellObjectRange`  
**Access** Read-only

#### Table 1206. COO Service Contract Index

**Name** `cooServiceContractIndex`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.20.1.2  
**Description** Defines the index (one-based) of this service contract.  
**Syntax** `DellObjectRange`  
**Access** Read-only

#### Table 1207. COO Service Contract State

<b>Name</b>	cooServiceContractState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.3
<b>Description</b>	Defines the status of the service contract for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1208. COO Service Contract Was Renewed

<b>Name</b>	cooServiceContractWasRenewed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.4
<b>Description</b>	Specifies whether the service contract for this system was renewed.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

#### Table 1209. COO Service Contract Type Name

<b>Name</b>	cooServiceContractTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.5
<b>Description</b>	Defines the name of the service contract type for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

#### Table 1210. COO Service Contract Vendor Name

<b>Name</b>	cooServiceContractVendorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.6
<b>Description</b>	Defines the name of the service contract provider for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

## COO Cost Event Log Table

The COO Cost Event Log Table provides MIB objects that allow you to track the duration and type of events that are logged for a particular system.

#### Table 1211. COO Cost Event Log Table

<b>Name</b>	cooCostEventLogTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30
<b>Description</b>	Defines the COO Cost Event Log Table.
<b>Syntax</b>	SEQUENCE OF COO CostEventLogTableEntry
<b>Access</b>	Not accessible

#### Table 1212. COO Cost Event Log Table Entry

<b>Name</b>	cooCostEventLogTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1
<b>Description</b>	Defines the COO Cost Event Log Table entry.
<b>Syntax</b>	cooCostEventLogTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	cooCostEventLogchassisIndex
	,
	cooCostEventLogIndex

**Table 1213. COO Cost Event Log Chassis Index**

<b>Name</b>	cooCostEventLogchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1214. COO Cost Event Log Index**

<b>Name</b>	cooCostEventLogIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.2
<b>Description</b>	Defines the index (one-based) of the cost event log.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1215. COO Cost Event Log State**

<b>Name</b>	cooCostEventLogState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.3
<b>Description</b>	Defines the cost event log state of this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 1216. COO Cost Event Log Duration**

<b>Name</b>	cooCostEventLogDuration
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.4
<b>Description</b>	Defines the duration of the event for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 1217. COO Cost Event Log Duration Type**

<b>Name</b>	cooCostEventLogDurationType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.5
<b>Description</b>	Defines the duration type of the event for this system.
<b>Syntax</b>	DellCOOHourDayDurationType (See <a href="#">COO Hour Day Duration Type</a> )
<b>Access</b>	Read-only

**Table 1218. COO Cost Event Log Description Name**

<b>Name</b>	cooCostEventLogDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.6
<b>Description</b>	Defines the name of the event description.

<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

## COO Warranty Table

The COO Warranty Table objects enable you to track facts about the type and duration of the warranty for a particular system.

### Table 1219. COO Warranty Table

<b>Name</b>	cooWarrantyTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40
<b>Description</b>	Defines the COO Warranty Table.
<b>Syntax</b>	SEQUENCE OF CooWarrantyTableEntry
<b>Access</b>	Not accessible

### Table 1220. COO Warranty Table Entry

<b>Name</b>	cooWarrantyTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1
<b>Description</b>	Defines the COO Warranty Table entry.
<b>Syntax</b>	CooWarrantyTableEntry
<b>Access</b>	Not accessible

#### Index

cooWarrantyChassisIndex

,

cooWarrantyIndex

### Table 1221. COO Warranty Chassis Index

<b>Name</b>	cooWarrantyChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 1222. COO Warranty Index

<b>Name</b>	cooWarrantyIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.2
<b>Description</b>	Defines the index of the warranty for this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 1223. COO Warranty State

<b>Name</b>	cooWarrantyState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.3
<b>Description</b>	Defines the state of the warranty for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1224. COO Warranty Duration

<b>Name</b>	cooWarrantyDuration
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.4
<b>Description</b>	Defines the duration of the warranty.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 1225. COO Warranty Duration Type

<b>Name</b>	cooWarrantyDurationType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.5
<b>Description</b>	Defines the warranty duration type for the system.
<b>Syntax</b>	DellCOODayMonthDurationType
<b>Access</b>	Read-only

#### Table 1226. COO Warranty End Date Name

<b>Name</b>	cooWarrantyEndDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.6
<b>Description</b>	Defines the warranty end date for this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

#### Table 1227. COO Warranty Cost

<b>Name</b>	cooWarrantyCost
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.7
<b>Description</b>	Defines the cost of the warranty for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## COO Lease Information Table

The COO lease information MIB objects enable you to track information about your lessor, lease duration, and lease type for each system.

#### Table 1228. COO Lease Information Table

<b>Name</b>	cooLeaseInformationTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50
<b>Description</b>	Defines the COO Lease Information Table.
<b>Syntax</b>	SEQUENCE OF CooLeaseInformationTableEntry
<b>Access</b>	Not accessible

#### Table 1229. COO Lease Information Table Entry

<b>Name</b>	cooLeaseInformationTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1
<b>Description</b>	Defines the COO Lease Information Table entry.
<b>Syntax</b>	CooLeaseInformationTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	cooLeaseInformationchassisIndex
	,
	cooLeaseInformationIndex

**Table 1230. COO Lease Information Chassis Index**

<b>Name</b>	cooLeaseInformationchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1231. COO Lease Information Index**

<b>Name</b>	cooLeaseInformationIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.2
<b>Description</b>	Defines the index of the lease information for this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1232. COO Lease Information State**

<b>Name</b>	cooLeaseInformationState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.3
<b>Description</b>	Defines the lease information state for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 1233. COO Lease Information Multiple Schedules**

<b>Name</b>	cooLeaseInformationMultipleSchedules
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.4
<b>Description</b>	Defines whether there are multiple schedules for this lease.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

**Table 1234. COO Lease Information Buyout Amount**

<b>Name</b>	cooLeaseInformationBuyOutAmount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.5
<b>Description</b>	Defines the balance purchase price for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

**Table 1235. COO Lease Information Lease Rate Factor**

<b>Name</b>	cooLeaseInformationLeaseRateFactor
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.6
<b>Description</b>	Defines the rate factor for the lease on this system.

<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 1236. COO Lease Information End Date Name

<b>Name</b>	cooLeaseInformationEndDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.7
<b>Description</b>	Defines the end date for the lease on this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

#### Table 1237. COO Lease Information Fair Market Value

<b>Name</b>	cooLeaseInformationFairMarketValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.8
<b>Description</b>	Defines the fair market value of this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 1238. COO Lease Information Lessor Name

<b>Name</b>	cooLeaseInformationLessorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.9
<b>Description</b>	Defines the name of the lessor of this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

## COO Schedule Number Table

#### Table 1239. COO Schedule Number Table

<b>Name</b>	cooScheduleNumberTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60
<b>Description</b>	Defines the COO Schedule Number Information Table.
<b>Syntax</b>	SEQUENCE OF CooScheduleNumberTableEntry
<b>Access</b>	Not accessible

#### Table 1240. COO Schedule Number Table Entry

<b>Name</b>	cooScheduleNumberTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1
<b>Description</b>	Defines the COO Schedule Number Information Table entry.
<b>Syntax</b>	CooScheduleNumberTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

cooScheduleNumberchassisIndex

,

cooScheduleNumberIndex

#### Table 1241. COO Schedule Number Chassis Index

<b>Name</b>	cooScheduleNumberchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1242. COO Schedule Number Index

<b>Name</b>	cooScheduleNumberIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.2
<b>Description</b>	Defines the index of the schedule number information.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1243. COO Schedule Number State

<b>Name</b>	cooScheduleNumberState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.3
<b>Description</b>	Defines the schedule number information state of this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1244. COO Schedule Number Lease Information Index Reference

<b>Name</b>	cooScheduleNumberLeaseInformationIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.4
<b>Description</b>	Defines the lease information index number to reference the schedule number.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 1245. COO Schedule Number Description Name

<b>Name</b>	cooScheduleNumberDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.5
<b>Description</b>	Describes the schedule number information.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

## COO Options Table

#### Table 1246. COO Options Table

<b>Name</b>	cooOptionsTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70
<b>Description</b>	Defines the COO Options Table.
<b>Syntax</b>	SEQUENCE OF CooOptionsTableEntry
<b>Access</b>	Not accessible

### Table 1247. COO Options Table Entry

<b>Name</b>	cooOptionsTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1
<b>Description</b>	Defines the COO Options Table entry.
<b>Syntax</b>	CooOptionsTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

```
cooOptionschassisIndex
```

```
,
```

```
cooOptionsIndex
```

### Table 1248. COO Options Chassis Index

<b>Name</b>	cooOptionschassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 1249. COO Options Index

<b>Name</b>	cooOptionsIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.2
<b>Description</b>	Defines the index (one-based) of the option information for this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 1250. COO Options State

<b>Name</b>	cooOptionsState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.3
<b>Description</b>	Defines the option information state for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### Table 1251. COO Options Lease Information Index Reference

<b>Name</b>	cooOptionsLeaseInformationIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.4
<b>Description</b>	Defines the lease information index of the option information for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Table 1252. COO Options Description Name

<b>Name</b>	cooOptionsDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.5
<b>Description</b>	Defines the option information description name.
<b>Syntax</b>	DellCostofOwnershipString

**Access** Read-only

## COO Maintenance Table

### Table 1253. COO Maintenance Table

**Name** `cooMaintenanceTable`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.80  
**Description** Defines the COO Maintenance Table.  
**Syntax** SEQUENCE OF `CooMaintenanceTableEntry`  
**Access** Not accessible

### Table 1254. COO Maintenance Table Entry

**Name** `cooMaintenanceTableEntry`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.80.1  
**Description** Defines the COO Maintenance Table entry.  
**Syntax** `CooMaintenanceTableEntry`  
**Access** Not accessible

**Index** `cooMaintenancechassisIndex`

`cooMaintenanceIndex`

### Table 1255. COO Maintenance Chassis Index

**Name** `cooMaintenancechassisIndex`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.80.1.1  
**Description** Defines the index (one-based) of this chassis.  
**Syntax** `DellObjectRange`  
**Access** Read-only

### Table 1256. COO Maintenance Index

**Name** `cooMaintenanceIndex`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.80.1.2  
**Description** Defines the index of this system's maintenance information.  
**Syntax** `DellObjectRange`  
**Access** Read-only

### Table 1257. COO Maintenance State

**Name** `cooMaintenanceState`  
**Object ID** 1.3.6.1.4.1.674.10892.1.1600.80.1.3  
**Description** Defines the state of this system's maintenance information.  
**Syntax** `DellStateSettings`  
**Access** Read-only

### Table 1258. COO Maintenance Start Date Name

<b>Name</b>	cooMaintenanceStartDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.4
<b>Description</b>	Defines the start date for maintenance on this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

### Table 1259. COO Maintenance End Date Name

<b>Name</b>	cooMaintenanceEndDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.5
<b>Description</b>	Defines the end date for maintenance on this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

### Table 1260. COO Maintenance Provider Name

<b>Name</b>	cooMaintenanceProviderName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.6
<b>Description</b>	Defines the maintenance provider's name.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### Table 1261. COO Maintenance Restrictions Name

<b>Name</b>	cooMaintenanceRestrictionsName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.7
<b>Description</b>	Defines the maintenance agreement restrictions.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

## COO Repair Table

### Table 1262. COO Repair Table

<b>Name</b>	cooRepairTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90
<b>Description</b>	Defines the COO Repair Table.
<b>Syntax</b>	SEQUENCE OF CooRepairTableEntry
<b>Access</b>	Not accessible

### Table 1263. COO Repair Table Entry

<b>Name</b>	cooRepairTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1
<b>Description</b>	Defines the COO Repair Table entry.
<b>Syntax</b>	CooRepairTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	cooRepairchassisIndex
	,
	cooRepairIndex

#### Table 1264. COO Repair Chassis Index

<b>Name</b>	cooRepairchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1265. COO Repair Index

<b>Name</b>	cooRepairIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.2
<b>Description</b>	Defines the index (one-based) of the repair information for this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1266. COO Repair State

<b>Name</b>	cooRepairState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.3
<b>Description</b>	Defines the state of the repair information for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1267. COO Repair Counter

<b>Name</b>	cooRepairCounter
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.4
<b>Description</b>	Defines the number of repairs that this system has undergone.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

#### Table 1268. COO Repair Vendor Name

<b>Name</b>	cooRepairVendorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.5
<b>Description</b>	Defines the name of the vendor that repairs this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

## COO Support Information Table

#### Table 1269. COO Support Information Table

<b>Name</b>	cooSupportInformationTable
-------------	----------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100
<b>Description</b>	Defines the COO Support Information Table.
<b>Syntax</b>	SEQUENCE OF cooSupportInformationTableEntry
<b>Access</b>	Not accessible

#### Table 1270. COO Support Information Table Entry

<b>Name</b>	cooSupportInformationTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1
<b>Description</b>	Defines the COO Support Information Table entry.
<b>Syntax</b>	cooSupportInformationTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	<div style="background-color: #f0f0f0; padding: 2px;">cooSupportInformationchassisIndex</div> <div style="background-color: #f0f0f0; padding: 2px;">cooSupportInformationIndex</div>

#### Table 1271. COO Support Information Chassis Index

<b>Name</b>	cooSupportInformationchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1272. COO Support Information Index

<b>Name</b>	cooSupportInformationIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.2
<b>Description</b>	Defines the index (one-based) for this system's support information.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1273. COO Support Information State

<b>Name</b>	cooSupportInformationState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.3
<b>Description</b>	Defines the support information state for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1274. COO Support Information Is Outsourced

<b>Name</b>	cooSupportInformationIsOutsourced
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.4
<b>Description</b>	Specifies whether the support for this system is outsourced or not.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

### Table 1275. COO Support Information Type

<b>Name</b>	cooSupportInformationType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.5
<b>Description</b>	Defines the type of component, system, or network problem that occurred.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Table 1276. COO Support Information Help Desk Name

<b>Name</b>	cooSupportInformationHelpDeskName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.6
<b>Description</b>	Defines the help desk information provided.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

### Table 1277. COO Support Information Fix Type Name

<b>Name</b>	cooSupportInformationFixTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.7
<b>Description</b>	Defines the method used to fix the problem.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

## COO Trouble Ticket Table

The MIB objects in the Trouble Ticket Table enable you to track details of any trouble tickets that you open for your system.

### Table 1278. COO Trouble Ticket Table

<b>Name</b>	cooTroubleTicketTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110
<b>Description</b>	Defines the COO Trouble Ticket Table.
<b>Syntax</b>	SEQUENCE OF cooTroubleTicketTableEntry
<b>Access</b>	Not accessible

### Table 1279. COO Trouble Ticket Table Entry

<b>Name</b>	cooTroubleTicketTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1
<b>Description</b>	Defines the COO Trouble Ticket Table entry.
<b>Syntax</b>	cooTroubleTicketTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<code>cooTroubleTicketchassisIndex</code>
	,
	<code>cooTroubleTicketIndex</code>

### Table 1280. COO Trouble Ticket Chassis Index

<b>Name</b>	cooTroubleTicketchassisIndex
-------------	------------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1281. COO Trouble Ticket Index

<b>Name</b>	cooTroubleTicketIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.2
<b>Description</b>	Defines the index (one-based) of the system's trouble ticket information.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1282. COO Trouble Ticket State

<b>Name</b>	cooTroubleTicketState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.3
<b>Description</b>	Defines the trouble ticket information state for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1283. COO Trouble Ticket Support Information Index Reference

<b>Name</b>	cooTroubleTicketSupportInformationIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.4
<b>Description</b>	Defines the support information index that references the trouble ticket.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

#### Table 1284. COO Trouble Ticket Number Name

<b>Name</b>	cooTroubleTicketNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.5
<b>Description</b>	Defines the trouble ticket number for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

## Cost of Ownership Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

#### Table 1285. COO Ownership Codes

**Variable Name:** DellCooOwnershipCodes

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
other (1)	The ownership code is not one of following:
unknown (2)	The ownership code is unknown.
owned (3)	The ownership code is owned.
leased (4)	The ownership code is leased.

rented (5)	The ownership code is rented.
offOfLease (6)	The ownership code is off of lease.
transfer (7)	The ownership code is transfer.

#### Table 1286. COO Hour Day Duration Type

**Variable Name:** DellCooHourDayDurationType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown (1)	Duration time type is unknown.
hours (2)	Duration time type is in hours.
days (3)	Duration time type is in days.

#### Table 1287. COO Day Month Duration Type

**Variable Name:** DellCooDayMonthDurationType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown (1)	Duration time type is unknown.
days (3)	Duration time type is in days.
months (4)	Duration time type is in months.

#### Table 1288. COO Month Year Duration Type

**Variable Name:** DellCooMonthYearDurationType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown (1)	Duration time type is unknown.
months (4)	Duration time type is in months.
years (5)	Duration time type is in years.

## Cluster Group

Clustering combines multiple systems in such a way that they provide services a single system cannot. Clustering enhances higher availability, scalability, and management. Higher availability is achieved by using *failover* clusters, in which resources can automatically move between two or more systems in the event of a failure. Scalability is achieved by balancing the load of an application across several computer systems. Simpler management is achieved by using virtual servers, as opposed to managing each individual computer system.

## Cluster Group

The Cluster Group defines attributes such as the number of systems in the cluster, capabilities of the cluster, type of cluster, and name of the cluster.

## Cluster Table

The following table defines the attributes of the cluster.

#### Table 1289. Cluster Table

<b>Name</b>	clusterTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10

<b>Description</b>	Defines the Cluster Table.
<b>Syntax</b>	SEQUENCE OF ClusterTableEntry
<b>Access</b>	Not accessible

#### Table 1290. Cluster Table Entry

<b>Name</b>	clusterTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1
<b>Description</b>	Defines the Cluster Table entry.
<b>Syntax</b>	ClusterTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	

```
clusterChassisIndex
```

,

```
clusterIndex
```

#### Table 1291. Cluster Chassis Index

<b>Name</b>	clusterChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1292. Cluster Index

<b>Name</b>	clusterIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.2
<b>Description</b>	Defines the index (one-based) of the cluster.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1293. Cluster State Capabilities

<b>Name</b>	clusterStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.3
<b>Description</b>	Defines the state capabilities of the cluster.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 1294. Cluster State Settings

<b>Name</b>	clusterStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.4
<b>Description</b>	Defines the state settings of the cluster.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 1295. Cluster Status**

<b>Name</b>	clusterStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.5
<b>Description</b>	Defines the status of the cluster.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1296. Cluster Type**

<b>Name</b>	clusterType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.6
<b>Description</b>	Defines the type of the cluster.
<b>Syntax</b>	DellClusterType
<b>Access</b>	Read-only

**Table 1297. Cluster Type Description Name**

<b>Name</b>	clusterTypeDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.7
<b>Description</b>	Defines the description name for the type of the cluster.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1298. Cluster Name**

<b>Name</b>	clusterName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.8
<b>Description</b>	Defines the name of the cluster.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Cluster Group Variable Values

This section includes definitions for Server Administrator-specific variable values used in this section.

**Table 1299. Cluster Type**

**Variable Name:**DellClusterType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
unknown (1)	The cluster type is unknown.
highAvailabilityCluster (2)	The cluster type is a high-availability cluster.

## Baseboard Management Controller Group

The Baseboard Management Controller (BMC) monitors the system for critical events by communicating with various sensors on the system board and sends alerts and log events when certain parameters exceed their preset thresholds. The BMC Group provides information about the BMC that may be present in your system. In addition to providing general information about the BMC, this group provides information about the serial and local area network (LAN) interfaces of the BMC.

# Baseboard Management Controller Group Tables

The objects in the BMC group define information about the BMC and the serial and LAN interfaces that can be used to access the BMC remotely to perform management activities. Objects for the serial interface define the serial connection mode, flow control type and bit rate. Objects for the LAN interface define the media access control (MAC) address, internet protocol (IP) address, subnet mask and default gateway.

The following MIB tables define the BMC group:

- Baseboard Management Controller Table
- Baseboard Management Controller Serial Interface Table
- Baseboard Management Controller LAN Interface Table

## Baseboard Management Controller Table

Table 1300. BMC Table

<b>Name</b>	bmcTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10
<b>Description</b>	Defines the Baseboard Management Controller Table.
<b>Syntax</b>	SEQUENCE OF BmcTableEntry
<b>Access</b>	Not accessible

Table 1301. BMC Table Entry

<b>Name</b>	bmcTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1
<b>Description</b>	Defines the Baseboard Management Controller (BMC) Table Entry.
<b>Syntax</b>	BmcTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	bmcChassisIndex
	,
	bmcIndex

Table 1302. BMC Chassis Index

<b>Name</b>	bmcChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.1
<b>Description</b>	Defines the index (one-based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

Table 1303. BMC Index

<b>Name</b>	bmcIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.2
<b>Description</b>	Defines the index (one-based) of the BMC.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1304. BMC State Capabilities

<b>Name</b>	bmcStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.3
<b>Description</b>	Defines the state capabilities of the BMC.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 1305. BMC State Settings

<b>Name</b>	bmcStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.4
<b>Description</b>	Defines the state settings of the BMC.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1306. BMC Status

<b>Name</b>	bmcStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.5
<b>Description</b>	Defines the status of the BMC.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1307. BMC Display Name

<b>Name</b>	bmcDisplayName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.6
<b>Description</b>	Defines the display name of the BMC.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 1308. BMC Description Name

<b>Name</b>	bmcDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.7
<b>Description</b>	Defines the description of the BMC.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1309. BMC IPMI Version Name

<b>Name</b>	bmcIPMIVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.8
<b>Description</b>	Defines the version of the Intelligent Platform Management Interface (IPMI) specification that the BMC supports.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

#### Table 1310. BMC GUID

<b>Name</b>	bmcGUID
-------------	---------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.9
<b>Description</b>	Defines the Globally Unique ID (GUID) of the BMC.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 1311. BMC Type**

<b>Name</b>	bmcType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.10
<b>Description</b>	Defines the type of the BMC.
<b>Syntax</b>	DellManagementControllerType
<b>Access</b>	Read-only

**Table 1312. BMC Module Name**

<b>Name</b>	bmcModuleName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.11
<b>Description</b>	Defines the module name for the BMC. The module name is present only on certain systems, such as modular systems.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1313. BMC IPv4 URL Name**

<b>Name</b>	bmcIPv4URLName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.12
<b>Description</b>	Defines the IPv4 URL for the BMC. The URL is not present on all systems.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1314. BMC IPv6 URL Name**

<b>Name</b>	bmcIPv6URLName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.13
<b>Description</b>	Defines the IPv6 URL for the BMC. The URL is not present on all systems.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1315. BMC Blade Form Factor**

<b>Name</b>	bmcBladeFormFactorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.14
<b>Description</b>	Defines Blade Form Factor
<b>Syntax</b>	DellBladeFormFactorType
<b>Access</b>	Read-only

## Baseboard Management Controller Serial Interface

**Table 1316. BMC Serial Interface Table**

<b>Name</b>	bmcSerialInterfaceTable
-------------	-------------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20
<b>Description</b>	Defines the BMC Serial Interface Table.
<b>Syntax</b>	SEQUENCE OF BmcSerialInterfaceTableEntry
<b>Access</b>	Not accessible

#### Table 1317. BMC Serial Interface Table Entry

<b>Name</b>	bmcSerialInterfaceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1
<b>Description</b>	Defines the BMC Serial Interface Table Entry.
<b>Syntax</b>	BmcSerialInterfaceTableEntry
<b>Access</b>	Not accessible

#### Index

bmcSerialInterfaceChassisIndex

,

bmcSerialInterfaceBMCIndex

,

bmcSerialInterfaceIndex

#### Table 1318. BMC Serial Interface Chassis Index

<b>Name</b>	bmcSerialInterfaceChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.1
<b>Description</b>	Defines the index (one-based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1319. BMC Serial Interface BMC Index

<b>Name</b>	bmcSerialInterfaceBMCIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.2
<b>Description</b>	Defines the index (one-based) of the associated BMC.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1320. BMC Serial Interface Index

<b>Name</b>	bmcSerialInterfaceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.3
<b>Description</b>	Defines the index (one-based) of the BMC serial interface.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1321. BMC Serial Interface State Capabilities

<b>Name</b>	bmcSerialInterfaceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.4
<b>Description</b>	Defines the state capabilities of the BMC serial interface.

<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

#### Table 1322. BMC Serial Interface State Settings

<b>Name</b>	bmcSerialInterfaceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.5
<b>Description</b>	Defines the state settings of the BMC serial interface.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

#### Table 1323. BMC Serial Interface Status

<b>Name</b>	bmcSerialInterfaceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.6
<b>Description</b>	Defines the status of the BMC serial interface.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1324. BMC Serial Interface Channel Number

<b>Name</b>	bmcSerialInterfaceChannelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.7
<b>Description</b>	Defines the BMC channel number of the BMC serial interface.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

#### Table 1325. BMC Serial Interface Connection Mode Capabilities

<b>Name</b>	bmcSerialInterfaceConnectionModeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.8
<b>Description</b>	Defines the connection mode capabilities of the BMC serial interface.
<b>Syntax</b>	DellBMCSerialConnectionModeCapabilities
<b>Access</b>	Read-only

#### Table 1326. BMC Serial Interface Connection Mode Settings

<b>Name</b>	bmcSerialInterfaceConnectionModeSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.9
<b>Description</b>	Defines the connection mode settings of the BMC serial interface.
<b>Syntax</b>	DellBMCSerialConnectionModeSettings
<b>Access</b>	Read-only

#### Table 1327. BMC Serial Interface Flow Control

<b>Name</b>	bmcSerialInterfaceFlowControl
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.10
<b>Description</b>	Defines the flow control type of the BMC serial interface.
<b>Syntax</b>	DellBMCSerialFlowControlType
<b>Access</b>	Read-only

**Table 1328. BMC Serial Interface Bit Rate**

<b>Name</b>	bmcSerialInterfaceBitRate
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.11
<b>Description</b>	Defines the bit rate of the BMC serial interface.
<b>Syntax</b>	DellBMCSerialBitRateType
<b>Access</b>	Read-only

## Baseboard Management Controller LAN Interface Table

**Table 1329. BMC LAN Interface**

<b>Name</b>	bmcLANInterfaceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30
<b>Description</b>	Defines the Baseboard Management Controller (BMC) LAN Interface Table.
<b>Syntax</b>	SEQUENCE OF BmcLANInterfaceTableEntry
<b>Access</b>	Not accessible

**Table 1330. BMC LAN Interface Table Entry**

<b>Name</b>	bmcLANInterfaceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1
<b>Description</b>	Defines the Baseboard Management Controller (BMC) LAN Interface Table Entry.
<b>Syntax</b>	BmcLANInterfaceTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	<code>bmcLANInterfaceChassisIndex</code>
	,
	<code>bmcLANInterfaceBMCIndex</code>
	,
	<code>bmcLANInterfaceIndex</code>

**Table 1331. BMC LAN Interface Chassis Index**

<b>Name</b>	bmcLANInterfaceChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.1
<b>Description</b>	Defines the index (one-based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1332. BMC LAN Interface BMC Index**

<b>Name</b>	bmcLANInterfaceBMCIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.2
<b>Description</b>	Defines the index (one-based) of the associated BMC.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1333. BMC LAN Interface Index**

<b>Name</b>	bmcLANInterfaceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.3
<b>Description</b>	Defines the index (one-based) of the BMC LAN interface.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1334. BMC LAN Interface State Capabilities**

<b>Name</b>	bmcLANInterfaceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.4
<b>Description</b>	Defines the state capabilities of the BMC LAN interface.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 1335. BMC LAN Interface State Settings**

<b>Name</b>	bmcLANInterfaceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.5
<b>Description</b>	Defines the state settings of the BMC LAN interface.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 1336. BMC LAN Interface Status**

<b>Name</b>	bmcLANInterfaceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.6
<b>Description</b>	Defines the status of the BMC LAN interface.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1337. BMC LAN Interface Channel Number**

<b>Name</b>	bmcLANInterfaceChannelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.7
<b>Description</b>	Defines the BMC channel number of the BMC LAN interface.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

**Table 1338. BMC LAN Interface IP Address Source**

<b>Name</b>	bmcLANInterfaceIPAddressSource
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.8
<b>Description</b>	Defines the source type of the IP address of the BMC LAN interface.
<b>Syntax</b>	DellBMCLANIPAddressSourceType
<b>Access</b>	Read-only

**Table 1339. BMC LAN Interface IP Address**

<b>Name</b>	bmcLANInterfaceIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.9

<b>Description</b>	Defines the IP address of the BMC LAN interface.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

**Table 1340. BMC LAN Interface Subnet Mask Address**

<b>Name</b>	bmcLANInterfaceSubnetMaskAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.10
<b>Description</b>	Defines the subnet mask of the BMC LAN interface.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

**Table 1341. BMC LAN Interface Default Gateway Address**

<b>Name</b>	bmcLANInterfaceDefaultGatewayAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.11
<b>Description</b>	Defines the IP address of the default gateway for the BMC LAN interface.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

**Table 1342. BMC LAN Interface MAC Address**

<b>Name</b>	bmcLANInterfaceMACAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.12
<b>Description</b>	Defines the MAC address of the BMC LAN interface.
<b>Syntax</b>	DellMACAddress
<b>Access</b>	Read-only

**Table 1343. BMC LAN Interface Alert Community Name**

<b>Name</b>	bmcLANInterfaceAlertCommunityName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.13
<b>Description</b>	Defines the SNMP community used for BMC LAN alerts (traps) sent on the BMC LAN interface.
<b>Syntax</b>	DisplayString (SIZE (0..32))
<b>Access</b>	Read-only

## Baseboard Management Controller Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 1344. Baseboard Management Controller**

**Variable Name:**DellBMCSerialConnectionModeCapabilities

**Data Type:**Integer

**These values are bit masks; therefore, combination values are possible.**

Possible Data Values	Meaning of Data Value
-- none (0)	No mode capabilities.
modemBasic (1)	BMC serial interface supports Modem Basic mode.

modemPPP (2)	BMC serial interface supports Modem Point to Point Protocol (PPP) mode.
modemTerminal (4)	BMC serial interface supports Modem Terminal mode.
directBasic (8)	BMC serial interface supports Direct Basic mode.
directPPP (16)	BMC serial interface supports Direct PPP mode.
directTerminal (32)	BMC serial interface supports Direct Terminal mode.

**Table 1345. BMC Serial Connection Mode Settings**

**Variable**

**Name:**DellBMCSerialConnectionModeSettingsDellBMCSerialConnectionModeCapabilities

**Data Type:**Integer

**These values are bit masks; therefore, combination values are possible.**

Possible Data Values	Meaning of Data Value
-- none (0)	No modes enabled.
modemBasic (1)	Modem Basic mode is enabled.
modemPPP (2)	Modem PPP mode is enabled.
modemTerminal (4)	Modem Terminal mode is enabled.
directBasic (8)	Direct Basic mode is enabled.
directPPP (16)	Direct PPP mode is enabled.
directTerminal (32)	Direct Terminal mode is enabled.

**Table 1346. BMC Serial Flow Control Type**

**Variable Name:**DellBMCSerialFlowControlType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
-- none (0)	No flow control used.
rtscts (1)	RTS/CTS (hardware) flow control used.
xonXoff (2)	XON/XOFF flow control used.

**Table 1347. BMC Serial Bit Rate Type**

**Variable Name:**DellBMCSerialBitRateType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
bps9600 (6)	Bit rate is 9600 bps (bits per second)
bps19200 (7)	Bit rate is 19200 bps
bps38400 (8)	Bit rate is 38400 bps
bps57600 (9)	Bit rate is 57600 bps
bps115200 (10)	Bit rate is 115200 bps

**Table 1348. BMC LAN IP Address Source Type**

**Variable Name:**DellBMCLANIPAddressSourceType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
-- unspecified(0)	Source is unspecified.
static(1)	IP address is static.
dhcp(2)	Dynamic Host Configuration Protocol (DHCP) used to obtain IP address.
biosOrSystemSoftware(3)	BIOS or system software provided IP Address.
other(4)	Other protocol used to obtain IP address.

**Table 1349. BMC Management Controller Type**

**Variable Name:**DellManagementControllerType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
-- legacyBMC(0)	Controller type is legacy Baseboard Management Controller.
iDRAC(8)	Controller type is iDRAC.
iDRAC6(10)	Controller type is Integrated Dell Remote Access Controller 6.
iDRAC6Modular(11)	Controller type is Integrated Dell Remote Access Controller 6 (Modular).
iDRAC6BMC(13)	Controller type is Integrated Dell Remote Access Controller 6 (BMC mode).
iDRAC7(16)	Controller type is Integrated Dell Remote Access Controller 7.
iDRAC7Modular(17)	Controller type is Integrated Dell Remote Access Controller 7 (Modular).
vrtxCMC(18)	Controller type is VRTX Chassis Management Controller (CMC).
fx2CMC(19)	Controller type is FX2 Chassis Management Controller (CMC).
iDRAC8(32)	Controller type is Integrated Dell Remote Access Controller 8.
iDRAC8Modular(33)	Controller type is Integrated Dell Remote Access Controller 8 (Modular).

**Table 1350. Dell Blade Form Factor Type**

**Variable Name:**DellBladeFormFactorType

**Data Type:**Integer

Possible Data Values	Meaning of Data Value
formFactorTypeIsSingleWidthHalfHeight(1)	Form Factor Type is singleWidthHalfHeight .
formFactorTypeIsDualWidthHalfHeight(2)	Form Factor Type is DualWidthHalfHeight.

<code>formFactorTypeIsSingleWidthFullHeight (3)</code>	Form Factor Type is SingleWidthFullHeight.
<code>formFactorTypeIsDualWidthFullHeight (4)</code>	Form Factor Type is DualWidthFullHeight.
<code>formFactorTypeIsSingleWidthQuarterHeight (5)</code>	Form Factor Type is SingleWidthQuarterHeight.
<code>formFactorTypeIs1UHalfWidth (6)</code>	Form Factor Type is 1UHalfWidth.
<code>formFactorTypeIs1UQuarterWidth (7)</code>	Form Factor Type is 1UQuarterWidth.
<code>formFactorTypeIs1UFullWidth (8)</code>	Form Factor Type is 1UFullWidth.
<code>notApplicable (256)</code>	Form Factor Type is Not Applicable for the system.

## Field Replaceable Unit Group

A field replaceable unit (FRU) is a part that can be removed and replaced without having to send the system to a repair facility. The Field Replaceable Unit Group provides information about the field replaceable units that may be present in your system.

## Field Replaceable Unit Group Tables

The objects in the FRU group define information such as manufacturer, serial number, part number and revision for field replaceable units. The following MIB tables define the FRU group.

**Table 1351. Field Replaceable Unit Table**

<b>Name</b>	<code>fruTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.2000.10
<b>Description</b>	Defines the Field Replaceable Unit table.
<b>Syntax</b>	SEQUENCE OF FruTableEntry
<b>Access</b>	Not accessible

**Table 1352. FRU Table Entry**

<b>Name</b>	<code>fruTableEntry</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.2000.10.1
<b>Description</b>	Defines the FRU Table Entry.
<b>Syntax</b>	FruTableEntry
<b>Access</b>	Not accessible

**Index**

<code>fruChassisIndex</code>
------------------------------

`fruIndex`

**Table 1353. FRU Chassis Index**

<b>Name</b>	<code>fruChassisIndex</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.2000.10.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing the FRU.
<b>Syntax</b>	DellObjectRange

**Access** Read-only

#### Table 1354. FRU Index

**Name** fruIndex  
**Object ID** 1.3.6.1.4.1.674.10892.1.2000.10.1.2  
**Description** Defines the index (one-based) of the FRU.  
**Syntax** DellObjectRange  
**Access** Read-only

#### Table 1355. FRU Information Status

**Name** fruInformationStatus  
**Object ID** 1.3.6.1.4.1.674.10892.1.2000.10.1.3  
**Description** Defines the status of the FRU table entry.  
**Syntax** DellStatus  
**Access** Read-only

#### Table 1356. FRU Information State

**Name** fruInformationState  
**Object ID** 1.3.6.1.4.1.674.10892.1.2000.10.1.4  
**Description** Defines the state of the FRU information. Some information for the FRU may not be available if the state is other than ok(1).  
**Syntax** DellFRUInformationState  
**Access** Read-only

#### Table 1357. FRU Device Name

**Name** fruDeviceName  
**Object ID** 1.3.6.1.4.1.674.10892.1.2000.10.1.5  
**Description** Defines the device name of the FRU.  
**Syntax** DisplayString (SIZE (0..64))  
**Access** Read-only

#### Table 1358. FRU Manufacturer Name

**Name** fruManufacturerName  
**Object ID** 1.3.6.1.4.1.674.10892.1.2000.10.1.6  
**Description** Defines the manufacturer of the FRU.  
**Syntax** DisplayString (SIZE (0..64))  
**Access** Read-only

#### Table 1359. FRU Serial Number Name

**Name** fruSerialNumberName  
**Object ID** 1.3.6.1.4.1.674.10892.1.2000.10.1.7  
**Description** Defines the serial number of the FRU.  
**Syntax** DisplayString (SIZE (0..64))  
**Access** Read-only

### Table 1360. FRU Part Number Name

<b>Name</b>	fruPartNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.2000.10.1.8
<b>Description</b>	Defines the part number of the FRU
<b>Syntax</b>	DisplayString (SIZE (0..64))
<b>Access</b>	Read-only

### Table 1361. FRU Revision Name

<b>Name</b>	fruRevisionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.2000.10.1.9
<b>Description</b>	Defines the revision of the FRU.
<b>Syntax</b>	DisplayString (SIZE (0..64))
<b>Access</b>	Read-only

### Table 1362. FRU Manufacturing Date Name

<b>Name</b>	fruManufacturingDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.2000.10.1.10
<b>Description</b>	Defines the manufacturing date of the FRU.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

### Table 1363. FRU Asset Tag Name

<b>Name</b>	fruAssetTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.2000.10.1.11
<b>Description</b>	Defines the asset tag of the FRU.
<b>Syntax</b>	DisplayString (SIZE (0..64))
<b>Access</b>	Read-only

## Field Replaceable Unit Group Variable Values

This section includes definitions for server administrator-specific variable values.

### Table 1364. FRU Information State

**Variable Name:** DellFRUInformationState

**Data Type:** Integer

#### Possible Data Values

ok(1)

notSupported(2)

notAvailable(3)

checksumInvalid(4)

corrupted(5)

#### Meaning of Data Value

FRU information is okay.

FRU information is not supported.

FRU information is not available.

FRU information checksum is invalid.

FRU information is corrupted.

# Storage Management Group

The Storage Management Group is composed of the following:

- Storage Management Group—information about the software product and system status.
- Storage Management Information Group—properties about the Simple Network Management Protocol (SNMP) agent.
- Global Data Group—system status.
- Physical Devices Group—physical devices managed by the software.
- Logical Devices Group—logical devices managed by the software.
- Storage Management Event Group—SNMP traps.

## Topics:

- [Storage Management Group](#)
- [Storage Management Information Group](#)
- [Global Data Group](#)
- [Physical Devices Group](#)
- [Logical Devices Group](#)
- [Storage Management Event Group](#)

## Storage Management Group

The Storage Management Information Base (MIB) Group defines the properties that identify information about the Storage Management software product and the current status of the system it manages.

**NOTE:** In Windows the optional “Storage Management” component must first be installed to respond to SNMP queries in this group. On Linux several optional RPM packages for storage must be installed. See the *Server Administrator Installation Guide* for more information.

**Table 1365. Software Version**

<b>Name</b>	softwareVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.1
<b>Description</b>	Identifies the version number of the storage management component of the systems management software.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1366. Global Status**

<b>Name</b>	globalStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.2
<b>Description</b>	Identifies global health for the subsystem managed by the Storage Management software. This global status is customized for HP OpenView. Other applications should refer to the agentSystemGlobalStatus entry in the globalData object group.  Possible values: 1: Critical 2: Warning 3: Normal 4: Unknown
<b>Syntax</b>	Integer

**Access** Read-only

#### Table 1367. Software Manufacturer

**Name** softwareManufacturer  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.3  
**Description** Identifies the manufacturer of the Storage Management software.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1368. Software Product

**Name** softwareProduct  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.4  
**Description** Identifies product information for the Storage Management software.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1369. Software Description

**Name** softwareDescription  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.5  
**Description** Identifies the product description for the Storage Management software.  
**Syntax** DisplayString  
**Access** Read-only

## Storage Management Information Group

The Storage Management Information MIB Group defines the properties that identify the Storage Management software SNMP agent.

#### Table 1370. Display Name

**Name** displayName  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.100.1  
**Description** Identifies the name of this management software for display purposes.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1371. Description

**Name** description  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.100.2  
**Description** Provides a short description of this management software.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1372. Agent Vendor

**Name** agentVendor  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.100.3  
**Description** Identifies the name of the management software manufacturer.

<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1373. Agent Version

<b>Name</b>	agentVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.100.4
<b>Description</b>	This entry is obsolete. Refer to softwareVersion.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Global Data Group

The Global Data Management Information Base (MIB) Group defines the properties that identify status information about the system that the Storage Management software is managing and about the Storage Management SNMP agent.

#### Table 1374. Agent System Global Status

<b>Name</b>	agentSystemGlobalStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.1
<b>Description</b>	This entry is obsolete. Use the value agentGlobalSystemStatus.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1375. Agent Last Global Status

<b>Name</b>	agentLastGlobalStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.2
<b>Description</b>	This entry is obsolete. Use the value agentLastGlobalSystemStatus.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1376. Agent Time Stamp

<b>Name</b>	agentTimeStamp
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.3
<b>Description</b>	Identifies the last time that the agent values have been updated. Universal time in seconds since UTC 1/1/70.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1377. Agent Get Timeout

<b>Name</b>	agentGetTimeout
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.4
<b>Description</b>	Indicates the suggested timeout value in milliseconds for how long the SNMP getter should wait while attempting to poll the SNMP agent.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1378. Agent Modifiers

<b>Name</b>	agentModifiers
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.5
<b>Description</b>	Identifies the agent functional modifiers. When set, the modifier is active. Bit definitions: Bit 3: agent in debug mode. All other bits are product specific.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1379. Agent Refresh Rate

<b>Name</b>	agentRefreshRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.6
<b>Description</b>	Identifies the rate, given in seconds, at which the cached data for SNMP is refreshed. The default value is 300 seconds, or 5 minutes.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1380. Agent Hostname

<b>Name</b>	agentHostname
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.7
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1381. Agent IP Address

<b>Name</b>	agentIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.8
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1382. Agent Software Status

<b>Name</b>	agentSoftwareStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.9
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1383. Agent SNMP Version

<b>Name</b>	agentSnmVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.10
<b>Description</b>	This entry is obsolete. Refer to 0001 softwareVersion.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1384. Agent MIB Version**

<b>Name</b>	agentMibVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.11
<b>Description</b>	Identifies the version of the Storage Management MIB.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1385. Agent Management Software URL Name**

<b>Name</b>	agentManagementSoftwareURLName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.12
<b>Description</b>	Identifies the Universal Resource Locator (URL) of the systems management software.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1386. Agent Global System Status**

<b>Name</b>	agentGlobalSystemStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.13
<b>Description</b>	<p>Global health information for the subsystem managed by the Storage Management software. This global status should be used by applications other than HP OpenView. HP OpenView should refer to the globalStatus in the root level object group. This is a rollup for the entire agent including any monitored devices. The status is intended to give initiative to an SNMP monitor to get further data when this status is abnormal. Possible values:</p> <ul style="list-style-type: none"><li>1: Other</li><li>2: Unknown</li><li>3: OK</li><li>4: Non-critical</li><li>5: Critical</li><li>6: Non-recoverable</li></ul> <p> <b>NOTE: This global status should be used by applications other than HP OpenView. HP OpenView should refer to the globalStatus in the root level object group.</b></p>
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1387. Agent Last Global System Status**

<b>Name</b>	agentLastGlobalSystemStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.14
<b>Description</b>	<p>The previous global status of the system managed by the Storage Management software. Possible values:</p> <ul style="list-style-type: none"><li>1: Other</li><li>2: Unknown</li><li>3: OK</li><li>4: Non-critical</li><li>5: Critical</li><li>6: Non-recoverable</li></ul>
<b>Syntax</b>	DellStatus

**Access** Read-only

**Table 1388. Agent Smart Thermal Shutdown**

<b>Name</b>	agentSmartThermalShutdown
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.15
<b>Description</b>	Indicates the status of smart thermal shutdown for PowerVault 220S and PowerVault 221S enclosures.  Possible values: 1: Enabled 2: Disabled 3: Not applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Physical Devices Group

The Physical Devices MIB group provides information about the devices managed by the Storage Management software and their relationships to each other. The following MIB tables define objects and relationships (connections) among the objects.

- **Controller Table** — describes available properties for each controller on the managed system.
- **Channel Table** — describes available properties for each channel on the managed system.
- **Enclosure Table** — describes available properties for each enclosure on the managed system.
- **Array Disk Table** — describes available properties for each physical array disk on the managed system.
- **Array Disk Enclosure Connection Table** — describes the connections between Fibre Channel array disks, their enclosure, and their associated controller. For each object in the table, its *object number* corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.
- **Array Disk Channel Connection Table** — describes the connections between SCSI array disks, their channel, and their associated controller. For each object in the table, its *object number* corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.
- **Fan Table** — describes available properties for each fan on the managed system.
- **Fan Connection Table** — describes the connection between each fan on the managed system and its enclosure. Each *enclosure number* in the table corresponds to that enclosure instance in the Enclosure Table.
- **Power Supply Table** — describes available properties for each power supply on the managed system.
- **Power Supply Connection Table** — describes the connection between each power supply on the managed system and its enclosure. Each *enclosure number* in the table corresponds to that enclosure instance in the Enclosure Table.
- **Temperature Probe Table** — describes available properties for each temperature probe on the managed system.
- **Temperature Probe Connection Table** — describes the connection between each temperature probe on the managed system and its enclosure. Each *enclosure number* in the table corresponds to that enclosure instance in the Enclosure Table.
- **EMM Table** — describes available properties for each Enclosure Management Module (EMM) on the managed system.
- **EMM Connection Table** — describes the connection between each EMM on the managed system and its enclosure. Each *enclosure number* in the table corresponds to that enclosure instance in the Enclosure Table.
- **Battery Table** — describes available properties for each controller battery on the managed system.
- **Battery Connection Table** — describes the connection between each battery on the managed system and its controller. Each *controller number* in the table corresponds to that controller instance in the Controller Table.

## Controller Table

This table describes available properties for each controller on the managed system.

The following object sets up the Controller Table.

**Table 1389. Controller Table**

<b>Name</b>	controllerTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1

<b>Description</b>	Defines the controller table, which is a table of managed Redundant Array of Independent disks (RAID) controllers. The number of entries is related to the number of RAID controllers discovered in the system.
<b>Syntax</b>	SEQUENCE OF ControllerEntry
<b>Access</b>	Not accessible

#### Table 1390. Controller Entry

<b>Name</b>	controllerEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1
<b>Description</b>	Defines the controller table entry, which is an entry in the table of RAID controllers. A row in this table cannot be created or deleted by SNMP operations on columns of the table.
<b>Syntax</b>	ControllerEntry
<b>Access</b>	Not accessible
<b>Index</b>	controllerNumber

#### Table 1391. Controller Number

<b>Name</b>	controllerNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.1
<b>Description</b>	Identifies the instance number of the controller entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1392. Controller Name

<b>Name</b>	controllerName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.2
<b>Description</b>	Identifies the name of the controller in this subsystem as represented in Storage Management. Includes the controller type and instance. For example: PERC 3/QC 1.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1393. Controller Vendor

<b>Name</b>	controllerVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.3
<b>Description</b>	Identifies the controller's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1394. Controller Type

<b>Name</b>	controllerType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.4
<b>Description</b>	Identifies the type of this controller: 1: SCSI 2: PowerVault 660F 3: Power Vault 662F 4: Integrated/Intelligent Drive Electronics (IDE) 5: Serial Advanced Technology Architecture (SATA)

	6: Serial Attached SCSI (SAS)
	9: PCIe SSD
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1395. Controller State

<b>Name</b>	controllerState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.5
<b>Description</b>	Identifies the status of the controller's subsystem (which includes any devices connected to it). Possible states: 0: Unknown 1: Ready 2: Failed 3: Online 4: Offline 6: Degraded
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1396. Controller Severity

<b>Name</b>	controllerSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.6
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

<b>Name</b>	controllerRebuildRateInPercent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.7
<b>Description</b>	Identifies the percent of the compute cycles dedicated to rebuilding failed array disks.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1397. Controller Firmware Version

<b>Name</b>	controllerFWVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.8
<b>Description</b>	Identifies the controller's current firmware version.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1398. Controller Cache Size in Megabytes

<b>Name</b>	controllerCacheSizeInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.9

<b>Description</b>	Identifies the controller's current amount of cache memory in megabytes. If this size is 0, it is less than a megabyte.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1399. Controller Cache Size in Bytes**

<b>Name</b>	controllerCacheSizeInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.10
<b>Description</b>	Identifies the controller's current amount of cache memory that is less than a megabyte. This combined with the controllerCacheSizeInMB is the total amount of memory.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1400. Controller Physical Device Count**

<b>Name</b>	controllerPhysicalDeviceCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.11
<b>Description</b>	Identifies the number of physical devices on the controller channel including both disks and the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1401. Controller Logical Device Count**

<b>Name</b>	controllerLogicalDeviceCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.12
<b>Description</b>	Identifies the number of virtual disks on the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1402. Controller Partner Status**

<b>Name</b>	controllerPartnerStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.13
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1403. Controller Host Port Count**

<b>Name</b>	controllerHostPortCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.14
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1404. Controller Memory Size in Megabytes**

<b>Name</b>	controllerMemorySizeInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.15

<b>Description</b>	Identifies the size of memory in megabytes on the controller. If this size is 0, it is less than a megabyte. This attribute is only supported on Adaptec controllers.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1405. Controller Memory Size in Bytes

<b>Name</b>	controllerMemorySizeInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.16
<b>Description</b>	Identifies the size of memory on the controller that is less than a megabyte. This combined with the controllerMemorySizeInMB is the total size of the memory. This attribute is only supported on Adaptec controllers.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1406. Controller Drive Channel Count

<b>Name</b>	controllerDriveChannelCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.17
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1407. Controller Fault Tolerant

<b>Name</b>	controllerFaultTolerant
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.18
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1408. Controller C0 Port 0 World Wide Name

<b>Name</b>	controllerC0Port0WorldWideName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.19
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1409. Controller C0 Port 0 Name

<b>Name</b>	controllerC0Port0Name
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.20
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1410. Controller C0 Port 0 ID

<b>Name</b>	controllerC0Port0ID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.21
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.

<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1411. Controller C0 Target

<b>Name</b>	controllerC0Target
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.22
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1412. Controller C0 Channel

<b>Name</b>	controllerC0Channel
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.23
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1413. Controller C0 Operating System Controller

<b>Name</b>	controllerC0OSController
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.24
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1414. Controller C0 Battery State

<b>Name</b>	controllerC0BatteryState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.25
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1415. Controller C1 Port 0 World Wide Name

<b>Name</b>	controllerC1Port0WWN
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.26
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1416. Controller C1 Port 0 Name

<b>Name</b>	controllerC1Port0Name
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.27
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1417. Controller C1 Port 0 ID**

<b>Name</b>	controllerC1Port0ID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.28
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1418. Controller C1 Target**

<b>Name</b>	controllerC1Target
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.29
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1419. Controller C1 Channel**

<b>Name</b>	controllerC1Channel
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.30
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1420. Controller C1 Operating System Controller**

<b>Name</b>	controllerC1OSController
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.31
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1421. Controller Battery State C1**

<b>Name</b>	controllerC1BatteryState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.32
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1422. Controller Node World Wide Name**

<b>Name</b>	controllerNodeWWN
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.33
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1423. Controller C0 Port 1 World Wide Name**

<b>Name</b>	controllerC0Port1WWN
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.34

<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1424. Controller C1 Port 1 World Wide Name

<b>Name</b>	controllerC1Port1WWN
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.35
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1425. Controller Battery Charge Count

<b>Name</b>	controllerBatteryChargeCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.36
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1426. Controller Roll-Up Status

<b>Name</b>	controllerRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.37
<b>Description</b>	Indicates severity of the controller state. This is the combined status of the controller and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1427. Controller Component Status

<b>Name</b>	controllerComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.38
<b>Description</b>	Indicates the status of the controller itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical

	6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1428. Controller Nexus ID

<b>Name</b>	controllerNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.39
<b>Description</b>	Durable unique ID for this controller.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1429. Controller Alarm State

<b>Name</b>	controllerAlarmState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.40
<b>Description</b>	Indicates state, or setting for the controller's alarm.  Possible values: 1: Enabled 2: Disabled 3: Not Applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1430. Controller Driver Version

<b>Name</b>	controllerDriverVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.41
<b>Description</b>	Indicates currently installed driver version of the controller
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1431. Controller PCI Slot

<b>Name</b>	controllerPCISlot
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.42
<b>Description</b>	Indicates the PCI slot number or embedded number for controllers on the motherboard
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1432. Controller Cluster Mode

<b>Name</b>	controllerClusterMode
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.43
<b>Description</b>	Identifies if the controller is in cluster mode.  Possible values: 1: Enabled 2: Disabled 3: Active (enabled and active)

	99: Not Applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1433. Controller Minimum Firmware Version

<b>Name</b>	controllerMinFWVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.44
<b>Description</b>	The minimum firmware version for Storage Management to support the controller.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1434. Controller Minimum Driver Version

<b>Name</b>	controllerMinDriverVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.45
<b>Description</b>	The minimum driver version for Storage Management to support the controller.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1435. Controller SCSI Initiator ID

<b>Name</b>	controllerSCSIInitiatorID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.46
<b>Description</b>	The SCSI ID of the initiator.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1436. Controller Channel Count

<b>Name</b>	controllerChannelCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.47
<b>Description</b>	The number of channels on the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1437. Controller Reconstruct Rate

<b>Name</b>	controllerReconstructRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.48
<b>Description</b>	The rate for reconstruct on the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1438. Controller Patrol Read Rate

<b>Name</b>	controllerPatrolReadRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.49
<b>Description</b>	The rate for patrol read on the controller.
<b>Syntax</b>	Integer

**Access** Read-only

#### Table 1439. Controller BGI Rate

**Name** controllerBGIRate  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.1.1.50  
**Description** The rate for background initialization on the controller.  
**Syntax** Integer  
**Access** Read-only

#### Table 1440. Controller Check Consistency Rate

**Name** controllerCheckConsistencyRate  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.1.1.51  
**Description** The rate for check consistency on the controller.  
**Syntax** Integer  
**Access** Read-only

#### Table 1441. Controller Patrol Read Mode

**Name** controllerPatrolReadMode  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.1.1.52  
**Description** Identifies the patrol read mode. Possible values: 1: Automatic (enabled) 2: Manual (enabled) 3: Disabled  
**Syntax** Integer  
**Access** Read-only

#### Table 1442. Controller Patrol Read State

**Name** controllerPatrolReadState  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.1.1.53  
**Description** The state of the patrol read.  
Possible values:  
1: Stopped - not running  
2: Ready - ready to start  
4: Active - is running  
8: Aborted - has aborted  
**Syntax** Integer  
**Access** Read-only

#### Table 1443. Controller Patrol Read Iterations

**Name** controllerPatrolReadIterations  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.1.1.54  
**Description** The number of times Patrol Read has been run on this controller.  
**Syntax** Integer  
**Access** Read-only

#### Table 1444. Controller Storport Driver Version

**Name** controllerStorportDriverVersion

<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.55
<b>Description</b>	Provides current Windows OS storport driver version. Not applicable for Linux.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 1445. Controller Minimum Required Storport Version**

<b>Name</b>	controllerMinimumRequiredStorportVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.56
<b>Description</b>	Provides minimum required storport driver version for Windows OS only.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 1446. Controller Encryption Capable**

<b>Name</b>	controllerEncryptionCapable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.57
<b>Description</b>	Indicates encryption capability of the controller. Value: 1 - Capable, 99 - Not Applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

<b>Name</b>	controllerEncryptionKeyPresent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.58
<b>Description</b>	Indicates presence of encryption key for the controller. Value: 1 - Yes, 0 - No, 99 - Not Applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1447. Controller Persistent Hot Spare**

<b>Name</b>	controllerPersistentHotSpare
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.59
<b>Description</b>	Indicates Persistent Hot Spare capability of the controller. Value: 1 - Enabled, 0 - Disabled, 99 - Undetermined /Not applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1448. Controller Spin Down Unconfigured Drives**

<b>Name</b>	controllerSpinDownUnconfiguredDrives
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.60
<b>Description</b>	Indicates controller capability to put unconfigured drives in power save mode. Value: 1 - Enabled, 0 - Disabled, 99 - Undetermined /Not applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1449. Controller Spin Down Hot Spare Drives**

<b>Name</b>	controllerSpinDownHotSpareDrives
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.61

<b>Description</b>	Indicates controller capability to put hot spare drives in power save mode. Value: 1 - Enabled, 0 - Disabled, 99 - Undetermined /Not applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1450. Controller Spin Down Time Interval

<b>Name</b>	controllerSpinDownTimeInterval
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.62
<b>Description</b>	Shows the duration in minutes after which, the unconfigured or hot spare drives is spun down to power save mode. Value: 30 to 1440  <b>NOTE: A value of 9999 indicates that the feature is not available.</b>
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1451. Controller Encryption Mode

<b>Name</b>	controllerEncryptionMode
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.63
<b>Description</b>	Indicates the current encryption mode of the controller. Value: 0 - No Encryption, 1 - Local Key Management (LKM), 2 - Dell Key Management (DKM), 99 - Not Applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1452. Controller CacheCade

<b>Name</b>	controllerCacheCade
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.64
<b>Description</b>	Indicates if the controller is CacheCade capable or not. Value: 1 - Capable, 0 - Not Capable, 99 - Undetermined
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1453. Controller Spin Down Configured Drives

<b>Name</b>	controllerSpinDownConfiguredDrives
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.65
<b>Description</b>	Indicates controller capability to spin down configured physical disks. Value: 0 - Disabled, 1 - Enabled, 99 - Undetermined
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1454. Controller Automatic Power Saving

<b>Name</b>	controllerAutomaticPowerSaving
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.66
<b>Description</b>	Indicates controller capability for automatic power saving. Value: 0 - Disabled, 1 - Enabled, 99 - Undetermined
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1455. Controller Configured Drives SpinUp Time

<b>Name</b>	controllerConfiguredDrivesSpinUpTime
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.67
<b>Description</b>	Indicates configured drives spin up start time. Value: 1:00 AM to 12:59 PM, 9999 - Undetermined
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1456. Controller Configured Drives SpinUp TimeInterval

<b>Name</b>	controllerConfiguredDrivesSpinUpTimeInterval
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.68
<b>Description</b>	Indicates configured drives spin up time interval in hours. This value is added with configured drives start time to arrive at time window in which configured drives are always spin up. Value: 1.. 24, 9999 - Undetermined
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1457. Controller Preserved Cache

<b>Name</b>	controllerPreservedCache
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.69
<b>Description</b>	Indicates if preserved cache is present on the controller. Values: 1- Yes 0 - No 99 - Not available / Not applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1458. Controller PI Enable

<b>Name</b>	controllerPIEnable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.70
<b>Description</b>	Indicates if T10 PI is enabled on a controller. Values are: 0 : T10 PI disabled 1 : T10 PI enabled
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1459. Controller Current Mode

<b>Name</b>	controllerCurrentMode
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.71
<b>Description</b>	Indicates the current controller mode.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

# Channel Table

This table describes available properties for each channel on the managed system.

The following object sets up the Channel Table.

## Table 1460. Channel Table

<b>Name</b>	channelTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2
<b>Description</b>	Defines the channel table.
<b>Syntax</b>	SEQUENCE OF ChannelEntry
<b>Access</b>	Not accessible

## Table 1461. Channel Entry

<b>Name</b>	channelEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1
<b>Description</b>	Defines the channel table entry.
<b>Syntax</b>	ChannelEntry
<b>Access</b>	Not accessible
<b>Index</b>	channelNumber

## Table 1462. Channel Number

<b>Name</b>	channelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.1
<b>Description</b>	Identifies the instance number of the channel entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Table 1463. Channel Name

<b>Name</b>	channelName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.2
<b>Description</b>	Identifies the name of the channel as represented in Storage Management. The name includes the word channel and the instance. For example: Channel 1.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Table 1464. Channel State

<b>Name</b>	channelState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.3
<b>Description</b>	Identifies the current state of this channel. Possible states: 0: Unknown 1: Ready - The I/O has resumed. 2: Failed 3: Online 4: Offline - The I/O has paused.

	6: Degraded
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1465. Channel Severity

<b>Name</b>	channelSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.4
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1466. Channel Termination

<b>Name</b>	channelTermination
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.5
<b>Description</b>	Identifies the type of SCSI termination on this channel. Termination is required for proper operation of this channel.  Possible values: 1: Wide Termination (16 bit) 2: Narrow Termination (8 bit) 3: Not Terminated
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1467. Channel SCSI ID

<b>Name</b>	channelSCSIID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.6
<b>Description</b>	Identifies the SCSI ID of the controller to which the channel belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1468. Channel Roll-Up Status

<b>Name</b>	channelRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.7
<b>Description</b>	Identifies the severity of the channel state. This is the combined status of the channel and its components.  Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus

**Access** Read-only

#### Table 1469. Channel Component Status

**Name** channelComponentStatus  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.2.1.8  
**Description** The status of the channel itself without the propagation of any contained component status.  
Possible values:  
1: Other  
2: Unknown  
3: OK  
4: Non-critical  
5: Critical  
6: Non-recoverable  
**Syntax** DellStatus  
**Access** Read-only

#### Table 1470. Channel Nexus ID

**Name** channelNexusID  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.2.1.9  
**Description** Durable unique ID for this channel.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1471. Channel Data Rate

**Name** channelDataRate  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.2.1.10  
**Description** Identifies the data rate of this channel.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1472. Channel Bus Type

**Name** channelBusType  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.2.1.11  
**Description** The bus type of the channel.  
Possible values:  
1: SCSI  
2: IDE  
3: Fibre Channel  
4: Serial Storage Architecture (SSA)  
6: Universal Serial Bus (USB)  
7: SATA  
8: SAS  
9: PCIe  
**Syntax** Integer

**Access** Read-only

## Enclosure Table

This table describes available properties for each enclosure on the managed system.

The following object sets up the Enclosure Table.

### Table 1473. Enclosure Table

<b>Name</b>	enclosureTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3
<b>Description</b>	Defines the enclosure table.
<b>Syntax</b>	SEQUENCE OF EnclosureEntry
<b>Access</b>	Not accessible

### Table 1474. Enclosure Entry

<b>Name</b>	enclosureEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1
<b>Description</b>	Defines the enclosure table entry.
<b>Syntax</b>	EnclosureEntry
<b>Access</b>	Not accessible
<b>Index</b>	enclosureNumber

### Table 1475. Enclosure Number

<b>Name</b>	enclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.1
<b>Description</b>	Identifies the instance number of the enclosure entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Table 1476. Enclosure Name

<b>Name</b>	enclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.2
<b>Description</b>	Identifies the enclosure's name as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Table 1477. Enclosure Vendor

<b>Name</b>	enclosureVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.3
<b>Description</b>	Identifies the enclosure's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Table 1478. Enclosure State

<b>Name</b>	enclosureState
-------------	----------------

<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.4
<b>Description</b>	The current condition of the enclosure (which includes any devices connected to it.) Possible values: 0: Unknown 1: Ready 2: Failed 3: Online 4: Offline 6: Degraded
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1479. Enclosure Severity

<b>Name</b>	enclosureSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1480. Enclosure ID

<b>Name</b>	enclosureID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.6
<b>Description</b>	Represents unique id for an enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1481. Enclosure Processor Version

<b>Name</b>	enclosureProcessorVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.7
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1482. Enclosure Service Tag

<b>Name</b>	enclosureServiceTag
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.8
<b>Description</b>	The enclosure identification used when consulting customer support.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1483. Enclosure Asset Tag

<b>Name</b>	enclosureAssetTag
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.9

<b>Description</b>	Customer definable asset tag for the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1484. Enclosure Asset Name

<b>Name</b>	enclosureAssetName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.10
<b>Description</b>	Customer definable asset name of the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1485. Enclosure Split Bus Part Number

<b>Name</b>	enclosureSplitBusPartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.11
<b>Description</b>	Identifies the enclosure's split bus part number.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1486. Enclosure Product ID

<b>Name</b>	enclosureProductID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.12
<b>Description</b>	Identifies the enclosure's product identification. This also corresponds to the enclosure type.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1487. Enclosure Kernel Version

<b>Name</b>	enclosureKernelVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.13
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1488. Enclosure ESM1 Part Number

<b>Name</b>	enclosureESM1PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.14
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1489. Enclosure ESM2 Part Number

<b>Name</b>	enclosureESM2PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.15
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString

**Access** Read-only

#### Table 1490. Enclosure Type

**Name** enclosureType  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.3.1.16  
**Description** Indicates the type of the enclosure.  
Possible values:  
1: Internal  
2: Dell PowerVault 200S (PowerVault 201S)  
3: Dell PowerVault 210S (PowerVault 211S)  
4: Dell PowerVault 220S (PowerVault 221S)  
5: Dell PowerVault 660F  
6: Dell PowerVault 224F  
7: Dell PowerVault 660F/PowerVault 224F  
8: Dell MD1000 9: Dell MD1120  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1491. Enclosure Processor2 Version

**Name** enclosureProcessor2Version  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.3.1.17  
**Description** This entry is obsolete for Storage Management.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1492. Enclosure Configuration

**Name** enclosureConfig  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.3.1.18  
**Description** Identifies the current configuration of the enclosure's backplane.  
Possible values:  
1: Joined  
2: Split Bus  
3: Clustered  
4: Unified  
**Syntax** Integer  
**Access** Read-only

#### Table 1493. Enclosure Channel Number

**Name** enclosureChannelNumber  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.3.1.19  
**Description** Identifies the channel number, or bus, to which the enclosure is connected.  
**Syntax** Integer  
**Access** Read-only

**Table 1494. Enclosure Alarm**

<b>Name</b>	enclosureAlarm
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.20
<b>Description</b>	Identifies the current status of the enclosure's alarm (PowerVault 220S and PowerVault 221S only.) Possible values: 1: Disabled 2: Enabled
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1495. Enclosure Backplane Part Number**

<b>Name</b>	enclosureBackplanePartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.21
<b>Description</b>	Identifies the part number of the enclosure's backplane.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1496. Enclosure SCSI ID**

<b>Name</b>	enclosureSCSIID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.22
<b>Description</b>	Identifies the SCSI ID of the controller to which this enclosure is attached.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1497. Enclosure Roll-Up Status**

<b>Name</b>	enclosureRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.23
<b>Description</b>	Identifies the severity of the enclosure state. This is the combined status of the enclosure and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1498. Enclosure Component Status**

<b>Name</b>	enclosureComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.24
<b>Description</b>	The status of the enclosure itself without the propagation of any contained component status.

Possible values:  
1: Other  
2: Unknown  
3: OK  
4: Non-critical  
5: Critical  
6: Non-recoverable

**Syntax** DellStatus  
**Access** Read-only

#### Table 1499. Enclosure Nexus ID

**Name** enclosureNexusID  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.3.1.25  
**Description** Durable unique ID for this enclosure.  
**Syntax** Integer  
**Access** Read-only

#### Table 1500. Enclosure FirmWare Version

**Name** enclosureFirmwareVersion  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.3.1.26  
**Description** The firmware version of the enclosure.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1501. Enclosure SCSI Rate

**Name** enclosureSCSIRate  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.3.1.27  
**Description** Actual SCSI rate in the enclosure.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1502. Enclosure Part Number

**Name** enclosurePartNumber  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.3.1.28  
**Description** The part number of the enclosure.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1503. Enclosure Serial Number

**Name** enclosureSerialNumber  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.3.1.29  
**Description** Serial number of the enclosure.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1504. Enclosure SAS Address

<b>Name</b>	enclosureSASAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.30
<b>Description</b>	The specified SAS address if this is a SAS enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1505. Enclosure Occupied Slot Count

<b>Name</b>	enclosureOccupiedSlotCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.31
<b>Description</b>	Shows the number of physical disk slots occupied in a storage enclosure.  <b>NOTE: A value of 9999 indicates that the feature is not available.</b>
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1506. Enclosure Total Slots

<b>Name</b>	enclosureTotalSlots
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.32
<b>Description</b>	Shows the total number of physical slots in a storage enclosure; it includes total count of occupied and empty slots.  <b>NOTE: A value of 9999 indicates that the feature is not available.</b>
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1507. Enclosure Empty Slot Count

<b>Name</b>	enclosureEmptySlotCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.33
<b>Description</b>	Shows the number of empty physical disk slots in a storage enclosure.  <b>NOTE: A value of 9999 indicates that the feature is not available</b>
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Array Disk Table

This table describes available properties for each physical array disk on the managed system.

The following object sets up the Array Disk Table.

#### Table 1508. Array Disk Table

<b>Name</b>	arrayDiskTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4
<b>Description</b>	Defines the array disk table.
<b>Syntax</b>	SEQUENCE OF ArrayDiskEntry
<b>Access</b>	Not accessible

### Table 1509. Array Disk Entry

<b>Name</b>	arrayDiskEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1
<b>Description</b>	Defines the array disk table entry.
<b>Syntax</b>	ArrayDiskEntry
<b>Access</b>	Not accessible
<b>Index</b>	arrayDiskNumber

### Table 1510. Array Disk Number

<b>Name</b>	arrayDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.1
<b>Description</b>	Identifies the instance number of the array disk entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Table 1511. Array Disk Name

<b>Name</b>	arrayDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.2
<b>Description</b>	Identifies the name of the array disk as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Table 1512. Array Disk Vendor

<b>Name</b>	arrayDiskVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.3
<b>Description</b>	The array disk's manufacturer's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Table 1513. Array Disk State

<b>Name</b>	arrayDiskState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.4
<b>Description</b>	Identifies the current state of the array disk. Possible states: 0: Unknown 1: Ready - Available for use, but no RAID configuration has been assigned. 2: Failed - Not operational. 3: Online - Operational. RAID configuration has been assigned. 4: Offline - The drive is not available to the RAID controller. 6: Degraded - Refers to a fault-tolerant array/virtual disk that has a failed disk. 7: Recovering - Refers to state of recovering from bad blocks on disks. 11: Removed - Indicates that array disk has been removed. 13: Non-RAID - Indicates that array disk is not a RAID capable disk. 14: Not Ready - Applicable for PCIeSSD devices indicating that the device is in locked state.

	15: Resynching - Indicates one of the following types of disk operations: Transform Type, Reconfiguration, and Check Consistency.
	22: Replacing - Indicates copyback operation is in progress.
	24: Rebuild
	25: No Media - CD-ROM or removable disk has no media.
	26: Formatting - In the process of formatting.
	28: Diagnostics - Diagnostics are running.
	34: Predictive Failure
	35: Initializing: Applies only to virtual disks on PERC, PERC 2/SC, and PERC 2/DC controllers.
	39: Foreign
	40: Clear
	41: Unsupported
	53: Incompatible
	56: Read Only - Applicable for PCIeSSD devices. Indicates that device has reached read-only state.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1514. Array Disk Severity**

<b>Name</b>	arrayDiskSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1515. Array Disk Product ID**

<b>Name</b>	arrayDiskProductID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.6
<b>Description</b>	Identifies the model number of the array disk.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1516. Array Disk Serial Number**

<b>Name</b>	arrayDiskSerialNo
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.7
<b>Description</b>	Identifies the array disk's unique identification number from the manufacturer.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1517. Array Disk Revision**

<b>Name</b>	arrayDiskRevision
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.8
<b>Description</b>	Identifies the firmware version of the array disk.
<b>Syntax</b>	DisplayString

**Access** Read-only

#### Table 1518. Array Disk Enclosure ID

**Name** arrayDiskEnclosureID  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.9  
**Description** Identifies the SCSI ID of the enclosure processor to which this array disk belongs.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1519. Array Disk Channel

**Name** arrayDiskChannel  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.10  
**Description** Identifies the bus to which this array disk is connected.  
**Syntax** Integer  
**Access** Read-only

#### Table 1520. Array Disk Length in Megabytes

**Name** arrayDiskLengthInMB  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.11  
**Description** Identifies the size in megabytes of the array disk. If this size is 0, it is smaller than a megabyte.  
**Syntax** Integer  
**Access** Read-only

#### Table 1521. Array Disk Length in Bytes

**Name** arrayDiskLengthInBytes  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.12  
**Description** Identifies the size of the array disk in bytes that is less than a megabyte. This size plus the arrayDiskLengthInMB is the total size of the array disk.  
**Syntax** Integer  
**Access** Read-only

#### Table 1522. Array Disk Largest Contiguous Free Space in Megabytes

**Name** arrayDiskLargestContiguousFreeSpaceInMB  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.13  
**Description** The size in megabytes of the largest contiguous free space on the array disk. If this size is 0, it is less than a megabyte.  
**Syntax** Integer  
**Access** Read-only

#### Table 1523. Array Disk Largest Contiguous Free Space in Bytes

**Name** arrayDiskLargestContiguousFreeSpaceInBytes  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.14  
**Description** The size of the largest contiguous free space on this array disk in bytes that is less than a megabyte. This size plus the arrayDiskLargestContiguousFreeSpaceInMB is the total size of the largest contiguous free space on the array disk.  
**Syntax** Integer

**Access** Read-only

#### Table 1524. Array Disk Target ID

**Name** arrayDiskTargetID  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.15  
**Description** Identifies the SCSI target ID which this array disk is assigned.  
**Syntax** Integer  
**Access** Read-only

#### Table 1525. Array Disk LUN ID

**Name** arrayDiskLunID  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.16  
**Description** Identifies the array disk's logical unit number.  
**Syntax** Integer  
**Access** Read-only

#### Table 1526. Array Disk Used Space in Megabytes

**Name** arrayDiskUsedSpaceInMB  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.17  
**Description** Identifies the amount in megabytes of the used space on the array disk. If this size is 0, it is smaller than a megabyte.  
**Syntax** Integer  
**Access** Read-only

#### Table 1527. Array Disk Used Space in Bytes

**Name** arrayDiskUsedSpaceInBytes  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.18  
**Description** Identifies the size in bytes of the used space on the array disk that is smaller than a megabyte. This size plus the arrayDiskUsedSpaceInMB is the total amount of used space on the array disk.  
**Syntax** Integer  
**Access** Read-only

#### Table 1528. Array Disk Free Space in Megabytes

**Name** arrayDiskFreeSpaceInMB  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.19  
**Description** Identifies the amount in megabytes of the free space on the array disk. If this size is 0, it is smaller than a megabyte.  
**Syntax** Integer  
**Access** Read-only

#### Table 1529. Array Disk Free Space in Bytes

**Name** arrayDiskFreeSpaceInBytes  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.20  
**Description** Identifies the size in bytes of the free space on the array disk that is smaller than a megabyte. This size plus the arrayDiskFreeSpaceInMB is the total amount of free space on the array disk.

<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1530. Array Disk Bus Type

<b>Name</b>	arrayDiskBusType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.21
<b>Description</b>	Identifies the bus type of the array disk.  Possible values: 1: SCSI 2: IDE 3: Fibre Channel 4: SSA 6: USB 7: SATA 8: SAS 9: PCIe
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1531. Array Disk Spare State

<b>Name</b>	arrayDiskSpareState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.22
<b>Description</b>	Identifies the status of the array disk as a spare.  Possible states: 1: Disk is a member of a virtual disk 2: Disk is a member of a disk group 3: Disk is a global hot spare 4: Disk is a dedicated hot spare 5: Not a spare 99: Not applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1532. Array Disk Roll-Up Status

<b>Name</b>	arrayDiskRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.23
<b>Description</b>	Severity of the array disk state. This is the combined status of the array disk and its components.  Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical

	6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1533. Array Disk Component Status**

<b>Name</b>	arrayDiskComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.24
<b>Description</b>	The status of the array disk itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1534. Array Disk Device Name**

<b>Name</b>	arrayDiskDeviceName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.25
<b>Description</b>	Identifies the operating system device name for this disk.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1535. Array Disk Nexus ID**

<b>Name</b>	arrayDiskNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.26
<b>Description</b>	Indicates the durable unique ID for this array disk.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1536. Array Disk Part Number**

<b>Name</b>	arrayDiskPartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.27
<b>Description</b>	Indicates the part number of the disk.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1537. Array Disk SAS Address**

<b>Name</b>	arrayDiskSASAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.28
<b>Description</b>	Indicates the specified SAS address if this is a SAS disk.
<b>Syntax</b>	DisplayString

**Access** Read-only

#### Table 1538. Array Disk Negotiated Speed

**Name** arrayDiskNegotiatedSpeed  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.29  
**Description** Indicates the speed at which the drive is actually running in MPS (megabytes per second).  
**Syntax** Integer  
**Access** Read-only

#### Table 1539. Array Disk Capable Speed

**Name** arrayDiskCapableSpeed  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.30  
**Description** Indicates the maximum speed at which the drive is capable of negotiating in MPS (megabytes per second).  
**Syntax** Integer  
**Access** Read-only

#### Table 1540. Array Disk Smart Alert Indication

**Name** arrayDiskSmartAlertIndication  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.31  
**Description** Indicates whether the disk has received a predictive failure.  
Possible values:  
1: No - disk has not received a predictive failure alert  
2: Yes - disk has received a predictive failure alert  
**Syntax** Integer  
**Access** Read-only

#### Table 1541. Array Disk Manufacture Day

**Name** arrayDiskManufactureDay  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.32  
**Description** Indicates the day of the week (1=Sunday through 7=Saturday) on which this disk was manufactured.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1542. Array Disk Manufacture Week

**Name** arrayDiskManufactureWeek  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.33  
**Description** Indicates the week (1 through 53) in which this disk was manufactured.  
**Syntax** DisplayString  
**Access** Read-only

#### Table 1543. Array Disk Manufacture Year

**Name** arrayDiskManufactureYear  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.130.4.1.34

<b>Description</b>	Indicates the four digit year in which this disk was manufactured.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1544. Array Disk Media Type**

<b>Name</b>	arrayDiskMediaType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.35
<b>Description</b>	The Media type of the array disk. Possible Values: 1:unknown 2:hdd 3:ssd
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1545. Array Disk Dell Certified**

<b>Name</b>	arrayDiskDellCertified
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.36
<b>Description</b>	Indicates if array disk is certified by Dell. Value: 1 - Certified, 0 - Not Certified, 99 - Unknown
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1546. Array Disk Alta Vendor Id**

<b>Name</b>	arrayDiskAltaVendorId
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.37
<b>Description</b>	Provides vendor information for Alta interposer.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 1547. Array Disk Alta Product Id**

<b>Name</b>	arrayDiskAltaProductId
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.38
<b>Description</b>	Provides product ID for Alta interposer.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 1548. Array Disk Alta Revision Id**

<b>Name</b>	arrayDiskAltaRevisionId
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.39
<b>Description</b>	Provides revision ID for Alta interposer.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 1549. Array Disk Encryption Capable**

<b>Name</b>	arrayDiskEncryptionCapable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.40
<b>Description</b>	Indicates if physical disk is encryption capable. Value: 1 - Capable, 0 - Not Capable, 99 - Not Applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1550. Array Disk Encrypted**

<b>Name</b>	arrayDiskEncrypted
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.41
<b>Description</b>	Indicates if the physical disk has encryption enabled. Value: 1 - Yes, 0 - No, 99 - Not Applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1551. Array Disk Power State**

<b>Name</b>	arrayDiskPowerState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.42
<b>Description</b>	Indicates power state of a physical drive. Value: 0 - Spun up, 1- Spun down, 255 - Transition, 99 - Not Applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1552. Array Disk Drive Write Cache**

<b>Name</b>	arrayDiskDriveWriteCache
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.43
<b>Description</b>	Indicates drive write cache capability for PCIe SSD devices. Value: 1 - Enabled, 0 - Disabled, 99 - Undetermined/NotApplicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1553. Array Disk Model Number**

<b>Name</b>	arrayDiskModelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.44
<b>Description</b>	Provides PCIe SSD device model number.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1554. Array Disk Life Remaining**

<b>Name</b>	arrayDiskLifeRemaining
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.45
<b>Description</b>	Provides PCIe SSD device life remaining in percentage. Value: 0..100, 999 - Undetermined/Not Applicable
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1555. Array Disk Driver Version

<b>Name</b>	arrayDiskDriverVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.46
<b>Description</b>	Provides PCIe SSD device driver version.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1556. Array Disk Device Life Status

<b>Name</b>	arrayDiskDeviceLifeStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.47
<b>Description</b>	Provides PCIe SSD device life status. Possible Values: -1: Not Available / Not Applicable 1: Drive Health Good 2: Approaching Warranty Coverage Expiry 3: Warranty Coverage Expired 4: Approaching Read Only 5: Read Only
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1557. Array Disk Read Only

<b>Name</b>	arrayDiskReadOnly
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.48
<b>Description</b>	Provides the read only attribute for PCIe SSD. Possible Values: Yes, No, Not Applicable
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1558. Array Disk Remaining Rated Write Endurance

<b>Name</b>	arrayDiskRemainingRatedWriteEndurance
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.49
<b>Description</b>	Provides the remaining rated write endurance for SAS/SATA SSD device. Possible Values: 0-100% : Not Available / Not Applicable
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1559. Array Disk Sector Size

<b>Name</b>	arrayDiskSectorSize
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.50
<b>Description</b>	Provides the information regarding sector size of the array disk.

	Possible Values: 512 or 4096
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1560. Array Disk PI Capable

<b>Name</b>	arrayDiskPICapable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.51
<b>Description</b>	Provides the information regarding T10 PI capability of array disk. Possible Values: 0 : T10 PI incapable or 1 : T10 PI capable
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1561. Array Disk Max Link Width

<b>Name</b>	arrayDiskMaxLinkWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.52
<b>Description</b>	Provides the information regarding Max Link Width of array disk. Possible Values: 0 – 8
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1562. Array Disk Negotiated Link Width

<b>Name</b>	arrayDiskNegotiatedLinkWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.53
<b>Description</b>	Provides the information regarding Negotiated Link Width of array disk. Possible Values: 0 – 8
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1563. Non-RAID Disk Cache Policy

<b>Name</b>	nonRAIDdiskCachePolicy
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.54
<b>Description</b>	Displays the current disk write cache policy of the Non-RAID disk. Possible Values: Enabled - Disabled
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1564. Array Disk Cache Policy

<b>Name</b>	arraydiskCachePolicy
-------------	----------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.55
<b>Description</b>	Displays the current disk write cache policy of the array disk. Possible Values: Enabled - Disabled - Default
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Array Disk Enclosure Connection Table

This table describes the connections among array disks, their enclosure, and their associated controller. For each object in the table, its object number corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.

 **NOTE: Only array disks that are part of an enclosure are listed in this table. Backplanes are considered enclosures by Storage Management.**

The following object sets up the Array Disk Enclosure Connection Table.

### Table 1565. Array Disk Enclosure Connection Table

<b>Name</b>	arrayDiskEnclosureConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5
<b>Description</b>	Defines the array disk enclosure connection table.
<b>Syntax</b>	SEQUENCE OF ArrayDiskEnclosureConnectionEntry
<b>Access</b>	Not accessible

### Table 1566. Array Disk Enclosure Connection Entry

<b>Name</b>	arrayDiskEnclosureConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1
<b>Description</b>	Defines the array disk enclosure connection table entry.
<b>Syntax</b>	Syntax ArrayDiskEnclosureConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	Index arrayDiskEnclosureConnectionNumber

### Table 1567. Array Disk Enclosure Connection Number

<b>Name</b>	arrayDiskEnclosureConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.1
<b>Description</b>	Identifies the instance number of the array disk enclosure connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Table 1568. Array Disk Enclosure Connection Array Disk Name

<b>Name</b>	arrayDiskEnclosureConnectionArrayDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.2
<b>Description</b>	Identifies the name of the array disk in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1569. Array Disk Enclosure Connection Array Disk Number**

<b>Name</b>	arrayDiskEnclosureConnectionArrayDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.3
<b>Description</b>	Identifies the instance number of the array disk in the arrayDiskTable in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1570. Array Disk Enclosure Connection Enclosure Name**

<b>Name</b>	arrayDiskEnclosureConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this array disk belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1571. Array Disk Enclosure Connection Enclosure Number**

<b>Name</b>	arrayDiskEnclosureConnectionEnclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.5
<b>Description</b>	Identifies the instance number in the enclosureTable of the enclosure to which this array disk belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1572. Array Disk Enclosure Connection Controller Name**

<b>Name</b>	arrayDiskEnclosureConnectionControllerName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.6
<b>Description</b>	Identifies the name of the controller as represented in Storage Management to which this array disk is connected.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1573. Array Disk Enclosure Connection Controller Number**

<b>Name</b>	arrayDiskEnclosureConnectionControllerNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.7
<b>Description</b>	Identifies the instance number in the controller, table of the controller to which this array disk is connected.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Array Disk Channel Connection Table

This table describes the connections between array disks, their channel, and their associated controller. For each object in the table, its object number corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.

**NOTE:** Only array disks that are NOT part of an enclosure are listed in this table. Backplanes are considered enclosures by Storage Management.

The following object sets up the Array Disk Channel Connection Table.

**Table 1574. Array Disk Channel Connection Table**

<b>Name</b>	<code>arrayDiskChannelConnectionTable</code>
<b>Object ID</b>	<code>1.3.6.1.4.1.674.10893.1.20.130.6</code>
<b>Description</b>	Defines the array disk channel connection table.
<b>Syntax</b>	<code>SEQUENCE OF ArrayDiskChannelConnectionEntry</code>
<b>Access</b>	Not accessible

**Table 1575. Array Disk Channel Connection Entry**

<b>Name</b>	<code>arrayDiskChannelConnectionEntry</code>
<b>Object ID</b>	<code>1.3.6.1.4.1.674.10893.1.20.130.6.1</code>
<b>Description</b>	Defines the array disk channel connection table entry.
<b>Syntax</b>	<code>ArrayDiskChannelConnectionEntry</code>
<b>Access</b>	Not accessible
<b>Index</b>	<code>arrayDiskEnclosureConnectionNumber</code>

**Table 1576. Array Disk Channel Connection Number**

<b>Name</b>	<code>arrayDiskChannelConnectionNumber</code>
<b>Object ID</b>	<code>1.3.6.1.4.1.674.10893.1.20.130.6.1.1</code>
<b>Description</b>	Identifies the instance number of the array disk channel connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1577. Array Disk Channel Connection Array Disk Name**

<b>Name</b>	<code>arrayDiskChannelConnectionArrayDiskName</code>
<b>Object ID</b>	<code>1.3.6.1.4.1.674.10893.1.20.130.6.1.2</code>
<b>Description</b>	Identifies the name of the array disk in this connection as represented in Storage Management.
<b>Syntax</b>	<code>DisplayString</code>
<b>Access</b>	Read-only

**Table 1578. Array Disk Channel Connection Array Disk Number**

<b>Name</b>	<code>arrayDiskChannelConnectionArrayDiskNumber</code>
<b>Object ID</b>	<code>1.3.6.1.4.1.674.10893.1.20.130.6.1.3</code>
<b>Description</b>	Identifies the instance number of the array disk in the <code>arrayDiskTable</code> in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1579. Array Disk Channel Connection Channel Name**

<b>Name</b>	<code>arrayDiskChannelConnectionChannelName</code>
-------------	--

<b>Object ID</b>	<b>1.3.6.1.4.1.674.10893.1.20.130.6.1.4</b>
<b>Description</b>	<b>Identifies the name of the channel as represented in Storage Management to which is array disk is connected.</b>
<b>Syntax</b>	<b>DisplayString</b>
<b>Access</b>	<b>Read-only</b>

**Table 1580. Array Disk Channel Connection Channel Number**

<b>Name</b>	<b>arrayDiskChannelConnectionChannelNumber</b>
<b>Object ID</b>	<b>1.3.6.1.4.1.674.10893.1.20.130.6.1.5</b>
<b>Description</b>	<b>Identifies the instance number of the channel in the channelTable to which this array disk is connected.</b>
<b>Syntax</b>	<b>Integer</b>
<b>Access</b>	<b>Read-only</b>

**Table 1581. Array Disk Channel Connection Controller Name**

<b>Name</b>	<b>arrayDiskChannelConnectionControllerName</b>
<b>Object ID</b>	<b>1.3.6.1.4.1.674.10893.1.20.130.6.1.6</b>
<b>Description</b>	<b>Identifies the name of the controller as represented in Storage Management to which this array disk is connected.</b>
<b>Syntax</b>	<b>DisplayString</b>
<b>Access</b>	<b>Read-only</b>

**Table 1582. Array Disk Channel Connection Controller Number**

<b>Name</b>	<b>arrayDiskChannelConnectionControllerNumber</b>
<b>Object ID</b>	<b>1.3.6.1.4.1.674.10893.1.20.130.6.1.7</b>
<b>Description</b>	<b>Identifies the instance number in the controllerTable of the controller to which this array disk is connected.</b>
<b>Syntax</b>	<b>Integer</b>
<b>Access</b>	<b>Read-only</b>

## Fan Table

This table describes available properties for each fan on the managed system.

The following object sets up the Fan Table.

**Table 1583. Fan Table**

<b>Name</b>	<b>fanTable</b>
<b>Object ID</b>	<b>1.3.6.1.4.1.674.10893.1.20.130.7</b>
<b>Description</b>	<b>Defines the fan table.</b>
<b>Syntax</b>	<b>SEQUENCE OF FanEntry</b>
<b>Access</b>	<b>Not accessible</b>

#### Table 1584. Fan Entry

<b>Name</b>	fanEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1
<b>Description</b>	Defines the fan table entry.
<b>Syntax</b>	FanEntry
<b>Access</b>	Not accessible
<b>Index</b>	fanNumber

#### Table 1585. Fan Number

<b>Name</b>	fanNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.1
<b>Description</b>	Identifies the instance number of the fan entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1586. Fan Name

<b>Name</b>	fanName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.2
<b>Description</b>	Identifies the fan's name as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1587. Fan Vendor

<b>Name</b>	fanVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.3
<b>Description</b>	Identifies the fan's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1588. Fan State

<b>Name</b>	fanState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.4
<b>Description</b>	Identifies the current state of the fan. Possible states: 0: Unknown 1: Ready 2: Failed 3: Online 4: Offline 6: Degraded 21: Missing
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1589. Fan Severity**

<b>Name</b>	fanSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1590. Fan Probe Unit**

<b>Name</b>	fanProbeUnit
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.6
<b>Description</b>	This entry is obsolete for Storage Services.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1591. Fan Probe Minimum Warning**

<b>Name</b>	fanProbeMinimumWarning
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.7
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1592. Fan Probe Minimum Critical**

<b>Name</b>	fanProbeMinimumCritical
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.8
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1593. Fan Probe Maximum Warning**

<b>Name</b>	fanProbeMaximumWarning
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.9
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1594. Fan Probe Maximum Critical**

<b>Name</b>	fanProbeMaximumCritical
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.10
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1595. Fan Probe Current Value

<b>Name</b>	fanProbeCurrValue
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.11
<b>Description</b>	Identifies the current speed of the fan.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1596. Fan1 Part Number

<b>Name</b>	fan1PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.12
<b>Description</b>	Identifies the part number of the fan in the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1597. Fan 2 Part Number

<b>Name</b>	fan2PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.13
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1598. Fan Roll-Up Status

<b>Name</b>	fanRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.14
<b>Description</b>	Severity of the fan state. This is the combined status of the fan and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1599. Fan Component Status

<b>Name</b>	fanComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.15
<b>Description</b>	The status of the fan itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK

	4: Non-critical
	5: Critical
	6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1600. Fan Nexus ID

<b>Name</b>	fanNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.16
<b>Description</b>	Durable unique ID for this fan.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1601. Fan Revision

<b>Name</b>	fanRevision
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.17
<b>Description</b>	Indicates the revision number of the fan in the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan Connection Table

This table describes the connection between each fan on the managed system and its enclosure. Each enclosure number in the table corresponds to that enclosure instance in the enclosure Table.

The following object sets up the Fan Connection Table.

#### Table 1602. Fan Connection Table

<b>Name</b>	fanConnectionTable
<b>Object ID</b>	fanConnectionTable
<b>Description</b>	Defines the fan connection table.
<b>Syntax</b>	SEQUENCE OF FanConnectionEntry
<b>Access</b>	Not accessible

#### Table 1603. Fan Connection Entry

<b>Name</b>	fanConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1
<b>Description</b>	Defines the fan connection table entry.
<b>Syntax</b>	FanConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	fanConnectionNumber

#### Table 1604. Fan Connection Number

<b>Name</b>	fanConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.1
<b>Description</b>	Identifies the instance number of the fan connection entry.

<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1605. Fan Connection Fan Name

<b>Name</b>	fanConnectionFanName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.2
<b>Description</b>	Identifies the name of the fan in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1606. Fan Connection Fan Number

<b>Name</b>	fanConnectionFanNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.3
<b>Description</b>	Identifies the instance number of the fan in the fanTable in the connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1607. Fan Connection Enclosure Name

<b>Name</b>	fanConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this fan belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1608. Fan Connection Enclosure Number

<b>Name</b>	fanConnectionEnclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.5
<b>Description</b>	Identifies the instance number of the enclosure in the enclosureTable to which this fan belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Power Supply Table

#### Table 1609. Power Supply Table

<b>Name</b>	powerSupplyTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12
<b>Description</b>	Defines the Power Supply Table.
<b>Syntax</b>	PowerSupplyTableEntry
<b>Access</b>	Not accessible

#### Table 1610. Power Supply Table Entry

<b>Name</b>	powerSupplyTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1
<b>Description</b>	Defines the Power Supply Table entry.

<b>Syntax</b>	PowerSupplyTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	powerSupplychassisIndex, powerSupplyIndex

#### Table 1611. Power Supply Chassis Index

<b>Name</b>	powerSupplychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1612. Power Supply Index

<b>Name</b>	powerSupplyIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.2
<b>Description</b>	Defines the index of power supply.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

#### Table 1613. Power Supply State Capabilities Unique

<b>Name</b>	powerSupplyStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.3
<b>Description</b>	Defines the capabilities of the power supply.
<b>Syntax</b>	DellPowerSupplyStateCapabilitiesUnique ( <a href="#">Power Supply State Capabilities Unique</a> )
<b>Access</b>	Read-only

#### Table 1614. Power Supply State Settings Unique

<b>Name</b>	powerSupplyStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.4
<b>Description</b>	Defines the state and settings of the power supply.
<b>Syntax</b>	DellPowerSupplyStateSettingsUnique ( <a href="#">Power Supply State Settings Unique</a> )
<b>Access</b>	Read-only

#### Table 1615. Power Supply Status

<b>Name</b>	powerSupplyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.5
<b>Description</b>	Defines the status of the power supply.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1616. Power Supply Output Watts

<b>Name</b>	powerSupplyOutputWatts
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.6
<b>Description</b>	Defines the maximum sustained output wattage of the power supply in tenths of watts.
<b>Syntax</b>	DellSigned32BitRange

**Access** Read-only

#### Table 1617. Power Supply Type

**Name** powerSupplyType  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.12.1.7  
**Description** Defines the type of power supply.  
**Syntax** DellPowerSupplyType ([Power Supply Type Definitions](#))  
**Access** Read-only

#### Table 1618. Power Supply Location Name

**Name** powerSupplyLocationName  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.12.1.8  
**Description** Defines the location name of the power supply.  
**Syntax** DellString  
**Access** Read-only

#### Table 1619. Power Supply Maximum Input Voltage

**Name** powerSupplyMaximumInputVoltage  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.12.1.9  
**Description** This attribute defines the maximum input voltage of the power supply (in Volts).  
**Syntax** DellSigned32BitRange  
**Access** Read-only

#### Table 1620. Power Supply Power Unit Index Reference

**Name** powerSupplypowerUnitIndexReference  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.12.1.10  
**Description** Defines the index to the associated system power unit in this chassis.  
**Syntax** DellObjectRange  
**Access** Read-only

#### Table 1621. Power Supply Sensor State

**Name** powerSupplySensorState  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.12.1.11  
**Description** Defines the state reported by the power supply sensor, and supplements the state and settings of the power supply.  
**Syntax** DellPowerSupplySensorState ([Power Supply Sensor State](#))  
**Access** Read-only

#### Table 1622. Power Supply Configuration Error Type

**Name** powerSupplyConfigurationErrorType  
**Object ID** 1.3.6.1.4.1.674.10892.1.600.12.1.12  
**Description** Defines the type of configuration error reported by the power supply sensor.  
**Syntax** DellPowerSupplyConfigurationErrorType ([Power Supply Configuration Error Type](#))  
**Access** Read-only

**Table 1623. Power Supply Power Monitor Capable**

<b>Name</b>	powerSupplyPowerMonitorCapable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.13
<b>Description</b>	Defines a boolean value that reports whether the power supply is capable of monitoring power consumption.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

**Table 1624. Power Supply Rated Input Wattage**

<b>Name</b>	powerSupplyRatedInputWattage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.14
<b>Description</b>	Defines the rated input wattage of the power supply (in tenths of Watts.)
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 1625. Power Supply FQDD**

<b>Name</b>	powerSupplyFQDD
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.15
<b>Description</b>	Fully qualified device descriptor (FQDD) of the power supply.
<b>Syntax</b>	FQDDString
<b>Access</b>	Read-only

**Table 1626. Power Supply Current Input Voltage**

<b>Name</b>	powerSupplyCurrentInputVoltage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.16
<b>Description</b>	This attribute defines the current input voltage to the power supply (in Volts).
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

## Power Supply Connection Table

This table describes the connection between each power supply on the managed system and its enclosure. Each enclosure number in the table corresponds to that enclosure instance in the enclosure Table.

The following object sets up the Power Supply Connection Table.

**Table 1627. Power Supply Connection Table**

<b>Name</b>	powerSupplyConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10
<b>Description</b>	Defines the power supply connection table.
<b>Syntax</b>	SEQUENCE OF PowerSupplyConnectionEntry
<b>Access</b>	Not accessible

**Table 1628. Power Supply Connection Entry**

<b>Name</b>	powerSupplyConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1

<b>Description</b>	Defines the power supply connection table entry.
<b>Syntax</b>	PowerSupplyConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	powerSupplyConnectionNumber

#### Table 1629. Power Supply Connection Number

<b>Name</b>	powerSupplyConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.1
<b>Description</b>	Identifies the instance number of the power supply connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1630. Power Supply Connection Power Supply Name

<b>Name</b>	powerSupplyConnectionPowerSupplyName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.2
<b>Description</b>	Identifies the name of the power supply in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1631. Power Supply Connection Power Supply Number

<b>Name</b>	powerSupplyConnectionPowerSupplyNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.3
<b>Description</b>	Identifies the instance number of the power supply in the powerSupplyTable in the connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1632. Power Supply Connection Enclosure Name

<b>Name</b>	powerSupplyConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this power supply belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1633. Power Supply Connection Enclosure Number

<b>Name</b>	powerSupplyConnectionEnclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.5
<b>Description</b>	Identifies the instance number of the enclosure in the enclosureTable to which this power supply belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1634. Power Supply Connection Firmware Version

<b>Name</b>	powerSupplyConnectionFirmwareVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.6

<b>Description</b>	Displays power supply connection firmware version.  <b>NOTE:</b> Available above 1.04 firmware version.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Temperature Probe Table

**Table 1635. Temperature Probe Table**

<b>Name</b>	temperatureProbeTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20
<b>Description</b>	Defines the Temperature Probe Table.
<b>Syntax</b>	TemperatureProbeTableEntry
<b>Access</b>	Not accessible

**Table 1636. Temperature Probe Table Entry**

<b>Name</b>	temperatureProbeTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1
<b>Description</b>	Defines the Temperature Probe Table entry.
<b>Syntax</b>	TemperatureProbeTableEntry
<b>Access</b>	Not accessible

<b>Index</b>	temperatureProbechassisIndex
	,
	temperatureProbeIndex

**Table 1637. Temperature Probe Chassis Index**

<b>Name</b>	temperatureProbechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1638. Temperature Probe Index**

<b>Name</b>	temperatureProbeIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.2
<b>Description</b>	Defines the index of temperature probes in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

**Table 1639. Temperature Probe State Capabilities**

<b>Name</b>	temperatureProbeStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.3

<b>Description</b>	Defines the capabilities of the temperature probe.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

**Table 1640. Temperature Probe State Settings**

<b>Name</b>	temperatureProbeStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.4
<b>Description</b>	Defines the state and settings of the temperature probe.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

**Table 1641. Temperature Probe Status**

<b>Name</b>	temperatureProbeStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.5
<b>Description</b>	Defines the status of the temperature probe in tenths of degrees Celsius.
<b>Syntax</b>	DellStatusProbe
<b>Access</b>	Read-only

**Table 1642. Temperature Probe Reading**

<b>Name</b>	temperatureProbeReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.6
<b>Description</b>	Defines the value of the temperature probe.  When the value for temperatureProbeType is other than temperatureProbeTypesDiscrete, the value returned for this attribute is the temperature that the probe is reading in tenths of degrees Centigrade. When the value for temperatureProbeType is temperatureProbeTypesDiscrete, a value is not returned for this attribute.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 1643. Temperature Probe Type**

<b>Name</b>	temperatureProbeType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.7
<b>Description</b>	Defines the temperature probe type.
<b>Syntax</b>	DellTemperatureProbeType ( <a href="#">Temperature Probe Type</a> )
<b>Access</b>	Read-only

**Table 1644. Temperature Probe Location Name**

<b>Name</b>	temperatureProbeLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.8
<b>Description</b>	Defines the location of the temperature probe in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

**Table 1645. Temperature Probe Upper Nonrecoverable Threshold**

<b>Name</b>	temperatureProbeUpperNonRecoverableThreshold
-------------	--

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.9
<b>Description</b>	Defines the value of the temperature probe's upper nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 1646. Temperature Probe Upper Critical Threshold**

<b>Name</b>	temperatureProbeUpperCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.10
<b>Description</b>	Defines the value of the temperature probe's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 1647. Temperature Probe Upper Noncritical Threshold**

<b>Name</b>	temperatureProbeUpperNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.11
<b>Description</b>	Defines the user-assigned value of the temperature probe's upper noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 1648. Temperature Probe Lower Noncritical Threshold**

<b>Name</b>	temperatureProbeLowerNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.12
<b>Description</b>	Defines the user-assigned value of the temperature probe's lower noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 1649. Temperature Probe Lower Critical Threshold**

<b>Name</b>	temperatureProbeLowerCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.13
<b>Description</b>	Defines the value of the temperature probe's lower critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 1650. Temperature Probe Lower Nonrecoverable Threshold**

<b>Name</b>	temperatureProbeLowerNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.14
<b>Description</b>	Defines the value of the temperature probe's lower nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

**Table 1651. Temperature Probe Probe Capabilities**

<b>Name</b>	temperatureProbeProbeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.15
<b>Description</b>	Defines the probe capabilities of the temperature probe.

<b>Syntax</b>	DellProbeCapabilities
<b>Access</b>	Read-only

#### Table 1652. Temperature Probe Discrete Reading

<b>Name</b>	temperatureProbeDiscreteReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.16
<b>Description</b>	Defines the reading for a temperature probe of type temperatureProbeTypelsDiscrete. When the value for temperatureProbeType is other than temperatureProbeTypelsDiscrete, a value is not returned for this attribute. When the value for temperatureProbeType is temperatureProbeTypelsDiscrete, the value returned for this attribute is the discrete reading for the probe.
<b>Syntax</b>	DellTemperatureDiscreteReading ( <a href="#">Temperature Probe Discrete Reading</a> )
<b>Access</b>	Read-only

## Temperature Probe Connection Table

This table describes the connection between each temperature probe on the managed system and its enclosure. Each enclosure number in the table corresponds to that enclosure instance in the enclosure Table.

The following object sets up the Temperature Probe Connection Table.

#### Table 1653. Temperature Probe Connection Table

<b>Name</b>	temperatureConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12
<b>Description</b>	Defines the temperature probe connection table.
<b>Syntax</b>	SEQUENCE OF TemperatureConnectionEntry
<b>Access</b>	Not accessible

#### Table 1654. Temperature Probe Connection Entry

<b>Name</b>	temperatureConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1
<b>Description</b>	Defines the temperature probe connection table entry. ber
<b>Syntax</b>	TemperatureConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	temperatureConnectionNumber

#### Table 1655. Temperature Probe Connection Number

<b>Name</b>	temperatureConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.1
<b>Description</b>	Identifies the instance number of the temperature probe connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1656. Temperature Probe Connection Temperature Probe Name

<b>Name</b>	temperatureConnectionTemperatureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.2

<b>Description</b>	Identifies the name of the temperature probe in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1657. Temperature Probe Connection Temperature Probe Number**

<b>Name</b>	temperatureConnectionTemperatureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.3
<b>Description</b>	Identifies the instance number in the temperatureTable of the temperature probe in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1658. Temperature Probe Connection Enclosure Name**

<b>Name</b>	temperatureConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this temperature probe belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1659. Temperature Probe Connection Enclosure Number**

<b>Name</b>	temperatureConnectionEnclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.5
<b>Description</b>	Identifies the instance number of the enclosure in the enclosureTable to which this temperature probe belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Enclosure Management Module Table

This table describes available properties for each enclosure management module on the managed system.

The following object sets up the Enclosure Management Module Table.

**Table 1660. Enclosure Management Module Table**

<b>Name</b>	enclosureManagementModuleTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13
<b>Description</b>	Defines the enclosure management module table.
<b>Syntax</b>	SEQUENCE OF EnclosureManagementModuleEntry
<b>Access</b>	Not accessible

**Table 1661. Enclosure Management Module Entry**

<b>Name</b>	EnclosureManagementModuleEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1
<b>Description</b>	Defines the enclosure management module table entry.
<b>Syntax</b>	EnclosureManagementModuleEntry

<b>Access</b>	Not accessible
<b>Index</b>	enclosureManagementModuleNumber

#### Table 1662. Enclosure Management Module Number

<b>Name</b>	enclosureManagementModuleNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.1
<b>Description</b>	Identifies the instance number of the enclosure management module entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1663. Enclosure Management Module Name

<b>Name</b>	enclosureManagementModuleName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.2
<b>Description</b>	Identifies the enclosure management module's name as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1664. Enclosure Management Module Vendor

<b>Name</b>	enclosureManagementModuleVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.3
<b>Description</b>	Identifies the enclosure management module's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1665. Enclosure Management Module State

<b>Name</b>	enclosureManagementModuleState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.4
<b>Description</b>	Identifies the current state of the enclosure management module. Possible states: 0: Unknown 1: Ready 2: Failed 3: Online 4: Offline 5: Not Installed 6: Degraded 21: Missing
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1666. Enclosure Management Module Severity

<b>Name</b>	enclosureManagementModuleSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.5

<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1667. Enclosure Management Module Part Number**

<b>Name</b>	enclosureManagementModulePartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.6
<b>Description</b>	Identifies the part number of the enclosure memory module.
<b>Syntax</b>	Display String
<b>Access</b>	Read-only

**Table 1668. Enclosure Management Module Type**

<b>Name</b>	enclosureManagementModuleType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.7
<b>Description</b>	Identifies the type of the enclosure management module.  Possible values: 0: Unknown 1: EMM 2: Termination Card
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

**Table 1669. Enclosure Management Module Firmware Version**

<b>Name</b>	enclosureManagementModuleFWVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.8
<b>Description</b>	Identifies the firmware version of the enclosure memory module.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1670. Enclosure Management Module Maximum Speed**

<b>Name</b>	enclosureManagementModuleMaxSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.9
<b>Description</b>	Identifies the maximum bus speed of the enclosure management module.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1671. Enclosure Management Module Roll-Up Status**

<b>Name</b>	enclosureManagementModuleRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.10
<b>Description</b>	Severity of the enclosure management module state. This is the combined status of the EMM and its components.  Possible values: 1: Other 2: Unknown

	3: OK
	4: Non-critical
	5: Critical
	6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1672. Enclosure Management Module Component Status

<b>Name</b>	enclosureManagementModuleComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.11
<b>Description</b>	The status of the enclosure management module itself without the propagation of any contained component status.  Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1673. Enclosure Management Module Nexus ID

<b>Name</b>	enclosureManagementModuleNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.12
<b>Description</b>	Durable unique ID for this EMM.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1674. Enclosure Management Module Revision

<b>Name</b>	enclosureManagementModuleRevision
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.13
<b>Description</b>	Identifies the revision number of the enclosure management module.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Enclosure Management Module Connection Table

This table describes the connection between each enclosure management module on the managed system and its enclosure. Each enclosure number in the table corresponds to that enclosure instance in the enclosure Table.

The following object sets up the Enclosure Management Module Connection Table.

#### Table 1675. Enclosure Management Module Connection Table

<b>Name</b>	enclosureManagementModuleConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14

<b>Description</b>	Defines the enclosure memory module connection table.
<b>Syntax</b>	SEQUENCE OF EnclosureManagementModuleConnectionEntry
<b>Access</b>	Not accessible

#### Table 1676. Enclosure Management Module Connection Entry

<b>Name</b>	enclosureManagementModuleConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1
<b>Description</b>	Defines the enclosure memory module connection table entry.
<b>Syntax</b>	EnclosureManagementModuleConnectionEntry
<b>Access Not</b>	accessible
<b>Index</b>	enclosureManagementModuleConnectionNumber

#### Table 1677. Enclosure Management Module Connection Number

<b>Name</b>	enclosureManagementModuleConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.1
<b>Description</b>	Identifies the instance number of the enclosure memory module connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1678. Enclosure Management Module Connection EMM Name

<b>Name</b>	enclosureManagementModuleConnectionEMMName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.2
<b>Description</b>	Identifies the name of the enclosure memory module in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1679. Enclosure Management Module Connection EMM Number

<b>Name</b>	enclosureManagementModuleConnectionEMMNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.3
<b>Description</b>	Identifies the instance number in the enclosureManagementModuleTable of the enclosure memory module in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1680. Enclosure Management Module Connection Enclosure Name

<b>Name</b>	enclosureManagementModuleConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this enclosure memory module belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1681. Enclosure Management Module Connection Enclosure Number

<b>Name</b>	enclosureManagementModuleConnectionEnclosure Number
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.5

<b>Description</b>	Identifies the instance number of the enclosure in the enclosureTable to which this enclosure memory module belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Battery Table

### Table 1682. Battery Table

<b>Name</b>	batteryTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50
<b>Description</b>	Defines the Battery Table.
<b>Syntax</b>	SEQUENCE OF BatteryTableEntry
<b>Access</b>	Not accessible

### Table 1683. Battery Table Entry

<b>Name</b>	batteryTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1
<b>Description</b>	Defines the Battery Table Entry.
<b>Syntax</b>	BatteryTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	batteryChassisIndex , batteryIndex

### Table 1684. Battery Chassis Index

<b>Name</b>	batteryChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.1
<b>Description</b>	Defines the index (one-based) of the chassis that contains the battery.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 1685. Battery Index

<b>Name</b>	batteryIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.2
<b>Description</b>	Defines the index (one-based) of the battery.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Table 1686. Battery State Capabilities

<b>Name</b>	batteryStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.3
<b>Description</b>	Defines the state capabilities of the battery.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Table 1687. Battery State Settings

<b>Name</b>	batteryStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.4
<b>Description</b>	Defines the state settings of the battery.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### Table 1688. Battery Status

<b>Name</b>	batteryStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.5
<b>Description</b>	Defines the status of the battery.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Table 1689. Battery Reading

<b>Name</b>	batteryReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.6
<b>Description</b>	Defines the reading of the battery.
<b>Syntax</b>	DellBatteryReading ( <a href="#">Battery Reading</a> )
<b>Access</b>	Read-only

### Table 1690. Battery Location Name

<b>Name</b>	batteryLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.50.1.7
<b>Description</b>	Defines the location of the battery.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Battery Connection Table

This table describes the connection between each controller battery on the managed system and its controller. Each controller number in the table corresponds to that controller instance in the controller Table.

The following object sets up the Battery Connection Table.

### Table 1691. Battery Connection Table

<b>Name</b>	batteryConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16
<b>Description</b>	Defines the battery connection table.
<b>Syntax</b>	SEQUENCE OF BatteryConnectionEntry
<b>Access</b>	Not accessible

### Table 1692. Battery Connection Entry

<b>Name</b>	batteryConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1
<b>Description</b>	Defines the battery connection table entry.

<b>Syntax</b>	BatteryConnectionEntry
<b>Access</b>	BatteryConnectionEntry
<b>Index</b>	BatteryConnectionNumber

#### Table 1693. Battery Connection Number

<b>Name</b>	batteryConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1.1
<b>Description</b>	Identifies the instance number of the battery connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1694. Battery Connection Battery Name

Name	batteryConnectionBatteryName
Object ID	1.3.6.1.4.1.674.10893.1.20.130.16.1.2
Description	Identifies the name of the battery in this connection as represented in Storage Management.
Syntax	DisplayString
Access	Read-only

#### Table 1695. Battery Connection Battery Number

<b>Name</b>	batteryConnectionBatteryNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1.3
<b>Description</b>	Identifies the instance number in the batteryTable of the battery in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1696. Battery Connection Controller Name

<b>Name</b>	batteryConnectionControllerName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1.4
<b>Description</b>	Identifies the name of the controller as represented in Storage Management to which this battery belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1697. Battery Connection Controller Number

<b>Name</b>	batteryConnectionControllerNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1.5
<b>Description</b>	Identifies instance number of the controller in the controllerTable to which this battery belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Tape Drive Table

This table describes available properties for each tape drive on the managed system.

The following object sets up the Tape Drive Table.

### Table 1698. Tape Drive Table

<b>Name</b>	tapeDriveTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17
<b>Description</b>	A table of listed Tape Drives The number of entries is related to number of Tape Drives discovered in the system. The maximum number of entries is implementation dependent.   <b>NOTE: The properties in this table may not be applicable to all entries.</b>
<b>Syntax</b>	SEQUENCE OF TapeDriveEntry
<b>Access</b>	Not accessible

### Table 1699. Tape Drive Entry

<b>Name</b>	tapeDriveEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17.1
<b>Description</b>	An entry in the Tape Library table. A row in this table cannot be created or deleted by SNMP operations on columns of the table.
<b>Syntax</b>	TapeDriveEntry
<b>Access</b>	Not accessible

### Table 1700. Tape Drive Number

<b>Name</b>	tapeDriveNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17.1.1
<b>Description</b>	Instance number of this tape drive entry.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

### Table 1701. Tape Drive Name

<b>Name</b>	tapeDriveName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17.1.2
<b>Description</b>	The name of the tape drive as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Table 1702. Tape Drive Vendor

<b>Name</b>	tapeDriveVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17.1.3
<b>Description</b>	The tape drive's manufacturer's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Table 1703. Tape Drive Product ID

<b>Name</b>	tapeDriveProductID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17.1.4
<b>Description</b>	The model number of the tape drive.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1704. Tape Drive Nexus ID

<b>Name</b>	tapeDriveNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17.1.5
<b>Description</b>	Durable unique ID for this tape drive
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1705. Tape Drive Bus Type

<b>Name</b>	tapeDriveBusType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17.1.6
<b>Description</b>	The bus type of the tape drive. Possible values: 8. SAS
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1706. Tape Drive SAS Address

<b>Name</b>	tapeDriveSASAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17.1.7
<b>Description</b>	The specified SAS address if this is a SAS tape drive.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1707. Tape Drive Media Type

<b>Name</b>	tapeDriveMediaType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.17.1.8
<b>Description</b>	The Media type of the tape drive. Possible Values: 4: Tape
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

## NVME adapter table

This table describes available NVME adapter cards on the managed system. The number of entries is related to number of NVME Adapter cards discovered in the system.

The following object sets up the NVME adapter Table.

#### Table 1708. NVME Adapter Table

<b>Name</b>	nvmeAdapterTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18
<b>Description</b>	A table of listed NVME Adapter cards
<b>Syntax</b>	SEQUENCE OF NvmeAdapterEntry
<b>Access</b>	Not accessible

 **NOTE: The properties in this table may not be applicable to all entries.**

#### Table 1709. NVME Adapter Entry

<b>Name</b>	nvmeAdapterEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1
<b>Description</b>	An entry in the NvmeAdapter table. A row in this table cannot be created or deleted by SNMP operations on columns of the table.
<b>Syntax</b>	NvmeAdapterEntry
<b>Access</b>	Not accessible

#### Table 1710. NVME Adapter Number

<b>Name</b>	nvmeAdapterNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.1
<b>Description</b>	Instance number of this NVME Adapter entry.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1711. NVME Adapter State

<b>Name</b>	nvmeAdapterState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.2
<b>Description</b>	The current state of the NVMe Adapter.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1712. NVME Adapter Controller Number

<b>Name</b>	nvmeAdapterControllerNum
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.3
<b>Description</b>	The PCIeSSD subsystem Id to which the NVMe Adapter belongs to.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1713. NVME Adapter PCI Slot

<b>Name</b>	nvmeAdapterPCISlot
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.4
<b>Description</b>	The PCI slot of the system where the adapter card is connected.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1714. NVME Adapter Device Name

<b>Name</b>	nvmeAdapterDeviceName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.5
<b>Description</b>	The device name of the NVMe Adapter as it is represented in OMSA and also the operating system.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1715. NVME Adapter Vendor**

<b>Name</b>	nvmeAdapterVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.6
<b>Description</b>	NVMe Adapter manufacturer.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1716. NVME Adapter Product ID**

<b>Name</b>	nvmeAdapterProductID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.7
<b>Description</b>	The product id or part number of the NVMe Adapter.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1717. NVME Adapter Serial Number**

<b>Name</b>	nvmeAdapterSerialNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.8
<b>Description</b>	Product serial number of the NVMe Adapter.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1718. NVME Adapter Revision**

<b>Name</b>	nvmeAdapterRevision
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.9
<b>Description</b>	The NVMe Adapter revision.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1719. NVME Adapter Driver Version**

<b>Name</b>	nvmeAdapterDriverVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.10
<b>Description</b>	NVMe Adapter driver version.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1720. NVME Adapter PCI Bus Number**

<b>Name</b>	nvmeAdapterPCIBusNo
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.11
<b>Description</b>	The PCI Bus number of the NVMe adapter.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1721. NVME Adapter PCI Device Number**

<b>Name</b>	nvmeAdapterPCIDeviceNum
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.12

<b>Description</b>	The PCI device number of the NVMe Adapter.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1722. NVME Adapter PCI Func Number**

<b>Name</b>	nvmeAdapterPCIFuncNum
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.13
<b>Description</b>	The PCI device number of the NVMe Adapter.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1723. NVME Adapter Nexus ID**

<b>Name</b>	nvmeAdapterNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.14
<b>Description</b>	Nexus ID of the NVMe Adapter.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1724. NVME Adapter Bus Protocol Type**

<b>Name</b>	nvmeAdapterBusProtocolType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.15
<b>Description</b>	The Bus protocol for NVMe device: value: 9 (PCIeSSD)
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1725. NVME Adapter Media Type**

<b>Name</b>	nvmeAdapterMediaType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.16
<b>Description</b>	NVMe Adapter media type. Possible Values: 1: unknown 2: ssd
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1726. NVME Adapter Length In Mega Bytes**

<b>Name</b>	nvmeAdapterLengthInMegaBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.17
<b>Description</b>	Size in megabytes of the NVMe Adapter.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1727. NVME Adapter Length Offset Bytes**

<b>Name</b>	nvmeAdapterLengthOffsetBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.18
<b>Description</b>	Number of bytes after total number of megabytes have been subtracted from the total size of the NVMe Adapter.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1728. NVME Adapter Device ID**

<b>Name</b>	nvmeAdapterDeviceID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.19
<b>Description</b>	The device Id of the NVMe Adapter.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1729. NVME Adapter Model Number**

<b>Name</b>	nvmeAdapterModelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.20
<b>Description</b>	Model number of the NVMe Adapter as per the manufacturer.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1730. NVME Adapter Negotiated Speed**

<b>Name</b>	nvmeAdapterNegotiatedSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.21
<b>Description</b>	The negotiated speed of the NVMe adapter in GT/s.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1731. NVME Adapter Capable Speed**

<b>Name</b>	nvmeAdapterCapableSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.22
<b>Description</b>	The maximum rated speed of the NVMe adapter in GT/s.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1732. NVME Adapter Remaining Rated Write Endurance**

<b>Name</b>	nvmeAdapterRemainingRatedWrEnd
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.23
<b>Description</b>	The remaining percentage of writes on the NVME device.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1733. NVME Adapter Form Factor**

<b>Name</b>	nvmeAdapterFormFactor
-------------	-----------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.24
<b>Description</b>	The form factor of the NVMe Adapter. Possible Values 2 : Card
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1734. NVME Adapter Supported Specification

<b>Name</b>	nvmeAdapterSupportedSpec
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.25
<b>Description</b>	The NVMe specification supported by the device.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1735. NVME Adapter Maximum Link Width

<b>Name</b>	nvmeAdapterMaxLinkWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.26
<b>Description</b>	The maximum bus width of NVME Adapter.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1736. NVME Adapter Negotiated Link Width

<b>Name</b>	nvmeAdapterNegotiatedLinkWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.27
<b>Description</b>	The negotiated bus width of NVMe Adapter.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1737. NVME Adapter Sub Vendor

<b>Name</b>	nvmeAdapterSubVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.18.1.28
<b>Description</b>	Sub vendor of the NVMe Adapter device.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Logical Devices Group

The Logical Devices Management Information Base (MIB) group provides information about the logical devices managed by the Dell Storage Management Software and their relationships to each other. This group and all of its associated tables and objects are not supported on Microsoft Windows Advanced Server Limited Edition 64-bit operating system (Windows.Net-64) on a Dell PowerEdge 7150. The following MIB tables define objects and relationships, or connections among the objects, in the Logical Devices Group:

- **Virtual Disk Table** — describes available properties for each virtual disk on the managed system.
- **Virtual Disk Partition** -- describes the available properties for each disk partitions on the managed system.
- **Array Disk Logical Connection Table** — describes the connections between array disks, the virtual disk to which they belong, and their associated logical disk. For each object in the table, its object number corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.

# Virtual Disk Table

This table describes available properties for each virtual disk on the managed system.

The following object sets up the Virtual Disk Table.

## Table 1738. Virtual Disk Table

<b>Name</b>	virtualDiskTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1
<b>Description</b>	Defines the virtual disk table.
<b>Syntax</b>	SEQUENCE OF VirtualDiskEntry
<b>Access</b>	Not accessible

## Table 1739. Virtual Disk Entry

<b>Name</b>	virtualDiskEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1
<b>Description</b>	Defines the virtual disk table entry.
<b>Syntax</b>	VirtualDiskEntry
<b>Access</b>	Not accessible
<b>Index</b>	virtualDiskNumber

## Table 1740. Virtual Disk Number

<b>Name</b>	virtualDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.1
<b>Description</b>	Identifies the instance number of the virtual disk entry.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

## Table 1741. Virtual Disk Name

<b>Name</b>	virtualDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.2
<b>Description</b>	Identifies the virtual disk's label generated by Storage Management or entered by the user.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Table 1742. Virtual Device Disk Name

<b>Name</b>	virtualDiskDeviceName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.3
<b>Description</b>	Identifies the device name used by this virtual disk's member disks.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Table 1743. Virtual Disk State

<b>Name</b>	virtualDiskState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.4
<b>Description</b>	Identifies the current state of this virtual disk.

Possible states:

0: Unknown

1: Ready - The disk is accessible and has no known problems.

2: Failed - The data on the virtual disk is no longer fault tolerant because one of the underlying disks is not online.

3: Online

4: Offline - The disk is not accessible. The disk may be corrupted or intermittently unavailable.

6: Degraded - The data on the virtual disk is no longer fault tolerant because one of the underlying disks is not online.

15: Resynching

16: Regenerating

24: Rebuilding

26: Formatting

32: Reconstructing

35: Initializing

36: Background Initialization

38: Resynching Paused

52: Permanently Degraded

54: Degraded Redundancy

**Syntax** INTEGER

**Access** Read-only

#### Table 1744. Virtual Disk Severity

<b>Name</b>	virtualDiskSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1745. Virtual Disk Length in Megabytes

<b>Name</b>	virtualDiskLengthInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.6
<b>Description</b>	Identifies the size of this virtual disk in megabytes. If this size is 0, it is smaller than a megabyte.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1746. Virtual Disk Length in Bytes

<b>Name</b>	virtualDiskLengthBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.7
<b>Description</b>	Identifies the portion of the virtual disk in bytes that is smaller than a megabyte. This size plus the virtualDiskLengthInMB is the total size of the virtual disk.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1747. Virtual Disk Free Space in Megabytes**

<b>Name</b>	virtualDiskFreeSpaceInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.8
<b>Description</b>	This entry is obsolete. This property is not supported by virtual disks managed under Storage Management.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1748. Virtual Disk Free Space in Bytes**

<b>Name</b>	virtualDiskFreeSpaceInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.9
<b>Description</b>	This entry is obsolete. This property is not supported by virtual disks managed under Storage Management.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1749. Virtual Disk Write Policy**

<b>Name</b>	virtualDiskWritePolicy
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.10
<b>Description</b>	Indicates whether the controller's write cache are used when writing to a virtual disk. Possible values: 1: Enabled - Adaptec Write Cache Enabled Protected 2: Disabled - Adaptec Write Cache Disabled 3: LSI Write Back 4: LSI Write Through 5: Enabled Always (Adaptec only) 6: Enabled Always (SAS only) 9: Not Applicable
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1750. Virtual Disk Read Policy**

<b>Name</b>	virtualDiskReadPolicy
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.11
<b>Description</b>	Indicates whether the controller's read cache are used when reading from a virtual disk. Possible values: 1: Enabled - Adaptec Read Cache Enabled 2: Disabled - Adaptec Read Cache Disabled 3: LSI Read Ahead 4: LSI Adaptive Read Ahead 5: LSI No Read Ahead 9: Not Applicable
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

### Table 1751. Virtual Disk Cache Policy

<b>Name</b>	virtualDiskCachePolicy
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.12
<b>Description</b>	Indicates whether the controller's cache is used when reading from or writing to a virtual disk. Possible values: 1: Direct I/O (LSI) 2: Cached I/O (LSI) 99: Not Applicable
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

### Table 1752. Virtual Disk Layout

<b>Name</b>	virtualDiskLayout
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.13
<b>Description</b>	Indicates the virtual disk's RAID type. Possible values: 1: Concatenated 2: RAID-0 3: RAID-1 7: RAID-5 8: RAID-6 10: RAID-10 12: RAID-50 19: Concatenated RAID 1 24: RAID-60 25: CacheCade
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

### Table 1753. Virtual Disk Current Stripe Size in Megabytes

<b>Name</b>	virtualDiskCurStripeSizeInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.14
<b>Description</b>	Identifies the stripe size of this virtual disk in megabytes. If this size is 0, it is smaller than a megabyte.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

### Table 1754. Virtual Disk Current Stripe Size in Bytes

<b>Name</b>	virtualDiskCurStripeSizeInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.15
<b>Description</b>	Identifies the portion of the stripe size in bytes that is smaller than a megabyte. This size plus the virtualDiskCurStripeSizeInMB is the total stripe size on the virtual disk.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

### Table 1755. Virtual Disk Channel

<b>Name</b>	virtualDiskChannel
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.16
<b>Description</b>	This entry is obsolete. This property is not supported by virtual disks managed under Storage Management.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

### Table 1756. Virtual Disk Target ID

<b>Name</b>	virtualDiskTargetID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.17
<b>Description</b>	Unique ID for the virtual disk.
<b>Syntax</b>	INTEGER

**Access** Read-only

#### Table 1757. Virtual Disk LUN ID

**Name** virtualDiskLunID  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.18  
**Description** This entry is obsolete. This property is not supported by virtual disks managed under Storage Management.  
**Syntax** INTEGER  
**Access** Read-only

#### Table 1758. Virtual Disk Roll-Up Status

**Name** virtualDiskRollUpStatus  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.19  
**Description** Severity of the virtual disk state. This is the combined status of the virtual disk and its components.  
Possible values:  
1: Other  
2: Unknown  
3: OK  
4: Non-critical  
5: Critical  
6: Non-recoverable  
**Syntax** DellStatus  
**Access** Read-only

#### Table 1759. Virtual Disk Component Status

**Name** virtualDiskComponentStatus  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.20  
**Description** The status of the virtual disk itself without the propagation of any contained component status.  
Possible values:  
1: Other  
2: Unknown  
3: OK  
4: Non-critical  
5: Critical  
6: Non-recoverable  
**Syntax** DellStatus  
**Access** Read-only

#### Table 1760. Virtual Disk Nexus ID

**Name** virtualDiskNexusID  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.21  
**Description** Durable unique ID for this virtual disk.  
**Syntax** DisplayString

**Access** Read-only

#### Table 1761. Virtual Disk Array Disk Type

**Name** virtualDiskArrayDiskType  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.22  
**Description** Identifies the type of array (physical) disks used to create the virtual disk.  
Possible values:  
1: SAS  
2: SATA  
3: SCSI  
4: IDE  
99: Unknown  
**Syntax** INTEGER  
**Access** Read-only

#### Table 1762. Virtual Disk Bad Blocks Detected

**Name** virtualDiskBadBlocksDetected  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.23  
**Description** Indicates if virtual disk has bad blocks.  
Value: 0 - No, 1 - Yes, 2 - Not Applicable, 99 - Unknown  
**Syntax** INTEGER  
**Access** Read-only

#### Table 1763. Virtual Disk Encrypted

**Name** virtualDiskEncrypted  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.24  
**Description** Indicates if virtual disk is encrypted.  
Value: 0 - No, 1 - Yes, 99 - Unknown  
**Syntax** INTEGER  
**Access** Read-only

#### Table 1764. Virtual Disk is CacheCade

**Name** virtualDiskIsCacheCade  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.25  
**Description** Indicates if this virtual disk is configured as CacheCade.  
Value: 1 - Yes, 0 - No, 99 - Undetermined  
**Syntax** INTEGER  
**Access** Read-only

#### Table 1765. Virtual Disk Disk Cache Policy

**Name** virtualDiskDiskCachePolicy  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.26  
**Description** Indicates disk cache policy of the logical device.  
Value: 1 - Enabled, 2 - Disabled, 99 - Undetermined

SWRAID : 2 - Enabled, 4 - Disabled, 8 - Default, 10 - Undetermined

**Syntax** INTEGER  
**Access** Read-only

#### Table 1766. Virtual Disk PI Enable

**Name** virtualDiskPIEnable  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.1.1.28  
**Description** Indicates if T10 PI is enabled on a virtual disk.  
Possible values are:  
0 : T10 PI disabled, 1 : T10 PI enabled  
**Syntax** INTEGER  
**Access** Read-only

## Virtual Disk Partition

#### Table 1767. Virtual Disk Partition Table

**Name** virtualDiskPartitionTable  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.2  
**Description** A table of managed virtual disk partitions. The number of entries is related to number of partitions discovered in the system. The maximum number of entries is implementation dependent.  
**NOTE:** The properties in this table may not be applicable to all entries.  
**Syntax** SEQUENCE OF VirtualDiskPartitionEntry  
**Access** Not-Accessible

#### Table 1768. Virtual Disk Partition Entry

**Name** virtualDiskPartitionEntry  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.2.1  
**Description** An entry in the Virtual Disk Partition table. A row in this table cannot be created or deleted by SNMP operations on columns of the table.  
**Syntax** VirtualDiskPartitionEntry  
**Access** Not—Accessible

#### Table 1769. Virtual Disk Partition Number

**Name** virtualDiskPartitionNumber  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.2.1.1  
**Description** Instance number of this partition entry.  
**Syntax** INTEGER  
**Access** Read-only

#### Table 1770. Virtual Disk Partition Device Name

**Name** virtualDiskPartitionDeviceName  
**Object ID** 1.3.6.1.4.1.674.10893.1.20.140.2.1.2  
**Description** Device name of the partition given by the operating system.

<b>Syntax</b>	OCTET STRING
<b>Access</b>	Read-only

#### Table 1771. Virtual Disk Partition State

<b>Name</b>	virtualDiskPartitionState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.2.1.3
<b>Description</b>	State of the partition. This is mapped stated of the associate virtual disk. <ul style="list-style-type: none"> <li>· Active - Mapped cache disk is working fine.</li> <li>· No - Fluid cache is not enabled.</li> <li>· Removing - This is a transient stage during the process of disabling the cache.</li> <li>· Failed - Mapped cache disk has failed.</li> </ul>
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1772. Virtual Disk Partition Size

<b>Name</b>	virtualDiskPartitionSize
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.2.1.4
<b>Description</b>	Size of the partition in GB.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

#### Table 1773. Virtual Disk Partition Nexus ID

<b>Name</b>	virtualDiskPartitionNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.2.1.6
<b>Description</b>	Durable unique ID for this partition. This comprises the controllerID, virtualDisk ID and hash mapped WWN number of this partition.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Array Disk Logical Connection Table

This table describes the connections between array disks, the virtual disk to which they belong, and their associated logical disk. For each object in the table, its object number corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.

The following object sets up the Array Disk Logical Connection Table.

#### Table 1774. Array Disk Logical Connection Table

<b>Name</b>	arrayDiskLogicalConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3
<b>Description</b>	Defines the array disk logical connection table.
<b>Syntax</b>	SEQUENCE OF arrayDiskLogicalConnectionEntry
<b>Access</b>	Not accessible

#### Table 1775. Array Disk Logical Connection Entry

<b>Name</b>	arrayDiskLogicalConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1

<b>Description</b>	Defines the array disk logical connection table entry.
<b>Syntax</b>	ArrayDiskLogicalConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	arrayDiskLogicalConnectionNumber

#### Table 1776. Array Disk Logical Connection Number

<b>Name</b>	arrayDiskLogicalConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.1
<b>Description</b>	Identifies the instance number of the disk entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1777. Array Disk Logical Connection Array Disk Name

<b>Name</b>	arrayDiskLogicalConnectionArrayDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.2
<b>Description</b>	Identifies the name of the array disk in this logical connection.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1778. Array Disk Logical Connection Array Disk Number

<b>Name</b>	arrayDiskLogicalConnectionArrayDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.3
<b>Description</b>	Identifies the instance number of the array disk in this logical connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1779. Array Disk Logical Connection Virtual Disk Name

<b>Name</b>	arrayDiskLogicalConnectionVirtualDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.4
<b>Description</b>	Identifies the name of the virtual disk to which this array disk belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1780. Array Disk Logical Connection Virtual Disk Number

<b>Name</b>	arrayDiskLogicalConnectionVirtualDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.5
<b>Description</b>	Identifies the instance number of the virtual disk to which this array disk belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1781. Array Disk Logical Connection Disk Name

<b>Name</b>	arrayDiskLogicalConnectionDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.6
<b>Description</b>	Identifies the name of the disk group to which this array disk belongs. This property is currently not supported.

<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1782. Array Disk Logical Connection Disk Number

<b>Name</b>	arrayDiskLogicalConnectionDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.7
<b>Description</b>	Identifies the instance number of the disk group to which this array disk belongs. This property is currently not supported.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Storage Management Event Group

The Storage Management Event Group defines the properties that are sent with SNMP traps.

#### Table 1783. Message ID Event

<b>Name</b>	messageIDEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.1
<b>Description</b>	Storage Management event message number.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

#### Table 1784. Description Event

<b>Name</b>	descriptionEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.2
<b>Description</b>	Storage Management event message text describing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1785. Location Event

<b>Name</b>	locationEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.3
<b>Description</b>	Additional information identifying the location of the object causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1786. Object Name Event

<b>Name</b>	objectNameEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.4
<b>Description</b>	Name of the object as represented in Storage Management causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1787. Object OID Event

<b>Name</b>	objectOIDEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.5

<b>Description</b>	MIB OID of the object causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1788. Object Nexus Event**

<b>Name</b>	objectNexusEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.6
<b>Description</b>	Durable, unique ID of the object causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1789. Current Status Event**

<b>Name</b>	currentStatusEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.7
<b>Description</b>	Current status of object causing the alert, if applicable.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

**Table 1790. Previous Status Event**

<b>Name</b>	previousStatusEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.8
<b>Description</b>	Previous status of object causing the alert if applicable.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

# Change Management Group

The Change Management Group lets you monitor information about the Dell devices and software that are present on a particular managed computer chassis. This information is collected during an inventory scan.

**NOTE:** On systems running Linux, the optional `srvadmin-cm` RPM package must be installed for Dell OpenManage Server Administrator to respond to SNMP queries in this group. See the *Server Administrator Installation Guide* for more information.

## Topics:

- [Inventory Group](#)
- [Device Group](#)
- [Application Group](#)
- [Operating System Group](#)
- [Inventory Collector Product Information](#)

## Inventory Group

The following objects describe the fields for inventory information.

**Table 1791. Inventory Locale**

<b>Name</b>	<code>inventoryLocale</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.1
<b>Description</b>	Defines the locale of the system.
<b>Syntax</b>	<code>DisplayString</code>
<b>Access</b>	Read-only

**Table 1792. Inventory Schema Version**

<b>Name</b>	<code>inventorySchemaVersion</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.2
<b>Description</b>	Defines the inventory schema implemented by this system.
<b>Syntax</b>	<code>DisplayString</code>
<b>Access</b>	Read-only

**Table 1793. Inventory System ID**

<b>Name</b>	<code>inventorySystemID</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.3
<b>Description</b>	Defines the System ID for the system.
<b>Syntax</b>	<code>SystemID</code>
<b>Access</b>	Read-only

## Device Group

The Device Group defines information about the devices discovered on the system during an inventory scan. Identifying information includes the Component ID, the Device ID, and the Vendor ID.

# Device Group Table

The following object sets up the Device Group Table.

## Table 1794. Device Table

<b>Name</b>	deviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5
<b>Description</b>	Defines the Device Table.
<b>Syntax</b>	SEQUENCE OF DeviceEntry
<b>Access</b>	Not accessible

## Table 1795. Device Entry

<b>Name</b>	deviceEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1
<b>Description</b>	Defines a device entry.
<b>Syntax</b>	DeviceEntry
<b>Access</b>	Not accessible

## Table 1796. Device Index

<b>Name</b>	deviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.1
<b>Description</b>	Defines the unique index for this device.
<b>Syntax</b>	Unsigned16BitRange
<b>Access</b>	Read-only

## Table 1797. Device Component ID

<b>Name</b>	deviceComponentID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.2
<b>Description</b>	Defines an optional component ID field for the device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Table 1798. Device Display String

<b>Name</b>	deviceDisplayString
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.3
<b>Description</b>	Provides a displayable string that describes the device.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Table 1799. Device Vendor ID

<b>Name</b>	deviceVendorID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.4
<b>Description</b>	Defines the ID for the vendor supplying the device.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 1800. Device ID**

<b>Name</b>	deviceDeviceID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.5
<b>Description</b>	Defines the ID for the device.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 1801. Device Sub ID**

<b>Name</b>	deviceSubID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.6
<b>Description</b>	Provides additional device identification.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

**Table 1802. Device Sub Vendor ID**

<b>Name</b>	deviceSubVendorID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.7
<b>Description</b>	Provides additional vendor identification.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

## Application Group

**NOTE:** Dell updateable components such as Basic input/output system (BIOS) and FirmWare (FW) are considered applications. For example, the following would be returned for system BIOS: `Application/DisplayString = BIOS`  
`Application/Version = A10`

The Application Group defines information about the applications discovered on the system during an inventory scan. Identifying information includes the application type, the application version, and the application description.

## Application Group Table

The following object sets up the Application Group Table

**Table 1803. Application Table**

<b>Name</b>	applicationTable
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6
<b>Description</b>	Defines a table of application information for the system.
<b>Syntax</b>	Defines a table of application information for the system.
<b>Access</b>	Not accessible

**Table 1804. Application Entry**

<b>Name</b>	applicationEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1
<b>Description</b>	Defines an application entry.
<b>Syntax</b>	ApplicationEntry
<b>Access</b>	Read-only

#### Table 1805. Application Index

<b>Name</b>	applicationIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.1
<b>Description</b>	Defines the unique index for this application.
<b>Syntax</b>	Unsigned16BitRange
<b>Access</b>	Read-only

#### Table 1806. Application Device Index

<b>Name</b>	applicationDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.2
<b>Description</b>	Defines a cross-index to the device table for the application.
<b>Syntax</b>	Unsigned16BitRange
<b>Access</b>	Read-only

#### Table 1807. Application Component Type

<b>Name</b>	applicationComponentType
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.3
<b>Description</b>	Identifies the type of application reported.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1808. Application Version

<b>Name</b>	applicationVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.4
<b>Description</b>	Identifies the version of the application.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1809. Application Display String

<b>Name</b>	applicationDisplayString
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.5
<b>Description</b>	A user visible display string that describes the application.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1810. Application Sub-Component ID

<b>Name</b>	applicationSubComponentID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.6
<b>Description</b>	The sub-component ID for the application. This is usually valid on ESM device reporting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

# Operating System Group

The Operating System Group provides status and identifying information about a system's operating system. Identifying information includes the name, version, and service pack of the installed operating system.

The following objects describe the fields for Operating System Group.

# Inventory Collector Product Information

The following objects describe the fields for the Inventory Collector. The Inventory Collector product variables are scalar objects, meaning that they are not related to other Inventory Collector base (MIB) objects and are thus not placed in a table.

# SNMP Traps

SNMP is frequently used to monitor systems for fault conditions such as temperature violations, hard drive failures, and so on. Management applications can monitor for these conditions by polling the appropriate OIDs with the Get command and analyzing the returned data. This method has its drawbacks. If it is done frequently, significant amounts of network bandwidth can be consumed. If it is done infrequently, the response to the fault condition may not occur in a timely fashion. SNMP traps avoid these limitations of the polling method.

An SNMP trap is an asynchronous event indicating that something significant has occurred. This is analogous to a pager receiving an important message, except that the SNMP trap frequently contains all the information needed to diagnose a fault.

Two drawbacks to SNMP traps are that they are sent using UDP, which is not a guaranteed delivery mechanism, and that they are not acknowledged by the receiver.

An SNMP trap message contains the trap's enterprise OID, the agent IP address, a generic trap ID, the specific trap ID, a time stamp, and zero or more variable bindings (varbinds). The combination of an enterprise OID and a specific trap ID uniquely identifies each Server Administrator-defined trap. A varbind consists of an OID and its value and provides additional information about the trap.

In order for a management system to receive SNMP traps from a managed system, the node must be configured to send traps to the management system. Trap destination configuration is dependent on the operating system. When this configuration is done, a management application on the management system can wait for traps and act on them when received.

**NOTE:** For information on Server Administrator Storage Management traps, see in **Storage Management Alert Reference, the**

[Alert Descriptions and Corrective Actions.](#)

**NOTE:** For the list of storage management alerts and storage management messages, see the *Dell OpenManage Server Administrator Messages Reference Guide* available on the Dell Support site at [dell.com/openmanagemanuals](http://dell.com/openmanagemanuals) navigate to **OpenManage Software and select the version required.**

## Topics:

- [Trap Variables](#)
- [Understanding The Trap Description](#)
- [Understanding Trap Severity](#)
- [BMC Traps](#)

## Trap Variables

This section describes the variables both on Traditional and Enhanced varbinds that are sent to the management console to provide additional information about a trap or alert generated by some event on your system. The trap variables presented here apply to all Instrumentation and RAC traps. Trap variables are sent in the order listed and are reserved for use only in traps. When a varbind is created for a trap variable, a zero is appended to the object ID (OID) to create the OID for the varbind.

The messages associated with each alertMessage varbind are available in the *Message Reference Guide* and can be found by matching the alert ID in the MIB to the event ID in the *Message Reference Guide*.

**Table 1811. Trap Variables**

<b>Variable Name</b>	alertSystem
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.1
<b>Description</b>	Identifies the system generating the alert.
<b>Syntax</b>	DisplayString

**Table 1812. Table Index OID**

<b>Variable Name</b>	alertTableIndexOID
----------------------	--------------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.2
<b>Description</b>	Specifies the object identifier for the index attribute in the table that contains the object causing the alert. Uniquely identifies the object causing the alert and can be used to correlate different alerts caused by the same object.

<b>Syntax</b>	OBJECT IDENTIFIER
---------------	-------------------

#### Table 1813. Message

<b>Variable Name</b>	alertMessage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.3
<b>Description</b>	Describes the alert.
<b>Syntax</b>	DisplayString

#### Table 1814. Current Status

<b>Variable Name</b>	alertCurrentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.4
<b>Description</b>	Specifies the current status of the object causing the alert.
<b>Syntax</b>	DellStatus

#### Table 1815. Previous Status

<b>Variable Name</b>	alertPreviousStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.5
<b>Description</b>	Specifies the previous status of the object causing the alert.
<b>Syntax</b>	DellStatus

#### Table 1816. Data

<b>Variable Name</b>	alertData
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.6
<b>Description</b>	Provides Server Administrator-defined data related to the alert.
<b>Syntax</b>	Octet String

The following variables show the Enhanced varbinds:

#### Table 1817. Message ID

<b>Variable Name</b>	alertMsgID
<b>Object ID</b>	1.3.6.1.4.1.674.10892.4.5000.10.7
<b>Description</b>	Specifies the enhanced message ID for the object generating the alert.
<b>Syntax</b>	DisplayString

#### Table 1818. System FQDN

<b>Variable Name</b>	alertSystemFQDN
<b>Object ID</b>	1.3.6.1.4.1.674.10892.4.5000.10.8
<b>Description</b>	Specifies fully qualified domain name of the system generating the alert.
<b>Syntax</b>	DisplayString

#### Table 1819. Service Tag

<b>Variable Name</b>	alertServiceTag
----------------------	-----------------

<b>Object ID</b>	1.3.6.1.4.1.674.10892.4.5000.10.9
<b>Description</b>	Specifies the system service tag of the system generating the alert.
<b>Syntax</b>	DisplayString

**Table 1820. Chassis Service Tag**

<b>Variable Name</b>	alertChassisServiceTag
<b>Object ID</b>	1.3.6.1.4.1.674.10892.4.5000.10.10
<b>Description</b>	Specifies the chassis service tag of the system generating the alert.
<b>Syntax</b>	DisplayString

## Understanding The Trap Description

The below table lists in alphabetical order each line item that may appear in the trap description.

**Table 1821. Trap Description**

Description Line Item	Explanation
Action performed was: <Action>	Specifies the automatic server recovery action that was performed, for example: Action performed was: Power cycle
Action requested was: <Action>	Specifies the user initiated host control action that was requested, for example: Action requested was: Reboot, shutdown OS first
Additional details: <Additional details for the events>	Specifies possible additional details about the specified device, for example: Additional details: Memory device: DIMM_1A Serial number: 11111111 Memory device: DIMM_1B Serial number: 22222222
<Additional power supply status information>	Specifies any additional power supply information pertaining to the event, for example: Power supply input AC is off, Power supply POK (power OK) signal is not normal, Power supply is turned off
Battery sensor status: <status>	Specifies the status reported by the battery sensor, for example: Battery sensor status: Predictive failure
Chassis intrusion state: <Intrusion state>	Specifies the chassis intrusion state (open or closed), for example: Chassis intrusion state: Open
Chassis location: <Name of chassis>	Specifies the name of the chassis that generated the message, for example: Chassis location: Main System Chassis
Configuration error type: <type of configuration error>	Specifies the type of configuration error that occurred, for example: Configuration error type: Revision mismatch
Current sensor value (in Amps): <Reading>	Specifies the current sensor value in amps, for example: Current sensor value: 7.853
Date and time of action: <Date and time>	Specifies the date and time that an automatic server recovery action was performed, for example: Date and time of action: Fri May 30 23:55:44 2003.
Description: <Description of event>	Specifies the description of the event that occurred, for example: Description: Chipset Err: Critical Event sensor, front panel NMI / diagnostic interrupt was asserted.

Description Line Item	Explanation
Device location: <Location in chassis>	Specifies the location of the device in the specified chassis, for example: Device location: Mem Card A
Discrete current state: <State>	Specifies the state of the current sensor, for example: Discrete current state: Good
Discrete temperature state: <State>	Specifies the state of the temperature sensor, for example: Discrete temperature state: Good
Discrete voltage state: <State>	Specifies the state of the voltage sensor, for example: Discrete voltage state: Good
Fan sensor value: <Reading>	Specifies the fan speed in revolutions per minute (RPMs) or On/Off, for example: Fan sensor value (in RPM): 2600 Fan sensor value: Off
Log type: <Log type>	Specifies the type of hardware log, for example: Log type: Embedded Server Management (ESM)
Memory device bank location: <Bank name in chassis>	Specifies the name of the memory bank in the system that generated the message, for example: Memory device bank location: Bank_1
Memory device location: <Device name in chassis>	Specifies the location of the memory module in the chassis, for example: Memory device location: DIMM_A
Number of devices required for full redundancy: <Number>	Specifies the number of power supply or cooling devices required to achieve full redundancy, for example: Number of devices required for full redundancy: 4
Peak value (in Watts): <Reading>	Specifies the peak value in Watts, for example: Peak value (in Watts): 125
Possible memory module event cause: <list of causes>	Specifies a list of possible causes for the memory module event, for example: Possible memory module event cause: Single bit warning error rate exceeded Single bit error logging disabled
Power Supply type: <type of power supply>	Specifies the type of power supply, for example: Power Supply type: VRM
Pre-failure state was: <State>	Specifies the status of the previous memory message, for example: Pre-failure state was: Failed
Previous redundancy state was: <State>	Specifies the status of the previous redundancy message, for example: Previous redundancy state was: Lost
Previous state was: <State>	Specifies the previous state of the sensor, for example: Previous state was: OK (Normal)
Processor sensor status: <status>	Specifies the status of the processor sensor, for example: Processor sensor status: Configuration error
Redundancy unit: <Redundancy location in chassis>	Specifies the location of the redundant power supply or cooling unit in the chassis, for example: Redundancy unit: Fan Enclosure

Description Line Item	Explanation
SD card device type: <Type of SD card device>	Specifies the type of SD card device, for example: SD card device type: Hypervisor
SD card state: <State of SD card>	Specifies the state of the SD card, for example: SD card state: Present, Failed
Sensor location: <Location in chassis>	Specifies the location of the sensor in the specified chassis, for example: Sensor location: CPU1
Temperature sensor value (in degrees Celsius): <Reading>	Specifies the temperature in degrees Celsius, for example: Temperature sensor value (in degrees Celsius): 30
Voltage sensor value (in Volts): <Reading>	Specifies the voltage sensor value in volts, for example: Voltage sensor value: 1.693

## Understanding Trap Severity

Traps often contain information about values recorded by probes or sensors. Probes and sensors monitor critical components for values such as amperage, voltage, and temperature. When an event occurs on your system, the Server Administrator sends information about one of the following event types to the system management console:

- **Information/Informational**—An event that describes the successful operation of a unit, such as a power supply turning on or a sensor reading returning to normal.
- **Warning** — An event that is not necessarily significant, but may indicate a possible future problem, such as crossing a warning threshold.
- **Critical/Error** — A significant event that indicates actual or imminent loss of data or loss of function, such as crossing a failure threshold or a hardware failure.

## BMC Traps

The BMC monitors the system for critical events by communicating with various sensors on the system board and by sending alerts and log events when certain parameters exceed their preset thresholds. All of the traps documented in this section belong to the MIB enterprise identified by OID 1.3.6.1.4.1.3183.1.1.1.

TrapID	Description	Severity
262402	Generic Critical Fan Failure	Critical
262530	Generic Critical Fan Failure Cleared	Information
131330	Under-Voltage Problem (Lower Critical - going low)	Critical
131458	Under-Voltage Problem Cleared	Information
131841	Generic Critical Voltage Problem	Critical
131840	Generic Critical Voltage Problem Cleared	Information
65792	Under-Temperature Warning (Lower non-critical, going low)	Warning
65920	Under-Temperature Warning Cleared	Information
65794	Under-Temperature Problem (Lower Critical - going low)	Critical
65922	Under-Temperature Problem Cleared	Information
65799	Over-Temperature warning (Upper non-critical, going high)	Minor
65927	Over-Temperature warning Cleared	Information

TrapID	Description	Severity
65801	Over-Temperature Problem (Upper Critical - going high)	Critical
65929	Over-Temperature Problem Cleared	Information
131328	Under-Voltage Warning (Lower Non Critical - going low)	Warning
131456	Under-Voltage Warning Cleared	Information
131330	Under-Voltage Problem (Lower Critical - going low)	Critical
131458	Under-Voltage Problem Cleared	Information
131335	Over-Voltage Warning (Upper Non Critical - going high)	Warning
131463	Over-Voltage Warning Cleared	Information
131337	Over-Voltage Problem (Upper Critical - going high)	Critical
131465	Over-Voltage Problem Cleared	Information
131841	Generic Critical Voltage Problem	Critical
131840	Generic Critical Voltage Problem Cleared	Information
356096	Chassis Intrusion - Physical Security Violation	Critical
356224	Chassis Intrusion (Physical Security Violation) Event Cleared	Information
262400	Generic Predictive Fan Failure (predictive failure asserted)	Minor
262528	Generic Predictive Fan Failure Cleared	Information
262402	Generic Critical Fan Failure	Critical
262530	Generic Critical Fan Failure Cleared	Information
264962	Fan redundancy has been degraded	Warning
264961	Fan Redundancy Lost	Critical
264960	Fan redundancy has returned to Normal	Information
2715392	Battery Low (Predictive Failure)	Warning
2715520	Battery Low (Predictive Failure) Cleared	Information
2715393	Battery Failure	Critical
2715521	Battery Failure Cleared	Information
487169	CPU Thermal Trip (Over Temperature Shutdown)	Critical
487297	CPU Thermal Trip (Over Temperature Shutdown) Cleared	Information
487168	CPU Internal Error Critical 487296 CPU Internal Error Cleared	Information
487173	CPU Configuration Error	Critical
487301	CPU Configuration Error Cleared	Information
487175	CPU Presence (Processor Presence detected)	Information
487303	CPU Not Present (Processor Not Present)	Critical
487170	CPU BIST (Built In Self Test) Failure	Critical

<b>TrapID</b>	<b>Description</b>	<b>Severity</b>
487298	CPU BIST (Built In Self Test) Failure Cleared	Information
487176	CPU Disabled (Processor Disabled)	Critical
487304	CPU Enabled (Processor Enabled)	Information
487178	CPU Throttle (Processor Speed Reduced)	Warning
487306	CPU Throttle Cleared (Normal Processor Speed)	Information
527106	Power Supply Redundancy Degraded	Warning
527105	Power Supply Redundancy Lost	Critical
527104	Power Supply Redundancy has returned to Normal	Information
552704	Power Supply Inserted	Information
552832	Power Supply Removed	Warning
552705	Power Supply Failure	Critical
552833	Power Supply Failure Cleared	Information
552706	Power Supply Warning	Warning
552834	Power Supply Warning Cleared	Information
552707	Power Supply AC Lost	Critical
552835	Power Supply AC Restored	Information
789249	Memory Redundancy has been Lost	Critical
789248	Memory redundancy has returned to Normal	Information
1076994	System Event Log (SEL) Cleared	Information
1076996	System Event Log (SEL) Full (Logging Disabled)	Critical
2322176	ASR (Automatic System Recovery) Timer Expired	Critical
2322177	ASR (Automatic System Recovery) Reset Occurred	Critical
2322178	ASR (Automatic System Recovery) Power Down Occurred	Critical
2322179	ASR (Automatic System Recovery) Power Cycle Occurred	Critical

# Storage Management Alert Reference

Storage Management's alert or event management features let you monitor the health of storage resources such as controllers, connectors, array disks, and virtual disks.

## Topics:

- [Alert Monitoring and Logging](#)
- [Viewing Alerts](#)
- [Alert Severity Levels](#)
- [SNMP Support for Storage Management Alerts](#)
- [Viewing SNMP Traps](#)
- [Alert Descriptions and Corrective Actions](#)

## Alert Monitoring and Logging

The Storage Management Service performs alert monitoring and logging. By default, the Storage Management Service starts when the managed system starts up. If you stop the Disk Management Service, then alert monitoring and logging stops. Alert monitoring does the following:

- Updates the status of the storage object that generated the alert.
- Propagates the storage object's status to all the related higher objects in the storage hierarchy. For example, the status of a lower-level object are propagated up to the status displayed on the Health tab for the top-level storage object.
- Logs an alert into the Alert log and Microsoft Windows application log.
- Sends an Simple Network Management Protocol (SNMP) trap if the operating system's SNMP service is installed and enabled.

**NOTE:** Storage Management does not log alerts regarding the data I/O path. These alerts are logged by the respective RAID drivers in the system alert log.

## Viewing Alerts

Storage Management generates alerts that are added to the Windows application alert log and to the Server Administrator Alert log. To view these alerts in Server Administrator:

1. Select the **System** object in the tree view.
2. Select the **Logs** tab.
3. Select the **Alert** subtab.

You can also view these alerts in the Windows Event Viewer. Every alert consists of the following:

- **Severity** — Shows the severity of alert.
- **Date and Time** — Date and time when Storage Management logged the alert.
- **Description** — A brief description of the alert. To expand or collapse the alert description, click the **Description** column heading.

## Alert Severity Levels

Each alert message in the Storage Management alert log has a severity level which indicates the nature of the alert and is displayed in the **Severity** field of the alert message. The severity level indicates the nature of the alert.

**Table 1822. Storage Management Alert Severity**

Alert Severity	Component Status
OK/Normal/Informational	No action is required. The alert is provided for informational purposes and does not indicate an error condition. For example, the alert may indicate the normal start or stop of an operation.

Warning/Non-critical	A component requires attention. This alert indicates a potential problem, but does not necessarily mean that the system has currently lost data or is nonfunctional. For example, a Warning/Non-critical alert may indicate that a component (such as a temperature probe in an enclosure) has crossed a warning threshold.
Critical/Failure/Error	A component has either failed or failure is imminent. This alert indicates a serious problem such as data loss or a loss of function. For example, a Critical/Failure/Error alert may indicate that an array disk has failed.

## SNMP Support for Storage Management Alerts

By default, Storage Management installs SNMP trap forwarding support. For this support to function, you should have SNMP installed on the managed system prior to installing Storage Management.

 **NOTE:** For more information on installation requirements and SNMP, see the *Server Administrator* documentation.

## SNMP Trap Forwarding

The Storage Management alerts are displayed in the Server Administrator alert log and are forwarded to the Windows application alert log. If you have SNMP installed on the managed system (and the SNMP service is running), the Storage Management alerts in the Windows application alert log are forwarded as SNMP traps. In order for these traps to be viewable, however, a target system or application must be configured to receive these traps. SNMP traps that are generated by Storage Management can be viewed in any standard SNMP-compatible enterprise management console.

The Windows SNMP service must be configured to forward the SNMP traps to the target system or application. When forwarding to an application, the application should also be configured to receive the SNMP traps. The IT Assistant application is already configured to receive the SNMP traps generated by Storage Management.

See Windows operating system documentation for information on configuring the operating system to forward SNMP traps. This information may be located under such topics as **Setting up SNMP** or **SNMP traps**. When configuring SNMP for Windows, be sure that the SNMP traps are forwarded to the correct server. For information on configuring an application to receive SNMP traps, see the documentation for that application.

## SNMP Trap Definitions

The Storage Management information base (MIB) defines the SNMP traps that Storage Management generates. These traps correspond to the alerts documented in the Alert Descriptions and Corrective Actions section. The MIB is located in `..\sm\mibs\dcstorag.mib`, a subdirectory of the Storage Management installation directory.

 **NOTE:** Storage Management supports trap forwarding on both 32-bit and 64-bit operating systems.

## Trap Variables

The Storage Management SNMP traps use a set of variables that are included with every trap. Below mentioned variables are the Traditional Varbinds:

**Table 1823. Message ID Event**

<b>Name</b>	<code>messageIDEvent</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.1
<b>Description</b>	Storage Management alert (event) message number.
<b>Syntax</b>	INTEGER
<b>Access</b>	Read-only

**Table 1824. Description Event**

<b>Name</b>	<code>descriptionEvent</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.2
<b>Description</b>	Storage Management event message text describing the alert.

<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1825. Location Event

<b>Name</b>	locationEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.3
<b>Description</b>	Additional information identifying the location of the object causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1826. Object Name Event

<b>Name</b>	objectNameEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.4
<b>Description</b>	Name of the object as represented in Storage Management causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1827. Object OID Event

<b>Name</b>	objectOIDEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.5
<b>Description</b>	MIB OID of the object causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1828. Object Nexus Event

<b>Name</b>	objectNexusEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.6
<b>Description</b>	Durable, unique ID of the object causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

#### Table 1829. Current Status Event

<b>Name</b>	currentStatusEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.7
<b>Description</b>	Current status of object causing the alert, if applicable.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

#### Table 1830. Previous Status Event

<b>Name</b>	previousStatusEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.8
<b>Description</b>	Previous status of object causing the alert if applicable.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

The below table shows the new enhanced mode varbinds which would be available in the EEMI were the user can get both Traditional and Enhanced varbinds :

**Table 1831. Enhanced Message ID Event**

<b>Name</b>	enhancedMessageIDEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.9
<b>Description</b>	Enhanced Message ID of object causing the alert if applicable.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1832. Enhanced System FQDN Event**

<b>Name</b>	systemFQDNEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.10
<b>Description</b>	Hostname of object causing the alert if applicable.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1833. Enhanced Service Tag Event**

<b>Name</b>	serviceTagEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.11
<b>Description</b>	Service Tag of object causing the alert if applicable.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

**Table 1834. Enhanced Chassis Service Tag Event**

<b>Name</b>	chassisServiceTagEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.12
<b>Description</b>	Chassis Service Tag of object causing the alert if applicable.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Viewing SNMP Traps

SNMP traps that are generated by Storage Management can be viewed in any standard SNMP-compatible enterprise management console. These traps are defined in the Storage Management MIB. These traps correspond to the alerts documented in the [Alert Descriptions and Corrective Actions](#) section. For more information on the MIB and its structure, as well as a change history of the SNMP traps, see the [Introduction](#) section. For more information on configuring SNMP, see [Support for Storage Management Alerts](#) .

## Alert Descriptions and Corrective Actions

The alerts generated by the redundant array of independent disks (RAID) or Small Computer System Interface (SCSI) controllers and supported by Storage Management are displayed in the Server Administrator Alert subtab or through Windows Event Viewer. These alerts can also be forwarded as SNMP traps to other applications.

SNMP traps that are generated for the alerts are included in the Storage Management MIB. The SNMP traps for these alerts use all of the SNMP trap variables. For the list of storage management alerts and storage management messages, see the *Dell OpenManage Server Administrator Messages Reference Guide* available on the Dell Support website at [dell.com/support/manuals](http://dell.com/support/manuals).

# Standard Data Type Definitions

This appendix contains definitions for data types that are standard in most contexts across the information technology industry. These are the most common data types for describing variable values defined in the `10892.mib`, `dcs3rmt.mib` and `dcs3fru.mib` files. Server Administrator-specific variable values are defined in the last section of the section in which they are introduced.

## Topics:

- [Common Data Types](#)
- [Variables with Data Types of State Capabilities and State Capabilities Unique](#)
- [Dell Status Data Types](#)
- [Dell Date](#)

## Common Data Types

Common data types include several types of strings, the object range, signed and unsigned bit ranges, and the familiar Boolean (true or false) data type.

**Table 1835. Common Data Types**

Variable Name:	Definition
DellString	DisplayString (SIZE (0..64))
DellSecurityString	DisplayString (SIZE (0..255))
DellCostofOwnershipString	DisplayString (SIZE (0..64))
DellObjectRange	INTEGER (1..128)
DellUnsigned8BitRange	INTEGER (1..256)
DellUnsigned16BitRange	INTEGER (1..65535)
DellUnsigned32BitRange	Gauge (0..4294967295)
DellSigned32BitRange	INTEGER (-2147483647..2147483647)
DellBoolean	INTEGER (0..1 (FALSE = 0, TRUE = 1))

## Variables with Data Types of State Capabilities and State Capabilities Unique

Variables with definitions of `<variable name>StateCapabilities` or `<variable name>StateCapabilitiesUnique` are integers representing a series of bit definitions. They are NOT enumerations and should be treated as bit fields. The value is passed as a decimal value. The decimal value should be converted to hex and the appropriate bits should be parsed from hex. Some of the more common bit combinations are defined in some variables, but not all combinations are or will be defined.

**Table 1836. Dell State Capabilities**

**Variable Name:** `DellStateCapabilities`

**Data Type:** Integer

**Possible Data Values**

`if set to zero(0)`

`unknownCapabilities(1)`

**Meaning of Data Value**

The object has no capabilities.

The object's capabilities are unknown.

enableCapable (2)	The object can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReadyCapable (4)	The object is not ready.
enableAndNotReadyCapable (6)	Enable and not ready capable.

#### Table 1837. Dell State Settings

**Variable Name:** DellStateSettings

**Data Type:** Integer

**Possible Data Values**

- if set to zero (0)
- unknown (1)
- enabled (2)
- notReady (4)
- enableAndNotReady (6)

**Meaning of Data Value**

- The object has no settings capabilities and its state is disabled.
- The object's state is unknown.
- The object's state is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
- The object is not ready.
- The object is enabled and not ready.

#### Table 1838. Dell Probe Capabilities

**Variable Name:** DellProbeCapabilities

**Data Type:** Integer

**Possible Data Values**

- if set to zero (0)
- upperNonCriticalThresholdSetCapable (1)
- lowerNonCriticalThresholdSetCapable (2)
- upperNonCriticalThresholdDefaultCapable (4)
- lowerNonCriticalThresholdDefaultCapable (8)

**Meaning of Data Value**

- The object has no capabilities.
- The upper noncritical threshold can be set.
- The lower noncritical threshold can be set.
- The upper noncritical threshold can be set to default.
- The lower noncritical threshold can be set to default.

## Dell Status Data Types

Status data types include DellStatus, DellStatusRedundancy, and DellStatusProbe.

#### Table 1839. Dell Status

**Variable Name:** DellStatus

**Data Type:** Integer

**Possible Data Values**

- other (1)
- unknown (2)
- ok (3)
- nonCritical (4)
- critical (5)
- nonRecoverable (6)

**Meaning of Data Value**

- The object's status is not one of the following:
- The object's status is unknown.
- The object's status is OK.
- The object's status is warning, noncritical.
- The object's status is critical (failure).
- The object's status is nonrecoverable (dead).

#### Table 1840. Dell Status Redundancy

**Variable Name:** DellStatusRedundancy

**Data Type:** Integer

**Possible Data Values**

**Meaning of Data Value**

other (1)	The object's status is not one of the following:
unknown (2)	The object's redundancy status is unknown.
full (3)	The object is fully redundant.
degraded (4)	The object's redundancy has been degraded.
lost (5)	The object's redundancy has been lost.
notRedundant (6)	Redundancy does not apply or it is not redundant.

**Table 1841. Dell Status Probe**

**Variable Name:** DellStatusProbe

**Data Type:** Integer

**Possible Data Values**

- other (1)
- unknown (2)
- ok (3)
- nonCriticalUpper (4)
- CriticalUpper (5)
- nonRecoverableUpper (6)
- nonCriticalLower (7)
- criticalLower (8)
- nonRecoverableLower (9)
- failed (10)

**Meaning of Data Value**

- The object's status is not one of the following:
- The status of the object is unknown.
- The status of the object is OK.
- The object is at the noncritical upper limit.
- The object is at the critical upper limit.
- The object is at the nonrecoverable upper limit.
- The object is at the noncritical lower limit.
- The object is at the critical lower limit.
- The object is at the nonrecoverable lower limit.
- The status of the object is failed.

## Dell Date

**Variable Name:** DellDate

**Data Type:** DellUnsigned64BitRange Octet String (SIZE(8))

The DellDate definition is required because SNMP V1 does not support 64-bit ranges. The information sent back by this subagent has the most significant byte of the information as the first byte. For example, the hex address 0x1029384754657687 is sent as hex: 0001 0000 0010 1001 0011 1000 0100 0111 ... Byte 1 Byte 2 Byte 3 Byte 4.

## Full Dates

**Variable Name:** DellDateName

**Data Type:** DisplayString DisplayString (SIZE (25))

Full dates are defined in the ASCII format: *yyyyMMddhhmmss.uuuuuu+fff* or *yyyyMMddhhmmss.uuuuuu-fff*

where *yyyy* is the year, *MM* is the month, *dd* is the day, *hh* are the hours, *mm* are the minutes, and *ss* are the seconds. *uuuuuu* is the number of microseconds, and *+fff* or *-fff* is the offset from UTC in minutes. For example, Friday, October 31, 2001, at 6:05:19 PM CST would be represented as 20011031180519.000000-360.

The values are zero-padded, and if a valid value for a field is not deliverable, each character in the field is replaced with an asterisk (\*) character.



```
1.3.6.1.4.1.674.10892.1.200.10.1.41.1 = 3
1.3.6.1.4.1.674.10892.1.200.10.1.42.1 = 3
1.3.6.1.4.1.674.10892.1.200.10.1.43.1 = '\03'
1.3.6.1.4.1.674.10892.1.300.10.1.1.1 = 1
1.3.6.1.4.1.674.10892.1.300.10.1.2.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.3.1 = 2
1.3.6.1.4.1.674.10892.1.300.10.1.4.1 = 3
1.3.6.1.4.1.674.10892.1.300.10.1.5.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.6.1 = 23
1.3.6.1.4.1.674.10892.1.300.10.1.7.1 = 'Main System
Chassis'
1.3.6.1.4.1.674.10892.1.300.10.1.8.1 = 'Dell Inc.'
1.3.6.1.4.1.674.10892.1.300.10.1.9.1 = 'PowerEdge
2650'
1.3.6.1.4.1.674.10892.1.300.10.1.10.1 = 'ASSETTAG'
1.3.6.1.4.1.674.10892.1.300.10.1.11.1 = '1234567'
1.3.6.1.4.1.674.10892.1.300.10.1.12.1 = 254
1.3.6.1.4.1.674.10892.1.300.10.1.13.1 = 289
1.3.6.1.4.1.674.10892.1.300.10.1.14.1 = 4
1.3.6.1.4.1.674.10892.1.300.10.1.15.1 = 'SERVER01'
1.3.6.1.4.1.674.10892.1.300.10.1.16.1 =
'20050513095213.000000-360'
1.3.6.1.4.1.674.10892.1.300.10.1.17.1 =
'20050513100052.000000-360'
1.3.6.1.4.1.674.10892.1.300.10.1.18.1 = 'Please set
the value'
1.3.6.1.4.1.674.10892.1.300.10.1.19.1 = 'Please set
the value'
1.3.6.1.4.1.674.10892.1.300.10.1.20.1 = 'Please set
the value'
1.3.6.1.4.1.674.10892.1.300.10.1.21.1 = 3
1.3.6.1.4.1.674.10892.1.300.10.1.22.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.23.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.24.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.25.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.26.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.27.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.28.1 = 8
1.3.6.1.4.1.674.10892.1.300.10.1.29.1 = 2
1.3.6.1.4.1.674.10892.1.300.10.1.30.1 = 1
1.3.6.1.4.1.674.10892.1.300.10.1.31.1 = 15
1.3.6.1.4.1.674.10892.1.300.10.1.32.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.33.1 = 27
1.3.6.1.4.1.674.10892.1.300.10.1.34.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.35.1 = 1
1.3.6.1.4.1.674.10892.1.300.10.1.36.1 = 480
1.3.6.1.4.1.674.10892.1.300.10.1.37.1 = 1
1.3.6.1.4.1.674.10892.1.300.10.1.38.1 = 2
1.3.6.1.4.1.674.10892.1.300.10.1.39.1 = 2
1.3.6.1.4.1.674.10892.1.300.10.1.44.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.45.1 = 0
1.3.6.1.4.1.674.10892.1.300.40.1.1.1.1 = 1
1.3.6.1.4.1.674.10892.1.300.40.1.2.1.1 = 1
1.3.6.1.4.1.674.10892.1.300.40.1.3.1.1 = 8
1.3.6.1.4.1.674.10892.1.300.40.1.4.1.1 = 2
1.3.6.1.4.1.674.10892.1.300.40.1.5.1.1 = 'Log
cleared'
1.3.6.1.4.1.674.10892.1.300.40.1.6.1.1 = 2
1.3.6.1.4.1.674.10892.1.300.40.1.7.1.1 = 3
1.3.6.1.4.1.674.10892.1.300.40.1.8.1.1 =
'20050513100047.000000-360'
```