

Dell OpenManage™  
Server Administrator Version 2.3  
**SNMP Reference Guide**

# Notes and Notices



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

---

**Information in this document is subject to change without notice.**

**© 2003–2005 Dell Inc. All rights reserved.**

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, *PowerEdge*, *PowerVault*, and *Dell OpenManage* are trademarks of Dell Inc.; *Microsoft*, *MS-DOS*, *Windows*, and *Windows NT* are registered trademarks of Microsoft Corporation; *Intel*, *Itanium*, *Pentium*, and *Celeron* are registered trademarks, and *MMX*, *Xeon*, and *Intel386* are trademarks of Intel Corporation; *UNIX* is a registered trademark of The Open Group in the United States and in other countries; *VESA* is a registered trademark of the Video Electronics Standards Association.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

**November 2005**

# Contents

1	Introduction .....	13
	Audience .....	13
	<b>What's New in this Release</b> .....	<b>13</b>
	What's New in the Storage Management Alert Reference MIB. ....	13
	<b>Introduction to the SNMP Reference Guide.</b> .....	<b>13</b>
	General Content. ....	14
	Server Administrator Instrumentation MIB. ....	14
	Server Administrator Remote Access MIB. ....	16
	Server Administrator Storage Management MIB .....	16
	Server Administrator Change Management MIB .....	17
	How This Guide Defines Technical Terms .....	18
	SNMP Basic Terminology. ....	18
	Frequently Used Terms in Variable Names. ....	21
	Tables .....	21
	Reference Guide Content Tables .....	23
	Section Organization .....	24
	Other Documents You May Need .....	25
	<b>Introduction to the Server Administrator SNMP Subagent</b> .....	<b>25</b>
	SNMP MIB OIDs .....	26
	SNMP Security .....	27
	Initiating Management Actions. ....	28
	SNMP Traps. ....	28
2	Instrumentation MIB Version Group .....	29
	<b>MIB Major Version Number</b> .....	<b>29</b>
	<b>MIB Minor Version Number</b> .....	<b>29</b>
	<b>MIB Maintenance Version Number</b> .....	<b>30</b>

3	Systems Management Software Group	31
	<b>Systems Management Software</b>	32
	Systems Management Software Name	32
	Systems Management Software Version Number Name	32
	Systems Management Software Build Number	32
	Systems Management Software Description Name	33
	Systems Management Software Supported Protocol	33
	Systems Management Software Preferred Protocol	33
	Systems Management Software Update Level Name	33
	Systems Management Software URL Name	34
	Systems Management Software Language Name	34
	Systems Management Software Global Version Name	34
	Systems Management Software Feature Flags	34
	Systems Management Software SNMP Agent Feature Flags	35
	Systems Management Software Manufacturer Name	35
	<b>Systems Management Software Variable Values</b>	35
4	System State Group	37
	<b>System State Group Table</b>	37
	System State Table	37
5	Chassis Information Group	55
	<b>Chassis Information Group Tables</b>	55
	Chassis Information Table	55
	UUID Table	67
	POST Log Table	69
	Event Log Table	71
	System BIOS Table	73
	Firmware Table	79
	Intrusion Table	82
	Baseboard Table	85
	<b>Chassis Information Group Variable Values</b>	89

6	Operating System Group .....	101
	<b>Operating System Group Table</b> .....	<b>101</b>
	Operating System Table .....	101
	Operating System Memory Table .....	103
7	System Resource Group.....	107
	<b>System Resource Group Tables</b> .....	<b>107</b>
	System Resource Map Table .....	107
	System Resource Owner Table .....	109
	System Resource Input/Output (I/O) Port Table .....	112
	System Resource Memory Table .....	115
	System Resource Interrupt Table .....	118
	System Resource Direct Memory Access (DMA) Table .....	121
	<b>System Resource Group Variable Values</b> .....	<b>124</b>
8	Power Group .....	127
	<b>Power Group Tables</b> .....	<b>127</b>
	Power Unit Table .....	127
	Power Supply Table .....	130
	Voltage Probe Table .....	133
	Amperage Probe Table .....	138
	AC Power Switch Table .....	142
	AC Power Cord Table .....	145
	<b>Power Group Variable Values</b> .....	<b>148</b>
9	Thermal Group.....	155
	<b>Thermal Group Tables</b> .....	<b>155</b>
	Cooling Unit Table .....	155
	Cooling Device Table .....	158
	Temperature Probe Table .....	163
	<b>Thermal Group Variable Values</b> .....	<b>168</b>

10	User Security Group . . . . .	171
	<b>User Security Group Table</b> . . . . .	171
	User Security Table . . . . .	171
11	Remote Flash BIOS Group . . . . .	173
	<b>Remote Flash BIOS Group Table</b> . . . . .	173
	Remote Flash BIOS Table . . . . .	173
	<b>Remote Flash BIOS Variable Values</b> . . . . .	176
12	Port Group . . . . .	179
	<b>Port Group Tables</b> . . . . .	179
	Pointing Port Table . . . . .	179
	Keyboard Port Table . . . . .	182
	Processor Port Table . . . . .	185
	Memory Device Port Table . . . . .	188
	Monitor Port Table . . . . .	191
	Small Computer System Interface (SCSI) Port Table . . . . .	194
	Parallel Port Table . . . . .	196
	Serial Port Table . . . . .	200
	Universal Serial Bus (USB) Port Table . . . . .	204
	<b>Port Group Variable Values</b> . . . . .	207
13	Device Group . . . . .	211
	<b>Device Tables</b> . . . . .	211
	Pointing Device Table . . . . .	211
	Keyboard Device Table . . . . .	214
	Processor Device Table . . . . .	216
	Processor Device Status Table . . . . .	221
	Cache Device Table . . . . .	223
	Memory Device Table . . . . .	229
	Memory Device Mapped Address Table . . . . .	235

Generic Device Table . . . . .	238
PCI Device Table . . . . .	240
PCI Device Configuration Space Table . . . . .	244
<b>Device Group Variable Values . . . . .</b>	<b>247</b>
<b>14 Slot Group . . . . .</b>	<b>257</b>
<b>System Slot Group Table . . . . .</b>	<b>257</b>
System Slot Table . . . . .	257
<b>System Slot Variable Values . . . . .</b>	<b>261</b>
<b>15 Memory Group . . . . .</b>	<b>269</b>
<b>Physical Memory Tables . . . . .</b>	<b>269</b>
Physical Memory Array Table. . . . .	269
Physical Memory Array Mapped Table. . . . .	274
Physical Memory Configuration Table . . . . .	277
Physical Memory Logging Table . . . . .	279
Redundant Memory Unit Table . . . . .	281
Physical Memory Card Table . . . . .	283
<b>Memory Group Variable Values . . . . .</b>	<b>286</b>
<b>16 BIOS Setup Control Group . . . . .</b>	<b>291</b>
<b>BIOS Group Tables . . . . .</b>	<b>291</b>
BIOS Setup Control Table. . . . .	291
SCSI Control Table . . . . .	301
Parallel Port Control Table . . . . .	303
Serial Port Control Table . . . . .	305
USB Control Table. . . . .	307
IDE Control Table . . . . .	309
Diskette Control Table. . . . .	311
Network Interface Control Table . . . . .	313
<b>BIOS Group Variable Values . . . . .</b>	<b>315</b>

17	Local Response Agent Group .....	325
	<b>LRA Group Tables</b> .....	<b>325</b>
	LRA Global Settings. ....	325
	LRA Global Settings Table .....	326
	LRA Action Table .....	328
	<b>Local Response Agent Variable Values</b> .....	<b>330</b>
18	Cost of Ownership Group.....	333
	<b>Cost of Ownership Group Tables</b> .....	<b>333</b>
	Cost of Ownership Table .....	333
	COO Service Contract Table .....	344
	COO Cost Event Log Table .....	346
	COO Warranty Table .....	348
	COO Lease Information Table. ....	350
	COO Schedule Number Table. ....	353
	COO Options Table .....	354
	COO Maintenance Table .....	356
	COO Repair Table .....	358
	COO Support Information Table. ....	360
	COO Trouble Ticket Table .....	363
	<b>Cost of Ownership Variable Values</b> .....	<b>365</b>
19	Remote Access Group .....	367
	<b>DRAC 4</b> .....	<b>367</b>
	Remote Access Table. ....	367
	<b>DRAC III.</b> .....	<b>373</b>
	Remote Access Table. ....	373
	Remote User Administration Table .....	382
	Remote SNMP Trap Table .....	390
	Remote Dial-Up Table. ....	394
	Remote User Dial-In Configuration Table. ....	398
	Remote Dial-Out Table .....	401
	<b>Remote Access Variable Values.</b> .....	<b>404</b>



20	Cluster Group	417
	<b>Cluster Group</b>	417
	Cluster Table	417
	<b>Cluster Group Variable Values</b>	420
21	Baseboard Management Controller Group	421
	<b>Baseboard Management Controller Group Tables</b>	421
	Baseboard Management Controller Table	421
	Baseboard Management Controller Serial Interface Table	424
	Baseboard Management Controller LAN Interface Table	427
	<b>Baseboard Management Controller Group Variable Values</b>	431
22	Storage Services Group	435
	<b>Storage Management Group</b>	435
	<b>Storage Management Information Group</b>	437
	<b>Global Data Group</b>	438
	<b>Physical Devices Group</b>	443
	Controller Table	444
	Channel Table	460
	Enclosure Table	464
	Array Disk Table	473
	Array Disk Enclosure Connection Table	483
	Array Disk Channel Connection Table	486
	Fan Table	488
	Fan Connection Table	493
	Power Supply Table	495
	Power Supply Connection Table	499
	Temperature Probe Table	501
	Temperature Probe Connection Table	505
	Enclosure Management Module Table	507
	Enclosure Management Module Connection Table	512
	Battery Table	514
	Battery Connection Table	518

<b>Logical Devices Group</b> . . . . .	<b>520</b>
Virtual Disk Table . . . . .	521
Array Disk Logical Connection Table . . . . .	528
<b>Storage Management Event Group</b> . . . . .	<b>531</b>
<b>23 Change Management Group</b> . . . . .	<b>533</b>
<b>Inventory Group</b> . . . . .	<b>533</b>
<b>Device Group</b> . . . . .	<b>534</b>
Device Group Table . . . . .	534
<b>Application Group</b> . . . . .	<b>536</b>
Application Group Table . . . . .	536
<b>Operating System Group</b> . . . . .	<b>538</b>
<b>Inventory Collector Product Information</b> . . . . .	<b>540</b>
<b>24 Traps</b> . . . . .	<b>543</b>
<b>Trap Variables</b> . . . . .	<b>543</b>
System . . . . .	543
Table Index OID . . . . .	544
Message . . . . .	544
Current Status . . . . .	544
Previous Status . . . . .	544
Data . . . . .	544
<b>Understanding the Trap Description</b> . . . . .	<b>545</b>
<b>Understanding Trap Severity</b> . . . . .	<b>547</b>
<b>Server Administrator SNMP Traps</b> . . . . .	<b>547</b>
Miscellaneous Traps . . . . .	548
Temperature Probe Traps . . . . .	549
Cooling Device Traps . . . . .	551
Voltage Probe Traps . . . . .	552
Amperage Probe Traps . . . . .	554
Chassis Intrusion Traps . . . . .	556
Redundancy Unit Traps . . . . .	556
Power Supply Traps . . . . .	558

Memory Device Traps . . . . .	559
Fan Enclosure Traps . . . . .	560
AC Power Cord Traps . . . . .	561
Hardware Log Traps . . . . .	561
Processor Device Status Traps . . . . .	562
Pluggable Device Traps. . . . .	563
<b>RAC Traps . . . . .</b>	<b>564</b>
<b>BMC Traps . . . . .</b>	<b>567</b>
<b>25 Storage Management Alert Reference . . . . .</b>	<b>569</b>
<b>Alert Monitoring and Logging . . . . .</b>	<b>569</b>
<b>Viewing Alerts . . . . .</b>	<b>569</b>
<b>Alert Severity Levels . . . . .</b>	<b>570</b>
<b>SNMP Support for Storage Management Alerts . . . . .</b>	<b>570</b>
SNMP Trap Forwarding. . . . .	570
SNMP Trap Definitions . . . . .	571
SNMP Trap Variables. . . . .	571
<b>Viewing SNMP Traps . . . . .</b>	<b>571</b>
<b>Alert Descriptions and Corrective Actions . . . . .</b>	<b>572</b>

A	Standard Data Type Definitions .....	623
	<b>Common Data Types</b> .....	623
	<b>Variables with Data Types of State Capabilities and State Capabilities Unique</b> .....	624
	<b>Dell Status Data Types</b> .....	625
	<b>Dell Date</b> .....	627
	Full Dates .....	627
B	SNMP Sample Output.....	629
	Glossary .....	633
	Index.....	655

# Introduction

This introduction is divided into two sections. The first section, "Introduction to the SNMP Reference Guide," explains the *SNMP Reference Guide* design. All essential Simple Network Management Protocol (SNMP) terms are defined in this section. Some of the vocabulary may seem complex and unfamiliar to system administrators who are using SNMP for the first time. SNMP experts can skim this section, and beginners can read the section more carefully.

The second section, "Introduction to the Server Administrator SNMP Subagent," is a more technical introduction to the management information base (MIB) that underlies Server Administrator services.

## Audience

This guide is intended for system administrators, network administrators, and anyone who wants to write SNMP MIB applications to monitor systems.

## What's New in this Release

This section lists changes to the Server Administrator MIBs in this release of Server Administrator.

### What's New in the Storage Management Alert Reference MIB

Storage Management Alert reference MIB object (See Section 25, *Storage Management Alert Reference*.) is updated to include Serial Attached SCSI (SAS) support for Dell™ PowerEdge™ 6800 and 6850 and support for PowerEdge RAID Controller (PERC) 5/E.

## Introduction to the SNMP Reference Guide

This reference guide provides a formatted version of the Server Administrator Instrumentation MIB (filename `10892.mib`), the Server Administrator Remote Access MIB (filename `dcs3rmt.mib`), the Server Administrator Storage Management MIB (filename `dcstorag.mib`), and the Server Administrator Change Management MIB (filename `dellcm.mib`) that are released with the current version of Dell OpenManage™ Server Administrator.

Sections in this guide follow MIB groups and provide explanations and definitions for the terms used to define MIB objects. Content in this reference guide is organized as documented in the following subsections.

## General Content

Table 1-1 describes the sections that provide general information about the MIBs documented in this guide.

**Table 1-1. General Content Sections in This Guide**

Section	Topics	MIB Group Number
<b>1</b>	Introduction to SNMP basics and to the MIBs that support Server Administrator services	NA
<b>24</b>	Traps — describes in-band traps defined in the Server Administrator Instrumentation MIB and out-of-band traps sent by the Remote Access Controller (RAC) and Baseboard Management Controller (BMC).	5000
<b>Appendix A</b>	Standard Data Type Definitions — defines standard data types used in this reference guide.	NA
<b>Appendix B</b>	SNMP Sample Output — provides a sample SNMP output.	NA
<b>Glossary</b>	Defines acronyms, abbreviations, and technical terms used in this reference guide.	NA

## Server Administrator Instrumentation MIB

The Server Administrator Instrumentation MIB (filename **10892.mib**) provides instrumentation data that allows you to monitor the health of a system with SNMP management applications. It provides:

- Information about the status of temperatures, power supplies, voltages, currents, fans, and memory at key points in the system
- Rapid access to detailed fault and performance information gathered by industry standard systems management agents
- Version information for Basic Input/Output System (BIOS), firmware, and operating system
- A detailed account of every cost of ownership (COO) detail about your system

In addition, traps are sent to report a change in status of the health of critical components.

The Server Administrator Instrumentation MIB structures its MIB objects into groups of scalar objects or MIB tables that provide related information. Table 1-2 describes each Server Administrator Instrumentation MIB group and lists the MIB group number assigned to the MIB group. The Server Administrator Instrumentation MIB groups are identified by the SNMP OID

1.3.6.1.4.1.674.10892.1.<MIB group number>, where <MIB group number> is the MIB group number assigned to the MIB group. See the relevant section for more information about the MIB objects defined in a MIB group.

**Table 1-2. Server Administrator Instrumentation MIB Sections in This Guide**

<b>Section</b>	<b>Topics</b>	<b>MIB Group Numbers</b>
<b>2</b>	Instrumentation MIB Version Group — defines version numbers of the Instrumentation MIB	1
<b>3</b>	Systems Management Software Group — defines information about the systems management software and the supported systems management standards	100
<b>4</b>	System State Group — defines status, state, and redundancy for a system and its components	200
<b>5</b>	Chassis Information Group — defines chassis types, events, and indicators	300
<b>6</b>	Operating System Group — defines variables for name, version, service pack, and other information about a system's operating system	400
<b>7</b>	System Resource Group — defines variables for input/output ports, memory, interrupts, and direct memory access	500
<b>8</b>	Power Group — defines variables for power units, power supplies, and their current and voltage probes	600
<b>9</b>	Thermal Group — defines variables for temperature probes and cooling devices	700
<b>10</b>	User Security Group — defines variables for creating and modifying user accounts	800
<b>11</b>	Remote Flash BIOS Group — defines variables for updating the system's BIOS remotely	900
<b>12</b>	Port Group — defines variables for major port types such as keyboard, monitor, small computer system interface (SCSI), Universal Serial Bus (USB), and parallel and serial ports	1000
<b>13</b>	Device Group — defines variables for pointing, keyboard, processor, cache, memory, and personal computer interface devices	1100
<b>14</b>	Slot Group — defines variables for the system's slots	1200
<b>15</b>	Memory Group — defines variables for the system's physical memory	1300
<b>16</b>	BIOS Setup Control Group — defines variables for BIOS functions such as boot sequence, speakers, Wake on the local area network (LAN), diskettes, ports, and network interface controllers (NIC)	1400
<b>17</b>	Local Response Agent Group — defines variables for global settings and actions. These variables allow users to predetermine how the system responds to a particular type of event	1500
<b>18</b>	Cost of Ownership Group — defines variables for tracking data on the system's service contract, lease, repair records, trouble tickets, and so on	1600

**Table 1-2. Server Administrator Instrumentation MIB Sections in This Guide (continued)**

Section	Topics	MIB Group Numbers
20	Cluster Group — defines variables for systems that operate as a cluster	1800
21	Baseboard Management Controller Group — provides information about the Baseboard Management Controller (BMC) that may be present in your system. In addition to providing general information about the BMC, this group provides information about the serial and local area network (LAN) interfaces of the BMC	1900
24	Traps — defines the types of alerts that can be sent to report the status of critical components	5000

### Server Administrator Remote Access MIB

The Server Administrator Remote Access MIB (filename `dc3rmt.mib`) provides in-band information about remote access hardware that may be present in your system.

The Server Administrator Remote Access MIB structures its MIB objects into groups of scalar objects or MIB tables that provide related information. Table 1-3 describes each Server Administrator Remote Access MIB group and lists the MIB group number assigned to the MIB group. The Server Administrator Remote Access MIB groups are identified by the SNMP OID 1.3.6.1.4.1.674.10892.1.<MIB group number> where <MIB group number> is the MIB group number assigned to the MIB group. See the relevant section for more information about the MIB objects defined in a MIB group.

**Table 1-3. Server Administrator Remote Access MIB Sections in This Guide**

Section	Topic	MIB Group Numbers
19	Remote Access Group — provides information about remote access hardware that may be present in your system and defines variables for administrative users, SNMP trap destinations, modem configuration for dial-up networking, dial-in configuration, and dial-out destinations	1700

### Server Administrator Storage Management MIB

The Server Administrator Storage Management MIB (filename `dcstorag.mib`) provides storage management data that allows you to monitor the health of storage resources with SNMP management applications.

Table 1-4 describes each Server Administrator Storage Management MIB group and lists the MIB group number assigned to the MIB group. The Server Administrator Storage Management MIB groups are identified by the SNMP OID 1.3.6.1.4.1.674.<MIB group number> where <MIB group number> is the MIB group number assigned to the MIB group. See the relevant section for more information about the MIB objects defined in a MIB group.



**Table 1-4. Server Administrator Storage Management MIB Sections in This Guide**

<b>Section</b>	<b>Topics</b>	<b>MIB Group Numbers</b>
<b>22</b>	Storage Services Group — consists of definitions for the following MIB groups: <ul style="list-style-type: none"> <li>• Storage Management Group</li> <li>• Storage Management Information Group</li> <li>• Global Data Group</li> <li>• Physical Devices Group</li> <li>• Logical Devices Group</li> <li>• Storage Management Event Group</li> </ul>	10893
<b>25</b>	Storage Management Alert Reference — lets you monitor the health of storage resources such as controllers, channels, array disks, and virtual disks	NA

### Server Administrator Change Management MIB

The Server Administrator Change Management MIB (filename **dellcm.mib**) provides management data that allows you to monitor the inventory of devices and applications with SNMP management applications.

Table 1-5 describes each Server Administrator Change Management MIB group and lists the MIB group number assigned to the MIB group. The Server Administrator Change Management MIB groups are identified by the SNMP OID 1.3.6.1.4.1.674.<MIB group number> where <MIB group number> is the MIB group number assigned to the MIB group. See the relevant section for more information about the MIB objects defined in a MIB group.

**Table 1-5. Server Administrator Change Management MIB Sections in This Guide**

<b>Section</b>	<b>Topics</b>	<b>MIB Group Number</b>
<b>23</b>	Change Management Group - describes the inventory data provided by the Change Management MIB that allows users to monitor devices and software that are present on a particular managed computer chassis	10899

## How This Guide Defines Technical Terms

The following table provides information about where to find definitions for technical terms in this reference guide.

**Table 1-6. Where to Find Definitions for Technical Terms**

Type of Definition	See
Basic SNMP vocabulary.	Introduction
MIB-group-specific variable values. MIB-group-specific MIB variables contain links to the tables that define these values in the last section of the section in which these variables are used.	Sections 3, 5, 7, 8, 9, and 11 through 18.
Systems management terms, acronyms, and commonly managed components referred to in this reference guide.	Glossary
Server Administrator-standard data types that specify variable values in this reference guide.	Appendix A, "Standard Data Type Definitions."

## SNMP Basic Terminology

It is important to have a good understanding of the key technical terms used in this guide. This guide provides definitions for all essential terms used in describing the Server Administrator Instrumentation MIB and Server Administrator Remote Access MIB.

The Glossary contains definitions for all essential terms and acronyms.

## SNMP Master Agent

Typically, the SNMP agent on a managed system consists of one SNMP master agent and zero or more SNMP extension agents. This SNMP agent extendable structure facilitates the addition of new MIB modules without having to rebuild the entire SNMP agent and is invisible to SNMP management applications.

The SNMP master agent is responsible for receiving SNMP request protocol messages from SNMP management applications and sending SNMP response protocol messages. As part of processing SNMP request protocol messages, the SNMP master agent typically communicates with one or more SNMP extension agents. This communication does not involve standard SNMP protocol messages. The SNMP master agent uses an extension protocol that shields the SNMP extension agent from the standard SNMP protocol messages. The extension protocol also provides a way for SNMP extension agents to send SNMP event notifications (called traps in SNMPv1). The SNMP master agent is also responsible for sending SNMP event notification protocol messages to SNMP management applications.

On supported operating systems, the SNMP master agent is provided with the operating system. For example, on supported Microsoft® Windows® operating systems, the Windows SNMP service is the SNMP master agent. For information on the versions of the SNMP protocol supported by the SNMP master agent, see the operating system documentation.

## **SNMP Extension Agent**

The SNMP extension agent is responsible for registering the MIB objects that it supports with the SNMP master agent and then processing requests from the SNMP master agent for those MIB objects. The SNMP extension agent also initiates event notifications to the SNMP master agent. The SNMP extension agent does not receive or send standard SNMP protocol messages. The SNMP extension agent communicates with the SNMP master agent using an extension protocol defined by the SNMP master agent. The Server Administrator SNMP subagent is an SNMP extension agent.

## **Managed Object**

A managed object is any item in a computer system that can be singled out for discovery, monitoring, or user intervention and correction.



**NOTE:** Not all managed objects described in this guide are supported by all systems.

## **MIB**

A MIB acts as a structured road map for managed objects. As an Application Programming Interface (API), a MIB allows systems management tools to retrieve data maintained by an agent. The server administrator MIB is divided into several major groups of managed objects.

## **Variable**

A variable is a component of a managed object. A temperature probe, for example, has a variable to describe its capabilities, its health or status, and certain indexes that you can use to locate specific temperature probes. One index for the probe would be the probe's chassis number. Some systems may have multiple chassis—one chassis for the central processing unit and another chassis for storage. A chassis within a system can also have more than one temperature probe. Variables for a temperature probe include its capabilities, status, chassis index, and index.

## **One-Based Index**

When an index is one-based, counting starts at 1. One-based indexing counts the first instance as 1, the second index as 2, and so on.

## **Zero-Based Index**

When an index is zero-based, counting starts at 0. Zero-based indexing counts the first instance as 0, the second index as 1, and so on.

## Fields

Managed object variables contain fields. In this reference guide, managed object variables have the following fields defined:

**Name** is the exact string by which the variable is known in the MIB. MIB variables are named according to the following conventions:

- Variable names start with a lowercase letter.
- Spaces are not allowed between words in the variable name.
- Acronyms are in uppercase letters, except when an acronym is the first word in the variable name.
- With the exception of the first letter of the variable name and acronyms, all other words in the variable name start with capital letters.

The following variable names illustrate these conventions:

```
temperatureProbeLowerCriticalThreshold  
coolingUnitIndex  
pCIDeviceSpeed
```

**Object Identifier (OID)** is the unique number assigned to an object defined in a MIB. An OID is written as a sequence of subidentifiers in decimal notation. Each OID in this reference guide has a prefix that identifies the managed objects as belonging to Dell: 1.3.6.1.4.1.674. The additional numbers identify the MIB group and subgroup as well as the table entry number of any variables.

For example, the OID for the temperature probe managed object table is 700.20 and the variable for the location of the temperature probe (temperatureProbeLocationName) has an OID of 700.20.1.8. The full OIDs for these items are 1.3.6.1.4.1.674.10892.1.700.20 for the temperatureProbeTable and 1.3.6.1.4.1.674.10892.1.700.20.1.8 for the temperatureProbeLocation. For more information about the structure of OIDs, see "SNMP MIB OIDs."

**Description** is a brief explanation of what a particular managed object does.

**Syntax** defines the data type in which the values of the variable must be expressed. Most variables in this reference guide use standard data types such as string or boolean. All data types that are unique to server administrator variables are defined at the end of the section in which they occur. Standard data types are defined in "Standard Data Type Definitions."

**Access** specifies whether persons with administrative privileges can read but not modify the value of a variable (read only) or can both read and modify the value of a variable (read-write).

## Frequently Used Terms in Variable Names

The following terms are frequently used in the name of a MIB variable:

**Capability** refers to the actions an object can perform, or to actions that can be taken by the object. Hot-pluggable is an example of a capability. If a card is hot-pluggable, it can be replaced while a system is running. Capability settings refer to the capabilities of the object that the user can select from and activate if desired. Capability settings allow users of the server administrator to predetermine how an object will behave under specific conditions.

**Settings** are the conditions of a manageable object that determine what happens when a certain value is detected in a component. For example, a user can set the upper critical threshold of a temperature probe to 75 degrees Celsius. If the probe reaches that temperature, the setting causes an alert to be sent to the management console. Some settings, when reached, can trigger a system shutdown or other response to prevent damage to the system.

**State** refers to the condition of an object that has more than one condition. For example, an object may be in a "not ready" or in an "enabled" state.

**Status** refers to the health of an object or how the object is functioning. For example, the status of a temperature probe that is measuring acceptable temperatures would be reported as normal. When the probe begins reading temperatures that exceed limits set by the user, it reports a critical status.

## Tables

This reference guide contains two types of tables: tables that are used to organize and define variable values and tables that define MIB objects. Readers must understand the differences between these two types of tables.

### SNMP Tables

Most of the MIB objects defined in this reference guide are organized into SNMP tables. SNMP tables organize data into two-dimensional structural arrays. In SNMP, objects that have a relationship to other objects are called columnar objects. Columnar objects are the type of object used to form lists and tables. When a MIB group is divided into one or more discrete tables, the word "table" has a technical meaning. An example is the section of this reference guide entitled Universal Unique Identifier (UUID). The UUID object has a type and a value that uniquely identify an object such as a chassis. The table defines all of the variables that comprise the managed object UUID.

The following table is an example of an SNMP table. The table contains variables that must occur in a definite sequence. In the example table the defined variables are UUID Chassis Index, UUID Index, UUID Type, and UUID Value.

## Example SNMP Table

### *UUID Table*

These objects comprise the Server Administrator definitions for the UUID.

<b>Name</b>	uUIDTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20
<b>Description</b>	Defines the UUID table.
<b>Syntax</b>	SEQUENCE OF UUIDTableEntry
<b>Access</b>	Not accessible

### *UUID Table Entry*

<b>Name</b>	uUIDTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1
<b>Description</b>	Defines the UUID table entry.
<b>Syntax</b>	UUIDTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	uUIDIndex, uUIDchassisIndex

### *UUID Chassis Index*

<b>Name</b>	uUIDchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### *UUID Index*

<b>Name</b>	uUIDIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.2
<b>Description</b>	Defines the index of the UUID in a specified chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only


### ***UUID Type***

<b>Name</b>	uUUIDType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.3
<b>Description</b>	Defines the type of the UUID for this chassis.
<b>Syntax</b>	DellUUIDType
<b>Access</b>	Read-only

### ***UUID Value***

<b>Name</b>	uUUIDValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.4
<b>Description</b>	Defines the value of the UUID for this chassis.
<b>Syntax</b>	OCTET STRING (SIZE[16])
<b>Access</b>	Read-only

## **Reference Guide Content Tables**

 **NOTE:** Variable values are defined for any variable that is Server Administrator-specific. Industry-standard variable definitions are documented in "Standard Data Type Definitions."

Some of the tables in this guide have no technical significance in SNMP. These tables are designed to show information in a readable form. The following table, for example, defines the Server Administrator-specific variable, DellFanControlCapabilities. The table provides the name of the variable, its data type, the values that are valid for the variable, and the meaning of each value.

**Table 1-7. Example Variable Type Definition Table**

---

<b>Variable Name:</b> DellFanControlCapabilities	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	The fan's capabilities are unknown.
lowSpeedCapable(2)	The fan can be set to low speed.
highSpeedCapable(4)	The fan can be set to high speed.
lowOrHighSpeedCapable(6)	The fan can be set to low or high speed.

---

This type of table is used throughout the reference guide to list and define variable values. Tables that explain Server Administrator-specific variable values are located in the final section of sections that define Server Administrator-specific variables. In the preceding example, the variable name is `DellFanControlCapabilities`. This variable must be expressed as an integer and has four possible values: `unknown`, `lowSpeedCapable`, `highSpeedCapable`, and `lowOrHighSpeedCapable`.

## Section Organization

Sections in this reference guide are based on the Server Administrator Instrumentation MIB and Server Administrator Remote Access MIB, so the complexity of each section depends on the complexity of each MIB group. The first section provides a high-level introduction to the MIB group. If the group is defined by one or more tables, the second section lists these tables. The third section documents the variables that comprise the group, and if applicable, the variables that comprise the tables. The fourth section contains definitions for any Server Administrator-specific variables that are used in the section.

The following example shows the typical content of these four sections.

### 1 BIOS Setup Control Group

This section explains the purpose of the MIB group and summarizes the major features of the component groups.

### 2 BIOS Group Tables

If there is more than one SNMP table for a group, this section lists all of the tables. For this BIOS group example, there are eight tables listed. Double-clicking any table on the list takes you to that table.

- BIOS Setup Control Table
- SCSI Control Table
- Parallel Port Control Table
- Serial Port Control Table
- USB Control Table
- IDE Control Table
- Diskette Control Table
- Network Interface Control Table

### 3 Variables that make up each table in the group

This section documents the variables for the eight tables that comprise the BIOS group.

### 4 BIOS Variable Values

This section explains any Server Administrator-specific variables and data types that are used in this section. In the BIOS group example, there are 17 unique, Server Administrator-specific variable meanings. Information on each Server Administrator-specific variable is presented in a formatted table.



## Other Documents You May Need

In addition to this *Server Administrator SNMP Reference Guide*, you can find the following guides on your documentation CD:

- The *Server Administrator Messages Reference Guide* lists the messages that you can receive on your systems management console or on your operating system's event viewer. This guide explains the text, severity, and cause of each message that the server administrator issues.
- *Server Administrator CIM Reference Guide* documents the Common Information Model (CIM) provider, an extension of the standard management object format (MOF) file. The Server-Administrator provider documents supported classes of management objects.

## Introduction to the Server Administrator SNMP Subagent

This guide provides formatted information drawn primarily from the MIB files written for the Server Administrator Instrumentation and Remote Access services. The MIB filenames are **10892.mib** and **dcs3rmt.mib**.

For each of the variables defined in the MIBs, the following fields are specified:

- Variable name
- OID or unique identifying number
- Description
- Data type of the variable (for example: integer, string, octet string)
- Whether the variable is accessible, not accessible, read-only, or read-write
- Index or indexes, if applicable

For each MIB group that has unique variable definitions, tables are included in the last section of the section to explain the meaning of the terms.

Standards for writing MIBs are defined by the Internet Engineering Task Force (IETF). Structure of Management Information (SMI) is a standard that specifies the rules for defining the structure and type of managed objects and events in a MIB. SMIv1 is specified in Request For Comments (RFC) 1155. The Server Administrator MIB conforms to the SMIv1 standard.

SNMP is a systems management standard originally designed for network management. SNMP manages much more than networks. Information Technology (IT) professionals use SNMP for monitoring and managing computer systems and the various components and peripherals supported by their systems.

SNMP standards are defined by the Internet Engineering Task Force (IETF). SNMP version 1 was published in August 1988 and is the most commonly supported version of SNMP. SNMP version 2 was first published in May 1993, but has not gained widespread market acceptance. SNMP version 3 was recently completed and has addressed security issues that exist in version 1.

All SNMP systems consist of one or more managed systems that provide data through an SNMP agent to a management system. The management system provides a user interface to view data from the managed systems. The management system and managed systems communicate over a network (typically through User Datagram Protocol/Internet Protocol [UDP/IP]).

The management system and a managed system communicate by means of a common data schema. SNMP MIB files define the structure, type, and values of the SNMP data. While MIBs can be standardized or enterprise specific, most operating systems supply SNMP agents for the standard MIB-I and MIB-II schemas. MIB-I defines a base set of standard management information for systems implementing the Internet Protocol (IP) suite. MIB-II defines characteristics of the system, characteristics of network interfaces, and characteristics of components of the IP on the system. In addition to the standard MIBs, many hardware vendors have defined MIBs that provide management data specific to their systems and peripheral devices.

Monitored data can be retrieved through SNMP using the Get command. Typically, this command requires the host name or IP address of the target machine as well as the OID of the data to retrieve. Exact details are dependent on the operating system and the development tools being used to create the management application. The Get command has a variant known as GetNext.


## **SNMP MIB OIDs**

Each data class within an MIB is defined by an OID. OIDs are unique across all MIBs. An OID consists of a series of digits separated by periods. The OID functions in a similar fashion to a phone number. The phone number 011-512-471-0000 uniquely identifies a single phone. The phone number can be broken down into a number of components to uniquely identify a phone. The first component, 011, is the country code for the United States. The second component, 512, identifies the area code for central Texas. The third component, 471, is the phone exchange for a large state university in the city of Austin. The final component, 0000, is the main switchboard.

There are two main differences between the phone number example and an actual OID. The first difference is that there are many more components in an OID, up to 128. The combination of these components is called an OID prefix. The second difference is that OIDs support the concept of indexes or keys. The OID prefix specifies the data class but does not specify an instance of the data within the class. Indexes can be used to identify the instances of a data class. These indexes are referred to as the OID suffix.

The assignment of values for each OID prefix component can be illustrated by using a tree structure. The following is an example of an OID assignment:

**ROOT**

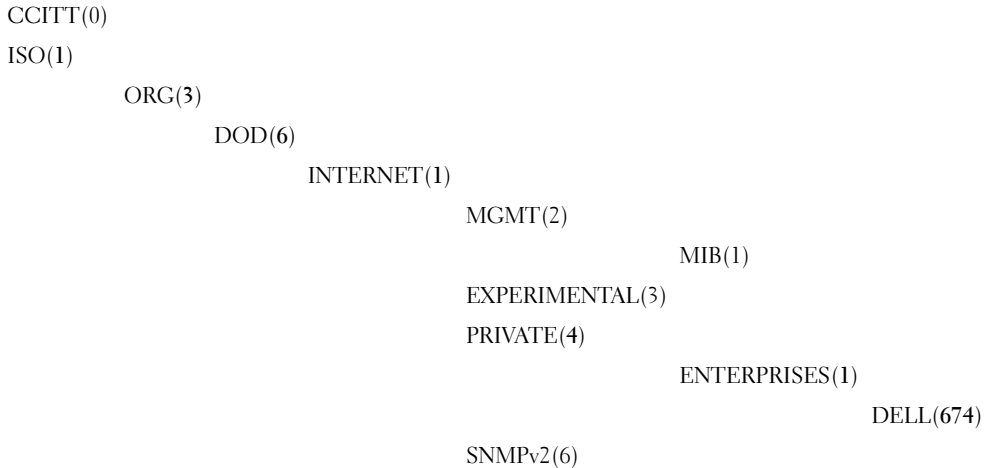

In the preceding example, the OID prefix for the Dell enterprise would be 1.3.6.1.4.1.674.

The numbers in boldface type show the categories and numbers that apply to Server Administrator. All Server Administrator-defined OIDs consist of 1.3.6.1.4.1.674 followed by additional component values.

### **SNMP Security**

SNMP version 1 has a very limited security mechanism. SNMP agents support the use of a community string, which is configured at each SNMP agent and is passed as a part of all SNMP request messages. There is no verification that the requester is actually a member of the specified community.

Because most system and network management data is not confidential, this limited security is acceptable for Get types of requests. On the other hand, this security is not acceptable for Set types of operations where an SNMP request could power off a system, reconfigure a redundant array of independent disks (RAID) card, and so on. Some vendors have chosen not to support SNMP Set operations for this reason. Server Administrator is able to support SNMP Set operations because its SNMP agents implement a hash/digest mechanism to prevent unauthorized SNMP Set operations. One limitation of this practice is that only server administrator-developed SNMP management applications have the capability to support the hash/digest mechanism.

## Initiating Management Actions

Management actions can be performed using the SNMP Set command. These actions can consist of configuring a phone number for the system's owner, rebooting a system, or changing the asset tag of the system. See the previous section, "SNMP Security," for limitations on Set operations.

## SNMP Traps

SNMP is frequently used to monitor systems for fault conditions such as temperature violations, hard drive failures, and so on. Management applications can monitor for these conditions by polling the appropriate OIDs with the Get command and analyzing the returned data. This method has its drawbacks. If it is done frequently, significant amounts of network bandwidth can be consumed. If it is done infrequently, the response to the fault condition may not occur in a timely fashion. SNMP traps avoid these limitations of the polling method.

An SNMP trap is an asynchronous event indicating that something significant has occurred. This is analogous to a pager receiving an important message, except that the SNMP trap frequently contains all the information needed to diagnose a fault.

Two drawbacks to SNMP traps are that they are sent using UDP, which is not a guaranteed delivery mechanism, and that they are not acknowledged by the receiver.

An SNMP trap message contains the trap's enterprise OID, the agent IP address, a generic trap ID, the specific trap ID, a time stamp, and zero or more variable bindings (varbinds). The combination of an enterprise OID and a specific trap ID uniquely identifies each Server Administrator-defined trap. A varbind consists of an OID and its value and provides additional information about the trap.

In order for a management system to receive SNMP traps from a managed system, the node must be configured to send traps to the management system. Trap destination configuration is dependent on the operating system. When this configuration is done, a management application on the management system can wait for traps and act on them when received.

For a list of traps supported by the server administrator SNMP subagent, see "Traps."

# Instrumentation MIB Version Group

The Instrumentation Management Information Base (MIB) Version Group defines the attributes that identify the version of the Instrumentation MIB supported by the systems management software.

The `mIBMajorVersionNumber`, `mIBMinorVersionNumber`, and `mIBMaintenanceVersionNumber` attributes are scalar objects, meaning that they are not related to other MIB objects and are thus not placed in a table.

## MIB Major Version Number

<b>Name</b>	<code>mIBMajorVersionNumber</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1.1.0
<b>Description</b>	<p>Defines the major version number of the version of this MIB supported by the systems management software. For example, if the MIB version is 1.2.3, the major version number is 1.</p> <p>A major version number change indicates a major change in object functionality.</p>
<b>Syntax</b>	<code>DellUnsigned8BitRange</code>
<b>Access</b>	Read-only

## MIB Minor Version Number

<b>Name</b>	<code>mIBMinorVersionNumber</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1.2.0
<b>Description</b>	<p>Defines the minor version number of the version of this MIB supported by the systems management software. For example, if the MIB version is 1.2.3, the minor version number is 2.</p> <p>A minor revision provides additional support for new objects as well as problem fixes.</p>
<b>Syntax</b>	<code>DellUnsigned8BitRange</code>
<b>Access</b>	Read-only

## MIB Maintenance Version Number

<b>Name</b>	mIBMaintenanceVersionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1.3.0
<b>Description</b>	Defines the maintenance version number for the version of this MIB supported by the systems management software. For example, if the MIB version is 1.2.3, the maintenance version number is 3.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

## Systems Management Software Group

The Systems Management Software Group allows users to see information about the standards and software that are supported by the agent of a particular managed computer chassis. The Systems Management Software Group classifies each computer chassis according to the systems management standard that the agent supports.

Additional objects define the universal resource locator (URL) of the systems management software and the language in which systems management information displays. Defining these objects enables users to manage a system using an internet browser. You can access Server Administrator using the secure hypertext transfer protocol (https) and a pre-assigned port number of 1311, or you can specify a port number of your own choosing.



**NOTE:** Using the **Software** → **Server Preferences** menu of Server Administrator, you can bind to either one IP address or to all IP addresses.



**NOTE:** To manage a system remotely using Server Administrator, type one of the following in the address field of your browser:

`https://<systemname>:<1311 or user specified port number>`

or

`https://<IP address>:<1311 or user specified port number>`

To manage a system locally using Server Administrator, type the following in the address field of your browser:

`https://localhost:<1311 or user-specified port number>`

# Systems Management Software

The following objects describe the fields for server administrator systems management information. The systems management software variables are scalar objects, meaning that they are not related to other management information base (MIB) objects and are thus not placed in a table.

## Systems Management Software Name

<b>Name</b>	<code>systemManagementSoftwareName</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.1
<b>Description</b>	Defines the systems management software product name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Systems Management Software Version Number Name

<b>Name</b>	<code>systemManagementSoftwareVersionNumberName</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.2
<b>Description</b>	Defines the version number of the systems management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Systems Management Software Build Number

<b>Name</b>	<code>systemManagementSoftwareBuildNumber</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.3
<b>Description</b>	Defines the build number of the systems management software.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only



## Systems Management Software Description Name

<b>Name</b>	systemManagementSoftwareDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.4
<b>Description</b>	Defines the description of the systems management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Systems Management Software Supported Protocol

<b>Name</b>	systemManagementSoftwareSupportedProtocol
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.5
<b>Description</b>	Defines the systems management standards (SNMP or CIM) supported by the systems management software.
<b>Syntax</b>	SMSSupportedTypes (See Table 3-1.)
<b>Access</b>	Read-only

## Systems Management Software Preferred Protocol

<b>Name</b>	systemManagementSoftwarePreferredProtocol
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.6
<b>Description</b>	Defines the preferred systems management standard for the systems management software.
<b>Syntax</b>	SMSSupportedTypes (See Table 3-1.)
<b>Access</b>	Read-only

## Systems Management Software Update Level Name

<b>Name</b>	systemManagementSoftwareUpdateLevelName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.7
<b>Description</b>	Defines the update level of the system management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Systems Management Software URL Name

<b>Name</b>	systemManagementSoftwareURLName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.8
<b>Description</b>	Defines the universal resource locator (URL) of the systems management software.
<b>Syntax</b>	DisplayString (SIZE (0..255))
<b>Access</b>	Read-only

## Systems Management Software Language Name

<b>Name</b>	systemManagementSoftwareLanguageName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.9
<b>Description</b>	Defines the language of the systems management software.
<b>Syntax</b>	DisplayString (SIZE (0..255))
<b>Access</b>	Read-only

## Systems Management Software Global Version Name

<b>Name</b>	systemManagementSoftwareGlobalVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.10
<b>Description</b>	Defines the global version of the systems management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Systems Management Software Feature Flags

<b>Name</b>	systemManagementSoftwareFeatureFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.11
<b>Description</b>	Defines the features of the systems management software.
<b>Syntax</b>	SMSFeatureFlags (See Table 3-2)
<b>Access</b>	Read-only

## Systems Management Software SNMP Agent Feature Flags

<b>Name</b>	systemManagementSoftwareSNMPAgentFeatureFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.12
<b>Description</b>	Defines the features of the SNMP agent software provided by the operating system.
<b>Syntax</b>	SMSSNMPAgentFeatureFlags (See Table 3-3)
<b>Access</b>	Read-only

## Systems Management Software Manufacturer Name

<b>Name</b>	systemManagementSoftwareManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.100.13
<b>Description</b>	Defines the manufacturer of the systems management software.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Systems Management Software Variable Values

This section includes definitions of server administrator-specific variable values used in this section.

**Table 3-1. Systems Management Software Supported Standards**

---

<b>Variable Name:</b> SMSSupportedTypes	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
supportsSNMP(1)	This system supports SNMP.
supportsDMI(2)	This system supports DMI.
supportsSNMPandDMI(3)	This system supports SNMP and DMI.
supportsCIMOM(4)	This system supports CIM.
supportsSNMPandCIMOM(5)	This system supports SNMP and CIM.

---

**Table 3-2. Systems Management Software Feature Flags**

---

**Variable Name:** SMSFeatureFlags

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The Systems Management Software features are not enabled.
webOneToOneManagementPreferred(1)	The web 1:1 management preferred feature is enabled.

---

**Table 3-3. Systems Management Software SNMP Agent Feature Flags**

---

**Variable Name:** SMSSNMPAgentFeatureFlags

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The Systems Management Software SNMP agent features are not enabled.
supportsSparseTables(1)	The SNMP agent supports sparse tables.

---

# System State Group

The Management Information Base (MIB) variables presented in this section enable you to track various attributes that describe the state of the critical components supported by your system. Components monitored under the System State Group include power supplies, AC power cords, AC power switches, and cooling devices, as well as temperature, fan, amperage, and voltage probes.

## System State Group Table

The System State Group defines objects in the System State MIB table.

### System State Table

The following object sets up the System State Table:

<b>Name</b>	systemStateTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10
<b>Description</b>	Defines the System State Table.
<b>Syntax</b>	SEQUENCE OF SystemStateTableEntry
<b>Access</b>	Not accessible

### System State Table Entry

<b>Name</b>	systemStateTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1
<b>Description</b>	Defines the System State Table entry.
<b>Syntax</b>	SystemStateTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemStatechassisIndex

### System State Chassis Index

<b>Name</b>	systemStatechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System State Global System Status

<b>Name</b>	systemStateGlobalSystemStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.2
<b>Description</b>	Defines the global system status of all chassis being monitored by this instrumentation instance.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Chassis State

<b>Name</b>	systemStateChassisState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.3
<b>Description</b>	Defines the system state of this chassis.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### System State Chassis Status

<b>Name</b>	systemStateChassisStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.4
<b>Description</b>	Defines the system status of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Power Unit State Details

<b>Name</b>	systemStatePowerUnitStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.5
<b>Description</b>	Defines the state of all power units in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific power unit. The first byte returned represents the state of the first power unit, the second byte returned represents the state of the second power unit, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Power Unit Status Redundancy

<b>Name</b>	systemStatePowerUnitStatusRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.6
<b>Description</b>	Defines the system status of the power unit(s) in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Power Unit Status Details

<b>Name</b>	systemStatePowerUnitStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.7
<b>Description</b>	Defines the status of all power units in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific power unit. The first byte returned represents the status of the first power unit, the second byte returned represents the status of the second power unit, and so on. The bytes have the same definition type as DellStatusRedundancy.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Power Supply State Details

<b>Name</b>	systemStatePowerSupplyStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.8
<b>Description</b>	Defines the state of all power supplies in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific power supply. The first byte returned represents the state of the first power supply, the second byte returned represents the state of the second power supply, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Power Supply Status Combined

<b>Name</b>	systemStatePowerSupplyStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.9
<b>Description</b>	Defines the status of all power supplies in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Power Supply Status Details

<b>Name</b>	systemStatePowerSupplyStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.10
<b>Description</b>	Defines the status of all power supplies in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific power supply. The first byte returned represents the status of the first power supply, the second byte returned represents the status of the second power supply, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only



### System State Voltage State Details

<b>Name</b>	systemStateVoltageStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.11
<b>Description</b>	Defines the state of all voltage probes in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific voltage probe. The first byte returned represents the status of the first voltage probe, the second byte returned represents the status of the second voltage probe, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Voltage Status Combined

<b>Name</b>	systemStateVoltageStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.12
<b>Description</b>	Defines the status of all voltage probes in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Voltage Status Details

<b>Name</b>	systemStateVoltageStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.13
<b>Description</b>	Defines the status of all voltage probes in this chassis.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Amperage State Details

<b>Name</b>	systemStateAmperageStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.14
<b>Description</b>	Defines the state of all current probes in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific current probe. The first byte returned represents the state of the first current probe, the second byte returned represents the state of the second current probe, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Amperage Status Combined

<b>Name</b>	systemStateAmperageStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.15
<b>Description</b>	Defines the status of all amperage probes in this chassis. The result is returned as a combined status value. The value has the same definition type as DellStatus.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Amperage Status Details

<b>Name</b>	systemStateAmperageStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.16
<b>Description</b>	Defines the status of all amperage probes in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific amperage probe. The first byte returned represents the status of the first amperage probe, the second byte returned represents the status of the second amperage probe, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Cooling Unit State Details

<b>Name</b>	statesystemStateCoolingUnitStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.17
<b>Description</b>	Defines the state of all cooling units in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific cooling unit. The first byte returned represents the state of the first cooling unit, the second byte returned represents the state of the second cooling unit, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Cooling Unit Status Redundancy

<b>Name</b>	systemStateCoolingUnitStatusRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.18
<b>Description</b>	Defines the state of all cooling units in this chassis.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

### System State Cooling Unit State Details

<b>Name</b>	systemStateCoolingUnitstateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.19
<b>Description</b>	Defines the state of all cooling units in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific cooling unit. The first byte returned represents the state of the first cooling unit, the second byte returned represents the state of the second cooling unit, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Cooling Device State Details

<b>Name</b>	systemStateCoolingDeviceStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.20
<b>Description</b>	Defines the state of all cooling devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific cooling device. The first byte returned represents the state of the first cooling device, the second byte returned represents the state of the second cooling device, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Cooling Device Status Combined

<b>Name</b>	systemStateCoolingDeviceStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.21
<b>Description</b>	This attribute defines the cooling device status of all cooling devices in this chassis. The results is returned as a combined status value. The value has the same definition type as DellStatus.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Cooling Device Status Details

<b>Name</b>	systemStateCoolingDeviceStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.22
<b>Description</b>	Defines the status of all cooling devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific cooling device. The first byte returned represents the status of the first cooling device, the second byte returned represents the status of the second cooling device, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Temperature State Details

<b>Name</b>	systemStateTemperatureStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.23
<b>Description</b>	Defines the state of all temperature probes in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of a specific temperature probe. The first byte returned represents the state of the first temperature probe, the second byte returned represents the status of the second temperature probe, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Temperature Status Combined

<b>Name</b>	systemStateTemperatureStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.24
<b>Description</b>	Defines the status of all temperature probes in this chassis. The result is returned as a combined status value. The value has the same definition type as DellStatus.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Temperature Status Details

<b>Name</b>	systemStateTemperatureStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.25
<b>Description</b>	Defines the status of all temperature probes in this chassis. The first byte returned represents the status of the first temperature probe, the second byte returned represents the status of the second temperature probe, and so on.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Memory Device State Details

<b>Name</b>	systemStateMemoryDeviceStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.26
<b>Description</b>	Defines the state of all memory devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the state of the specific memory device. The first byte returned represents the state of the first memory device, the second byte returned represents the status of the second memory device, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Memory Device Status Combined

<b>Name</b>	systemStateMemoryDeviceStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.27
<b>Description</b>	Defines the status of all memory devices in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Memory Device Status Details

<b>Name</b>	systemStateMemoryDeviceStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.28
<b>Description</b>	Defines the status of all memory devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific memory device. The first byte returned represents the status of the first memory device, the second byte returned represents the status of the second memory device, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Chassis Intrusion State Details

<b>Name</b>	systemStateChassisIntrusionStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.29
<b>Description</b>	Defines the intrusion state of all intrusion detection devices in this chassis. The results are returned as a binary octet string. Each byte of the octet string represents the status of a specific intrusion detection device. The first byte returned represents the status of the first intrusion detection device, the second byte returned represents the status of the second intrusion detection device, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Chassis Intrusion Status Combined

<b>Name</b>	systemStateChassisIntrusionStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.30
<b>Description</b>	Defines the intrusion status of all intrusion detection devices in this chassis. The result is returned as a combined status value. The value has the same definition type as DellStatus.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Chassis Intrusion Status Details

<b>Name</b>	systemStateChassisIntrusionStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.31
<b>Description</b>	Defines the intrusion status of all intrusion detection devices in this chassis. The first byte returned represents the status of the first intrusion detection device, the second byte returned represents the status of the second intrusion detection device, and so on.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State AC Power Switch State Details

<b>Name</b>	systemStateACPowerSwitchStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.32
<b>Description</b>	Defines the individual state of all AC power switches in this chassis. The first byte returned represents the state of the first AC power switch, the second byte returned represents the state of the second AC power switch, and so on.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State AC Power Switch Status Redundancy

<b>Name</b>	systemStateACPowerSwitchStatusRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.33
<b>Description</b>	Defines the overall redundancy status of the AC power switches in this chassis.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

### System State AC Power Switch Status Details

<b>Name</b>	systemStateACPowerSwitchStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.34
<b>Description</b>	Defines the individual status of all AC power switches in this chassis. The first byte returned represents the status of the first AC power switch, the second byte returned represents the status of the second AC power switch, and so on.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only



### System State AC Power Cord State Details

<b>Name</b>	systemStateACPowerCordStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.35
<b>Description</b>	Defines the individual state of all AC power cords for any AC power switches in this chassis. The first byte returned represents the state of the first AC power cord, the second byte returned represents the state of the second AC power cord, and so on.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State AC Power Cord Status Combined

<b>Name</b>	systemStateACPowerCordStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.36
<b>Description</b>	Defines the overall status of all AC power cords for any AC power switches in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State AC Power Cord Status Details

<b>Name</b>	systemStateACPowerCordStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.37
<b>Description</b>	Defines the individual status of all AC power cords for any AC power switches in this chassis. Defines the individual status of all AC power cords for any AC power switches in this chassis. The first byte returned represents the status of the first AC power cord, the second byte returned represents the status of the second AC power cord, and so on.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Redundant Memory Unit State Details

<b>Name</b>	systemStateRedundantMemoryUnitStateDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.38
<b>Description</b>	Defines the state of all redundant memory units in this chassis. The results are returned as a binary octet string, each byte of the octet string represents the state of the specific object. The first byte returned represents the state of the first object, and so on. The bytes have the same definition type as DellStateSettings.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Redundant Memory Unit Status Redundancy

<b>Name</b>	systemStateRedundantMemoryUnitStatusRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.39
<b>Description</b>	Defines the overall redundancy status for redundant memory.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

### System State Redundant Memory Unit Status Details

<b>Name</b>	systemStateRedundantMemoryUnitStatusDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.40
<b>Description</b>	Defines the status of all redundant memory units in this chassis. The results are returned as a binary octet string, each byte of the octet string represents the status of the specific object. The first byte returned represents the status of the first object, and so on. The bytes have the same definition type as DellStatusRedundancy.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Event Log Status

<b>Name</b>	systemStateEventLogStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.41
<b>Description</b>	Defines the overall status of this chassis (ESM) event log.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Power Unit Status Combined

<b>Name</b>	systemStatePowerUnitStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.42
<b>Description</b>	Defines the combined status of all power units of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Power Unit Status List

<b>Name</b>	systemStatePowerUnitStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.43
<b>Description</b>	Lists the status of each power unit of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a power unit. The first byte returned represents the status of the first power unit, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Cooling Unit Status Combined

<b>Name</b>	systemStateCoolingUnitStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.44
<b>Description</b>	Defines the combined status of all cooling units of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Cooling Unit Status List

<b>Name</b>	systemStateCoolingUnitStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.45
<b>Description</b>	Lists the status of each cooling unit of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a cooling unit. The first byte returned represents the status of the first cooling unit, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State AC Power Switch Status Combined

<b>Name</b>	systemStateACPowerSwitchStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.46
<b>Description</b>	Defines the combined status of all AC power switches of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State AC Power Switch Status List

<b>Name</b>	systemStateACPowerSwitchStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.47
<b>Description</b>	Lists the status of each AC power switch of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of an AC power switch. The first byte returned represents the status of the first AC power switch, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Redundant Memory Unit Status Combined

<b>Name</b>	systemStateRedundantMemoryUnitStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.48
<b>Description</b>	Defines the combined status of all redundant memory units of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Redundant Memory Unit Status List

<b>Name</b>	systemStateRedundantMemoryUnitStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.49
<b>Description</b>	Lists the status of each redundant memory unit of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a redundant memory unit. The first byte returned represents the status of the first redundant memory unit, and so on. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only

### System State Processor Device Status Combined

<b>Name</b>	systemStateProcessorDeviceStatusCombined
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.50
<b>Description</b>	Defines the combined status of all processor devices of this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System State Processor Device Status List

<b>Name</b>	systemStateProcessorDeviceStatusList
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.200.10.1.51
<b>Description</b>	Lists the status of each processor device of this chassis. The results are returned as a binary octet string where each byte of the octet string represents the status of a processor device. The first byte returned represents the status of the first processor device, etc. The bytes have the same definition type as DellStatus.
<b>Syntax</b>	OCTET STRING (SIZE(1..128))
<b>Access</b>	Read-only



# Chassis Information Group

The Chassis Information Group provides information about the type or types of chassis in your system, as well as information about the light-emitting diode (LED) indicators and settings for devices on each chassis. Information is also available about the current date and time displayed on the chassis, intrusion warnings, watchdog timer, systems management basic input/output system (SMBIOS), and so on.

## Chassis Information Group Tables

The following management information base (MIB) tables define the objects in the Chassis Information Group:

- Chassis Information Table
- UUID Table
- POST Log Table
- Event Log Table
- System BIOS Table
- Firmware Table
- Intrusion Table
- Baseboard Table

### Chassis Information Table

The following object sets up the Chassis Information Table.

<b>Name</b>	<code>chassisInformationTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10
<b>Description</b>	Defines the chassis information table.
<b>Syntax</b>	SEQUENCE OF ChassisInformationTableEntry
<b>Access</b>	Not accessible

### Chassis Information Table Entry

<b>Name</b>	chassisInformationTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1
<b>Description</b>	Defines the chassis information table entry.
<b>Syntax</b>	ChassisInformationTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	chassisIndexChassisInformation

### Chassis Index Chassis Information

<b>Name</b>	chassisIndexChassisInformation
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis. The first chassis will be numbered one.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Chassis State Capabilities

<b>Name</b>	chassisStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.2
<b>Description</b>	Defines the capabilities of the chassis.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Chassis State Settings

<b>Name</b>	chassisStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.3
<b>Description</b>	Defines the state settings for the chassis.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write



## Chassis Status

<b>Name</b>	chassisStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.4
<b>Description</b>	Defines the status of the chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Chassis Parent Index Reference

<b>Name</b>	chassisparentIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.4
<b>Description</b>	Defines the index (one-based) of the parent chassis of this chassis, if any. A zero (0) means that this chassis is the parent of all other chassis managed by the Server Administrator.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Chassis Type

<b>Name</b>	chassisType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.6
<b>Description</b>	Defines the chassis type.
<b>Syntax</b>	DellChassisType (See Table 5-2.)
<b>Access</b>	Read-only

## Chassis Name

<b>Name</b>	chassisName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.7
<b>Description</b>	Defines the user-assigned chassis name of the chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

### Chassis Manufacturer Name

<b>Name</b>	chassisManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.8
<b>Description</b>	Defines the manufacturer's name for this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Chassis Model Name

<b>Name</b>	chassisModelName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.9
<b>Description</b>	Defines the system model type for this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Chassis Asset Tag Name

<b>Name</b>	chassisAssetTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.10
<b>Description</b>	Defines the user-assigned asset tag name for this chassis.
<b>Syntax</b>	DisplayString (SIZE (0..10))
<b>Access</b>	Read-write

### Chassis Service Tag Name

<b>Name</b>	chassisServiceTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.11
<b>Description</b>	Defines the service tag name for this chassis.
<b>Syntax</b>	DisplayString (SIZE (0..7))
<b>Access</b>	Read-only

## Chassis ID

<b>Name</b>	chassisID
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.12
<b>Description</b>	Defines the asset tag name for this chassis.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

## Chassis ID Extension

<b>Name</b>	chassisIDExtension
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.13
<b>Description</b>	Defines the SMBIOS machine ID of this chassis.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

## Chassis System Class

<b>Name</b>	chassisSystemClass
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.14
<b>Description</b>	Defines the chassis class of this chassis.
<b>Syntax</b>	DellChassisSystemClass (See Table 5-20.)
<b>Access</b>	Read-only

## Chassis System Name

<b>Name</b>	chassisSystemName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.15
<b>Description</b>	Defines the system name of this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Chassis System Boot Date Name

<b>Name</b>	chassisSystemBootDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.16
<b>Description</b>	Defines the boot time of this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

### Chassis System Date Name

<b>Name</b>	chassisSystemDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.17
<b>Description</b>	Defines the current time on this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

### Chassis System Location Name

<b>Name</b>	chassisSystemLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.18
<b>Description</b>	Defines the user-assigned location for this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

### Chassis System Primary User Name

<b>Name</b>	chassisSystemPrimaryUserName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.19
<b>Description</b>	Defines the user-assigned primary user name for this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

### Chassis System User Phone Number Name

<b>Name</b>	chassisSystemUserPhoneNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.20
<b>Description</b>	Defines the user-assigned phone number of the primary user of the system.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

### Chassis Connection Status Unique

<b>Name</b>	chassisConnectionStatusUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.21
<b>Description</b>	Defines the status of the connection from the system chassis to an expansion chassis.
<b>Syntax</b>	DellConnectionStatus (See Table 5-3.)
<b>Access</b>	Read-only

### Chassis Fan Control Capabilities Unique

<b>Name</b>	chassisFanControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.22
<b>Description</b>	Defines the capabilities of the fan control function in this chassis.
<b>Syntax</b>	DellFanControlCapabilities (See Table 5-4.)
<b>Access</b>	Read-only

### Chassis Fan Control Settings Unique

<b>Name</b>	chassisFanControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.23
<b>Description</b>	Defines the readings and settings of the fan control hardware in the chassis.
<b>Syntax</b>	DellFanControlSettings
<b>Access</b>	Read-write

### Chassis LED Control Capabilities Unique

<b>Name</b>	chassisLEDControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.24
<b>Description</b>	Defines the capabilities of the LED control function in the chassis.
<b>Syntax</b>	DellLEDControlCapabilities (See Table 5-5.)
<b>Access</b>	Read-only

### Chassis LED Control Settings Unique

<b>Name</b>	chassisLEDControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.25
<b>Description</b>	Defines the readings and settings of the LED control hardware in the chassis.
<b>Syntax</b>	DellLEDControlSettings (See Table 5-6.)
<b>Access</b>	Read-write

### Chassis Hard-Drive (HD) Fault Clear Control Capabilities

<b>Name</b>	chassisHDFaultClearControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.26
<b>Description</b>	Specifies whether the chassis allows reset of the chassis hard-drive fault LED.
<b>Syntax</b>	DellHDFaultLEDControlCapabilities (See Table 5-7.)
<b>Access</b>	Read-only

### Chassis HD Fault Clear Control Settings

<b>Name</b>	chassisHDFaultClearControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.27
<b>Description</b>	Allows reset of the chassis hard-drive fault LED.
<b>Syntax</b>	DellHDFaultLEDControlSettings (See Table 5-8.)
<b>Access</b>	Read-write

### Chassis Identify Flash Control Capabilities

<b>Name</b>	chassisIdentifyFlashControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.28
<b>Description</b>	Specifies whether the chassis front-panel LED can be set to flash.
<b>Syntax</b>	DellChassisIdentifyControlCapabilities (See Table 5-9.)
<b>Access</b>	Read-only

### Chassis Identify Flash Control Settings

<b>Name</b>	chassisIdentifyFlashControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.29
<b>Description</b>	Causes the chassis front-panel LED to flash.
<b>Syntax</b>	DellChassisIdentifyControlSettings (See Table 5-10.)
<b>Access</b>	Read-write

### Chassis Lock Present

<b>Name</b>	chassisLockPresent
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.30
<b>Description</b>	Specifies whether a chassis lock is present on the chassis.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

### Chassis Host Control Capabilities Unique

<b>Name</b>	chassishostControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.31
<b>Description</b>	Defines the capabilities of the host control object.
<b>Syntax</b>	DellHostControlCapabilities (See Table 5-11.)
<b>Access</b>	Read-only

### Chassis Host Control Settings Unique

<b>Name</b>	chassishostControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.32
<b>Description</b>	Defines the current settings of the host control object.
<b>Syntax</b>	DellHostControlSettings (See Table 5-13.)
<b>Access</b>	Read-write

### Chassis Watchdog Control Capabilities Unique

<b>Name</b>	chassiswatchDogControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.33
<b>Description</b>	Defines the capabilities of the watchdog timer object.
<b>Syntax</b>	DellWatchDogControlCapabilities (See Table 5-13.)
<b>Access</b>	Read-only

### Chassis Watchdog Control Settings Unique

<b>Name</b>	chassiswatchDogControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.34
<b>Description</b>	Defines the current settings and the values allowed to be set for the watchdog timer object.
<b>Syntax</b>	DellWatchDogControlCapabilities (See Table 5-13.)
<b>Access</b>	Read-write

### Chassis Watchdog Control Expiry Time Capabilities Unique

<b>Name</b>	chassiswatchDogControlExpiryTimeCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.35
<b>Description</b>	Defines the capabilities of the watchdog expiry timer object.
<b>Syntax</b>	DellWatchDogTimerCapabilities (See Table 5-13.)
<b>Access</b>	Read-only



### Chassis Watchdog Control Expiry Time

<b>Name</b>	chassiswatchDogControlExpiryTime
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.36
<b>Description</b>	Defines the current reading and allows setting of the nonrecoverable watchdog expiry timer object.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-write

### Chassis Allow Set Commands From SNMP

<b>Name</b>	chassisallowSETCommandsfromSNMP
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.37
<b>Description</b>	Specifies whether Simple Network Management Protocol (SNMP) Set type commands are allowed by Server Administrator. This attribute does not reflect whether SNMP Set type commands are allowed by the SNMP master agent.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

### Chassis Power Button Control Capabilities Unique

<b>Name</b>	chassisPowerButtonControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.38
<b>Description</b>	Defines the capabilities of the power button control function.
<b>Syntax</b>	DellPowerButtonControlCapabilities (See Table 5-16)
<b>Access</b>	Read-only

### Chassis Power Button Control Settings Unique

<b>Name</b>	chassisPowerButtonControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.39
<b>Description</b>	Defines the current reading and allows setting of the power button control hardware.
<b>Syntax</b>	DellPowerButtonControlSettings (See Table 5-17)
<b>Access</b>	Read-write

### Chassis Reseller Name

<b>Name</b>	chassisResellerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.40
<b>Description</b>	Defines the name of the chassis reseller.
<b>Syntax</b>	DisplayString (SIZE (0..128))
<b>Access</b>	Read-only

### Chassis Reseller Contact Information Name

<b>Name</b>	chassisResellerContactInformationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.41
<b>Description</b>	Defines the chassis reseller contact information name.
<b>Syntax</b>	DisplayString (SIZE (0..128))
<b>Access</b>	Read-only

### Chassis Reseller Product Name

<b>Name</b>	chassisResellerProductName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.42
<b>Description</b>	Defines the chassis reseller product name.
<b>Syntax</b>	DisplayString (SIZE (0..128))
<b>Access</b>	Read-only

### Chassis Reseller System ID

<b>Name</b>	chassisResellerSystemID
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.43
<b>Description</b>	Defines the chassis reseller system ID.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

## Chassis NMI Button Control Capabilities Unique

<b>Name</b>	chassisNMIButtonControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.44
<b>Description</b>	Defines the capabilities of the NMI button control function.
<b>Syntax</b>	DellNMIButtonControlCapabilities (See Table 5-18)
<b>Access</b>	Read-only

## Chassis NMI Button Control Settings Unique

<b>Name</b>	chassisNMIButtonControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.10.1.45
<b>Description</b>	Defines the current reading and allows setting of the NMI button control hardware.
<b>Syntax</b>	DellNMIButtonControlSettings (See Table 5-19)
<b>Access</b>	Read-write

## UUID Table

These objects comprise the server administrator definitions for the Universal Unique Identifier (UUID).

<b>Name</b>	uUIDTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20
<b>Description</b>	Defines the UUID table.
<b>Syntax</b>	SEQUENCE OF uUIDTableEntry
<b>Access</b>	Not accessible

## UUID Table Entry

<b>Name</b>	uUIDTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1
<b>Description</b>	Defines the UUID table entry.
<b>Syntax</b>	uUIDTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	uUIDIndex, uUIDchassisIndex

## UUID Chassis Index

<b>Name</b>	uUUIDchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## UUID Index

<b>Name</b>	uUUIDIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.2
<b>Description</b>	Defines the index of the UUID in a specified chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## UUID Type

<b>Name</b>	uUUIDType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.3
<b>Description</b>	Defines the type of the UUID for this chassis.
<b>Syntax</b>	DellUUIDType
<b>Access</b>	Read-only

## UUID Value

<b>Name</b>	uUUIDValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.20.1.4
<b>Description</b>	Defines the value of the UUID for this chassis.
<b>Syntax</b>	OCTET STRING (SIZE(16))
<b>Access</b>	Read-only

## POST Log Table

This section defines attributes for the power-on self-test (POST) log. When you turn on your computer, the POST checks various system components before the operating system loads. The POST tests the random-access memory (RAM), the hard drives, and the keyboard, for example. While the POST is running, it makes a log file that system administrators can view. The variables in this section also contribute to managing the POST log.

<b>Name</b>	postLogTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30
<b>Description</b>	Defines the POST Log Table.
<b>Syntax</b>	SEQUENCE OF PostLogTableEntry
<b>Access</b>	Not accessible

## POST Log Table Entry

<b>Name</b>	postLogTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1
<b>Description</b>	Defines the POST Log Table entry.
<b>Syntax</b>	PostLogTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	postLogchassisIndex, postLogRecordIndex

## POST Log Chassis Index

<b>Name</b>	postLogchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## POST Log Record Index

<b>Name</b>	postLogRecordIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.2
<b>Description</b>	Defines the record number (one-based) of the POST log.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## POST Log State Capabilities Unique

<b>Name</b>	postLogStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.3
<b>Description</b>	Defines the capabilities of the object that is writing the POST log.
<b>Syntax</b>	DellStateCapabilitiesLogUnique
<b>Access</b>	Read-only

## POST Log State Settings Unique

<b>Name</b>	postLogStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.4
<b>Description</b>	Defines the state of the object that is writing the POST log.
<b>Syntax</b>	DellStateSettingsLogUnique
<b>Access</b>	Read-write

## POST Log Record

<b>Name</b>	postLogRecord
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.5
<b>Description</b>	Defines the data for the specified chassis and record index in the POST log being returned.
<b>Syntax</b>	DisplayString (SIZE (0..1024))
<b>Access</b>	Read-only

## POST Log Format

<b>Name</b>	postLogFormat
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.30.1.5
<b>Description</b>	Defines format of the POST log.
<b>Syntax</b>	DellLogFormat (See Table 5-1.)
<b>Access</b>	Read-only

## Event Log Table

<b>Name</b>	eventLogTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40
<b>Description</b>	Defines the Event Log Table.
<b>Syntax</b>	SEQUENCE OF EventLogTableEntry
<b>Access</b>	Not accessible

## Event Log Table Entry

<b>Name</b>	eventLogTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1
<b>Description</b>	Defines the event Log Table Entry.
<b>Syntax</b>	EventLogTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	eventLogchassisIndex,eventLogRecordIndex

## Event Log Chassis Index

<b>Name</b>	eventLogchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Event Log Record Index

<b>Name</b>	eventLogRecordIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.2
<b>Description</b>	Defines the record index of the event log.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Event Log State Capabilities Unique

<b>Name</b>	eventLogStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.3
<b>Description</b>	Defines the capabilities of the object that is writing the event log.
<b>Syntax</b>	DellStateCapabilitiesLogUnique
<b>Access</b>	Read-only

### Event Log State Settings Unique

<b>Name</b>	eventLogStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.4
<b>Description</b>	Defines the state settings for the object that is writing the event log.
<b>Syntax</b>	DellStateSettingsLogUnique
<b>Access</b>	Read-write

### Event Log Record

<b>Name</b>	eventLogRecord
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.5
<b>Description</b>	Defines the data for the specified chassis and log record index in the event log being returned.
<b>Syntax</b>	DisplayString (SIZE (0..1024))
<b>Access</b>	Read-only

### Event Log Format

<b>Name</b>	eventLogFormat
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.6
<b>Description</b>	Defines the format of the event log.
<b>Syntax</b>	DellLogFormat (See Table 5-1.)
<b>Access</b>	Read-only



## Event Log Severity Status

<b>Name</b>	eventLogSeverityStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.7
<b>Description</b>	Defines the severity of the event log record.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only
<b>Status</b>	Mandatory

## Event Log Date Name

<b>Name</b>	eventLogDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.40.1.8
<b>Description</b>	Defines the date and time of the event log record.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only
<b>Status</b>	Mandatory

## System BIOS Table

This table lists objects that define the system's basic input/output system (BIOS).

<b>Name</b>	systemBIOSTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50
<b>Description</b>	Defines the System BIOS Table.
<b>Syntax</b>	SEQUENCE OF SystemBIOSTableEntry
<b>Access</b>	Not accessible

## System BIOS Table Entry

<b>Name</b>	systemBIOSTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1
<b>Description</b>	Defines the System BIOS Table entry.
<b>Syntax</b>	SystemBIOSTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemBIOSchassisIndex,systemBIOSIndex

## System BIOS Chassis Index

<b>Name</b>	systemBIOSchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## System BIOS Index

<b>Name</b>	systemBIOSIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.2
<b>Description</b>	Defines the index (one-based) of the system BIOS of this object.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## System BIOS State Capabilities

<b>Name</b>	systemBIOSStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.3
<b>Description</b>	Defines the capabilities of the system BIOS of this object.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## System BIOS State Settings

<b>Name</b>	systemBIOSStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.4
<b>Description</b>	Defines the state of the system BIOS of this object.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## System BIOS Status

<b>Name</b>	systemBIOSStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.5
<b>Description</b>	Defines the status of the system BIOS of this object.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## System BIOS Size

<b>Name</b>	systemBIOSSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.6
<b>Description</b>	Defines the image size of the system BIOS in kilobytes (KB). A zero (0) indicates that the image size of the BIOS is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## System BIOS Release Date Name

<b>Name</b>	systemBIOSReleaseDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.7
<b>Description</b>	Defines the release date of the system BIOS.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

## System BIOS Version Name

<b>Name</b>	systemBIOSVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.8
<b>Description</b>	Defines the version name of the system BIOS.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### System BIOS Starting Address

<b>Name</b>	systemBIOSStartingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.9
<b>Description</b>	Defines the starting address of the system BIOS. A zero (0) indicates that the address is unknown.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

### System BIOS Ending Address

<b>Name</b>	systemBIOSEndingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.10
<b>Description</b>	Defines the ending address of the system BIOS. A zero (0) indicates that the address is unknown.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

### System BIOS Manufacturer Name

<b>Name</b>	systemBIOSManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.11
<b>Description</b>	Defines the system BIOS manufacturer's name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## System BIOS Characteristics

**Name** systemBIOSCharacteristics

**Object ID** 1.3.6.1.4.1.674.10892.1.300.50.1.12

**Description** Defines characteristics of the system BIOS. This attribute is a bit field where a bit has the meaning defined below when set to 1 (one). Bit 63 is the first bit in the value, and bit 0 is the last bit in the value. See the description of DellUnsigned64BitRange at the beginning of this file for more information on the format of the value.

Bits 48-63 need to be examined in the context of the system ID. The system ID is available in the attribute chassisID. If the value for chassisID is non-zero, bits 48-63 have the meaning defined below:

Bit Position    Meaning if Set

-----	-----
Bit 0	Reserved
Bit 1	Reserved
Bit 2	Unknown
Bit 3	BIOS Characteristics Not Supported
Bit 4	ISA is supported
Bit 5	MCA is supported
Bit 6	EISA is supported
Bit 7	PCI is supported
Bit 8	PC Card (PCMCIA) is supported
Bit 9	Plug and Play is supported
Bit 10	APM is supported
Bit 11	BIOS is Upgradeable (Flash)
Bit 12	BIOS shadowing is allowed
Bit 13	VL-VESA is supported
Bit 14	ESCD support is available
Bit 15	Boot from CD is supported
Bit 16	Selectable Boot is supported
Bit 17	BIOS ROM is socketed
Bit 18	Boot From PC Card (PCMCIA) is supported
Bit 19	EDD (Enhanced Disk Drive) Specification is supported
Bit 20	Int 13h - Japanese Floppy for NEC 9800 1.2mb (3.5 in, 1k Bytes/Sector, 360 RPM) is supported
Bit 21	Int 13h - Japanese Floppy for Toshiba 1.2mb (3.5 in, 360 RPM) is supported
Bit 22	Int 13h - 5.25 in / 360 KB Floppy Services are supported
Bit 23	Int 13h - 5.25 in / 1.2MB Floppy Services are supported
Bit 24	Int 13h - 3.5 in / 720 KB Floppy Services are supported
Bit 25	Int 13h - 3.5 in / 2.88 MB Floppy Services are supported
Bit 26	Int 5h, Print Screen Service is supported
Bit 27	Int 9h, 8042 Keyboard services are supported
Bit 28	Int 14h, Serial Services are supported

<b>Name</b>	systemBIOSCharacteristics	
<b>Description</b>	Bit Position	Meaning if Set
	-----	-----
	Bit 29	Int 17h, Printer Services are supported
	Bit 30	Int 10h, CGA/Mono Video Services are supported
	Bit 31	NEC PC-98
	Bit 32-47	Reserved
	Bit 48	Built-in NIC supports Magic Packet
	Bit 49	System supports Wake-on-LAN
	Bit 50	System supports chassis intrusion
	Bit 51	Built-in NIC supports pattern-matching
	Bit 52	System BIOS supports a 7-character service tag
	Bit 53-63	Reserved
<b>Syntax</b>	DellUnsigned64BitRange	

### System BIOS Characteristics Ext 1

<b>Name</b>	systemBIOSCharacteristicsExt1	
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.13	
<b>Description</b>	Defines additional characteristics of the system basic input/output system (BIOS). This attribute is a bit field where a bit has the meaning defined below when set to 1 (one).	
	Bit Position	Meaning if Set
	-----	-----
	Bit 0	ACPI supported
	Bit 1	USB Legacy is supported
	Bit 2	AGP is supported
	Bit 3	I2O boot is supported
	Bit 4	LS-120 boot is supported
	Bit 5	ATAPI ZIP Drive boot is supported
	Bit 6	1394 boot is supported
	Bit 7	Smart Battery supported
<b>Syntax</b>	DellUnsigned8BitRange	
<b>Access</b>	Read-only	

## System BIOS Characteristics Ext 2

<b>Name</b>	systemBIOSCharacteristicsExt2												
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.50.1.14												
<b>Description</b>	Defines additional characteristics of the system BIOS. This attribute is a bit field where a bit has the meaning defined below when set to 1 (one). <table><thead><tr><th>Bit Position</th><th>Meaning if Set</th></tr><tr><th>-----</th><th>-----</th></tr></thead><tbody><tr><td>Bit 0</td><td>BIOS Boot Specification supported</td></tr><tr><td>Bit 1</td><td>Function key-initiated Network Service boot supported</td></tr><tr><td>Bit 2</td><td>Targeted Content Distribution supported</td></tr><tr><td>Bit 3-7</td><td>Reserved</td></tr></tbody></table>	Bit Position	Meaning if Set	-----	-----	Bit 0	BIOS Boot Specification supported	Bit 1	Function key-initiated Network Service boot supported	Bit 2	Targeted Content Distribution supported	Bit 3-7	Reserved
Bit Position	Meaning if Set												
-----	-----												
Bit 0	BIOS Boot Specification supported												
Bit 1	Function key-initiated Network Service boot supported												
Bit 2	Targeted Content Distribution supported												
Bit 3-7	Reserved												
<b>Syntax</b>	DellUnsigned8BitRange												
<b>Access</b>	Read-only												

## Firmware Table

<b>Name</b>	firmwareTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60
<b>Description</b>	Defines the Firmware Table.
<b>Syntax</b>	SEQUENCE OF FirmwareTableEntry
<b>Access</b>	Not accessible

## Firmware Table Entry

<b>Name</b>	firmwareTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1
<b>Description</b>	Defines the Firmware Table entry.
<b>Syntax</b>	FirmwareTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	firmwarechassisIndex, firmwareIndex

## Firmware Chassis Index

<b>Name</b>	firmwarechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Firmware Index

<b>Name</b>	firmwareIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.2
<b>Description</b>	Defines the index (one-based) of the firmware in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Firmware State Capabilities

<b>Name</b>	firmwareStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.3
<b>Description</b>	Defines the capabilities of the firmware states.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Firmware State Capabilities

<b>Name</b>	firmwareStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.4
<b>Description</b>	Defines the state of the firmware and allows for the setting of the firmware.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write



## Firmware Status

<b>Name</b>	firmwareStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.5
<b>Description</b>	Defines the status of the firmware.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

## Firmware Size

<b>Name</b>	firmwareSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.6
<b>Description</b>	Defines the image size of the firmware in KB. A zero (0) indicates that the size is unknown.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

## Firmware Type

<b>Name</b>	firmwareType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.7
<b>Description</b>	Defines the type of the firmware.
<b>Syntax</b>	DellFirmwareType
<b>Access</b>	Read-only

## Firmware Type Name

<b>Name</b>	firmwareTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.8
<b>Description</b>	Defines the name of firmware type.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Firmware Update Capabilities

<b>Name</b>	firmwareUpdateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.9
<b>Description</b>	Defines the bitmap of supported methods for firmware update.
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

## Firmware Date Name

<b>Name</b>	firmwareDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.10
<b>Description</b>	Defines the date of the firmware.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

## Firmware Version Name

<b>Name</b>	firmwareVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.60.1.11
<b>Description</b>	Defines the version name of the firmware.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Intrusion Table

The following objects and attributes describe the different forms of chassis intrusion, a situation that occurs when the cover of a computer is removed.

<b>Name</b>	intrusionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70
<b>Description</b>	Defines the Intrusion Table.
<b>Syntax</b>	SEQUENCE OF IntrusionTableEntry
<b>Access</b>	Not accessible

## Intrusion Table Entry

<b>Name</b>	<code>intrusionTableEntry</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1
<b>Description</b>	Defines the Intrusion Table entry.
<b>Syntax</b>	<code>IntrusionTableEntry</code>
<b>Access</b>	Not accessible
<b>Index</b>	<code>intrusionchassisIndex</code> , <code>intrusionIndex</code>

## Intrusion Chassis Index

<b>Name</b>	<code>intrusionchassisIndex</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	<code>DellObjectRange</code>
<b>Access</b>	Read-only

## Intrusion Index

<b>Name</b>	<code>intrusionIndex</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.2
<b>Description</b>	Defines the index of the intrusion objects in this subgroup.
<b>Syntax</b>	<code>DellObjectRange</code>
<b>Access</b>	Read-only

## Intrusion State Capabilities

<b>Name</b>	<code>intrusionStateCapabilities</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.3
<b>Description</b>	Defines the capabilities of the intrusion object.
<b>Syntax</b>	<code>DellStateCapabilities</code>
<b>Access</b>	Read-only

### Intrusion State Settings

<b>Name</b>	intrusionStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.4
<b>Description</b>	Defines the settings of the intrusion object.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Intrusion Status

<b>Name</b>	intrusionStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.5
<b>Description</b>	Defines the status of the intrusion object.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Intrusion Reading

<b>Name</b>	intrusionReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.6
<b>Description</b>	Defines the reading of the intrusion object.
<b>Syntax</b>	DellIntrusionReading
<b>Access</b>	Read-only

### Intrusion Type

<b>Name</b>	intrusionType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.7
<b>Description</b>	Defines the type of the intrusion object.
<b>Syntax</b>	DellIntrusionType
<b>Access</b>	Read-only

## Intrusion Location Name

<b>Name</b>	intrusionLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.70.1.8
<b>Description</b>	Defines the location name of the intrusion object in this subgroup.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Baseboard Table

This table lists objects that define the baseboard of a system.

<b>Name</b>	baseBoardTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80
<b>Description</b>	Defines the Baseboard Table.
<b>Syntax</b>	SEQUENCE OF BaseBoardTableEntry
<b>Access</b>	Not accessible

## Baseboard Table Entry

<b>Name</b>	baseBoardTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1
<b>Description</b>	Defines the Baseboard Table entry.
<b>Syntax</b>	BaseBoardTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	baseBoardChassisIndex, baseBoardIndex

## Baseboard Chassis Index

<b>Name</b>	baseBoardChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.1
<b>Description</b>	Defines the index (one-based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Baseboard Index

<b>Name</b>	baseBoardIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.2
<b>Description</b>	Defines the index (one-based) of the base board.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Baseboard State Capabilities

<b>Name</b>	baseBoardStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.3
<b>Description</b>	Defines the state capabilities of the baseboard.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Baseboard State Settings

<b>Name</b>	baseBoardStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.4
<b>Description</b>	Defines the state settings of the baseboard.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## Baseboard Status

<b>Name</b>	baseBoardStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.5
<b>Description</b>	Defines the status of the baseboard.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Baseboard Feature Flags

<b>Name</b>	baseBoardFeatureFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.6
<b>Description</b>	Defines the features of the baseboard.
<b>Syntax</b>	DellBaseBoardFeatureFlags
<b>Access</b>	Read-only

## Baseboard Type

<b>Name</b>	baseBoardType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.7
<b>Description</b>	Defines the type of the baseboard.
<b>Syntax</b>	DellBaseBoardType
<b>Access</b>	Read-only

## Baseboard Type Name

<b>Name</b>	baseBoardTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.8
<b>Description</b>	Defines the name of the type of baseboard.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Baseboard Location Name

<b>Name</b>	baseBoardLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.9
<b>Description</b>	Defines the location name of the baseboard.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Baseboard Manufacturer Name

<b>Name</b>	baseBoardManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.10
<b>Description</b>	Defines the baseboard manufacturer's name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Baseboard Product Name

<b>Name</b>	baseBoardProductName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.11
<b>Description</b>	Defines the baseboard product's name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Baseboard Version Name

<b>Name</b>	baseBoardVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.12
<b>Description</b>	Defines the baseboard version name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Baseboard Service Tag Name

<b>Name</b>	baseBoardServiceTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.13
<b>Description</b>	Defines the baseboard service tag name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only



## Baseboard Piece Part ID (PPID) Name

<b>Name</b>	baseBoardPiecePartIDName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.14
<b>Description</b>	Defines the baseboard PPID.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Baseboard Asset Tag Name

<b>Name</b>	baseBoardAssetTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.300.80.1.15
<b>Description</b>	Defines the baseboard asset tag name.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

# Chassis Information Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 5-1. Log Format**

---

<b>Variable Name:</b> DellLogFormat	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
raw(1)	The log is in the format received from the firmware.
ascii(2)	The log is in ASCII format.
uniCode(3)	The log is in Unicode format.

---

**Table 5-2. Chassis Type**

---

**Variable Name:** DellChassisType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other(1)	The chassis type is not one of the following:
unknown(2)	The chassis type is unknown.
desktop(3)	The chassis type is a desktop.
lowProfileDesktop(4)	The chassis type is a low-profile desktop.
pizzaBox(5)	The chassis type is a pizza box.
miniTower(6)	The chassis type is a minitower.
tower(7)	The chassis type is a tower.
portable(8)	The chassis type is a portable.
lapTop(9)	The chassis type is a laptop.
noteBook(10)	The chassis type is a notebook.
handHeld(11)	The chassis type is a handheld.
dockingStation(12)	The chassis type is a docking station.
allInOne(13)	The chassis type is an all-in-one.
subNoteBook(14)	The chassis type is a subnotebook.
spaceSaving(15)	The chassis type is a spacesaver.
lunchBox(16)	The chassis type is a lunch box.
mainSystemChassis(17)	The chassis type is the main system chassis.
expansionChassis(18)	The chassis type is an expansion chassis.
subChassis(19)	The chassis type is a subchassis.
busExpansionChassis(20)	The chassis type is a bus-expansion chassis.
peripheralChassis(21)	The chassis type is a peripheral chassis.
raidChassis(22)	The chassis type is a disk RAID chassis.
rackMountChassis(23)	The chassis type is a rack-mounted chassis.
sealedCasePC(24)	The chassis type is a sealed-case chassis.
multiSystemChassis(25)	The chassis type is a multisystem chassis.

---

**Table 5-3. Connection Status**


---

**Variable Name:** DellConnectionStatus

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(2)	The status of the chassis connection is unknown.
ok(3)	The status of the chassis connection is OK.
failure(4)	The status of the chassis connection is failure.

---

**Table 5-4. Fan Control Capabilities**


---

**Variable Name:** DellFanControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	The fan's capabilities are unknown.
lowSpeedCapable(2)	The fan can be set to low speed.
highSpeedCapable(4)	The fan can be set to high speed.
lowOrHighSpeedCapable(6)	The fan can be set to low or high speed.

---

**Table 5-5. Front-Panel LED Control Capabilities**


---

**Variable Name:** DellLEDControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	The LED control capabilities are unknown.
alertOnErrorCapable(2)	The LED control can be set to alert on an error condition.
alertOnWarningAndErrorCapable(4)	The LED control can be set to alert on an error and a warning condition.
alertOnWarningOrErrorCapable(6)	The LED control can be set to alert on an error or a warning condition.

---

**Table 5-6. Front-Panel LED Control Settings**


---

**Variable Name:** DellLEDControlSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	The LED control setting is unknown.
alertOnError(2)	The LED control is set to alert on an error condition.
alertOnWarningAndError(4)	The LED control is set to alert on an error or a warning condition.

---

**Table 5-7. Hard-Drive Fault LED Control Capabilities**


---

**Variable Name:** DellHDFaultLEDControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The hard drive has no fault LED capabilities.
unknownCapabilities(1)	The hard-drive fault LED capabilities are unknown.
enableCapable(2)	The hard-drive fault LED can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReadyCapable(4)	The hard-drive fault LED can indicate not ready.
resetCapable(8)	The hard-drive fault LED can be reset.

---

**Table 5-8. Hard-Drive Fault LED Control Settings**


---

**Variable Name:** DellHDFaultLEDControlSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The LEDs do not have any fault settings capabilities.
unknown(1)	The hard-drive fault LEDs' state is unknown.
enabled(2)	The hard-drive fault LEDs' state is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReady(4)	The hard-drive fault LEDs' state is not ready.
reset(8)	The hard-drive fault LEDs have been reset.
resetAndEnable(10)	The hard-drive fault LEDs have been reset and enabled.

---

**Table 5-9. Chassis Identification Control Capabilities**

---

**Variable Name:** DellChassisIdentifyControlCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The LEDs do not have any chassis identification capabilities.
unknownCapabilities(1)	The chassis identification control's capabilities are unknown.
enableCapable(2)	The chassis identification controls can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReadyCapable(4)	The chassis identification control's capabilities are not ready.
identifyCapable(8)	The chassis identification control's LEDs can be made to identify the chassis.

---

**NOTE:** Chassis identification capabilities allow system administrators to set front panel light-emitting diodes (LEDs) to blink when the chassis has malfunctioning components. When enabled, the blinking lights help administrators locate the problem chassis.

**Table 5-10. Chassis Identification Control Settings**

---

**Variable Name:** DellChassisIdentifyControlSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	The chassis identification control's state is unknown.
enabled(2)	The chassis identification control's state is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReady(4)	The chassis identification control's state is not ready.
identifyChassis(8)	The chassis identification control's LEDs may be returned to (normal) 0, or (identify chassis) 1.
identifyChassisAndEnable(10)	The chassis identification control's LEDs may be returned to normal (a binary 0 value), or identify chassis and enabled (a binary 1 value).

---

**Table 5-11. Host Control Capabilities**

---

**Variable Name:** DellHostControlCapabilities

**NOTE:** An operator can manually cause these actions using SNMP.

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
manualRebootCapable(1)	The operator can reboot capable host.
manualPowerOFFCapable(2)	The operator can power off capable host.
manualPowerCycleCapable(4)	The operator can power-cycle capable host.
manualAllExceptOperatingSystemShutdownCapable(7)	The operator can reboot and power off capable host.
manualOperatingSystemShutdownCapable(8)	The operator can shut down the operating-system-shutdown capable host.
manualFullyCapable(15)	The operator can reboot, power on and off the power-cycle capable host, and shut down the operating-system-shutdown capable host.

---

**Table 5-12. Host Control Settings**

---

**Variable Name:** DellHostControlSettings

**NOTE:** An operator can manually cause these actions using SNMP.

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
manualReboot(1)	The operator can reboot the host.
manualPowerOFF(2)	The operator can power off the host.
manualPowerCycle(4)	Power cycle the host.
manualOperatingSystemShutdown(8)	The operator can shut down the operating system on the host.
manualOperatingSystemShutdownThenReboot(9)	The operator can shut down the operating system on the host then reboot.
manualOperatingSystemShutdownThenPowerOFF(10)	The operator can shut down the operating system on the host then power off machine.
manualOperatingSystemShutdownThenPowerCycle(12)	The operator can shut down the operating system on the host then power cycle machine.

---

**Table 5-13. Watchdog Control Capabilities**

**Variable Name:** DellWatchDogControlCapabilities

**NOTE:** When the system determines that the operating system is not responding, it will automatically perform the selected action without operator intervention.

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
automaticRebootCapable(1)	Watchdog controls can be set to reboot capable host.
automaticPowerCycleCapable(2)	Watchdog controls can be set to power cycleable capable host.
automaticNotificationCapable(4)	Watchdog controls can be set to notify capable host.
automaticWatchDogTimerCapable(8)	Watchdog controls can be set to function automatically.
automaticPowerOffCapable(16)	Watchdog controls can be set to automatically power off host.
automaticAllExceptNotificationCapable(27)	Watchdog controls can be set to automatically perform all functions except notification capable.
automaticFullyCapable(31)	Watchdog controls can be set to automatically perform all functions.

**Table 5-14. Watchdog Control Settings**

**Variable Name:** DellWatchControlSettings

**NOTE:** The watchdog timer is the mechanism used by a chassis to determine if the operating system has stopped responding.

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
automaticRebootEnabled(1)	Automatic reboot is enabled for this host.
automaticPowerCycleEnabled(2)	Automatic power cycleable is enabled for this host.
automaticNotificationEnabled(4)	Automatic notification is enabled for this host.
automaticPowerOffEnabled(8)	Automatic power off is enabled for this host.

**Table 5-15. Watchdog Timer Capabilities**

---

**Variable Name:** DellWatchDogTimerCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
type1Capable(1)	Watchdog timer can time in intervals from 20–480 seconds.
type2Capable(2)	Watchdog timer can time in 30-, 60-, 120-, and 480-second intervals.
type3Capable(4)	Watchdog timer can time in 60-second intervals.

---

**Table 5-16. Power Button Control Capabilities**

---

**Variable Name:** DellPowerButtonControlCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The power button has no capabilities.
unknownCapabilities(1)	The power button capabilities are unknown.
enableCapable(2)	The power button can be enabled (online) or disabled (offline).

---

**Table 5-17. Power Button Control Settings**

---

**Variable Name:** DellPowerButtonControlSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The power button has no settings capabilities.
unknown(1)	The power button settings are unknown.
enabled(2)	The power button state is enabled.
disabled(4)	The power button state is disabled.

---



**Table 5-18. NMI Button Control Capabilities**

---

**Variable Name:** DellNMIButtonControlCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The NMI button has no capabilities.
unknownCapabilities(1)	The NMI button capabilities are unknown.
enableCapable(2)	The NMI button can be enabled (online) or disabled (offline).

---

**Table 5-19. NMI Button Control Settings**

---

**Variable Name:** DellNMIButtonControlSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The NMI button has no settings capabilities.
unknown(1)	The NMI button settings are unknown.
enabled(2)	The NMI button state is enabled.
disabled(4)	The NMI button state is disabled.

---

**Table 5-20. Chassis System Class**

---

**Variable Name:** DellChassisSystemClass

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other(1)	The chassis system class is not one of the following:
unknown(2)	The chassis system class is unknown.
workstationClass(3)	The chassis system class is a workstation.
serverClass(4)	The chassis system class is a server.
desktopClass(5)	The chassis system class is a desktop.
portableClass(6)	The chassis system class is a portable.
netPCClass(7)	The chassis system class is a "Net PC."
storageClass(8)	The chassis system class is storage.

---

**Table 5-21. Firmware Type**

---

<b>Variable Name:</b> DellFirmwareType	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other(1)	The firmware type is other than following values.
unknown(2)	The firmware type is unknown.
systemBIOS(3)	The firmware type is System BIOS
embeddedSystemManagementController(4)	The firmware type is Embedded System Management Controller.
powerSupplyParallelingBoard(5)	The firmware type is Power Supply Paralleling Board.
systemBackPlane(6)	The firmware type is System (Primary) Backplane.
powerVault2XXSKernel(7)	The firmware type is Dell™ PowerVault™ 2XXS Kernel.
powerVault2XXSApplication(8)	The firmware type is PowerVault 2XXS Application.
frontPanel(9)	The firmware type is Front Panel Controller.
baseboardManagementController(10)	The firmware type is Baseboard Management Controller.
hotPlugPCI(11)	The firmware type is Hot Plug Peripheral Component Interconnect (PCI) Controller.
sensorData(12)	The firmware type is Sensor Data Records.
peripheralBay(13)	The firmware type is Peripheral Bay Backplane.
secondaryBackPlane(14)	The firmware type is Secondary Backplane for ESM 2 systems.
secondaryBackPlaneESM3And4(15)	The firmware type is Secondary Backplane for ESM 3 and 4 systems.
rac4(16)	The firmware type is Remote Access Controller 4.

---

**Table 5-22. Baseboard Type**

<b>Variable Name:</b> DellBaseBoardType	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	The baseboard type is unknown.
other(2)	The baseboard type is not one of the following types.
serverBlade(3)	The baseboard type is a server blade.
connectivitySwitch(4)	The baseboard type is a connectivity switch.
systemManagementModule(5)	The baseboard type is a system management module.
processorModule(6)	The baseboard type is a processor module.
ioModule(7)	The baseboard type is an I/O module.
memoryModule(8)	The baseboard type is a memory module
daughterBoard(9)	The baseboard type is a daughter board.
motherboard(10)	The baseboard type is a mother board.
processorMemoryModule(11)	The baseboard type is a processor or memory module
processorIOModule(12)	The baseboard type is a processor or I/O module
interconnectBoard(13)	The baseboard type is an interconnect board.

**Table 5-23. Baseboard Feature Flags**

<b>Variable Name:</b> DellBaseBoardFeatureFlags	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
<b>NOTE:</b> These values are bit fields, so combination values are possible.	
no features(0)	This baseboard has no feature flags.
boardIsHostingBoard(1)	This baseboard is a hosting board.
boardRequiresDaughterBoard(2)	This baseboard requires at least one daughter board or auxiliary card.
boardIsRemovable(4)	This baseboard is removable.
boardIsReplaceable(8)	This baseboard is replaceable.
boardIsHotSwappable(16)	This baseboard is hot swappable.



# Operating System Group

The Operating System Group provides status and identifying information about a system's operating system. Identifying information includes the name, version, service pack, and patch level of the installed operating system.

## Operating System Group Table

The following management information base (MIB) tables define the objects in the Operating System Group:

- Operating System Table
- Operating System Memory Table

### Operating System Table

The following object sets up the Operating System Table.

<b>Name</b>	<code>operatingSystemTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.10
<b>Description</b>	Defines the Operating System Table.
<b>Syntax</b>	SEQUENCE OF <code>OperatingSystemTableEntry</code>
<b>Access</b>	Not accessible

### Operating System Table Entry

<b>Name</b>	<code>operatingSystemTableEntry</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.10.1
<b>Description</b>	Defines the Operating System Table entry.
<b>Syntax</b>	<code>OperatingSystemTableEntry</code>
<b>Access</b>	Not accessible
<b>Index</b>	<code>operatingSystemchassisIndex</code>

### Operating System State Capabilities

<b>Name</b>	<code>operatingSystemStateCapabilities</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.10.1.2
<b>Description</b>	Defines the capabilities of the operating system.
<b>Syntax</b>	<code>DellStateCapabilities</code>
<b>Access</b>	Read-only

### Operating System State Settings

<b>Name</b>	<code>operatingSystemStateSettings</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.10.1.3
<b>Description</b>	Defines the state of the operating system.
<b>Syntax</b>	<code>DellStateSettings</code>
<b>Access</b>	Read-write

### Operating System Status

<b>Name</b>	<code>operatingSystemStatus</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.10.1.4
<b>Description</b>	Defines the status of the operating system.
<b>Syntax</b>	<code>DellStatus</code>
<b>Access</b>	Read-only

### Operating System Is Primary

<b>Name</b>	<code>operatingSystemIsPrimary</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.10.1.5
<b>Description</b>	Specifies whether this operating system is the primary operating system.
<b>Syntax</b>	<code>DellBoolean</code>
<b>Access</b>	Read-only

## Operating System Name

<b>Name</b>	operatingSystemOperatingSystemName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.10.1.6
<b>Description</b>	Defines the name of the operating system running on the system.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Operating System Version Name

<b>Name</b>	operatingSystemOperatingSystemVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.10.1.7
<b>Description</b>	Defines the version of the operating system running on the system.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Operating System Memory Table

<b>Name</b>	operatingSystemMemoryTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20
<b>Description</b>	Defines the Operating System Memory Table.
<b>Syntax</b>	SEQUENCE OF OperatingSystemMemoryTableEntry
<b>Access</b>	Not accessible

## Operating System Memory Table Entry

<b>Name</b>	operatingSystemTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1
<b>Description</b>	Defines the Operating System Memory Table entry.
<b>Syntax</b>	OperatingSystemMemoryTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	operatingSystemMemorychassisIndex

## Operating System Memory Chassis Index

<b>Name</b>	operatingSystemMemorychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Operating System Memory State Capabilities

<b>Name</b>	operatingSystemMemoryStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.2
<b>Description</b>	Defines the capabilities of the operating system memory.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Operating System Memory State Settings

<b>Name</b>	operatingSystemMemoryStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.3
<b>Description</b>	Defines the state and allows the setting of the operating system memory.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## Operating System Memory Status

<b>Name</b>	operatingSystemMemoryStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.4
<b>Description</b>	Defines the status of the operating system memory.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only



### Operating System Total Physical Size

<b>Name</b>	operatingSystemMemoryTotalPhysicalSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.5
<b>Description</b>	Defines the total physical memory size in bytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Operating System Memory Available Physical Size

<b>Name</b>	operatingSystemMemoryAvailblePhysicalSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.6
<b>Description</b>	Defines the available physical memory size in bytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Operating System Memory Total Page File Size

<b>Name</b>	operatingSystemMemoryTotalPageFileSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.7
<b>Description</b>	Defines the total page file memory size in bytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-on

### Operating System Memory Available Page File Size

<b>Name</b>	operatingSystemMemoryAvailblePageFileSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.8
<b>Description</b>	Defines the available page file memory size in bytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Operating System Memory Total Virtual Size

<b>Name</b>	operatingSystemMemoryTotalVirtualSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.9
<b>Description</b>	Defines the total virtual memory size in bytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Operating System Memory Available Virtual Size

<b>Name</b>	operatingSystemMemoryAvailableVirtualSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.400.20.1.10
<b>Description</b>	Defines the available virtual memory size in bytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

# System Resource Group

The Management Information Base (MIB) variables presented in this section enable you to track various attributes of your system resources. This section includes System Resource Group Tables that track variables such as the owner, ports, system memory, interrupts, and direct memory access.

## System Resource Group Tables

The following MIB tables define objects for the System Resource Group:

- System Resource Map Table
- System Resource Owner Table
- System Resource Input/Output (I/O) Port Table
- System Resource Memory Table
- System Resource Interrupt Table
- System Resource Direct Memory Access (DMA) Table

### System Resource Map Table

<b>Name</b>	systemResourceMapTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10
<b>Description</b>	Defines the System Resource Map Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceMapTableEntry
<b>Access</b>	Not accessible

### System Resource Map Table Entry

<b>Name</b>	systemResourceMapTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1
<b>Description</b>	Defines the System Resource Map Table entry.
<b>Syntax</b>	SystemResourceMapTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemResourceMapchassisIndex, systemResourceMapIndex

### System Resource Map Chassis Index

<b>Name</b>	systemResourceMapchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Map Index

<b>Name</b>	systemResourceMapIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.2
<b>Description</b>	Defines the index of system resource maps in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Map State Capabilities

<b>Name</b>	systemResourceMapStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.3
<b>Description</b>	Defines the capabilities of this system map.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### System Resource Map State Settings

<b>Name</b>	systemResourceMapStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.4
<b>Description</b>	Defines the state and allows the setting of this system map.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### System Resource Map Status

<b>Name</b>	systemResourceMapStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.5
<b>Description</b>	Defines the status of this system map.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System Resource Map Type

<b>Name</b>	systemResourceMapType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.10.1.6
<b>Description</b>	Defines the type of this system map.
<b>Syntax</b>	DellSystemResourceMapType (See Table 7-1.)
<b>Access</b>	Read-only

### System Resource Owner Table

<b>Name</b>	systemResourceOwnerTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20
<b>Description</b>	Defines the System Resource Owner Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceOwnerTableEntry
<b>Access</b>	Not accessible

### System Resource Owner Table Entry

<b>Name</b>	systemResourceOwnerTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1
<b>Description</b>	Defines the System Resource Owner Table entry. Variables in this group reference the System Resource Map index.
<b>Syntax</b>	SystemResourceOwnerTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemResourceOwnerchassisIndex, systemResourceOwnerIndex

### System Resource Owner Chassis Index

<b>Name</b>	systemResourceOwnerchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Owner Index

<b>Name</b>	systemResourceOwnerIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.2
<b>Description</b>	Defines the index of system resource owners for this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Owner State Capabilities

<b>Name</b>	systemResourceOwnerStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.3
<b>Description</b>	Defines the capabilities of this system resource owner.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### System Resource Owner State Settings

<b>Name</b>	systemResourceOwnerStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.4
<b>Description</b>	Defines the state settings of this system resource owner.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### System Resource Owner Status

<b>Name</b>	systemResourceOwnerStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.5
<b>Description</b>	Defines the status of this system resource owner.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-write

### System Resource Owner Interface Type

<b>Name</b>	systemResourceOwnerInterfaceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.6
<b>Description</b>	Defines the interface type for this system resource owner.
<b>Syntax</b>	DellResourceOwnerInterfaceType (See Table 7-2.)
<b>Access</b>	Read-only

### System Resource Map Index Reference

<b>Name</b>	systemResourceMapIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.7
<b>Description</b>	Defines the index to the associated system resource map in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Owner Description Name

<b>Name</b>	systemResourceOwnerDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.8
<b>Description</b>	Defines the description name of the system resource owner.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### System Resource Owner Interface Instance

<b>Name</b>	systemResourceOwnerInterfaceInstance
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.20.1.9
<b>Description</b>	Defines the associated system resource owner interface instance in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Input/Output (I/O) Port Table

<b>Name</b>	systemResourceIOPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30
<b>Description</b>	Defines the System Resource I/O Port Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceIOPortTableEntry
<b>Access</b>	Not accessible

### System Resource I/O Port Table Entry

<b>Name</b>	systemResourceIOPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1
<b>Description</b>	Defines the System Resource I/O Port Table entry.
<b>Syntax</b>	SystemResourceIOPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemResourceIOPortchassisIndex, systemResourceIOPortIndex

### System Resource I/O Port Chassis Index

<b>Name</b>	systemResourceIOPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only



### System Resource I/O Port Index

<b>Name</b>	systemResourceIOPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.2
<b>Description</b>	Defines the index (one-based) of the system resource I/O ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource I/O Port State Capabilities

<b>Name</b>	systemResourceIOPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.3
<b>Description</b>	Defines the capabilities of the system resource I/O port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### System Resource I/O Port State Settings

<b>Name</b>	systemResourceIOPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.4
<b>Description</b>	Defines the state and allows the setting of the system resource I/O port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### System Resource I/O Port Status

<b>Name</b>	systemResourceIOPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.5
<b>Description</b>	Defines the status of the system resource I/O port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### System Resource I/O Port Owner Index Reference

<b>Name</b>	systemResourceIOPortOwnerIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.6
<b>Description</b>	Defines the index to the associated system resource owner in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource I/O Port Share Disposition

<b>Name</b>	systemResourceIOPortShareDisposition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.7
<b>Description</b>	Defines the share disposition of the system resource I/O port.
<b>Syntax</b>	DellResourceShareDisposition (See Table 7-3.)
<b>Access</b>	Read-only

### System Resource I/O Port Starting Address

<b>Name</b>	systemResourceIOPortStartingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.8
<b>Description</b>	Defines the 64 bits of the starting address of the system resource I/O port.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

### System Resource I/O Port Ending Address

<b>Name</b>	systemResourceIOPortEndingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.30.1.9
<b>Description</b>	Defines the 64 bits of the ending address of the system resource I/O port.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

## System Resource Memory Table

<b>Name</b>	systemResourceMemoryTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40
<b>Description</b>	Defines the System Resource Memory Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceMemoryTableEntry
<b>Access</b>	Not accessible

## System Resource Memory Table Entry

<b>Name</b>	systemResourceMemoryTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1
<b>Description</b>	Defines the System Resource Memory Table entry.
<b>Syntax</b>	SystemResourceMemoryTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemResourceMemorychassisIndex, systemResourceMemoryIndex

## System Resource Memory Chassis Index

<b>Name</b>	systemResourceMemorychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## System Resource Memory Index

<b>Name</b>	systemResourceMemoryIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.2
<b>Description</b>	Defines the index of system resource memory in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Memory State Capabilities

<b>Name</b>	systemResourceMemoryStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.3
<b>Description</b>	Defines the capabilities of this system resource memory.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Memory State Settings

<b>Name</b>	systemResourceMemoryStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.4
<b>Description</b>	Defines the state of this system resource memory.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-write

### System Resource Memory Status

<b>Name</b>	systemResourceMemoryStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.5
<b>Description</b>	Defines the status of this system resource memory.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System Resource Memory Owner Index Reference

<b>Name</b>	systemResourceMemoryOwnerIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.6
<b>Description</b>	Defines the index to the associated system resource owner in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Memory Share Disposition

<b>Name</b>	systemResourceMemoryShareDisposition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.7
<b>Description</b>	Defines the share disposition of the system resource memory.
<b>Syntax</b>	DellResourceShareDisposition (See Table 7-3.)
<b>Access</b>	Read-only

### System Resource Memory Starting Address

<b>Name</b>	systemResourceMemoryStartingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.8
<b>Description</b>	Defines the 64 bits of the starting address of the system resource memory.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

### System Resource Memory Ending Address

<b>Name</b>	systemResourceMemoryEndingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.9
<b>Description</b>	Defines the 64 bits of the ending address of the system resource memory.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

### System Resource Memory Flags

<b>Name</b>	systemResourceMemoryFlags
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.40.1.10
<b>Description</b>	Defines the permission flags for the system resource memory.
<b>Syntax</b>	DellResourceMemoryFlags (See Table 7-4.)
<b>Access</b>	Read-only

## System Resource Interrupt Table

<b>Name</b>	systemResourceInterruptTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50
<b>Description</b>	Defines the System Resource Interrupt Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceInterruptTableEntry
<b>Access</b>	Not accessible

## System Resource Interrupt Table Entry

<b>Name</b>	systemResourceInterruptTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1
<b>Description</b>	Defines the System Resource Interrupt Table entry.
<b>Syntax</b>	SystemResourceInterruptTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemResourceInterruptchassisIndex, systemResourceInterruptIndex

## System Resource Interrupt Chassis Index

<b>Name</b>	systemResourceInterruptchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Not accessible

## System Resource Interrupt Index

<b>Name</b>	systemResourceInterruptIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.2
<b>Description</b>	Defines the index (one-based) of this interrupt resource.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Interrupt State Capabilities

<b>Name</b>	systemResourceInterruptStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.3
<b>Description</b>	Defines the capabilities of this system resource interrupt.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### System Resource Interrupt State Settings

<b>Name</b>	systemResourceInterruptStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.4
<b>Description</b>	Defines the state of this system resource interrupt.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### System Resource Interrupt Status

<b>Name</b>	systemResourceInterruptStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.5
<b>Description</b>	Defines the status of this system resource interrupt.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System Resource Interrupt Owner Index Reference

<b>Name</b>	systemResourceInterruptOwnerIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.6
<b>Description</b>	Defines the index for the associated system resource owner in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource Interrupt Owner Share Disposition

<b>Name</b>	systemResourceInterruptShareDisposition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.7
<b>Description</b>	Defines the share disposition of the system resource interrupt.
<b>Syntax</b>	DellResourceShareDisposition (See Table 7-3.)
<b>Access</b>	Read-only

### System Resource Interrupt Level

<b>Name</b>	systemResourceInterruptLevel
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.8
<b>Description</b>	Defines the interrupt request (IRQ) level of the system resource interrupt.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### System Resource Interrupt Type

<b>Name</b>	systemResourceInterruptType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.9
<b>Description</b>	Defines the interrupt type of the system resource interrupt.
<b>Syntax</b>	DellResourceInterruptType (See Table 7-5.)
<b>Access</b>	Read-only

### System Resource Interrupt Trigger

<b>Name</b>	systemResourceInterruptTrigger
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.50.1.10
<b>Description</b>	Defines the interrupt trigger of the system resource interrupt.
<b>Syntax</b>	DellResourceInterruptTrigger (See Table 7-6.)
<b>Access</b>	Read-only



## System Resource Direct Memory Access (DMA) Table

<b>Name</b>	systemResourceDMATable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60
<b>Description</b>	Defines the System Resource DMA Table.
<b>Syntax</b>	SEQUENCE OF SystemResourceDMATableEntry
<b>Access</b>	Not accessible

## System Resource DMA Table Entry

<b>Name</b>	systemResourceDMATable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1
<b>Description</b>	Defines the System Resource DMA Table entry.
<b>Syntax</b>	SystemResourceDMATableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemResourceDMAchassisIndex, systemResourceDMAIndex

## System Resource DMA Chassis Index

<b>Name</b>	systemResourceDMAchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## System Resource DMA Index

<b>Name</b>	systemResourceDMAIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.2
<b>Description</b>	Defines the index of system resource DMAs in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource DMA State Capabilities

<b>Name</b>	systemResourceDMAStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.3
<b>Description</b>	Defines the capabilities of this system resource DMA.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### System Resource DMA State Settings

<b>Name</b>	systemResourceDMAStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.4
<b>Description</b>	Defines the state and setting of this system resource DMA.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### System Resource DMA Status

<b>Name</b>	systemResourceDMAStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.5
<b>Description</b>	Defines the status of this system resource DMA.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### System Resource DMA Owner Index Reference

<b>Name</b>	systemResourceDMAOwnerIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.6
<b>Description</b>	Defines the index to the associated system resource owner in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### System Resource DMA Share Disposition

<b>Name</b>	systemResourceDMAShareDisposition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.7
<b>Description</b>	Defines the share disposition of the system resource DMA.
<b>Syntax</b>	DellResourceShareDisposition (See Table 7-3.)
<b>Access</b>	Read-only

### System Resource DMA Maximum Transfer Size

<b>Name</b>	systemResourceDMAMaximumTransferSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.8
<b>Description</b>	Defines the maximum size of a memory transfer in bytes for the system resource DMA.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### System Resource DMA Transfer Width

<b>Name</b>	systemResourceDMATransferWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.9
<b>Description</b>	Defines the transfer width of the system resource DMA.
<b>Syntax</b>	DellResourceDMATransferWidth (See Table 7-8.)
<b>Access</b>	Read-only

### System Resource DMA Bus Master

<b>Name</b>	systemResourceDMABusMaster
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.500.60.1.10
<b>Description</b>	Defines the bus mastering capabilities of the system resource DMA.
<b>Syntax</b>	DellResourceDMABusMaster (See Table 7-7.)
<b>Access</b>	Read-only

## System Resource Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 7-1. System Resource Map Type**

---

**Variable Name:** DellSystemResourceMapType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
other (1)	The system resource map type is not one of the following:
unknown (2)	The system resource map type is unknown (not known or not monitored).
typeOne (3)	The system resource map is type 1 (one).

---

**Table 7-2. Resource Owner Interface Type**

---

**Variable Name:** DellResourceOwnerInterfaceType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
typeIsOther (1)	The interface type is not one of the following:
typeIsUnknown (2)	The interface type is unknown.
typeIsInternal (3)	The interface type is internal.
typeIsISA (4)	The interface type is an Industry Standard Architecture (ISA) bus.
typeIsEISA (5)	The interface type is an Extended Industry Standard Architecture (EISA) bus.
typeIsMCA (6)	The interface type is a microchannel architecture (MCA) bus.
typeIsTurboChannel (7)	The interface type is a turbo-channel bus.

---

**Table 7-3. Resource Share Disposition**

---

**Variable Name:** DellResourceShareDisposition

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
shareIsOther(1)	The share disposition is not one of the following:
shareIsUnknown(2)	The share disposition is unknown (not known or not monitored).
shareIsDeviceExclusive(3)	The share disposition is device exclusive.
shareIsDriverExclusive(4)	The share disposition is driver exclusive.
shareIsShared(5)	The share disposition is shared.

---

**Table 7-4. Resource Memory Flags**

---

**Variable Name:** DellResourceMemoryFlags

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
memoryIsReadOnly(1)	The resource memory is read-only.
memoryIsWriteOnly(2)	The resource memory is write-only.
memoryIsPreFetchable(4)	The resource memory is prefetchable.
memoryIsCombinedWritable(8)	The resource memory is read-write.
memoryIsF24(16)	The resource memory is F24.

---

**Table 7-5. Resource Interrupt Type**

---

**Variable Name:** DellResourceInterruptType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
interruptIsLevelSensitive(1)	The interrupt type is level sensitive.
interruptIsLatched(2)	The interrupt type is latched.

---

**Table 7-6. Resource Interrupt Trigger**

---

**Variable Name:** DellResourceInterruptTrigger

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
interruptIsActiveWhenLow(1)	The interrupt trigger is active on a low signal.
interruptIsActiveWhenHigh(2)	The interrupt trigger is active on a high signal.

---

**Table 7-7. Resource DMA Bus Master**

---

**Variable Name:** DellResourceDMABusMaster

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
dmaIsOther(1)	The DMA bus master capability is not one of the following:
dmaIsUnknown(2)	The DMA bus master capability is unknown.
dmaIsNotABusmaster(3)	The DMA does not have bus master capability.

---

**Table 7-8. Resource DMA Transfer Width**

---

**Variable Name:** DellResourceDMATransferWidth

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
dmaTransferWidthIsOther(1)	The DMA transfer width is not one of the following:
dmaTransferWidthIsunknown(2)	The DMA transfer width is unknown.
dmaTransferWidthIs8Bits(3)	The DMA transfer width is 8 bits.
dmaTransferWidthIs16Bits(4)	The DMA transfer width is 16 bits.
dmaTransferWidthIs32Bits(5)	The DMA transfer width is 32 bits.
dmaTransferWidthIs64Bits(6)	The DMA transfer width is 64 bits.
dmaTransferWidthIs128Bits(7)	The DMA transfer width is 128 bits.

---

# Power Group

The Power Group provides information about power units (a group of power supplies in a system chassis), power supplies, and voltage and amperage probes.

## Power Group Tables

The following management information base (MIB) tables define objects for the Power Group:

- Power Unit Table
- Power Supply Table
- Voltage Probe Table
- Amperage Probe Table
- AC Power Switch Table
- AC Power Cord Table

### Power Unit Table

<b>Name</b>	powerUnitTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10
<b>Description</b>	Defines the Power Unit Table.
<b>Syntax</b>	PowerUnitTableEntry
<b>Access</b>	Not accessible

### Power Unit Table Entry

<b>Name</b>	powerUnitTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1
<b>Description</b>	Defines the Power Unit Table entry.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only
<b>Index</b>	powerUnitchassisIndex, powerUnitIndex

### Power Unit Chassis Index

<b>Name</b>	powerUnitChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Power Unit Index

<b>Name</b>	powerUnitIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.2
<b>Description</b>	Defines the index of the power unit in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Power Unit State Capabilities

<b>Name</b>	powerUnitStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.3
<b>Description</b>	Defines the capabilities of the power unit.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Power Unit State Settings

<b>Name</b>	powerUnitStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.4
<b>Description</b>	Defines the state and settings of the power unit.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write



### Power Unit Redundancy Status

<b>Name</b>	powerUnitRedundancyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.5
<b>Description</b>	Defines the redundancy status of the power unit.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

### Power Supply Count for Redundancy

<b>Name</b>	powerSupplyCountForRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.6
<b>Description</b>	Defines the total number of power supplies required for this power unit to have redundancy.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Power Unit Name

<b>Name</b>	powerUnitName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.7
<b>Description</b>	Defines the name of the power unit in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Power Unit Status

<b>Name</b>	powerUnitStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.10.1.8
<b>Description</b>	Defines the status of the power unit in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Power Supply Table

<b>Name</b>	powerSupplyTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12
<b>Description</b>	Defines the Power Supply Table.
<b>Syntax</b>	PowerSupplyTableEntry
<b>Access</b>	Not accessible

## Power Supply Table Entry

<b>Name</b>	powerSupplyTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1
<b>Description</b>	Defines the Power Supply Table entry.
<b>Syntax</b>	PowerSupplyTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	powerSupplychassisIndex, powerSupplyIndex

## Power Supply Chassis Index

<b>Name</b>	powerSupplychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Power Supply Index

<b>Name</b>	powerSupplyIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.2
<b>Description</b>	Defines the index of power supply.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Power Supply State Capabilities Unique

<b>Name</b>	powerSupplyStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.3
<b>Description</b>	Defines the capabilities of the power supply.
<b>Syntax</b>	DellPowerSupplyStateCapabilitiesUnique (See Table 8-1.)
<b>Access</b>	Read-only

### Power Supply State Settings Unique

<b>Name</b>	powerSupplyStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.4
<b>Description</b>	Defines the state and settings of the power supply.
<b>Syntax</b>	DellPowerSupplyStateSettingsUnique (See Table 8-2.)
<b>Access</b>	Read-write

### Power Supply Status

<b>Name</b>	powerSupplyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.5
<b>Description</b>	Defines the status of the power supply.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Power Supply Output Watts

<b>Name</b>	powerSupplyOutputWatts
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.6
<b>Description</b>	Defines the maximum sustained output wattage of the power supply in tenths of watts.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Power Supply Type

<b>Name</b>	powerSupplyType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.7
<b>Description</b>	Defines the type of power supply.
<b>Syntax</b>	DellPowerSupplyType (See Table 8-3.)
<b>Access</b>	Read-only

### Power Supply Location Name

<b>Name</b>	powerSupplyLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.8
<b>Description</b>	Defines the location name of the power supply.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Power Supply Input Voltage

<b>Name</b>	powerSupplyInputVoltage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.9
<b>Description</b>	Defines the input voltage to the power supply in volts.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Power Supply Power Unit Index Reference

<b>Name</b>	powerSupplyPowerUnitIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.10
<b>Description</b>	Defines the index to the associated system power unit in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Power Supply Sensor State

<b>Name</b>	powerSupplySensorState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.11
<b>Description</b>	Defines the state reported by the power supply sensor, and supplements the state and settings of the power supply.
<b>Syntax</b>	DellPowerSupplySensorState (See Table 8-4)
<b>Access</b>	Read-only

## Power Supply Configuration Error Type

<b>Name</b>	powerSupplyConfigurationErrorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.12.1.12
<b>Description</b>	Defines the type of configuration error reported by the power supply sensor.
<b>Syntax</b>	DellPowerSupplyConfigurationErrorType (See Table 8-5)
<b>Access</b>	Read-only

## Voltage Probe Table

<b>Name</b>	voltageProbeTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20
<b>Description</b>	Defines the Voltage Probe Table.
<b>Syntax</b>	VoltageProbeTableEntry
<b>Access</b>	Not accessible

## Voltage Probe Table Entry

<b>Name</b>	voltageProbeTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1
<b>Description</b>	Defines the Voltage Probe Table entry.
<b>Syntax</b>	VoltageProbeTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	voltageProbechassisIndex, voltageProbeIndex

### Voltage Probe Chassis Index

<b>Name</b>	voltageProbechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Voltage Probe Index

<b>Name</b>	voltageProbeIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.2
<b>Description</b>	Defines the index of voltage probes in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Voltage Probe State Capabilities

<b>Name</b>	voltageProbeStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.3
<b>Description</b>	Defines the capabilities of the voltage probe.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Voltage Probe State Settings

<b>Name</b>	voltageProbeStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.4
<b>Description</b>	Defines the state and settings of the voltage probe.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Voltage Probe Status

<b>Name</b>	voltageProbeStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.5
<b>Description</b>	Defines the status of the voltage probe.
<b>Syntax</b>	DellStatusProbe
<b>Access</b>	Read-only

### Voltage Probe Reading

<b>Name</b>	voltageProbeReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.6
<b>Description</b>	Defines the value of the voltage probe reading. The value is an integer representing the voltage in millivolts that the probe is reading.  When the value for voltageProbeType is voltageProbeTypeIsDiscrete, a value is not returned for this attribute.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Voltage Probe Type

<b>Name</b>	voltageProbeType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.7
<b>Description</b>	Defines the type of the voltage probe.
<b>Syntax</b>	DellVoltageType
<b>Access</b>	Read-only

### Voltage Probe Location Name

<b>Name</b>	voltageProbeLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.8
<b>Description</b>	Defines the location of the voltage probe in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### **Voltage Probe Upper Nonrecoverable Threshold**

<b>Name</b>	voltageProbeUpperNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.9
<b>Description</b>	Defines the value of the voltage probe's upper nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### **Voltage Probe Upper Critical Threshold**

<b>Name</b>	voltageProbeUpperCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.10
<b>Description</b>	Defines the value of the voltage probe's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### **Voltage Probe Upper Noncritical Threshold**

<b>Name</b>	voltageProbeUpperNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.11
<b>Description</b>	Defines the user-assigned value of the voltage probe's upper noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-write

### **Voltage Probe Lower Noncritical Threshold**

<b>Name</b>	voltageProbeLowerNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.12
<b>Description</b>	Defines the user-assigned value of the voltage probe's lower noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-write



### Voltage Probe Lower Critical Threshold

<b>Name</b>	voltageProbeLowerCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.13
<b>Description</b>	Defines the value of the voltage probe's lower critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Voltage Probe Lower Nonrecoverable Threshold

<b>Name</b>	voltageProbeLowerNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.14
<b>Description</b>	Defines the value of the voltage probe's lower nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Voltage Probe Probe Capabilities

<b>Name</b>	voltageProbeProbeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.15
<b>Description</b>	Defines the probe capabilities of the voltage probe.
<b>Syntax</b>	DellProbeCapabilities
<b>Access</b>	Read-only

### Voltage Probe Discrete Reading

<b>Name</b>	voltageProbeDiscreteReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.20.1.16
<b>Description</b>	Defines the reading for a voltage probe of type voltageProbeTypeIsDiscrete.  When the value for voltageProbeType is other than voltageProbeTypeIsDiscrete, a value is not returned for this attribute. When the value for voltageProbeType is voltageProbeTypeIsDiscrete, the value returned for this attribute is the discrete reading for the probe.
<b>Syntax</b>	DellVoltageDiscreteReading
<b>Access</b>	Read-only

## Amperage Probe Table

<b>Name</b>	amperageProbeTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30
<b>Description</b>	Defines the Amperage Probe Table.
<b>Syntax</b>	SEQUENCE OF AmperageProbeTableEntry
<b>Access</b>	Not accessible

## Amperage Probe Table Entry

<b>Name</b>	amperageProbeTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1
<b>Description</b>	Defines the Amperage Probe Table entry.
<b>Syntax</b>	AmperageProbeTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	amperageProbechassisIndex, amperageProbeIndex

## Amperage Probe Chassis Index

<b>Name</b>	amperageProbechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Amperage Probe Index

<b>Name</b>	amperageProbeIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.2
<b>Description</b>	Defines the index of amperage probes in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Amperage Probe State Capabilities

<b>Name</b>	amperageProbeStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.3
<b>Description</b>	Defines the capabilities of the amperage probe.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Amperage Probe State Settings

<b>Name</b>	amperageProbeStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.4
<b>Description</b>	Defines the state and settings of the amperage probe.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Amperage Probe Status

<b>Name</b>	amperageProbeStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.5
<b>Description</b>	Defines the status of the amperage probe.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Amperage Probe Reading

<b>Name</b>	amperageProbeReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.6
<b>Description</b>	Defines the value of the amperage probe. When the value for amperageProbeType is other than amperageProbeTypeIsDiscrete, the value returned for this attribute is the amperage that the probe is reading in milliamps. When the value for amperageProbeType is amperageProbeTypeIsDiscrete, a value is not returned for this attribute.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Amperage Probe Type

<b>Name</b>	amperageProbeType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.7
<b>Description</b>	Defines the type of the amperage probe.
<b>Syntax</b>	DellAmperageProbeType
<b>Access</b>	Read-only

### Amperage Probe Location Name

<b>Name</b>	amperageProbeLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.8
<b>Description</b>	Defines the location name of the amperage probe in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Amperage Probe Upper Nonrecoverable Threshold

<b>Name</b>	amperageProbeUpperNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.9
<b>Description</b>	Defines the value of the amperage probe's upper nonrecoverable threshold. The value is an integer representing the amperage in milliamperes that the probe is reading.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Amperage Probe Upper Critical Threshold

<b>Name</b>	amperageProbeUpperCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.10
<b>Description</b>	Defines the value of the amperage probe's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Amperage Probe Upper Noncritical Threshold

<b>Name</b>	amperageProbeUpperNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.11
<b>Description</b>	Defines the user-assigned value of the amperage probe's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-write

### Amperage Probe Lower Noncritical Threshold

<b>Name</b>	amperageProbeLowerNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.12
<b>Description</b>	Defines the user-assigned value of the amperage probe's lower noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-write

### Amperage Probe Lower Critical Threshold

<b>Name</b>	amperageProbeLowerCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.13
<b>Description</b>	Defines the value of the amperage probe's lower critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Amperage Probe Lower Nonrecoverable Threshold

<b>Name</b>	amperageProbeLowerNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.14
<b>Description</b>	Defines the value of the amperage probe's lower nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

## Amperage Probe Probe Capabilities

<b>Name</b>	amperageProbeProbeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.15
<b>Description</b>	Defines the probe capabilities of the amperage probe.
<b>Syntax</b>	DellProbeCapabilities
<b>Access</b>	Read-only

## Amperage Probe Discrete Reading

<b>Name</b>	amperageProbeDiscreteReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.30.1.16
<b>Description</b>	<p>Defines the reading for a amperage probe of type amperageProbeTypesIsDiscrete.</p> <p>When the value for amperageProbeType is other than amperageProbeTypesIsDiscrete, a value is not returned for this attribute. When the value for amperageProbeType is amperageProbeTypesIsDiscrete, the value returned for this attribute is the discrete reading for the probe.</p>
<b>Syntax</b>	DellAmperageDiscreteReading (See Table 8-9)
<b>Access</b>	Read-only

## AC Power Switch Table

<b>Name</b>	aCPowerSwitchTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40
<b>Description</b>	Defines the AC Power Switch Table.
<b>Syntax</b>	SEQUENCE OF ACPowerSwitchTableEntry
<b>Access</b>	Not accessible

## AC Power Switch Table Entry

<b>Name</b>	aCPowerSwitchTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1
<b>Description</b>	Defines the AC Power Switch Table entry.
<b>Syntax</b>	ACPowerSwitchTableEntry
<b>Access</b>	Not accessible

### AC Power Switch Chassis Index

<b>Name</b>	aCPowerSwitchChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing this AC power switch.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### AC Power Switch Index

<b>Name</b>	aCPowerSwitchIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.2
<b>Description</b>	Defines the index (one-based) of this AC power switch.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### AC Power Switch Capabilities

<b>Name</b>	aCPowerSwitchCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.3
<b>Description</b>	Defines the capabilities of this AC power switch.
<b>Syntax</b>	DellACPowerSwitchCapabilities
<b>Access</b>	Read-only

### AC Power Switch Settings

<b>Name</b>	aCPowerSwitchSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.4
<b>Description</b>	Defines the settings of this AC power switch.
<b>Syntax</b>	DellACPowerSwitchSettings
<b>Access</b>	Read-write

### AC Power Switch Redundancy Status

<b>Name</b>	aCPowerSwitchRedundancyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.5
<b>Description</b>	Defines the redundancy status of this AC power switch.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

### AC Power Cord Count for Redundancy

<b>Name</b>	aCPowerCordCountForRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.6
<b>Description</b>	Defines the total number of AC power cords required for this AC power switch to have redundancy.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### AC Power Switch Name

<b>Name</b>	aCPowerSwitchName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.7
<b>Description</b>	Defines the name of this AC power switch.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### AC Power Switch Redundancy Mode

<b>Name</b>	aCPowerSwitchRedundancyMode
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.8
<b>Description</b>	Defines the redundancy mode of this AC power switch.
<b>Syntax</b>	DellACPowerSwitchRedundancyMode
<b>Access</b>	Read-write



## AC Power Switch Status

<b>Name</b>	aCPowerSwitchStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.40.1.9
<b>Description</b>	Defines the status of this AC power switch.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## AC Power Cord Table

<b>Name</b>	aCPowerCordTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42
<b>Description</b>	Defines the AC Power Cord Table.
<b>Syntax</b>	SEQUENCE OF ACPowerCordTableEntry
<b>Access</b>	Not accessible

## AC Power Cord Table Entry

<b>Name</b>	aCPowerCordTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1
<b>Description</b>	Defines the AC Power Cord Table entry.
<b>Syntax</b>	ACPowerCordTableEntry
<b>Access</b>	Not accessible

## AC Power Cord Chassis Index

<b>Name</b>	aCPowerCordChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing this AC power cord.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### AC Power Cord Index

<b>Name</b>	aCPowerCordIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.2
<b>Description</b>	Defines the index (one-based) of this AC power cord.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### AC Power Cord State Capabilities

<b>Name</b>	aCPowerCordStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.3
<b>Description</b>	Defines the capabilities of this AC power cord.
<b>Syntax</b>	DellACPowerCordStateCapabilities
<b>Access</b>	Read-only

### AC Power Cord State Settings

<b>Name</b>	aCPowerCordStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.4
<b>Description</b>	Defines the settings of this AC power cord.
<b>Syntax</b>	DellACPowerCordStateSettings
<b>Access</b>	Read-write

### AC Power Cord Status

<b>Name</b>	aCPowerCordStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.5
<b>Description</b>	Defines the status of this AC power cord.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### AC Power Cord AC Power Switch Index Reference

<b>Name</b>	aCPowerCordACPowerSwitchIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.6
<b>Description</b>	Defines the index (one-based) to the associated AC power switch for this AC power cord.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### AC Power Cord Location Name

<b>Name</b>	aCPowerCordLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.600.42.1.7
<b>Description</b>	Defines the location name of this AC power cord.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Power Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 8-1. Power Supply State Capabilities Unique**

---

**Variable Name:** DellPowerSupplyStateCapabilitiesUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	The power supply's capabilities are unknown.
onlineCapable(2)	The power supply can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReadyCapable(4)	The power supply's capabilities are not ready.

---

**Table 8-2. Power Supply State Settings Unique**

---

**Variable Name:** DellPowerSupplyStateSettingsUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	The power supply's capabilities are unknown.
onLine(2)	The power supply's state is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReady(4)	The power supply's state is not ready.
fanFailure(8)	The power supply fan has failed.
onlineAndFanFailure(10)	The power supply is online and indicating that its fan is not working.
powerSupplyIsON(16)	The power supply is indicating that it is on.
powerSupplyIsOk(32)	The power supply is indicating that it is OK.
acSwitchIsON(64)	The power supply is indicating that the AC power switch is on.
onlineandAcSwitchIsON(66)	The power supply is online and indicating that the AC power supply switch capability is activated.
acPowerIsON(128)	The power supply is indicating that the AC power is on.
onlineAndAcPowerIsON(130)	The power supply is online and indicating that the AC power is on.
onlineAndPredictiveFailure(210)	The power supply is online and indicating that it has a problem.
acPowerAndSwitchAreOnPowerSupplyIsOnIsOkAndOnline(242)	The power supply is online and OK.

---

**Table 8-3. Power Supply Type Definitions**


---

**Variable Name:** DellPowerSupplyType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
powerSupplyTypeIsOther(1)	The power supply type is not one of the following:
powerSupplyTypeIsUnknown(2)	The power supply type is unknown (not known or not monitored).
powerSupplyTypeIsLinear(3)	The power supply type is a linear power supply.
powerSupplyTypeIsSwitching(4)	The power supply type is a switching power supply.
powerSupplyTypeIsBattery(5)	The power supply type is a battery.
powerSupplyTypeIsUPS(6)	The power supply type is an uninterruptable power supply.
powerSupplyTypeIsConverter(7)	The power supply type is a power converter power supply.
powerSupplyTypeIsRegulator(8)	The power supply type is a regulator power supply.
powerSupplyTypeIsAC(9)	The power supply type is an AC power supply.
powerSupplyTypeIsDC(10)	The power supply type is a DC power supply.
powerSupplyTypeIsVRM(11)	The power supply type is a voltage regulator module (VRM) power supply.

---

**Table 8-4. Power Supply Sensor State**


---

**Variable Name:** DellPowerSupplySensorState

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
presenceDetected(1)	The power supply's presence is detected.
psFailureDetected(2)	The power supply failure is detected.
predictiveFailure(4)	The power supply sensor detects predictive failure
psACLost(8)	The power supply's AC power is lost.
acLostOrOutOfRange(16)	The power supply's AC power is lost or out of range.
acOutOfRangeButPresent(32)	The power supply's AC power is present, but it is out of range.
configurationError(64)	The power supply sensor detects a configuration error.

---

**Table 8-5. Power Supply Configuration Error Type**

<b>Variable Name:</b> DellPowerSupplyConfigurationErrorType	
<b>Data Type:</b> Integer	
Possible Data Values	Meaning of Data Value
vendorMismatch(1)	The power supply configuration error type is vendor mismatch.
revisionMismatch(2)	The power supply configuration error type is revision mismatch.
processorMissing(3)	The power supply configuration error type is processor missing.

**Table 8-6. Voltage Probe Type**

<b>Variable Name:</b> DellVoltageType	
<b>Data Type:</b> Integer	
Possible Data Values	Meaning of Data Value
voltageProbeTypeIsOther(1)	The voltage probe type is not one of the following:
voltageProbeTypeIsUnknown(2)	The voltage probe type is unknown (not known or not monitored).
voltageProbeTypeIs1Point5Volt(3)	The voltage probe type is a 1.5-volt (V) probe.
voltageProbeTypeIs3Point3Volt(4)	The voltage probe type is a 3.3-V probe.
voltageProbeTypeIs5Volt(5)	The voltage probe type is a 5-V probe.
voltageProbeTypeIsMinus5Volt(6)	The voltage probe type is a -5-V probe.
voltageProbeTypeIs12Volt(7)	The voltage probe type is a 12-V probe.
voltageProbeTypeIsMinus12Volt(8)	The voltage probe type is a -12-V probe.
voltageProbeTypeIsIO(9)	The voltage probe type is an I/O volt probe.
voltageProbeTypeIsCore(10)	The voltage probe type is a core volt probe.
voltageProbeTypeIsFLEA(11)	The voltage probe type is a FLEA (standby) volt probe.
voltageProbeTypeIsBattery(12)	The voltage probe type is a battery volt probe.
voltageProbeTypeIsTerminator(13)	The voltage probe type is a SCSI termination volt probe.
voltageProbeTypeIs2Point5Volt(14)	The voltage probe type is a 2.5-V probe.
voltageProbeTypeIsGTL(15)	The voltage probe type is a ground termination logic (GTL) probe.
voltageProbeTypeIsDiscrete(16)	The voltage probe type is a voltage probe with discrete reading.

**Table 8-7. Voltage Probe Discrete Reading**


---

**Variable Name:** DellVoltageDiscreteReading

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
voltageIsGood(1)	The voltage probe discrete reading is good.
voltageIsBad(2)	The voltage probe discrete reading is bad.

---

**Table 8-8. Amperage Probe Definitions**


---

**Variable Name:** DellAmperageType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
amperageProbeTypeIsOther(1)	The amperage probe type is not one of the following:
amperageProbeTypeIsUnknown(2)	The amperage probe type is unknown (not known or not monitored).
amperageProbeTypeIs1Point5Volt(3)	The amperage probe type is a 1.5-ampere (A) probe.
amperageProbeTypeIs3Point3volt(4)	The amperage probe type is a 3.3-A probe.
amperageProbeTypeIs5Volt(5)	The amperage probe type is a 5-A probe.
amperageProbeTypeIsMinus5Volt(6)	The amperage probe type is a -5-A probe.
amperageProbeTypeIs12Volt(7)	The amperage probe type is a 12-A probe.
amperageProbeTypeIsMinus12Volt(8)	The amperage probe type is a -12-A probe.
amperageProbeTypeIsIO(9)	The amperage probe type is an I/O amperage probe.
amperageProbeTypeIsCore(10)	The amperage probe type is a core amperage probe.
amperageProbeTypeIsFLEA(11)	The amperage probe type is a FLEA (standby) amperage probe.
amperageProbeTypeIsBattery(12)	The amperage probe type is a battery amperage probe.
amperageProbeTypeIsTerminator(13)	The amperage probe type is a Small Computer System Interface (SCSI) termination amperage probe.
amperageProbeTypeIs2Point5Volt(14)	The amperage probe type is a 2.5-V amperage probe.
amperageProbeTypeIsGTL(15)	The amperage probe type is a Gunning Transceiver Logic (GTL) probe.
amperageProbeTypeIsDiscrete(16)	The amperage probe type is an amperage probe with discrete reading.

---

**Table 8-9. Amperage Probe Discrete Reading**


---

**Variable Name:** DellAmperageDiscreteReading

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
amperageIsGood(1)	The amperage probe discrete reading is good.
amperageIsBad(2)	The amperage probe discrete reading is bad.

---

**Table 8-10. AC Power Switch Capabilities**


---

**Variable Name:** DellACPowerSwitchCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknownCapabilities(1)	The AC power switch's capabilities are unknown.
inputSourceCord1NoReturnCapable(2)	Input source is AC power cord 1, with no return.
inputSourceCord1ReturnCapable(4)	Input source is AC power cord 1, with return.
inputSourceCord2NoReturnCapable(8)	Input source is AC power cord 2, with no return.
inputSourceCord2ReturnCapable(16)	Input source is AC power cord 2, with return.
inputSourceSharedCapable(32)	Input source is shared.

---

**Table 8-11. AC Power Switch Settings**


---

**Variable Name:** DellACPowerSwitchSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	The AC power switch's settings are unknown.
inputSourceCord1NoReturn(2)	Input source is AC power cord 1, with no return.
inputSourceCord1Return(4)	Input source is AC power cord 1, with return.
inputSourceCord2NoReturn(8)	Input source is AC power cord 2, with no return.
inputSourceCord2Return(16)	Input source is AC power cord 2, with return.
inputSourceShared(32)	Input source is shared.

---



**Table 8-12. AC Power Switch Redundancy Mode**

---

**Variable Name:** DellACPowerSwitchRedundancyMode

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
nonRedundant(1)	The AC power switch is not expecting redundancy.
redundant(2)	The AC power switch is expecting redundancy.

---

**Table 8-13. AC Power Cord State Capabilities**

---

**Variable Name:** DellACPowerCordStateCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	The AC power cord's capabilities are unknown.
onlineCapable(2)	The AC power cord can be disabled (offline) or enabled (online).
notReadyCapable(4)	The AC power cord's capabilities are not ready.

---

**Table 8-14. AC Power Cord State Settings**

---

**Variable Name:** DellACPowerCordStateSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	The AC power cord's state is unknown.
online(2)	The AC power cord's state is disabled (offline) 0 or enabled (online) 1.
notReady(4)	The AC power cord's state is not ready.
acPowerCordHasPower(8)	The AC power cord has power.
acPowerCordIsActiveSource(16)	The AC power cord is the active source of AC power.

---



# Thermal Group

The Thermal Group provides information about cooling units, cooling devices, and temperature probes. Cooling units are sets of fans or other cooling devices in a system chassis. Thermal Group variables include threshold values and types of cooling devices and temperature probes.

## Thermal Group Tables

The following management information base (MIB) tables define the objects in the Thermal Group:

- Cooling Unit Table
- Cooling Unit Status
- Temperature Probe Table

### Cooling Unit Table

<b>Name</b>	coolingUnitTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10
<b>Description</b>	Defines the Cooling Unit Table.
<b>Syntax</b>	TableEntry
<b>Access</b>	Not accessible

### Cooling Unit Table Entry

<b>Name</b>	coolingUnitTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1
<b>Description</b>	Defines the Cooling Unit Table entry.
<b>Syntax</b>	TableEntry
<b>Access</b>	Not accessible
<b>Index</b>	coolingUnitchassisIndex, coolingUnitIndex

### Cooling Unit Chassis Index

<b>Name</b>	coolingUnitChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	TableEntry
<b>Access</b>	Read-only

### Cooling Unit Index

<b>Name</b>	coolingUnitIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.2
<b>Description</b>	Defines the index (one-based) of cooling units.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Cooling Unit State Capabilities

<b>Name</b>	coolingUnitStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.3
<b>Description</b>	Defines the capabilities of the cooling unit.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Cooling Unit State Settings

<b>Name</b>	coolingUnitStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.4
<b>Description</b>	Defines the state and settings of the cooling unit.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Cooling Unit Redundancy Status

<b>Name</b>	coolingUnitRedundancyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.5
<b>Description</b>	Defines the redundancy status of the cooling unit.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

### Cooling Device Count For Redundancy

<b>Name</b>	coolingDeviceCountForRedundancy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.6
<b>Description</b>	Defines the total number of cooling devices required for this cooling unit to have redundancy.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Cooling Unit Name

<b>Name</b>	coolingUnitName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.7
<b>Description</b>	Defines the cooling unit name in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Cooling Unit Status

<b>Name</b>	coolingUnitStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.10.1.8
<b>Description</b>	Defines the status of the cooling unit in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Cooling Device Table

<b>Name</b>	coolingDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12
<b>Description</b>	Defines the Cooling Device Table.
<b>Syntax</b>	CoolingDeviceTableEntry
<b>Access</b>	Not accessible

## Cooling Device Table Entry

<b>Name</b>	coolingDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1
<b>Description</b>	Defines the Cooling Device Table entry.
<b>Syntax</b>	CoolingDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	cooling DevicechassisIndex, coolingDeviceIndex

## Cooling Device Chassis Index

<b>Name</b>	coolingDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Cooling Device Index

<b>Name</b>	coolingDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.2
<b>Description</b>	Defines the index of cooling devices in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Cooling Device State Capabilities

<b>Name</b>	coolingDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.3
<b>Description</b>	Defines the capabilities of the cooling device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Cooling Device State Settings

<b>Name</b>	coolingDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.4
<b>Description</b>	Defines the state and settings of the cooling device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## Cooling Device Status

<b>Name</b>	coolingDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.5
<b>Description</b>	Defines the status of the cooling device.
<b>Syntax</b>	DellStatusProbe
<b>Access</b>	Read-only

## Cooling Device Reading

<b>Name</b>	coolingDeviceReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.6
<b>Description</b>	<p>Defines either the cooling device's speed in revolutions per minute (RPM), or the off/on value of the fan.</p> <p>When the value for coolingDeviceSubType is other than coolingDeviceSubTypeIsDiscrete, the value returned for this attribute is the speed in RPM or the OFF/ON value of the cooling device.</p> <p>When the value for coolingDeviceSubType is coolingDeviceSubTypeIsDiscrete, a value is not returned for this attribute.</p>
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Cooling Device Type

<b>Name</b>	coolingDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.7
<b>Description</b>	Defines the cooling device type.
<b>Syntax</b>	DellCoolingDeviceType (See Table 9-1.)
<b>Access</b>	Read-only

### Cooling Device Location Name

<b>Name</b>	coolingDeviceLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.8
<b>Description</b>	Defines the location of the cooling device in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Cooling Device Upper Nonrecoverable Threshold

<b>Name</b>	coolingDeviceUppernonrecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.9
<b>Description</b>	Defines the value of the fan's upper nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Cooling Device Upper Critical Threshold

<b>Name</b>	coolingDeviceUpperCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.10
<b>Description</b>	Defines the value of the fan's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only



### Cooling Device Upper Noncritical Threshold

<b>Name</b>	coolingDeviceUpperNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.11
<b>Description</b>	Defines the user-assigned value of the fan's upper noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-write

### Cooling Device Lower Noncritical Threshold

<b>Name</b>	coolingDeviceLowerNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.12
<b>Description</b>	Defines the user-assigned value of the fan's lower noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-write

### Cooling Device Lower Critical Threshold

<b>Name</b>	coolingDeviceLowerCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.13
<b>Description</b>	Defines the value of the fan's lower critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Cooling Device Lower Nonrecoverable Threshold

<b>Name</b>	coolingDeviceLowerNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.14
<b>Description</b>	Defines the value of the fan's lower nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

## Cooling Device Cooling Unit Index Reference

<b>Name</b>	coolingDevicecoolingUnitIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.15
<b>Description</b>	Defines the index for the associated system cooling unit in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Cooling Device Subtype

<b>Name</b>	coolingDeviceSubType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.16
<b>Description</b>	Defines the cooling device subtype.
<b>Syntax</b>	DellCoolingDeviceSubType (See Table 9-2.)
<b>Access</b>	Read-only

## Cooling Device Probe Capabilities

<b>Name</b>	coolingDeviceProbeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.17
<b>Description</b>	Defines the probe capabilities of the cooling device.
<b>Syntax</b>	DellProbeCapabilities
<b>Access</b>	Read-only

## Cooling Device Discrete Reading

<b>Name</b>	coolingDeviceDiscreteReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.12.1.18
<b>Description</b>	Defines the reading for a voltage probe of type coolingDeviceSubTypeIsDiscrete.  When the value for coolingDeviceSubType is other than coolingDeviceSubTypeIsDiscrete, a value is not returned for this attribute. When the value for coolingDeviceSubType is coolingDeviceSubTypeIsDiscrete, the value returned for this attribute is the discrete reading for the cooling device.
<b>Syntax</b>	DellCoolingDeviceDiscreteReading (See Table 9-3)
<b>Access</b>	Read-only

## Temperature Probe Table

<b>Name</b>	temperatureProbeTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20
<b>Description</b>	Defines the Temperature Probe Table.
<b>Syntax</b>	TemperatureProbeTableEntry
<b>Access</b>	Not accessible

## Temperature Probe Table Entry

<b>Name</b>	temperatureProbeTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1
<b>Description</b>	Defines the Temperature Probe Table entry.
<b>Syntax</b>	TemperatureProbeTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	temperatureProbeChassisIndex, temperatureProbeIndex

## Temperature Probe Chassis Index

<b>Name</b>	temperatureProbeChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Temperature Probe Index

<b>Name</b>	temperatureProbeIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.2
<b>Description</b>	Defines the index of temperature probes in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Temperature Probe State Capabilities

<b>Name</b>	temperatureProbeStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.3
<b>Description</b>	Defines the capabilities of the temperature probe.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Temperature Probe State Settings

<b>Name</b>	temperatureProbeStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.4
<b>Description</b>	Defines the state and settings of the temperature probe.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Temperature Probe Status

<b>Name</b>	temperatureProbeStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.5
<b>Description</b>	Defines the status of the temperature probe in tenths of degrees Celsius.
<b>Syntax</b>	DellStatusProbe
<b>Access</b>	Read-only

### Temperature Probe Reading

<b>Name</b>	temperatureProbeReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.6
<b>Description</b>	Defines the value of the temperature probe. When the value for temperatureProbeType is other than temperatureProbeTypeIsDiscrete, the value returned for this attribute is the temperature that the probe is reading in tenths of degrees Centigrade. When the value for temperatureProbeType is temperatureProbeTypeIsDiscrete, a value is not returned for this attribute.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Temperature Probe Type

<b>Name</b>	temperatureProbeType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.7
<b>Description</b>	Defines the temperature probe type.
<b>Syntax</b>	DellTemperatureProbeType (See Table 9-4.)
<b>Access</b>	Read-only

### Temperature Probe Location Name

<b>Name</b>	temperatureProbeLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.8
<b>Description</b>	Defines the location of the temperature probe in this chassis.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Temperature Probe Upper Nonrecoverable Threshold

<b>Name</b>	temperatureProbeUpperNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.9
<b>Description</b>	Defines the value of the temperature probe's upper nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Temperature Probe Upper Critical Threshold

<b>Name</b>	temperatureProbeUpperCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.10
<b>Description</b>	Defines the value of the temperature probe's upper critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Temperature Probe Upper Noncritical Threshold

<b>Name</b>	temperatureProbeUpperNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.11
<b>Description</b>	Defines the user-assigned value of the temperature probe's upper noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-write

### Temperature Probe Lower Noncritical Threshold

<b>Name</b>	temperatureProbeLowerNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.12
<b>Description</b>	Defines the user-assigned value of the temperature probe's lower noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-write

### Temperature Probe Lower Critical Threshold

<b>Name</b>	temperatureProbeLowerCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.13
<b>Description</b>	Defines the value of the temperature probe's lower critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Temperature Probe Lower Nonrecoverable Threshold

<b>Name</b>	temperatureProbeLowerNonRecoverableThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.14
<b>Description</b>	Defines the value of the temperature probe's lower nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Temperature Probe Probe Capabilities

<b>Name</b>	temperatureProbeProbeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.15
<b>Description</b>	Defines the probe capabilities of the temperature probe.
<b>Syntax</b>	DellProbeCapabilities
<b>Access</b>	Read-only

### Temperature Probe Discrete Reading

<b>Name</b>	temperatureProbeDiscreteReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.700.20.1.16
<b>Description</b>	<p>Defines the reading for a temperature probe of type temperatureProbeTypeIsDiscrete.</p> <p>When the value for temperatureProbeType is other than temperatureProbeTypeIsDiscrete, a value is not returned for this attribute. When the value for temperatureProbeType is temperatureProbeTypeIsDiscrete, the value returned for this attribute is the discrete reading for the probe.</p>
<b>Syntax</b>	DellTemperatureDiscreteReading (See Table 9-5)
<b>Access</b>	Read-only

# Thermal Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 9-1. Cooling Device Type**

---

<b>Variable Name:</b> DellCoolingDeviceType	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
<code>coolingDeviceTypeIsOther(1)</code>	The cooling device type is not one of the following:
<code>coolingDeviceTypeIsUnknown(2)</code>	The cooling device type is unknown (not known or not monitored).
<code>coolingDeviceTypeIsAFan(3)</code>	The cooling device type is a fan.
<code>coolingDeviceTypeIsABlower(4)</code>	The cooling device type is a centrifugal blower.
<code>coolingDeviceTypeIsAChipFan(5)</code>	The cooling device type is a fan on an integrated circuit.
<code>coolingDeviceTypeIsACabinetFan(6)</code>	The cooling device type is a cabinet fan.
<code>coolingDeviceTypeIsAPowerSupplyFan(7)</code>	The cooling device type is a power supply fan.
<code>coolingDeviceTypeIsAHeatPipe(8)</code>	The cooling device type is a heat pipe.
<code>coolingDeviceTypeIsRefrigeration(9)</code>	The cooling device type is an integrated refrigeration unit.
<code>coolingDeviceTypeIsActiveCooling(10)</code>	The cooling device type is an active cooling device.
<code>coolingDeviceTypeIsPassiveCooling(11)</code>	The cooling device type is a passive cooling device.

---



**Table 9-2. Cooling Device Subtype**

<b>Variable Name:</b> DellCoolingDeviceSubType	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
coolingDeviceSubTypeIsOther(1)	The cooling device subtype is not one of the following:
coolingDeviceSubTypeIsUnknown(2)	The cooling device subtype is unknown (not known or not monitored).
coolingDeviceSubTypeIsAFanThatReadsInRPM(3)	The cooling device subtype is a fan that reads in RPMs.
coolingDeviceSubTypeIsAFanReadsONorOFF(4)	The cooling device subtype is a fan that reads 0 (off) or 1 (on).
coolingDeviceSubTypeIsAPowerSupplyFanThatReadsinRPM(5)	The cooling device subtype is a power supply fan that reads in RPMs.
coolingDeviceSubTypeIsAPowerSupplyFanThatReads-ONorOFF(6)	The cooling device subtype is a power supply fan that reads 0 (off) or 1 (on).
coolingDeviceSubTypeIsDiscrete(16)	The cooling device subtype is a cooling device with discrete reading.

**Table 9-3. Cooling Device Discrete Reading**

<b>Variable Name:</b> DellCoolingDeviceDiscreteReading	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
coolingDeviceIsGood(1)	The cooling device discrete reading is good.
coolingDeviceIsBad(2)	The cooling device discrete reading is bad.

**Table 9-4. Temperature Probe Type**

---

**Variable Name:** DellTemperatureProbeType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
temperatureProbeTypeIsOther(1)	The temperature probe subtype is not one of the following:
temperatureProbeTypeIsUnknown(2)	The temperature probe subtype is unknown (not known or not monitored).
temperatureProbeTypeIsAmbientESM(3)	The temperature probe is for ambient Embedded Systems Management (ESM).
temperatureProbeTypeIsDiscrete(16)	The temperature probe subtype is a temperature probe with discrete reading.

---

**Table 9-5. Temperature Probe Discrete Reading**

---

**Variable Name:** DellTemperatureDiscreteReading

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
temperatureIsGood(1)	The temperature probe discrete reading is good.
temperatureIsBad(2)	The temperature probe discrete reading is bad.

---

# User Security Group

The User Security Table defines the objects that allow administrators to create and modify user accounts and to control which users can perform **Set** operations on managed systems.

## User Security Group Table

The User Security Group defines objects in the User Security MIB table.

### User Security Table

The following object sets up the User Security Table:

<b>Name</b>	userSecurityTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.800
<b>Description</b>	Contains the database of users that are authorized to perform Set operations on a managed system.
<b>Syntax</b>	UserSecurityTableEntry
<b>Access</b>	Not accessible

### User Security Table Entry

<b>Name</b>	userSecurityTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.800.1
<b>Description</b>	Defines a row in the User Security Table.
<b>Syntax</b>	UserSecurityTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	userSecuritychassisIndex, userSecurityIndex

### User Security Chassis Index

<b>Name</b>	userSecuritychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.800.1.1
<b>Description</b>	Defines the user security index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## User Security Index

<b>Name</b>	userSecurityIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.800.1.2
<b>Description</b>	Defines the user security index.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## User Security User Name

<b>Name</b>	userSecurityUserName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.800.1.3
<b>Description</b>	Defines the user security user name.
<b>Syntax</b>	DellSecurityString
<b>Access</b>	Read-only

## User Security Control Name

<b>Name</b>	userSecurityControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.800.1.4
<b>Description</b>	Defines a control name used for creating, deleting, and editing users.
<b>Syntax</b>	DellSecurityString
<b>Access</b>	Read-write

## User Security Request Name

<b>Name</b>	userSecurityRequestName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.800.1.5
<b>Description</b>	Defines a request name used for creating, deleting, and editing users.
<b>Syntax</b>	DellSecurityString
<b>Access</b>	Read-write

## Remote Flash BIOS Group

The Remote Flash Basic Input/Output System (BIOS) Table defines the variables used to remotely update the BIOS in a system. The variables also define the capabilities of BIOS updates on the system.

### Remote Flash BIOS Group Table

The Remote Flash BIOS Group defines objects in the Remote Flash BIOS MIB table.

#### Remote Flash BIOS Table

The following object sets up the Remote Flash BIOS Table:

<b>Name</b>	remoteFlashBIOSTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10
<b>Description</b>	Defines the Remote Flash BIOS Table.
<b>Syntax</b>	RemoteFlashBIOSTableEntry
<b>Access</b>	Not accessible

#### Remote Flash BIOS Table Entry

<b>Name</b>	remoteFlashBIOSTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1
<b>Description</b>	Defines the Remote Flash BIOS Table entry.
<b>Syntax</b>	RemoteFlashBIOSTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	remoteFlashBIOSchassisIndex, remoteFlashBIOSIndex

### Remote Flash BIOS Chassis Index

<b>Name</b>	remoteFlashBIOSchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Flash BIOS Index

<b>Name</b>	remoteFlashBIOSIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.2
<b>Description</b>	Defines the index to the remote BIOS update hardware on this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Flash BIOS State Capabilities Unique

<b>Name</b>	remoteFlashBIOSStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.3
<b>Description</b>	Defines the capabilities of the remote BIOS update hardware on this system.
<b>Syntax</b>	DellRemoteFlashBIOSStateCapabilitiesUnique (See Table 11-1.)
<b>Access</b>	Read-only

### Remote Flash BIOS State Settings Unique

<b>Name</b>	remoteFlashBIOSStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.4
<b>Description</b>	Defines the state and settings of the remote BIOS update hardware on this system.
<b>Syntax</b>	DellRemoteFlashBIOSStateSettingsUnique (See Table 11-2.)
<b>Access</b>	Read-write

### Remote Flash BIOS Status

<b>Name</b>	remoteFlashBIOSStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.5
<b>Description</b>	Defines the status of the remote BIOS update hardware on this system.
<b>Syntax</b>	DellRemoteFlashBIOSStateStatus
<b>Access</b>	Read-only

### Remote Flash BIOS Last BIOS Date Name

<b>Name</b>	remoteFlashBIOSLastBIOSDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.6
<b>Description</b>	Defines the date of the last BIOS update.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-only

### Remote Flash BIOS Completion Code

<b>Name</b>	remoteFlashBIOSCompletionCode
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.7
<b>Description</b>	Defines the completion code of the last BIOS update.
<b>Syntax</b>	DellRemoteFlashBIOSCompletionCode (See Table 11-3.)
<b>Access</b>	Read-only

### Remote Flash BIOS Minimum Contiguous Memory

<b>Name</b>	remoteFlashBIOSMinimumContiguousMemory
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.900.10.1.8
<b>Description</b>	Defines the minimum size of contiguous memory required for remote BIOS update in kilobytes.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## Remote Flash BIOS Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 11-1. Remote Flash BIOS State Capabilities Unique**

---

**Variable Name:** DellRemoteFlashBIOSStateCapabilitiesUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	The remote flash BIOS's capabilities are unknown.
enableCapable(2)	The remote flash BIOS can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReadyCapable(4)	The remote flash BIOS can be set to indicate not ready.
cancelCapable(8)	Flash of BIOS can be canceled.
enableAndCancelCapable(10)	Flash of BIOS can be enabled or canceled.

---

**Table 11-2. Remote Flash BIOS State Settings**

---

**Variable Name:** DellRemoteFlashBIOSStateSettingsUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	The remote flash BIOS's capabilities are unknown.
enabled(2)	The remote flash BIOS update is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
notReady(4)	The remote flash BIOS's state is not ready.
canceled(8)	The remote flash BIOS has been canceled.
pending(16)	The remote flash BIOS update is pending.
other(32)	The remote flash BIOS state/setting is not one of the previous values.

---



**Table 11-3. Remote Flash BIOS Completion Code**

---

**Variable Name:** DellRemoteFlashBIOSCompletionCode

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
completionCodeIsOther(1)	The completion code status is not one of the following:
completionCodeIsUnknown(2)	The completion code is unknown (not known or not monitored).
completionCodeIsOK(3)	This completion code completed successfully.
completionCodeIsBadImage(4)	This completion code is a bad flash BIOS image.
completionCodeIsNoFileAccess(5)	Flash BIOS could not be accessed.
completionCodeIsNotReady(6)	Flash BIOS memory not ready.
completionCodeIsDisabled(7)	Flash BIOS is currently disabled.
completionCodeIsNoBattery(8)	A battery must be installed.
completionCodeIsNoChargedBattery(9)	A fully charged battery must be installed.
completionCodeIsNoExternalPower(10)	An external power adapter must be connected.
completionCodeIsNo12VoltSet(11)	12 volts (V) could not be set.
completionCodeIsNo12VoltRemoval(12)	12 V could not be removed.
completionCodeIsFlashMemoryFailed(13)	A flash memory failure occurred.
completionCodeIsGeneralFailure(14)	A general failure occurred.
completionCodeIsDataMiscompare(15)	A data miscompare error occurred.
completionCodeIsNoImageFound(16)	The flash BIOS image could not be found in memory.
completionCodeIsNoUpdatePerformed(17)	No update operation has been performed.

---



## Port Group

The Port Group provides information about the different types of ports that may be present in your system. This management information base (MIB) group also provides information about the capabilities, states, and settings that are possible for each port.

### Port Group Tables

The following MIB tables define objects in the Port Group:

- Pointing Port Table
- Keyboard Port Table
- Processor Port Table
- Memory Device Port Table
- Monitor Port Table
- Small Computer System Interface (SCSI) Port Table
- Parallel Port Table
- Serial Port Table
- Universal Serial Bus (USB) Port Table

#### Pointing Port Table

<b>Name</b>	pointingPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10
<b>Description</b>	Defines the Pointing Port Table.
<b>Syntax</b>	IntegerPointingPortTableEntry
<b>Access</b>	Not accessible

### Pointing Port Table Entry

<b>Name</b>	pointingPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.1
<b>Description</b>	Defines the Pointing Port Table entry.
<b>Syntax</b>	PointingPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	pointingPortchassisIndex, pointingPortIndex

### Pointing Port Chassis Index

<b>Name</b>	pointingPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Pointing Port Index

<b>Name</b>	pointingPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.1.2
<b>Description</b>	Defines the index of the pointing ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Pointing Port State Capabilities

<b>Name</b>	pointingPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.3
<b>Description</b>	Defines the capabilities of the pointing port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Pointing Port State Settings

<b>Name</b>	pointingPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.4
<b>Description</b>	Defines the state and settings of the pointing port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Pointing Port Status

<b>Name</b>	pointingPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.5
<b>Description</b>	Defines the status of the pointing port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Pointing Port Security State

<b>Name</b>	pointingPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.6
<b>Description</b>	Defines the security settings of the pointing port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

### Pointing Port Connector Type

<b>Name</b>	pointingPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.7
<b>Description</b>	Defines the connector type of the pointing port.
<b>Syntax</b>	DellPointingPortConnectorType (See Table 12-1.)
<b>Access</b>	Read-only

## Pointing Port Name

<b>Name</b>	pointingPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.8
<b>Description</b>	Defines the name of the pointing port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Pointing Port BIOS Connector Type

<b>Name</b>	pointingPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.10.9
<b>Description</b>	Defines the basic input/output system (BIOS) connector type of the pointing port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

## Keyboard Port Table

<b>Name</b>	keyboardPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20
<b>Description</b>	Defines the Keyboard Port Table.
<b>Syntax</b>	IntegerKeyboardPortTableEntry
<b>Access</b>	Not accessible

## Keyboard Port Table Entry

<b>Name</b>	keyboardPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1
<b>Description</b>	Defines the Keyboard Port Table entry.
<b>Syntax</b>	KeyboardPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	keyboardPortchassisIndex, keyboardPortIndex

### Keyboard Port Chassis Index

<b>Name</b>	keyboardPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Keyboard Port Index

<b>Name</b>	keyboardPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.2
<b>Description</b>	Defines the index of the keyboard ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Keyboard Port State Capabilities

<b>Name</b>	keyboardPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.3
<b>Description</b>	Defines the capabilities of the keyboard port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Keyboard Port State Settings

<b>Name</b>	keyboardPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.4
<b>Description</b>	Defines the state and settings of the keyboard port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### Keyboard Port Status

<b>Name</b>	keyboardPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.5
<b>Description</b>	Defines the status of the keyboard port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Keyboard Port Security State

<b>Name</b>	keyboardPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.6
<b>Description</b>	Defines the security settings of the keyboard port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

### Keyboard Port Connector Type

<b>Name</b>	keyboardPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.7
<b>Description</b>	Defines the connector type of the keyboard port.
<b>Syntax</b>	DellKeyboardPortConnectorType (See Table 12-2.)
<b>Access</b>	Read-only

### Keyboard Port Name

<b>Name</b>	keyboardPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.8
<b>Description</b>	Defines the name of the keyboard port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only



## Keyboard Port BIOS Connector Type

<b>Name</b>	keyboardPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.20.1.9
<b>Description</b>	Defines the BIOS connector type of the keyboard port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

## Processor Port Table

<b>Name</b>	processorPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30
<b>Description</b>	Defines the Processor Port Table.
<b>Syntax</b>	IntegerProcessorPortTableEntry
<b>Access</b>	Not accessible

## Processor Port Table Entry

<b>Name</b>	processorPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1
<b>Description</b>	Defines the Processor Port Table entry.
<b>Syntax</b>	ProcessorPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	processorPortchassisIndex, processorPortIndex

## Processor Port Chassis Index

<b>Name</b>	processorPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Processor Port Index

<b>Name</b>	processorPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.2
<b>Description</b>	Defines the index of the processor ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Processor Port State Capabilities

<b>Name</b>	processorPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.3
<b>Description</b>	Defines the capabilities of the processor port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Processor Port State Settings

<b>Name</b>	processorPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.4
<b>Description</b>	Defines the state and settings of the processor port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## Processor Port Status

<b>Name</b>	processorPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.5
<b>Description</b>	Defines the status of the processor port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Processor Port Security State

<b>Name</b>	processorPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.6
<b>Description</b>	Defines the security settings of the processor port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

### Processor Port Connector Type

<b>Name</b>	processorPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.7
<b>Description</b>	Defines the connector type of the processor port.
<b>Syntax</b>	DellProcessorPortConnectorType (See Table 12-3.)
<b>Access</b>	Read-only

### Processor Port Name

<b>Name</b>	processorPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.8
<b>Description</b>	Defines name of the processor port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Processor Port BIOS Connector Type

<b>Name</b>	processorPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.30.1.9
<b>Description</b>	Defines the BIOS connector type of the processor port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

## Memory Device Port Table

<b>Name</b>	memoryDevicePortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40
<b>Description</b>	Defines the Memory Device Port Table.
<b>Syntax</b>	IntegerMemoryDevicePortTableEntry
<b>Access</b>	Not accessible

## Memory Device Port Table Entry

<b>Name</b>	memoryDevicePortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1
<b>Description</b>	Defines the Memory Device Port Table entry.
<b>Syntax</b>	MemoryDevicePortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	memoryDevicePortchassisIndex, memoryDevicePortIndex

## Memory Device Port Chassis Index

<b>Name</b>	memoryDevicePortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Memory Device Port Index

<b>Name</b>	memoryDevicePortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.2
<b>Description</b>	Defines the index of the memory device port in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Memory Device Port State Capabilities

<b>Name</b>	memoryDevicePortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.3
<b>Description</b>	Defines the capabilities of the memory device port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Memory Device Port State Settings

<b>Name</b>	memoryDevicePortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.4
<b>Description</b>	Defines the state and settings of the memory device port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Memory Device Port Status

<b>Name</b>	memoryDevicePortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.5
<b>Description</b>	Defines the status of the memory device port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Memory Device Port Security State

<b>Name</b>	memoryDevicePortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.6
<b>Description</b>	Defines the security settings of the memory device port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

### Memory Device Port Connector Type

<b>Name</b>	memoryDevicePortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.7
<b>Description</b>	Defines the connector type of the memory device port.
<b>Syntax</b>	DellMemoryDevicePortConnectorType (See Table 12-4.)
<b>Access</b>	Read-only

### Memory Device Port Name

<b>Name</b>	memoryDevicePortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.8
<b>Description</b>	Defines the name of the memory device port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Memory Device Port BIOS Connector Type

<b>Name</b>	memoryDevicePortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.9
<b>Description</b>	Defines the BIOS connector type of the memory device port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

### Memory Device Port Physical Memory Array Index Reference

<b>Name</b>	memoryDevicePortPhysicalMemoryArrayIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.10
<b>Description</b>	Defines the index to the associated physical memory array.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## Memory Device Port Physical Memory Card Index Reference

<b>Name</b>	memoryDevicePortPhysicalMemoryCardIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.40.1.11
<b>Description</b>	Defines the index (one based) of the Physical Memory Card Table entry for the physical memory card with the same chassis index that this memory device port is associated with (if any).
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## Monitor Port Table

<b>Name</b>	monitorPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50
<b>Description</b>	Defines the Monitor Port Table.
<b>Syntax</b>	IntegerMonitorPortTableEntry
<b>Access</b>	Not accessible

## Monitor Port Table Entry

<b>Name</b>	monitorPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1
<b>Description</b>	Defines the Monitor Port Table entry.
<b>Syntax</b>	MonitorPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	monitorPortchassisIndex, monitorPortIndex

## Monitor Port Chassis Index

<b>Name</b>	monitorPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Monitor Port Index

<b>Name</b>	monitorPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.2
<b>Description</b>	Defines the index of the monitor ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Monitor Port State Capabilities

<b>Name</b>	monitorPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.3
<b>Description</b>	Defines the capabilities of the monitor port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Monitor Port State Settings

<b>Name</b>	monitorPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.4
<b>Description</b>	Defines the state of the monitor port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## Monitor Port Status

<b>Name</b>	monitorPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.5
<b>Description</b>	Defines the status of the monitor port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only



### Monitor Port Security State

<b>Name</b>	monitorPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.6
<b>Description</b>	Defines the security settings of the monitor port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

### Monitor Port Connector Type

<b>Name</b>	monitorPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.7
<b>Description</b>	Defines the connector type of the monitor port.
<b>Syntax</b>	DellMonitorPortConnectorTypes (See Table 12-5.)
<b>Access</b>	Read-only

### Monitor Port Name

<b>Name</b>	monitorPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.8
<b>Description</b>	Defines the name of the monitor port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Monitor Port BIOS Connector Type

<b>Name</b>	monitorPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.50.1.9
<b>Description</b>	Defines the name of the BIOS connector type of the monitor port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

## Small Computer System Interface (SCSI) Port Table

<b>Name</b>	sCSIPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60
<b>Description</b>	Defines the SCSI Port Table.
<b>Syntax</b>	IntegerSCSIPortTableEntry
<b>Access</b>	Not accessible

### SCSI Port Table Entry

<b>Name</b>	sCSIPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1
<b>Description</b>	Defines the SCSI Port Table entry.
<b>Syntax</b>	SCSIPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	sCSIPortchassisIndex, sCSIPortIndex

### SCSI Port Chassis Index

<b>Name</b>	sCSIPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### SCSI Port Index

<b>Name</b>	sCSIPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.2
<b>Description</b>	Defines the index of the SCSI ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### SCSI Port State Capabilities

<b>Name</b>	sCSIPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.3
<b>Description</b>	Defines the capabilities of the SCSI port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### SCSI Port State Settings

<b>Name</b>	DellStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.4
<b>Description</b>	Defines the state and settings of the SCSI port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-write

### SCSI Port Status

<b>Name</b>	sCSIPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.5
<b>Description</b>	Defines the status of the SCSI port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### SCSI Port Security State

<b>Name</b>	sCSIPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.6
<b>Description</b>	Defines the security settings of the SCSI port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

### SCSI Port Connector Type

<b>Name</b>	sCSIPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.7
<b>Description</b>	Defines the connector type of the SCSI port.
<b>Syntax</b>	DellSCSIPortConnectorType (See Table 12-6.)
<b>Access</b>	Read-only

### SCSI Port Name

<b>Name</b>	sCSIPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.8
<b>Description</b>	Defines the name of the SCSI port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### SCSI Port BIOS Connector Type

<b>Name</b>	sCSIPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.60.1.9
<b>Description</b>	Defines the BIOS connector type of the SCSI port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

### Parallel Port Table

<b>Name</b>	parallelPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70
<b>Description</b>	Defines the Parallel Port Table.
<b>Syntax</b>	IntegerParallelPortTableEntry
<b>Access</b>	Not accessible

### Parallel Port Table Entry

<b>Name</b>	parallelPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1
<b>Description</b>	Defines the Parallel Port Table entry.
<b>Syntax</b>	ParallelPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	parallelPortchassisIndex, parallelPortIndex

### Parallel Port Chassis Index

<b>Name</b>	parallelPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Parallel Port Index

<b>Name</b>	parallelPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.2
<b>Description</b>	Defines the index of the parallel ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Parallel Port State Capabilities

<b>Name</b>	parallelPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.3
<b>Description</b>	Defines the capabilities of the parallel port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Parallel Port State Settings

<b>Name</b>	parallelPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.4
<b>Description</b>	Defines the state and settings of the parallel port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Parallel Port Status

<b>Name</b>	parallelPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.5
<b>Description</b>	Defines the status of the parallel port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Parallel Port Security State

<b>Name</b>	DellPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.6
<b>Description</b>	Defines the security state of the parallel port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Parallel Port Connector Type

<b>Name</b>	parallelPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.7
<b>Description</b>	Defines the connector type of the parallel port.
<b>Syntax</b>	DellParallelPortConnectorType
<b>Access</b>	Read-only

## Parallel Port Name

<b>Name</b>	parallelPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.8
<b>Description</b>	Defines the name of the parallel port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Parallel Port Connector Pin Out

<b>Name</b>	parallelPortConnectorPinOut
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.9
<b>Description</b>	Defines the pinout of the parallel port.
<b>Syntax</b>	DellParallelPortConnectorPinout
<b>Access</b>	Read-only

## Parallel Port Capabilities Unique

<b>Name</b>	parallelPortCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.10
<b>Description</b>	Defines the capabilities of the parallel port.
<b>Syntax</b>	DellParallelPortConnectorPinout
<b>Access</b>	Read-only

## Parallel Port Base I/O Address

<b>Name</b>	parallelPortBaseIOAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.11
<b>Description</b>	Defines the Base Input/Output (I/O) address of the parallel port.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

## Parallel Port IRQ Level

<b>Name</b>	<code>parallelPortIRQLevel</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.12
<b>Description</b>	Defines the Interrupt Request Level (IRQ) of the parallel port.
<b>Syntax</b>	<code>DellUnsigned8BitRange</code>
<b>Access</b>	Read-only

## Parallel Port DMA Support

<b>Name</b>	<code>parallelPortDMASupport</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.70.1.13
<b>Description</b>	Defines if direct memory access (DMA) is supported by the parallel port.
<b>Syntax</b>	<code>DellBoolean</code>
<b>Access</b>	Read-only

## Serial Port Table

<b>Name</b>	<code>serialPortTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80
<b>Description</b>	Defines the Serial Port Table.
<b>Syntax</b>	<code>IntegerSerialPortTableEntry</code>
<b>Access</b>	Not accessible

## Serial Port Table Entry

<b>Name</b>	<code>serialPortTableEntry</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1
<b>Description</b>	Defines the Serial Port Table entry.
<b>Syntax</b>	<code>SerialPortTableEntry</code>
<b>Access</b>	Not accessible



## Serial Port Chassis Index

<b>Name</b>	<code>serialPortchassisIndex</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Serial Port Index

<b>Name</b>	<code>serialPortIndex</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.2
<b>Description</b>	Defines the index of the serial ports in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Serial Port State Capabilities

<b>Name</b>	<code>serialPortStateCapabilities</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.3
<b>Description</b>	Defines the capabilities of the serial port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Serial Port State Settings

<b>Name</b>	<code>serialPortStateSettings</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.4
<b>Description</b>	Defines the state and settings of the serial port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Serial Port Status

<b>Name</b>	<code>serialPortStatus</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.5
<b>Description</b>	Defines the status of the serial port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Serial Port Security State

<b>Name</b>	<code>serialPortSecurityState</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.6
<b>Description</b>	Defines the security settings of the serial port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

### Serial Port Connector Type

<b>Name</b>	<code>serialPortConnectorType</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.7
<b>Description</b>	Defines connector type of the serial port.
<b>Syntax</b>	DellSerialPortConnectorType
<b>Access</b>	Read-only

### Serial Port Name

<b>Name</b>	<code>serialPortName</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.8
<b>Description</b>	Defines the name of the serial port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Serial Port Maximum Speed

<b>Name</b>	<code>serialPortMaximumSpeed</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.9
<b>Description</b>	Defines the maximum speed the serial interface can support in bits per second (bps).
<b>Syntax</b>	<code>DellUnsigned32BitRange</code>
<b>Access</b>	Read-only

### Serial Port Capabilities Unique

<b>Name</b>	<code>serialPortCapabilitiesUnique</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.10
<b>Description</b>	Defines additional capabilities of the serial port.
<b>Syntax</b>	<code>DellSerialPortCapabilitiesUnique</code>
<b>Access</b>	Read-only

### Serial Port Base I/O Address

<b>Name</b>	<code>serialPortBaseIOAddress</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.11
<b>Description</b>	Defines the base I/O address of the serial port.
<b>Syntax</b>	<code>DellUnsigned64BitRange</code>
<b>Access</b>	Read-only

### Serial Port IRQ Level

<b>Name</b>	<code>serialPortIRQLevel</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.80.1.12
<b>Description</b>	Defines the IRQ of the serial port.
<b>Syntax</b>	<code>DellUnsigned8BitRange</code>
<b>Access</b>	Read-only

## Universal Serial Bus (USB) Port Table

<b>Name</b>	uSBPortTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90
<b>Description</b>	Defines the USB Port Table.
<b>Syntax</b>	IntegerUSBPortTableEntry
<b>Access</b>	Not accessible

## USB Port Table Entry

<b>Name</b>	uSBPortTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1
<b>Description</b>	Defines the USB Port Table entry.
<b>Syntax</b>	USBPortTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	pointingPortchassisIndex, pointingPortIndex

## USB Port Chassis Index

<b>Name</b>	uSBPortchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## USB Port Index

<b>Name</b>	uSBPortIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.2
<b>Description</b>	Defines the index of the USB ports in this chassis
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## USB Port State Capabilities

<b>Name</b>	uSBPortStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.3
<b>Description</b>	Defines the capabilities of the USB port.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## USB Port State Settings

<b>Name</b>	uSBPortStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.4
<b>Description</b>	Defines the state and settings of the USB port.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## USB Port Status

<b>Name</b>	uSBPortStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.5
<b>Description</b>	Defines the state of the USB port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## USB Port Security State

<b>Name</b>	uSBPortSecurityState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.6
<b>Description</b>	Defines the security settings of the USB port.
<b>Syntax</b>	DellPortSecurityState
<b>Access</b>	Read-only

### USB Port Connector Type

<b>Name</b>	uSBPortConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.7
<b>Description</b>	Defines the connector type of the USB port.
<b>Syntax</b>	DellUSBPortConnectorType
<b>Access</b>	Read-only

### USB Port Name

<b>Name</b>	uSBPortName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.8
<b>Description</b>	Defines the name of the USB port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### USB Port BIOS Connector Type

<b>Name</b>	uSBPortBIOSConnectorType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1000.90.1.9
<b>Description</b>	Defines the BIOS connector type of the USB port.
<b>Syntax</b>	DellGenericPortConnectorType
<b>Access</b>	Read-only

## Port Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 12-1. Pointing Port Connector Type**

---

<b>Variable Name:</b> DellPointingPortConnectorType	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
connectorPortTypeIsOther(1)	The pointing port connector type is not one of the following:
connectorPortTypeIsUnknown(2)	The pointing port connector type is unknown.
connectorPortTypeIsSerial(3)	The pointing port connector type is serial.
connectorPortTypeIsPS2(4)	The pointing port connector type is a Personal System/2 (PS/2).
connectorPortTypeIsInfrared(5)	The pointing port connector type is infrared.
connectorPortTypeIsHPHIL(6)	The pointing port connector type is HP-HIL.
connectorPortTypeIsBusMouse(7)	The pointing port connector type is a bus mouse.
connectorPortTypeIsADB(8)	The pointing port connector type is ADB.
connectorPortTypeIsDB9(9)	The pointing port connector type is nine-pin DB-9.
connectorPortTypeIsMicroDIN(10)	The pointing port connector type is micro Deutsche Industrie Norm (DIN).
connectorPortTypeIsAccessBusUSB(11)	The pointing port connector type is Access Bus USB.
connectorPortTypeIsPC98(12)	The port connector type is a PC-98.

---

**Table 12-2. Keyboard Port Connector Types**

---

**Variable Name:** DellKeyboardPortConnectorType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
connectorPortTypeIsOther(1)	The keyboard port connector type is not one of the following:
connectorPortTypeIsUnknown(2)	The keyboard port connector type is unknown.
connectorPortTypeIsMiniDIN(3)	The keyboard port connector type is a mini DIN.
connectorPortTypeIsMicroDIN(4)	The keyboard port connector type is a MicroDIN.
connectorPortTypeIsPS2(5)	The keyboard port connector type is PS/2.
connectorPortTypeIsInfrared(6)	The keyboard port connector type is infrared.
connectorPortTypeIsHPHIL(7)	The keyboard port connector type is HP-HIL.
connectorPortTypeIsDB9(8)	The keyboard port connector type is DB-9.
connectorPortTypeIsAccessBusUSB(9)	The keyboard port connector type is bus USB.
connectorPortTypeIsPC98(10)	The keyboard port connector type is PC-98.

---

**Table 12-3. Processor Port Connector Types**

---

**Variable Name:** DellProcessorPortConnectorType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
connectorPortTypeIsOther(1)	The processor port connector type is not one of the following:
connectorPortTypeIsUnknown(2)	The processor port connector type is unknown.
connectorPortTypeIsDaughterdBoard(3)	The processor port connector type is a daughter board.
connectorPortTypeIsZIFSocket(4)	The processor port connector type is a zero insertion force (ZIF) socket.
connectorPortTypeIsAPiggyBackBoard(5)	The processor port connector type is a replacement piggyback board.
connectorPortTypeIsNone(6)	There is no processor port connector; processor is soldered in place.
connectorPortTypeIsLIFSocket(7)	The processor port connector type is a low insertion force (LIF) socket.
connectorPortTypeIsSlot1(8)	The processor port connector type is a slot one.
connectorPortTypeIsSlot2(9)	The processor port connector type is a slot two.
connectorPortTypeIs370PinSocket(10)	The processor port connector type is a 370 pin socket.

---



**Table 12-4. Memory Device Port Connector Types**

---

**Variable Name:** DellMemoryDevicePortConnectorType

**Data Type:** Integer

<b>Possible Data Value</b>	<b>Meaning of Data Value</b>
connectorPortTypeIsOther(1)	The memory device port connector type is not one of the following:
connectorPortTypeIsUnknown(2)	The memory device port connector type is unknown.
connectorPortTypeIsSIMM(3)	The memory device port connector type is a single in-line memory module (SIMM).
connectorPortTypeIsSIP(4)	The memory device port connector type is a SIP.
connectorPortTypeIsAChip(5)	The memory device port connector type is a chip.
connectorPortTypeIsDIP(6)	The memory device port connector type is a dual in-line package (DIP).
connectorPortTypeIsZIP(7)	The memory device port connector type is a ZIP.
connectorPortTypeIsAProprietaryCard(8)	The memory device port connector type is a proprietary card.
connectorPortTypeIsDIMM(9)	The memory device port connector type is a dual in-line memory module (DIMM).
connectorPortTypeIsTSOP(10)	The memory device port connector type is a TSOP.
connectorPortTypeIsARowOfChips(11)	The memory device port connector type is a row of chips.
connectorPortTypeIsRIMM(12)	The memory device port connector type is a Rambus Inline Memory Module (RIMM).
connectorPortTypeIsSODIMM(13)	The memory device port connector type is a small outline, dual in-line memory module (SODIMM).
connectorPortTypeIsSRIMM(14)	The memory device port connector type is a SRIMM.

---

**Table 12-5. Monitor Port Connector Types**

---

**Variable Name:** DellMonitorPortConnectorType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
connectorPortTypeIsOther(1)	The monitor port connector type is not one of the following:
connectorPortTypeIsUnknown(2)	The monitor port connector type is unknown.
connectorPortTypeIsDB15PinMale(3)	The monitor port connector type is a male DB-15.
connectorPortTypeIsDB15PinFemale(4)	The monitor port connector type is a female DB-15.

---

**Table 12-6. SCSI Port Connector Types**

---

**Variable Name:** DellSCSIPortConnectorType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
connectorPortTypeIsOther(1)	The SCSI port connector type is not one of the following:
connectorPortTypeIsUnknown(2)	The SCSI port connector type is unknown.
connectorPortTypeIsDIN25pin(3)	The SCSI port connector type is a DIN 25-pin.
connectorPortTypeIsDIN50pin(4)	The SCSI port connector type is a DIN 50-pin.
connectorPortTypeIsDIN68pin(5)	The SCSI port connector type is a DIN 68-pin.

---

## Device Group

The Device Group provides information about different types of pointing, keyboard, processor, cache, memory, and peripheral component interconnect (PCI) devices. Variables in this group cover information about type, settings, configuration, manufacturer, address or location, and if applicable, the speed of the device.

### Device Tables

The following management information base (MIB) tables define objects in the Device Group:

- Pointing Device Table
- Keyboard Device Table
- Processor Device Table
- Processor Device Status Table
- Cache Device Table
- Memory Device Table
- Memory Device Mapped Address Table
- Generic Device Table
- PCI Device Table
- PCI Device Configuration Space Table

### Pointing Device Table

<b>Name</b>	pointingDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10
<b>Description</b>	Defines the Pointing Device Table. This group of objects references the Pointing Port Index (See Section 12).
<b>Syntax</b>	SEQUENCE OF PointingDeviceTableEntry
<b>Access</b>	Not accessible

### Pointing Device Table Entry

<b>Name</b>	pointingDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1
<b>Description</b>	Defines the Pointing Device Table entry.
<b>Syntax</b>	PointingDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	pointingDevicechassisIndex, pointingDeviceIndex

### Pointing Device Chassis Index

<b>Name</b>	pointingDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Pointing Device Index

<b>Name</b>	pointingDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.2
<b>Description</b>	Defines the index of the pointing device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Pointing Device State Capabilities

<b>Name</b>	pointingDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.3
<b>Description</b>	Defines the capabilities of the pointing device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Pointing Device State Settings

<b>Name</b>	pointingDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.4
<b>Description</b>	Defines the state of the pointing device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Pointing Device Status

<b>Name</b>	pointingDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.5
<b>Description</b>	Defines the status of the pointing device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Pointing Port Index Reference

<b>Name</b>	pointingPortIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.6
<b>Description</b>	Defines the index to the pointing port in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Pointing Device Type

<b>Name</b>	pointingDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.7
<b>Description</b>	Defines the type of the pointing device.
<b>Syntax</b>	DellPointingDeviceType (See Table 13-1.)
<b>Access</b>	Read-only

## Pointing Device Number of Buttons

<b>Name</b>	pointingDeviceNumberOfButtons
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.10.1.8
<b>Description</b>	Defines the number of buttons on the pointing device.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

## Keyboard Device Table

<b>Name</b>	keyboardDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20
<b>Description</b>	Defines the Keyboard Device Table. This table references the Keyboard Port Index (See Section 12).
<b>Syntax</b>	SEQUENCE OF KeyboardDeviceTableEntry
<b>Access</b>	Not accessible

## Keyboard Device Table Entry

<b>Name</b>	keyboardDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1
<b>Description</b>	Defines the Keyboard Device Table entry.
<b>Syntax</b>	KeyboardDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	keyboardDevicechassisIndex, keyboardDeviceIndex

## Keyboard Device Chassis Index

<b>Name</b>	keyboardDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Keyboard Device Index

<b>Name</b>	keyboardDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.2
<b>Description</b>	Defines the index of the keyboard device for this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Keyboard Device State Capabilities

<b>Name</b>	keyboardDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.3
<b>Description</b>	Defines the capabilities of the keyboard device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Keyboard Device State Settings

<b>Name</b>	keyboardDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.4
<b>Description</b>	Defines the state of the keyboard device.
<b>Syntax</b>	DellStatesSettings
<b>Access</b>	Read-write

## Keyboard Device Status

<b>Name</b>	keyboardDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.5
<b>Description</b>	Defines the status of the keyboard device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Keyboard Port Index Reference

<b>Name</b>	keyboardPortIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.6
<b>Description</b>	Defines the index to the associated the keyboard port in this chassis.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Keyboard Device Type Name

<b>Name</b>	keyboardDeviceTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.7
<b>Description</b>	Defines the name of the keyboard type.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Keyboard Device Layout Name

<b>Name</b>	keyboardDeviceLayoutName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.20.1.8
<b>Description</b>	Defines the name of the keyboard layout.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Processor Device Table

<b>Name</b>	processorDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30
<b>Description</b>	Defines the Processor Device Table.
<b>Syntax</b>	SEQUENCE OF ProcessorDeviceTableEntry
<b>Access</b>	Not accessible



### Processor Device Table Entry

<b>Name</b>	processorDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1
<b>Description</b>	Defines the Processor Device Table entry.
<b>Syntax</b>	ProcessorDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	processorDevicechassisIndex, processorDeviceIndex

### Processor Device Chassis Index

<b>Name</b>	processorDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Processor Device Index

<b>Name</b>	processorDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.2
<b>Description</b>	Defines the index of the processor device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Processor Device State Capabilities

<b>Name</b>	processorDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.3
<b>Description</b>	Defines the capabilities of the processor device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Processor Device State Settings

<b>Name</b>	processorDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.4
<b>Description</b>	Defines the state of the processor device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Processor Device Status

<b>Name</b>	processorDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.5
<b>Description</b>	Defines the status of the processor device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Processor Port Index Reference

<b>Name</b>	processorPortIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.6
<b>Description</b>	Defines the index to the associated processor port in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Processor Device Type

<b>Name</b>	processorDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.7
<b>Description</b>	Defines the type of processor device.
<b>Syntax</b>	DellProcessorDeviceType (See Table 13-4)
<b>Access</b>	Read-only

### Processor Device Manufacturer Name

<b>Name</b>	processorDeviceManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.8
<b>Description</b>	Defines the name of manufacturer of the processor device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Processor Device Status State

<b>Name</b>	processorDeviceStatusState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.9
<b>Description</b>	Defines the status state of the processor device.
<b>Syntax</b>	DellProcessorDeviceStatusState (See Table 13-2.)
<b>Access</b>	Read-only

### Processor Device Family

<b>Name</b>	processorDeviceFamily
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.10
<b>Description</b>	Defines the family of the processor device.
<b>Syntax</b>	DellProcessorDeviceFamily (See Table 13-6.)
<b>Access</b>	Read-only

### Processor Device Maximum Speed

<b>Name</b>	processorDeviceMaximumSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.11
<b>Description</b>	Defines the maximum speed of the processor device in megahertz (MHz). A zero (0) indicates that the speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Processor Device Current Speed

<b>Name</b>	processorDeviceCurrentSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.12
<b>Description</b>	Defines the current speed of the processor device in MHz. A zero (0) indicates that the speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Processor Device External Clock Speed

<b>Name</b>	processorDeviceExternalClockSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.13
<b>Description</b>	Defines the speed of the external clock (the front-side bus speed) for the processor device in MHz. A zero (0) indicates that the speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Processor Device Voltage

<b>Name</b>	processorDeviceVoltage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.14
<b>Description</b>	Defines the voltage powering the processor device in millivolts. A zero (0) indicates the speed is unknown.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Processor Device Upgrade Information

<b>Name</b>	processorDeviceUpgradeInformation
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.15
<b>Description</b>	Defines the processor upgrade information for the processor device.
<b>Syntax</b>	DellProcessorUpgradeInformation (See Table 13-5.)
<b>Access</b>	Read-only

## Processor Device Version Name

<b>Name</b>	processorDeviceVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.30.1.16
<b>Description</b>	Defines the version name of the processor device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Processor Device Status Table

<b>Name</b>	processorDeviceStatusTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32
<b>Description</b>	Defines the Processor Device Status Table.
<b>Syntax</b>	SEQUENCE OF ProcessorDeviceStatusTableEntry
<b>Access</b>	Not accessible

## Processor Device Status Table Entry

<b>Name</b>	processorDeviceStatusTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1
<b>Description</b>	Defines the Processor Device Status Table Entry.
<b>Syntax</b>	ProcessorDeviceStatusTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	processorDeviceStatusChassisIndex, processorDeviceStatusIndex

## Processor Device Status Chassis Index

<b>Name</b>	processorDeviceStatusChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.1
<b>Description</b>	Defines the index (one based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Processor Device Status Index

<b>Name</b>	processorDeviceStatusIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.2
<b>Description</b>	Defines the index (one based) of the processor device status probe.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Processor Device Status State Capabilities

<b>Name</b>	processorDeviceStatusStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.3
<b>Description</b>	Defines the state capabilities of the processor device status probe.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Processor Device Status State Settings

<b>Name</b>	processorDeviceStatusStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.4
<b>Description</b>	Defines the state settings of the processor device status probe.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Processor Device Status Status

<b>Name</b>	processorDeviceStatusStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.5
<b>Description</b>	Defines the status of the processor device status probe. This status will be joined into the processorDeviceStatus attribute.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Processor Device Status Reading

<b>Name</b>	processorDeviceStatusReading
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.6
<b>Description</b>	Defines the reading of the processor device status probe.
<b>Syntax</b>	DellProcessorDeviceStatusReading
<b>Access</b>	Read-only

### Processor Device Status Location Name

<b>Name</b>	processorDeviceStatusLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.7
<b>Description</b>	Defines the location name of the processor device status probe.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Processor Device Status Port Index Reference

<b>Name</b>	processorDeviceStatusPortIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.32.1.8
<b>Description</b>	Defines the index (one based) of the associated processor port in the same chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Cache Device Table

<b>Name</b>	cacheDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40
<b>Description</b>	Defines the Cache Device Table.
<b>Syntax</b>	SEQUENCE OF CacheDeviceTableEntry
<b>Access</b>	Not accessible

### Cache Device Table Entry

<b>Name</b>	cacheDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1
<b>Description</b>	Defines the Cache Device Table entry.
<b>Syntax</b>	CacheDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	cacheDevicechassisIndex, cacheDeviceIndex

### Cache Device Chassis Index

<b>Name</b>	cacheDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Cache Device Index

<b>Name</b>	cacheDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.2
<b>Description</b>	Defines the index of the cache device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Cache Device State Capabilities

<b>Name</b>	cacheDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.3
<b>Description</b>	Defines the capabilities of the cache device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only



### Cache Device State Settings

<b>Name</b>	cacheDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.4
<b>Description</b>	Defines the state of the cache device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Cache Device Status

<b>Name</b>	cacheDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.5
<b>Description</b>	Defines the status of the cache device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Cache Device Processor Device Index Reference

<b>Name</b>	cacheDeviceprocessorDeviceIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.6
<b>Description</b>	Defines the index number of the processor device with which this cache device is associated.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Cache Device Type

<b>Name</b>	cacheDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.7
<b>Description</b>	Defines the type of cache device.
<b>Syntax</b>	DellCacheDeviceType (See Table 13-7.)
<b>Access</b>	Read-only

### Cache Device Location

<b>Name</b>	cacheDeviceLocation
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.8
<b>Description</b>	Defines the location of the cache device.
<b>Syntax</b>	DellCacheDeviceLocation (See Table 13-13.)
<b>Access</b>	Read-only

### Cache Device Status State

<b>Name</b>	cacheDeviceStatusState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.9
<b>Description</b>	Defines the status state of the cache device.
<b>Syntax</b>	DellCacheDeviceStatusState (See Table 13-10.)
<b>Access</b>	Read-only

### Cache Device External Socket Name

<b>Name</b>	cacheDeviceExternalSocketName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.10
<b>Description</b>	Defines the external socket name of the cache device, if the cache is socketed.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Cache Device Level

<b>Name</b>	cacheDeviceLevel
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.11
<b>Description</b>	Defines the level of the cache device.
<b>Syntax</b>	DellCacheDeviceLevel (See Table 13-8)
<b>Access</b>	Read-only

### Cache Device Maximum Size

<b>Name</b>	cacheDeviceMaximumSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.12
<b>Description</b>	Defines the maximum size of the cache device in kilobytes (KB). A zero (0) indicates that the size is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Cache Device Current Size

<b>Name</b>	cacheDeviceCurrentSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.13
<b>Description</b>	Defines the current size of the cache device in KB. A zero (0) indicates that the size is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Cache Device Speed

<b>Name</b>	cacheDeviceSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.14
<b>Description</b>	Defines the speed of the cache device in nanoseconds. A zero (0) indicates that the speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Cache Device Write Policy

<b>Name</b>	cacheDeviceWritePolicy
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.15
<b>Description</b>	Defines the write policy of the cache device.
<b>Syntax</b>	DellCacheDeviceWritePolicy (See Table 13-9.)
<b>Access</b>	Read-only

### Cache Device Is Socketed

<b>Name</b>	cacheDeviceIsSocketed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.16
<b>Description</b>	Defines if the cache device is socketed.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

### Cache Device Error Checking and Correction (ECC) Type

<b>Name</b>	cacheDeviceECCType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.17
<b>Description</b>	Defines the type of error correction in use by the cache device.
<b>Syntax</b>	DellCacheDeviceECCType (See Table 13-7.)
<b>Access</b>	Read-only

### Cache Device Associativity

<b>Name</b>	cacheDeviceAssociativity
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.18
<b>Description</b>	Defines the type of associativity in use by the cache device.
<b>Syntax</b>	DellCacheDeviceAssociativity (See Table 13-12.)
<b>Access</b>	Read-only

### Cache Device Supported Type

<b>Name</b>	cacheDeviceSupportedType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.19
<b>Description</b>	Defines the type of static random-access memory (SRAM) that the cache device can support.
<b>Syntax</b>	DellCacheDeviceSupportedType
<b>Access</b>	Read-only

## Cache Device Current Type

<b>Name</b>	cacheDeviceCurrentType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.40.1.20
<b>Description</b>	Defines the current type of SRAM for the cache device.
<b>Syntax</b>	DellCacheDeviceSRAMType (See Table 13-14.)
<b>Access</b>	Read-only

## Memory Device Table

<b>Name</b>	memoryDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50
<b>Description</b>	Defines the Memory Device Table.
<b>Syntax</b>	SEQUENCE OF MemoryDeviceTableEntry
<b>Access</b>	Not accessible

## Memory Device Table Entry

<b>Name</b>	memoryDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1
<b>Description</b>	Defines the Memory Device Table entry.
<b>Syntax</b>	MemoryDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	memoryDevicechassisIndex, memoryDeviceIndex

## Memory Device Chassis Index

<b>Name</b>	memoryDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Memory Device Index

<b>Name</b>	memoryDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.2
<b>Description</b>	Defines the index of the memory device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Memory Device State Capabilities

<b>Name</b>	memoryDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.3
<b>Description</b>	Defines the capabilities of the memory device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Memory Device State Settings

<b>Name</b>	memoryDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.4
<b>Description</b>	Defines the state of the memory device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## Memory Device Status

<b>Name</b>	memoryDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.5
<b>Description</b>	Defines the status of the memory device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Memory Device Memory Port Index Reference

<b>Name</b>	memoryDeviceMemoryPortIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.6
<b>Description</b>	Defines the index of the memory port of which this memory device is part.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only


## Memory Device Type

<b>Name</b>	memoryDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.7
<b>Description</b>	Defines the type of the memory device.
<b>Syntax</b>	DellMemoryDeviceType (See Table 13-16.)
<b>Access</b>	Read-only

## Memory Device Location Name

<b>Name</b>	memoryDeviceLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.8
<b>Description</b>	Defines the location name of the memory device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

## Memory Device Error Count

 **NOTE:** Memory Device Failure Modes has now replaced this attribute. Memory Device Error Count should no longer be used. If you use the Memory Device Error Count attribute, the value returned is always zero, and using the attribute will have no effect.

<b>Name</b>	memoryDeviceErrorCount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.9
<b>Description</b>	Defines the total number of Error Checking and Correction (ECC) errors detected by the memory device. Writing a 0 (zero) to this variable will reset the devices error counts.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-write

### Memory Device Bank Location Name

<b>Name</b>	memoryDeviceBankLocationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.10
<b>Description</b>	Defines the bank location name of the memory device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Memory Device Type Details

<b>Name</b>	memoryDeviceTypeDetails
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.11
<b>Description</b>	Defines the detailed type of the memory device.
<b>Syntax</b>	DellMemoryDeviceTypeDetails (See Table 13-17.)
<b>Access</b>	Read-only

### Memory Device Form Factor

<b>Name</b>	memoryDeviceFormFactor
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.12
<b>Description</b>	Defines the form factor of the memory device.
<b>Syntax</b>	DellMemoryDeviceFormFactor (See Table 13-15.)
<b>Access</b>	Read-only

### Memory Device Set

<b>Name</b>	memoryDeviceSet
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.13
<b>Description</b>	Defines if the memory device is a part of a set. A zero (0) indicates that this device is not part of a set.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only



### Memory Device Size

<b>Name</b>	memoryDeviceSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.14
<b>Description</b>	Defines the size in KB of the memory device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Memory Device Speed

<b>Name</b>	memoryDeviceSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.15
<b>Description</b>	Defines the speed in nanoseconds of the memory device. A zero (0) indicates that the speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Memory Device Total Bus Width

<b>Name</b>	memoryDeviceTotalBusWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.16
<b>Description</b>	Defines the total number of bits, including ECC, used by the memory device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Memory Device Total Data Bus Width

<b>Name</b>	memoryDeviceTotalDataBusWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.17
<b>Description</b>	Defines the total number of data bits used by the memory device.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Memory Device Correctable Memory Event Count



**NOTE:** Memory Device Failure Modes has now replaced this attribute. Memory Device Correctable Memory Event Count should no longer be used. If you use the Memory Device Correctable Memory Event Count attribute, the value returned is always zero, and using the attribute will have no effect.

<b>Name</b>	memoryDeviceSingleBitErrorCount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.18
<b>Description</b>	Defines the total number of Correctable Memory Events detected by the memory device.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Memory Device Uncorrectable Memory Event Count



**NOTE:** Memory Device Failure Modes has now replaced this attribute. Memory Device Uncorrectable Memory Event Count should no longer be used. If you use the Memory Device Uncorrectable Memory Event Count attribute, the value returned is always zero, and using the attribute will have no effect.

<b>Name</b>	memoryDeviceMultiBitErrorCount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.19
<b>Description</b>	Defines the total number of Uncorrectable Memory Events detected by the memory device.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Memory Device Failure Modes

<b>Name</b>	memoryDeviceFailureModes
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.50.1.20
<b>Description</b>	Defines the failure modes of the memory device when the memoryDeviceStatus attribute is not OK. It is a bit field that can be used to report more than one type of failure mode by using a combination of the defined bit masks.
<b>Syntax</b>	DellMemoryDeviceFailureModes
<b>Access</b>	Read-only

## Memory Device Mapped Address Table

<b>Name</b>	memoryDeviceMappedAddressTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60
<b>Description</b>	Defines the Memory Device Mapped Address Table.
<b>Syntax</b>	SEQUENCE OF MemoryDeviceMappedAddressTableEntry
<b>Access</b>	Not accessible

## Memory Device Mapped Address Table Entry

<b>Name</b>	memoryDeviceMappedAddressTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1
<b>Description</b>	Defines the Memory Device Mapped Address Table entry.
<b>Syntax</b>	MemoryDeviceMappedAddressTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	memoryDeviceMappedAddresschassisIndex, memoryDeviceMappedAddressIndex

## Memory Device Mapped Address Chassis Index

<b>Name</b>	memoryDeviceMappedAddresschassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Memory Device Mapped Address Index

<b>Name</b>	memoryDeviceMappedAddressIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.2
<b>Description</b>	Defines the index (one-based) of the memory device mapped address in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Memory Device Mapped Address State Capabilities

<b>Name</b>	memoryDeviceMappedAddressStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.3
<b>Description</b>	Defines the capabilities of the memory device mapped address.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Memory Device Mapped Address State Settings

<b>Name</b>	memoryDeviceMappedAddressStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.4
<b>Description</b>	Defines the state of the memory device mapped address.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Memory Device Mapped Address Status

<b>Name</b>	memoryDeviceMappedAddressStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.5
<b>Description</b>	Defines the status of the memory device mapped address.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Memory Device Index Reference

<b>Name</b>	memoryDeviceIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.6
<b>Description</b>	Defines the index of the memory device(s) associated with this memory device mapped address.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Memory Device Mapped Address Row Position

<b>Name</b>	memoryDeviceMappedAddressRowPosition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.7
<b>Description</b>	Defines the position of the referenced memory in a row of the memory device mapped address.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Memory Device Mapped Address Interleave Position

<b>Name</b>	memoryDeviceMappedAddressInterleavePosition
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.8
<b>Description</b>	Defines the position of the referenced memory in an interleave of the memory device mapped address.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Memory Device Mapped Address Interleave Depth

<b>Name</b>	memoryDeviceMappedAddressInterleaveDepth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.9
<b>Description</b>	Defines the maximum number of consecutive rows from the referenced memory device that are accessed in a single interleaved transfer in the memory device mapped address.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Memory Device Mapped Address Starting Address

<b>Name</b>	memoryDeviceMappedAddressStartingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.10
<b>Description</b>	Defines the physical starting address in KB of the memory device mapped address.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

### Memory Device Mapped Address Ending Address

<b>Name</b>	memoryDeviceMappedAddressEndingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.60.1.11
<b>Description</b>	Defines the physical ending address in KB of the memory device mapped address.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

### Generic Device Table

<b>Name</b>	genericDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70
<b>Description</b>	Defines the Generic Device Table.
<b>Syntax</b>	SEQUENCE OF GenericDeviceTableEntry
<b>Access</b>	Not accessible

### Generic Device Table Entry

<b>Name</b>	genericDeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1
<b>Description</b>	Defines the Generic Device Table entry.
<b>Syntax</b>	GenericDeviceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	genericDevicechassisIndex, genericDeviceIndex

### Generic Device Chassis Index

<b>Name</b>	genericDevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Generic Device Index

<b>Name</b>	genericDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.2
<b>Description</b>	Defines the index of the generic device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Generic Device State Capabilities

<b>Name</b>	genericDeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.3
<b>Description</b>	Defines the capabilities of the generic device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Generic Device State Settings

<b>Name</b>	genericDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.4
<b>Description</b>	Defines the state of the generic device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## Generic Device Status

<b>Name</b>	genericDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.5
<b>Description</b>	Defines the status of the generic device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Generic Device System Slot Index Reference

<b>Name</b>	genericDeviceSystemSlotIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.6
<b>Description</b>	Defines the index of the system slot into which this generic device is plugged.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Generic Device Type

<b>Name</b>	genericDeviceType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.7
<b>Description</b>	Defines the type of the generic device.
<b>Syntax</b>	DellGenericDeviceType (See Table 13-18.)
<b>Access</b>	Read-only

## Generic Device Name

<b>Name</b>	genericDeviceName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.70.1.8
<b>Description</b>	Defines the name of the generic device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## PCI Device Table

<b>Name</b>	pCIDeviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80
<b>Description</b>	Defines the PCI Device Detail Table.
<b>Syntax</b>	SEQUENCE OF PCIDeviceTableEntry
<b>Access</b>	Not accessible



### PCI Device Table Entry

<b>Name</b>	pCIODeviceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1
<b>Description</b>	Defines the PCI Device Table entry.
<b>Syntax</b>	Not accessible
<b>Access</b>	PCIODeviceTableEntry
<b>Index</b>	pCIODevicechassisIndex, pCIODeviceIndex

### PCI Device Chassis Index

<b>Name</b>	pCIODevicechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	Read-only
<b>Access</b>	DellObjectRange

### PCI Device Index

<b>Name</b>	pCIODeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.2
<b>Description</b>	Defines the index (one-based) of the PCI device in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### PCI Device State Capabilities

<b>Name</b>	pCIODeviceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.3
<b>Description</b>	Defines the capabilities of the PCI device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### PCI Device State Settings

<b>Name</b>	pCIDeviceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.4
<b>Description</b>	Defines the state of the PCI device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### PCI Device Status

<b>Name</b>	pCIDeviceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.5
<b>Description</b>	Defines the status of the PCI device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### PCI Device System Slot Index Reference

<b>Name</b>	pCIDeviceSystemSlotIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.6
<b>Description</b>	Defines the index number of the system slot that this PCI device is in.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### PCI Device Data Bus Width

<b>Name</b>	pCIDeviceDataBusWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.7
<b>Description</b>	Defines the bus width of the PCI device in this chassis.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### PCI Device Manufacturer Name

<b>Name</b>	pCIDeviceManufacturerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.8
<b>Description</b>	Defines the name of the PCI device manufacturer.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### PCI Device Description Name

<b>Name</b>	pCIDeviceDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.9
<b>Description</b>	Defines the descriptive name of the PCI device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### PCI Device Speed

<b>Name</b>	pCIDeviceSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.10
<b>Description</b>	Defines the bus speed in MHz of the PCI device in this chassis. A zero (0) indicates that the speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### PCI Device Adapter Fault

<b>Name</b>	pCIDeviceAdapterFault
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.80.1.11
<b>Description</b>	Defines whether the PCI device in this chassis has detected a fault.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

## PCI Device Configuration Space Table

<b>Name</b>	pCIDeviceConfigurationSpaceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82
<b>Description</b>	Defines the PCI Device Configuration Table.
<b>Syntax</b>	SEQUENCE OF PCIDeviceConfigurationSpaceTableEntry
<b>Access</b>	Not accessible

## PCI Device Configuration Space Table Entry

<b>Name</b>	pCIDeviceConfigurationSpaceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1
<b>Description</b>	Defines the PCI Device Configuration Table entry.
<b>Syntax</b>	PCIDeviceConfigurationSpaceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	pCIDeviceConfigurationSpacechassisIndex, pCIDeviceConfigurationSpaceIndex

## PCI Device Configuration Space Chassis Index

<b>Name</b>	pCIDeviceConfigurationSpacechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## PCI Device Configuration Space Index

<b>Name</b>	pCIDeviceConfigurationSpaceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.2
<b>Description</b>	Defines the index (one-based) of the PCI device configuration in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### PCI Device Configuration Space State Capabilities

<b>Name</b>	pCIDeviceConfigurationSpaceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.3
<b>Description</b>	Defines the capabilities of the PCI device configuration.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### PCI Device Configuration Space State Settings

<b>Name</b>	pCIDeviceConfigurationSpaceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.4
<b>Description</b>	Defines the state of the PCI device configuration.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### PCI Device Configuration Space Status

<b>Name</b>	pCIDeviceConfigurationSpaceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.5
<b>Description</b>	Defines the status of the PCI device configuration.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### PCI Device Index Reference

<b>Name</b>	pCIDeviceIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.6
<b>Description</b>	Defines the index number of PCI device that this configuration applies to.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### PCI Device Configuration Space Bus Number

<b>Name</b>	pCIDeviceConfigurationSpaceBusNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.7
<b>Description</b>	Defines the bus number of the PCI device configuration in this chassis.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### PCI Device Configuration Space Device Number

<b>Name</b>	pCIDeviceConfigurationSpaceDeviceNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.8
<b>Description</b>	Defines the device number of the PCI device in this chassis.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### PCI Device Configuration Space Function Number

<b>Name</b>	pCIDeviceConfigurationSpaceFunctionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.9
<b>Description</b>	Defines the function number of the PCI device in this chassis.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### PCI Device Configuration Space Header

<b>Name</b>	pCIDeviceConfigurationSpaceHeader
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1100.82.1.10
<b>Description</b>	Defines the common configuration space header of the PCI device.
<b>Syntax</b>	OCTET STRING (SIZE(0..1025))
<b>Access</b>	Read-only

## Device Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 13-1. Pointing Device Type**

---

**Variable Name:** DellPointingDeviceType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsOther(1)	Device type is not one of the following:
deviceTypeIsUnknown(2)	Device type is unknown.
deviceTypeIsAMouse(3)	Device type is a mouse.
deviceTypeIsATrackBar(4)	Device type is a track ball.
deviceTypeIsATrackBarPoint(5)	Device type is a track point.
deviceTypeIsAGlidePoint(6)	Device type is a glide point.
deviceTypeIsATouchPad(7)	Device type is a touch pad.

---

**Table 13-2. Processor Device Status State**

---

**Variable Name:** DellProcessorDeviceStatusState

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
other(1)	Processor device type is not one of the following:
unknown(2)	Device type is unknown.
enabled(3)	Device is enabled.
userDisabled(4)	Device is disabled by the user.
biosDisabled(5)	Device has its BIOS disabled.
idle(6)	Device is idle.

---

**Table 13-3. Processor Device Status Reading**

---

**Variable Name:** DellProcessorDeviceStatusReading

**Data Type:** Integer

**NOTE:** These values are bit masks, so combination values are possible.

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
internalError(1)	The processor experienced an internal error
thermalTrip(2)	The processor experienced a thermal trip
configurationError(32)	The processor experienced a configuration error
processorPresent(128)	The processor is present
processorDisabled(256)	The processor is disabled
terminatorPresent(512)	The terminator is Present
processorThrottled(1024)	The processor is throttled

---

**Table 13-4. Processor Device Type**

---

**Variable Name:** DellProcessorDeviceType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
deviceTypeIsOther(1)	The processor device type is not one of the following values:
deviceTypeIsUnknown(2)	The processor device type is unknown.
deviceTypeIsCPU(3)	The processor device type is a central processing unit.
deviceTypeIsMathProcessor(4)	The processor device type is a math processor.
deviceTypeIsDSP(5)	The processor device type is a digital signal processor.
deviceTypeIsAVideoProcessor(6)	The processor device is a video processor.

---



**Table 13-5. Processor Upgrade Information**

<b>Variable Name:</b> DellProcessorUpgradeInformation	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
processorUpgradeIsOther (1)	The upgrade device type is not one of the following:
processorUpgradeIsUnknown (2)	Upgrade device type is unknown.
processorUpgradeIsByDaughterBoard (3)	Upgrade device is on a daughter board.
processorUpgradeIsByZIFSocket (4)	Upgrade device is in a zero insertion force (ZIF) socket.
processorUpgradeIsByReplacement (5)	Upgrade device is a replacement.
processorUpgradeIsNone (6)	There is no upgrade device.
processorUpgradeIsByLIFSocket (7)	Upgrade device is in a low insertion force (LIF) socket.
processorUpgradeIsBySlot1 (8)	Upgrade device is a SLOT 1 processor.
processorUpgradeIsBySlot2 (9)	Upgrade device is a SLOT 2 processor.
processorUpgradeIsBy370PinSocket (10)	Upgrade device is a 370 pin socket.

**Table 13-6. Processor Device Family**

<b>Variable Name:</b> DellProcessorDeviceFamily	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
deviceFamilyIsOther (1)	The processor family is not one of the following values:
deviceFamilyIsUnknown (2)	The processor family is unknown.
deviceFamilyIs8086 (3)	The processor family is 8086.
deviceFamilyIs80286 (4)	The processor family is 80286.
deviceFamilyIs80386 (5)	The processor family is 80386.
deviceFamilyIs80486 (6)	The processor family is 80486.
deviceFamilyIs8087 (7)	The processor family is 8087.
deviceFamilyIs80287 (8)	The processor family is 80287.
deviceFamilyIs80387 (9)	The processor family is 80387.
deviceFamilyIs80487 (10)	The processor family is 80487.

**Table 13-6. Processor Device Family (continued)**

<b>Variable Name:</b> DellProcessorDeviceFamily	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
deviceFamilyIsPentium(11)	The processor family is Intel® Pentium®.
deviceFamilyIsPentiumPro(12)	The processor family is Pentium Pro.
deviceFamilyIsPentium2(13)	The processor family is Pentium II.
deviceFamilyIsPentiumMMX(14)	The processor family is Pentium MMX™.
deviceFamilyIsCeleron(15)	The processor family is Celeron®.
deviceFamilyIsXeon(16)	The processor family is Xeon™.
deviceFamilyIsPentium3(17)	The processor family is Pentium III.
deviceFamilyIsPentium3Xeon(18)	The processor family is Pentium III Xeon.
deviceFamilyIsPentium3Step(19)	The processor family is Pentium III Speed Step.
deviceFamilyIsPentiumItanium(20)	The processor family is Itanium®.
deviceFamilyIsIntelXeon(21)	The processor family is Intel Xeon.
deviceFamilyIsPentium4(22)	The processor family is Pentium 4.
deviceFamilyIsIntelXeonMP(23)	The processor family is Intel Xeon MP.
deviceFamilyIsIntelItanium2(24)	The processor family is Intel Itanium 2.

**Table 13-7. Cache Device Type**

<b>Variable Name:</b> DellCacheDeviceType	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
deviceTypeIsOther(1)	System cache type is not one of the following:
deviceTypeIsUnknown(2)	System cache type is unknown.
deviceTypeIsInstruction(3)	System cache type is instruction.
deviceTypeIsData(4)	System cache type is data.
deviceTypeIsUnified(5)	System cache type is both instruction and data.

**Table 13-8. Cache Device Level**


---

**Variable Name:** DellCacheDeviceLevel

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceLevelIsOther(1)	Device level is not one of the following:
deviceLevelIsUnknown(2)	Device level is unknown.
deviceLevelIsPrimary(3)	Device level is primary.
deviceLevelIsSecondary(4)	Device level is secondary.
deviceLevelIsTertiary(5)	Device level is tertiary.

---

**Table 13-9. Cache Device Write Policy**


---

**Variable Name:** DellCacheDeviceWritePolicy

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceWritePolicyIsOther(1)	Device write policy is not one of the following:
deviceWritePolicyIsUnknown(2)	Device write policy is unknown.
deviceWritePolicyIsWriteBack(3)	Device write policy is write back.
deviceWritePolicyIsWriteThrough(4)	Device write policy is write through.
deviceWritePolicyIsVariesByAddress(5)	Device write policy varies by address.
deviceWritePolicyIsDeterminedByIO(6)	Device write policy is determined by I/O query.

---

**Table 13-10. Cache Device Status State**


---

**Variable Name:** DellCacheDeviceStatusState

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
other(1)	Device state is not one of the following:
unknown(2)	Device state is unknown.
enabled(3)	Device is enabled.
userDisabled(4)	Device is disabled by the user.
biosDisabled(5)	Device basic input/output system (BIOS) is disabled.

---

**Table 13-11. Cache Device ECC Type**


---

**Variable Name:** DellPointingDeviceType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsOther(1)	Device type is not one of the following:
deviceTypeIsUnknown(2)	Device type is unknown.
deviceTypeIsAMouse(3)	Device type is a mouse.
deviceTypeIsATrackBar(4)	Device type is a track ball.
deviceTypeIsATrackBarPoint(5)	Device type is a track point.
deviceTypeIsAGlidePoint(6)	Device type is a glide point.
deviceTypeIsATouchPad(7)	Device type is a touch pad.

---

**Table 13-12. Cache Device Associativity**


---

**Variable Name:** DellCacheDeviceAssociativity

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceAssociativityIsOther(1)	Device associativity is not one of the following:
deviceAssociativityIsUnknown(2)	Device associativity is unknown.
deviceAssociativityIsDirectMapped(3)	Device is direct mapped.
deviceAssociativityIsTwoWaySetAssociative(4)	Device is two-way set associative.
deviceAssociativityIsFourWaySetAssociative(5)	Device is four-way set associative.
deviceAssociativityIsFullyAssociative(6)	Device is fully associative.
deviceAssociativityIsEightWaySetAssociative(7)	Device is eight-way set associative.
deviceAssociativityIsSixteenWaySetAssociative(8)	Device is sixteen-way set associative.

---

**Table 13-13. Cache Device Location**


---

**Variable Name:** DellCacheDeviceLocation

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceLocationIsOther(1)	Device location is not one of the following:
deviceLocationIsUnknown(2)	Device location is unknown.
deviceLocationIsInternal(3)	Device location is internal.
deviceLocationIsExternal(4)	Device location is external.

---

**Table 13-14. Cache Device Static Random-Access Memory (SRAM) Type**


---

**Variable Name:** DellCacheDeviceSRAMType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceSRAMTypeIsOther(1)	Device SRAM type is not one of the following:
deviceSRAMTypeIsUnknown(2)	Device SRAM type is unknown.
deviceSRAMTypeIsNonBurst(3)	Device SRAM type is nonburst.
deviceSRAMTypeIsBurst(4)	Device SRAM type is burst.
deviceSRAMTypeIsPipeBurst(5)	Device SRAM type is pipeburst.
deviceSRAMTypeIsSynchronous(6)	Device SRAM type is synchronous.
deviceSRAMTypeIsAsynchronous(7)	Device SRAM type is asynchronous.

---

**Table 13-15. Memory Device Type Form Factor**


---

**Variable Name:** DellMemoryDeviceFormFactor

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceFormFactorIsOther(1)	Device form factor is not one of the following:
deviceFormFactorIsUnknown(2)	Device form factor is unknown.
deviceFormFactorIsSIMM(3)	Device form factor is SIMM.
deviceFormFactorIsSIP(4)	Device form factor is SIP.
deviceFormFactorIsAChip(5)	Device form factor is a chip.
deviceFormFactorIsDIP(6)	Device form factor is DIP.

---

**Table 13-15. Memory Device Type Form Factor (continued)**

---

**Variable Name:** DellMemoryDeviceFormFactor

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
deviceFormFactorIsZIP(7)	Device form factor is ZIP.
deviceFormFactorIsAProprietaryCard(8)	Device form factor is a proprietary card.
deviceFormFactorIsDIMM(9)	Device form factor is DIMM.
deviceFormFactorIsTSOP(10)	Device form factor is TSOP.
deviceFormFactorIsARowOfChips(11)	Device form factor is a row of chips.
deviceFormFactorIsRIMM(12)	Device form factor is RIMM.
deviceFormFactorIsSODIMM(13)	Device form factor is SODIMM.
deviceFormFactorIsSRIMM(14)	Device form factor is SRIMM.

---

**Table 13-16. Memory Device Type**

---

**Variable Name:** DellMemoryDeviceType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
deviceTypeIsOther(1)	Device type is not one of the following:
deviceTypeIsUnknown(2)	Device type is unknown.
deviceTypeIsDRAM(3)	Device type is DRAM.
deviceTypeIsEDRAM(4)	Device type is EDRAM.
deviceTypeIsVRAM(5)	Device type is VRAM.
deviceTypeIsSRAM(6)	Device type is SRAM.
deviceTypeIsRAM(7)	Device type is RAM.
deviceTypeIsROM(8)	Device type is ROM.
deviceTypeIsFLASH(9)	Device type is FLASH.
deviceTypeIsEEPROM(10)	Device type is EEPROM.
deviceTypeIsFEPROM(11)	Device type is FEPROM.
deviceTypeIsEPROM(12)	Device type is EPROM.
deviceTypeIsCDRAM(13)	Device type is CDRAM.
deviceTypeIs3DRAM(14)	Device type is 3DRAM.
deviceTypeIsSDRAM(15)	Device type is SDRAM.

**Table 13-16. Memory Device Type (continued)**


---

**Variable Name:** DellMemoryDeviceType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsSGRAM(16)	Device type is SGRAM.
deviceTypeIsRDRAM(17)	Device type is RDRAM.
deviceTypeIsDDR(18)	Device type is DDR.
deviceTypeIsDDR2(19)	Device type is DDR2.

---

**Table 13-17. Memory Device Type Details**


---

**Variable Name:** DellMemoryDeviceTypeDetails

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceTypeDetailIsOther(1)	The detailed device type is not one of the following:
deviceTypeDetailIsUnknown(2)	The detailed device type is unknown.
deviceTypeDetailIsFastPaged(3)	The detailed device type is fast paged.
deviceTypeDetailIsStaticColumn(4)	The detailed device type is static column.
deviceTypeDetailIsPseudoStatic(5)	The detailed device type is pseudo-static.
deviceTypeDetailIsRAMBUS(6)	The detailed device type is RAMBUS.
deviceTypeDetailIsSynchronous(7)	The detailed device type is synchronous.
deviceTypeDetailIsCMOS(8)	The detailed device type is CMOS.
deviceTypeDetailIsEDO(9)	The detailed device type is EDO.
deviceTypeDetailIsWindowDRAM(10)	The detailed device type is "Window" DRAM.
deviceTypeDetailIsCacheDRAM(11)	The detailed device type is Cache DRAM.
deviceTypeDetailIsNonVolatile(12)	The detailed device type is nonvolatile.

---

**Table 13-18. Generic Device Type**


---

**Variable Name:** DellGenericDeviceType

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
deviceTypeIsOther(1)	Device type is not one of the following:
deviceTypeIsUnknown(2)	Device type is unknown.
deviceTypeIsAVideoDevice(3)	Device type is a video.
deviceTypeIsASCSIController(4)	Device type is a SCSI controller.
deviceTypeIsAnEthernetDevice(5)	Device type is Ethernet.
deviceTypeIsTokenRingDevice(6)	Device type is token ring.
deviceTypeIsASoundDevice(7)	Device type is sound.

---

**Table 13-19. Memory Device Failure Modes**


---

**Variable Name:** DellMemoryDeviceFailureModes

**Data Type:** Integer

**NOTE:** These values are bit masks, so combination values are possible.

Possible Data Values	Meaning of Data Value
(0)	Memory device has no faults.
eccSingleBitCorrectionWarningRate(1)	Memory device has exceeded the Correctable Memory Event warning rate.
eccSingleBitCorrectionFailureRate(2)	Memory device has exceeded the Correctable Memory Event failure rate.
eccMultiBitFault(4)	Memory device has encountered an Uncorrectable Memory Event.
eccSingleBitCorrectionLoggingDisabled(8)	Correctable Memory Event logging for memory device has been disabled.
deviceDisabledBySpareBank(16)	Memory device is disabled because the spare bank was activated.

---



## Slot Group

The Slot Group provides information about the types of slots that your system supports. This management information base (MIB) group also provides information about the voltages, capabilities, states, and settings that are possible for these slots.

### System Slot Group Table

The System Slot Group defines objects in the System Slot MIB table.

#### System Slot Table

The following object sets up the System Slot Table:

<b>Name</b>	systemSlotTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10
<b>Description</b>	Defines the System Slot Table.
<b>Syntax</b>	IntegerSystemStateTableEntry
<b>Access</b>	Not accessible

#### System Slot Table Entry

<b>Name</b>	systemSlotTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1
<b>Description</b>	Defines the System Slot Table entry.
<b>Syntax</b>	IntegerSystemSlotTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	systemSlotchassisIndex, systemSlotIndex

## System Slot Chassis Index

<b>Name</b>	systemSlotchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## System Slot Index

<b>Name</b>	systemSlotIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.2
<b>Description</b>	Defines the index (one-based) of the system slot in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## System Slot State Capabilities Unique

<b>Name</b>	systemSlotStateCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.3
<b>Description</b>	Defines the capabilities of the system slot.
<b>Syntax</b>	DellSystemSlotStateCapabilities (See Table 14-1.)
<b>Access</b>	Read-only

## System Slot State Settings Unique

<b>Name</b>	systemSlotStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.4
<b>Description</b>	Defines the state of the system slot.
<b>Syntax</b>	DellSystemSlotStateSettings (See Table 14-2.)
<b>Access</b>	Read-only

## System Slot Status

<b>Name</b>	systemSlotStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.5
<b>Description</b>	Defines the status of the system slot.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## System Slot Current Usage

<b>Name</b>	systemSlotCurrentUsage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.6
<b>Description</b>	Defines the current usage of the system slot.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## System Slot Type

<b>Name</b>	systemSlotType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.7
<b>Description</b>	Defines the type of the system slot.
<b>Syntax</b>	DellSystemSlotType (See Table 14-3.)
<b>Access</b>	Read-only

## System Slot External Slot Name

<b>Name</b>	systemSlotSlotExternalSlotName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.8
<b>Description</b>	Defines the external connector name of the system slot.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### System Slot Length

<b>Name</b>	systemSlotLength
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.9
<b>Description</b>	Defines the length of the system slot.
<b>Syntax</b>	DellSystemSlotLength (See Table 14-5.)
<b>Access</b>	Read-only

### System Slot Slot ID

<b>Name</b>	systemSlotSlotID
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.10
<b>Description</b>	Defines the slot identification number of the system slot. A zero (0) indicates that the slot is embedded on the motherboard.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### System Slot Category

<b>Name</b>	systemSlotCategory
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.11
<b>Description</b>	Defines the system slot category.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### System Slot Hot-Plug Bus Width

<b>Name</b>	systemSlotHotPlugBusWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.12
<b>Description</b>	Defines the bus width of the hot-plug system slot.
<b>Syntax</b>	DellSystemSlotHotPlugBusWidth (See Table 14-7.)
<b>Access</b>	Read-only

## System Slot Hot-Plug Slot Speed

<b>Name</b>	systemSlotHotPlugSlotSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.13
<b>Description</b>	Defines the slot speed in megahertz of the hot-plug system slot. A zero (0) indicates that the slot speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## System Slot Hot-Plug Adapter Speed

<b>Name</b>	systemSlotHotPlugAdapterSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1200.10.1.14
<b>Description</b>	Defines the adapter speed in megahertz of the hot-plug system slot. A zero (0) indicates that the slot speed is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

# System Slot Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 14-1. System Slot State Capabilities**

<b>Variable Name:</b> DellSystemSlotStateCapabilities	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
systemSlotHotPlugIsUnknown(1)	The system slot's capabilities are unknown.
systemSlotHotPlugIsHotPluggableCapable(2)	The system slot supports hot-plug.
systemSlotHotPlugCanBePoweredOn(4)	The system slot power (and corresponding light-emitting diode [LED]) can be powered on.
systemSlotHotPlugCanSignalAttention(8)	The system slot attention state (and corresponding LED) can be set.
systemSlotHotPlugCanSignalPowerFault(16)	Power on fault (and corresponding LED) can be detected due to a short or overcurrent.
systemSlotHotPlugCanSignalAdapterPresent(32)	Adapter (card) present in slot (may not be powered) can be detected.

**Table 14-1. System Slot State Capabilities (continued)**

---

**Variable Name:** DellSystemSlotStateCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
systemSlotHotPlugCanSignalPowerButtonPressed(64)	The system slot power button can be pressed to signal a toggle of the power state.
canSupportAllHotPlugCapabilities(126)	The system slot can support all hot-plug capabilities.
systemSlotHotPlugIsUnknown(1)	The system slot's capabilities are unknown.
systemSlotCanProvide5Volts(128)	The system slot can provide a 5-volt (V) supply.
systemSlotCanProvide3Point3Volts(256)	The system slot can provide a 3.3-V supply.
systemSlotCanSignalIfShared(512)	The system slot's opening, if shared with another slot, can be detected.
systemSlotCanSupportCard16(1024)	The system slot can support PC Card-16.
systemSlotCanSupportCardBus(2048)	The system slot can support CardBus.
systemSlotCanSupportZoomVideo(4096)	The system slot can support Zoom Video.
systemSlotCanSupportModemRingResume(8192)	The system slot can support modem ring resume.
systemSlotCanSupportPMESignal(16384)	The system slot can support Power Management Enable (PME#) signal.
canSupportAllSlotCapabilities(32640)	The system slot can support all slot capabilities.

---

**Table 14-2. System Slot State Settings**

<b>Variable Name:</b> DellSystemSlotStateSettings	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
systemSlotHotPlugIsUnknown(1)	The system slot's capabilities are unknown.
systemSlotHotPlugIsHotPluggable(2)	The system slot supports hot-plug.
systemSlotHotPlugIsPoweredOn(4)	The system slot power (and corresponding LED) can be powered on.
systemSlotHotPlugIsAtAttention(8)	The system slot attention state (and corresponding LED) can be set.
systemSlotHotPlugIsHotPluggable(2)	The system slot supports hot-plug.
systemSlotHotPlugIsPoweredOn(4)	The system slot power (and corresponding LED) is on.
systemSlotHotPlugIsAtAttention(8)	The system slot attention state (and corresponding LED) is on.
systemSlotHotPlugHasPowerFaulted(16)	Power on fault (and corresponding LED) was detected due to a short or overcurrent.
systemSlotHotPlugAdapterIsPresent(32)	Adapter (card) present in slot (may not be powered).
systemSlotHotPlugAdapterPresentAndPoweredOn(36)	Adapter (card) present in slot and powered.
systemSlotHotPlugPowerButtonPressed(64)	The system slot power button pressed to signal a toggle of the power state.
systemSlotProvides5Volts(128)	The system slot provides a 5-V supply.
systemSlotProvides3Point3Volts(256)	The system slot provides a 3.3-V supply.
systemSlotIsShared(512)	The slot's opening is shared with another slot.
systemSlotSupportsCard16(1024)	The system slot supports PC Card-16.
systemSlotSupportsCardBus(2048)	The system slot supports CardBus.
systemSlotSupportsZoomVideo(4096)	The system slot supports zoom video.
systemSlotSupportsModemRingResume(8192)	The system slot supports modem ring resume.
systemSlotSupportsPMESignal(16384)	The system slot supports power management enable (PME#) signal.

**Table 14-2. System Slot State Settings (continued)**

<b>Variable Name:</b> DellSystemSlotStateSettings	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
supportsPMEand3P3Vand5VandHotPluggable(16770)	The system slot supports power management enable.
supportsPMEand3P3Vand5VhasAdapterOn(16804)	The system slot supports power management event (PME), supplies 3.3 V, and supplies 5 V. The adapter is on.
supportsPMEand3P3Vand5VhasAdapterOnandisHotPluggable(16806)	The system slot supports PME, supplies 3.3 V, and supplies 5 V. The adapter is on and the system slot is hot pluggable.
supportsPMEand3P3VIsSharedand5VhasAdapterOnandisHotPluggable(17316)	The system slot supports PME, supplies 3.3 V, supplies 5 V, and shares a slot opening. The adapter is on and the system slot is hot pluggable.

**Table 14-3. System Slot Type**

<b>Variable Name:</b> DellSystemSlotType	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
systemSlotIsOther(1)	The system slot type is not one of following:
systemSlotIsUnknown(2)	The system slot type is unknown.
systemSlotIsISA(3)	The system slot is Industry Standard Architecture (ISA).
systemSlotIsMCA(4)	The system slot is Micro Channel Architecture (MCA).
systemSlotIsEISA(5)	The system slot is Extended Industry Standard Architecture (EISA).
systemSlotIsPCI(6)	The system slot is Peripheral Component Interconnect (PCI).
systemSlotIsPCMCIA(7)	The system slot is compliant with the Personal Computer Memory Card International Association (PCMCIA) standards.



**Table 14-3. System Slot Type (continued)**

---

<b>Variable Name:</b> DellSystemSlotType	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
<hr/>	<hr/>
systemSlotIsVLVESAS(8)	The system slot is Very Low Voltage Enterprise System Architecture (VLVESAS).
systemSlotIsProprietary(9)	The system slot is proprietary.
systemSlotIsProcessorCard(10)	The system slot is a processor card.
systemSlotIsProprietaryMemory(11)	The system slot is proprietary memory.
systemSlotIsIORiserCard(12)	The system slot is an I/O riser card.
systemSlotIsNuBUS(13)	The system slot is a NuBus.
systemSlotIsPCI66MHz(14)	The system slot is a PCI66MHz.
systemSlotIsAGP(15)	The system slot is an Advanced Graphics Port (AGP).
systemSlotIsAGP2X(16)	The system slot is an AGP 2x card.
systemSlotIsAGP4X(17)	The system slot is an AGP 4x card.
systemSlotIsPC98C20(18)	The system slot is a PC-98/C20.
systemSlotIsPC98C24(19)	The system slot is a PC-98/C24.
systemSlotIsPC98E(20)	The system slot type is PC-98/E.
systemSlotIsPC98LocalBus(21)	The system slot type is a PC-98 local bus.
systemSlotIsPC98Card(22)	The system slot type is a PC-98 card.
systemSlotIsPCIX(23)	The system slot type is a PCIX card.
systemSlotIsPCIExpress(24)	The system slot type is a PCI Express card.
systemSlotIsAGP8X(25)	The system slot type is an AGP 8x card.

---

**Table 14-4. System Slot Usage**

---

**Variable Name:** DellSystemSlotUsage

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
systemSlotUsageIsOther(1)	The system slot usage is not one of following:
systemSlotUsageIsUnknown(2)	The system slot usage is unknown.
systemSlotUsageIsAvailable(3)	The system slot is available.
systemSlotUsageIsInUse(4)	The system slot is in use.

---

**Table 14-5. System Slot Length**

---

**Variable Name:** DellSystemSlotLength

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
systemSlotLengthIsOther(1)	The system slot length is not one of following:
systemSlotLengthIsUnknown(2)	The system slot length is unknown.
systemSlotLengthIsShort(3)	The system slot length is short.
systemSlotLengthIsLong(4)	The system slot length is long.

---

**Table 14-6. System Slot Category**

---

**Variable Name:** DellSystemSlotCategory

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
systemSlotCategoryIsOther(1)	The system slot category is not one of following:
systemSlotCategoryIsUnknown(2)	The system slot category is unknown.
systemSlotCategoryIsBusConnector(3)	The system slot is a bus connector.
systemSlotCategoryIsPCMCIA(4)	The system slot category is PCMCIA.
systemSlotCategoryIsMotherboard(5)	The system slot is a motherboard.

---

**Table 14-7. Hot-Plug Bus Width**


---

**Variable Name:** DellSystemSlotHotPlugBusWidth

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
busWidthIsOther(1)	The system slot bus width is not one of following:
busWidthIsUnknown(2)	The system slot bus width is unknown.
busWidthIs8bits(3)	The system slot bus width is 8 bits.
busWidthIs16bits(4)	The system slot bus width is 16 bits.
busWidthIs32bits(5)	The system slot bus width is 32 bits.
busWidthIs64bits(6)	The system slot bus width is 64 bits.
busWidthIs128bits(7)	The system slot bus width is 128 bits.
busWidthIs1xOrx1(8)	The system slot bus width is 1x or x1.
busWidthIs2xOrx2(9)	The system slot bus width is 2x or x2.
busWidthIs4xOrx4(10)	The system slot bus width is 4x or x4.
busWidthIs8xOrx8(11)	The system slot bus width is 8x or x8.
busWidthIs12xOrx12(12)	The system slot bus width is 12x or x12.
busWidthIs16xOrx16(13)	The system slot bus width is 16x or x16.
busWidthIs32xOrx32(14)	The system slot bus width is 32x or x32.

---

 **NOTE:** System slot bus width meanings of type "n bits" are for parallel bus such as PCI.

 **NOTE:** System slot bus width meanings of type "nx or xn" are for serial bus such as PCI Express.



## Memory Group

The Memory Group provides information about the physical memory in your system. Variables in this group include error correction type, location, and different types of memory use, such as cache, flash, system, video, and nonvolatile memory.

### Physical Memory Tables

The following management information base (MIB) tables define the objects in the Memory Group:

- Physical Memory Array Table
- Physical Memory Array Mapped Table
- Physical Memory Configuration Table
- Physical Memory Logging Table
- Redundant Memory Unit Table
- Physical Memory Card Table

#### Physical Memory Array Table

The physical memory array is the entire physical memory of a system. The example that follows shows variable values for a system that has one 128-megabyte (MB) dual in-line memory module (DIMM):

- `physicalMemoryArrayMaximumSize` = 2,097,152 kilobytes (KB) or 2 gigabytes (GB)
- `physicalMemoryArrayTotalNumberSockets` = 4 (the example system has four DIMM slots on the motherboard)
- `physicalMemoryArrayInUseNumberSockets` = 1 (there is only one DIMM installed)

The following object sets up the Physical Memory Array Table:

<b>Name</b>	<code>physicalMemoryArrayTable</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10
<b>Description</b>	Defines the Physical Memory Array Table.
<b>Syntax</b>	<code>PhysicalMemoryArrayTableEntry</code>
<b>Access</b>	Not accessible

### Physical Memory Array Table Entry

<b>Name</b>	physicalMemoryArrayTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1
<b>Description</b>	Defines the Physical Memory Array Table entry.
<b>Syntax</b>	PhysicalMemoryArrayTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	physicalMemoryArraychassisIndex, physicalMemoryArrayIndex

### Physical Memory Array Chassis Index

<b>Name</b>	physicalMemoryArraychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Physical Memory Array Index

<b>Name</b>	physicalMemoryArrayIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.2
<b>Description</b>	Defines the index (one-based) of the physical memory array in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Physical Memory Array State Capabilities

<b>Name</b>	physicalMemoryArrayStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.3
<b>Description</b>	Defines the capabilities of the physical memory array.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Physical Memory Array State Settings

<b>Name</b>	physicalMemoryArrayStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.4
<b>Description</b>	Defines the state of the physical memory array.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	read-write

### Physical Memory Array Status

<b>Name</b>	physicalMemoryArrayStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.5
<b>Description</b>	Defines the status of the physical memory array.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Physical Memory Array Use

<b>Name</b>	physicalMemoryArrayUse
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.6
<b>Description</b>	Defines the use of the physical memory array.
<b>Syntax</b>	DellPhysicalMemoryArrayUse (See Table 15-2.)
<b>Access</b>	Read-only

### Physical Memory Array Error Checking and Correcting (ECC) Type

<b>Name</b>	physicalMemoryArrayECCType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.7
<b>Description</b>	Defines the ECC type used by the physical memory array.
<b>Syntax</b>	DellPhysicalMemoryArrayECCType (See Table 15-2.)
<b>Access</b>	Read-only

### Physical Memory Array Location

<b>Name</b>	physicalMemoryArrayLocation
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.8
<b>Description</b>	Defines the location of the physical memory array.
<b>Syntax</b>	DellPhysicalMemoryArrayLocation (See Table 15-1.)
<b>Access</b>	Read-only

### Physical Memory Array Maximum Size

<b>Name</b>	physicalMemoryArrayMaximumSize
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.9
<b>Description</b>	Defines the size in KB of the physical memory array.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Physical Memory Array Total Number Sockets

<b>Name</b>	physicalMemoryArrayTotalNumberSockets
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.10
<b>Description</b>	Defines the total number of memory sockets available for the physical memory array.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Physical Memory Array In Use Number Sockets

<b>Name</b>	physicalMemoryArrayInUseNumberSockets
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.11
<b>Description</b>	Defines the total number of memory sockets in use by the physical memory array.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only



### Physical Memory Array ECC Error Nonrecoverable Threshold

<b>Name</b>	physicalMemoryArrayECCErrorNonRecoverbeThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.12
<b>Description</b>	Defines the value of the physical memory array Error Checking and Correction (ECC) error nonrecoverable threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Physical Memory Array ECC Error Critical Threshold

<b>Name</b>	physicalMemoryArrayECCErrorCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.13
<b>Description</b>	Defines the value of the physical memory array ECC error critical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	Read-only

### Physical Memory Array ECC Error Noncritical Threshold

<b>Name</b>	physicalMemoryArrayECCErrorNonCriticalThreshold
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.14
<b>Description</b>	Defines the value of the physical memory array ECC error noncritical threshold.
<b>Syntax</b>	DellSigned32BitRange
<b>Access</b>	read-write

### Physical Memory Array Redundant Memory Unit Index Reference

<b>Name</b>	physicalMemoryArrayRedundantMemoryUnitIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.10.1.15
<b>Description</b>	Defines the index to the associated Redundant Memory Unit in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Physical Memory Array Mapped Table

The physical memory array is divided into memory array mapped addresses.

The following object sets up the Physical Memory Array Mapped Table:

<b>Name</b>	physicalMemoryArrayMappedTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20
<b>Description</b>	Defines the Physical Memory Array Mapped Table.
<b>Syntax</b>	PhysicalMemoryArrayMappedTableEntry
<b>Access</b>	Not accessible

## Physical Memory Array Mapped Table Entry

<b>Name</b>	PhysicalMemoryArrayMappedTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1
<b>Description</b>	Defines the Physical Memory Array Mapped Table entry.
<b>Syntax</b>	PhysicalMemoryArrayMappedTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	physicalMemoryArrayMappedchassisIndex, physicalMemoryArrayMappedIndex

## Physical Memory Array Mapped Chassis Index

<b>Name</b>	physicalMemoryArrayMappedchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Physical Memory Array Mapped Index

<b>Name</b>	physicalMemoryArrayMappedIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.2
<b>Description</b>	Defines the index (one-based) of the memory array mapped address in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Physical Memory Array Mapped State Capabilities

<b>Name</b>	physicalMemoryArrayMappedStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.3
<b>Description</b>	Defines the capabilities of the memory array mapped address.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Physical Memory Array Mapped State Settings

<b>Name</b>	physicalMemoryArrayMappedStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.4
<b>Description</b>	Defines the state of the memory array mapped address.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Physical Memory Array Mapped Status

<b>Name</b>	physicalMemoryArrayMappedStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.5
<b>Description</b>	Defines the status of the memory array mapped address.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Physical Memory Array Index Reference

<b>Name</b>	physicalMemoryArrayIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.6
<b>Description</b>	Defines the index to the associated physical memory array in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Physical Memory Array Mapped Starting Address

<b>Name</b>	physicalMemoryArrayMappedStartingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.7
<b>Description</b>	Defines the physical starting address in KB of the memory array mapped address.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

### Physical Memory Array Mapped Ending Address

<b>Name</b>	physicalMemoryArrayMappedEndingAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.8
<b>Description</b>	Defines the physical ending address in KB of the memory array mapped address.
<b>Syntax</b>	DellUnsigned64BitRange
<b>Access</b>	Read-only

### Physical Memory Array Mapped Partition Width

<b>Name</b>	physicalMemoryArrayMappedPartitionWidth
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.20.1.9
<b>Description</b>	Defines the number of memory devices that form a single row in the memory array mapped address. A zero (0) indicates that the number is unknown.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

## Physical Memory Configuration Table

This table defines how the physical memory of a system chassis is set up, for example, which redundant memory types are supported and whether redundant memory is active.

The following object sets up the Physical Memory Configuration Table:

<b>Name</b>	physicalMemoryConfigTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30
<b>Description</b>	Defines the Physical Memory Configuration Table.
<b>Syntax</b>	SEQUENCE OF PhysicalMemoryConfigTableEntry
<b>Access</b>	Not accessible

## Physical Memory Configuration Table Entry

<b>Name</b>	physicalMemoryConfigTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1
<b>Description</b>	Defines the Physical Memory Configuration Table entry.
<b>Syntax</b>	PhysicalMemoryConfigTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	physicalMemoryConfigChassisIndex, physicalMemoryConfigIndex

## Physical Memory Configuration Chassis Index

<b>Name</b>	physicalMemoryConfigChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.1
<b>Description</b>	Defines the index (one-based) of the chassis associated with the physical memory configuration.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Physical Memory Configuration Index

<b>Name</b>	physicalMemoryConfigIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.2
<b>Description</b>	Defines the index (one-based) of the physical memory configuration.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Physical Memory Configuration State Capabilities

<b>Name</b>	physicalMemoryConfigStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.3
<b>Description</b>	Defines the state capabilities of the physical memory configuration.
<b>Syntax</b>	DellPhysicalMemoryConfigStateCapabilities
<b>Access</b>	Read-only

### Physical Memory Configuration State Settings

<b>Name</b>	physicalMemoryConfigStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.4
<b>Description</b>	Defines the state settings of the physical memory configuration.
<b>Syntax</b>	DellPhysicalMemoryConfigStateSettings
<b>Access</b>	Read-write

### Physical Memory Configuration Status

<b>Name</b>	physicalMemoryConfigStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.5
<b>Description</b>	Defines the status of the physical memory configuration.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Physical Memory Configuration Redundant Capabilities

<b>Name</b>	physicalMemoryConfigRedundantCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.6
<b>Description</b>	Defines the redundant capabilities of the physical memory.
<b>Syntax</b>	DellPhysicalMemoryConfigRedundantCapabilities
<b>Access</b>	Read-only

## Physical Memory Configuration Redundant Settings

<b>Name</b>	physicalMemoryConfigRedundantSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.30.1.7
<b>Description</b>	Defines the redundant settings of the physical memory.
<b>Syntax</b>	DellPhysicalMemoryConfigRedundantSettings
<b>Access</b>	Read-write

## Physical Memory Logging Table

This table defines the conditions for logging system memory events. The following object sets up the Physical Memory Logging Table:

<b>Name</b>	physicalMemoryLoggingTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.40
<b>Description</b>	Defines the Physical Memory Logging Table.
<b>Syntax</b>	SEQUENCE OF PhysicalMemoryLoggingTableEntry
<b>Access</b>	Not accessible

## Physical Memory Logging Table Entry

<b>Name</b>	physicalMemoryLoggingTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.40.1
<b>Description</b>	Defines the Physical Memory Logging Table entry.
<b>Syntax</b>	PhysicalMemoryLoggingTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	physicalMemoryLoggingChassisIndex, physicalMemoryLoggingIndex

## Physical Memory Logging Chassis Index

<b>Name</b>	physicalMemoryLoggingChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.40.1.1
<b>Description</b>	Defines the index (one-based) of the chassis associated with the physical memory logging.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Physical Memory Logging Index

<b>Name</b>	physicalMemoryLoggingIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.40.1.2
<b>Description</b>	Defines the index (one-based) of the physical memory logging.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Physical Memory Logging Capabilities

<b>Name</b>	physicalMemoryLoggingCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.40.1.3
<b>Description</b>	Defines the capabilities of the physical memory logging.
<b>Syntax</b>	DellPhysicalMemoryLoggingCapabilities
<b>Access</b>	Read-only

### Physical Memory Logging Settings

<b>Name</b>	physicalMemoryLoggingSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.40.1.4
<b>Description</b>	Defines the settings of the physical memory logging.
<b>Syntax</b>	DellPhysicalMemoryLoggingSettings
<b>Access</b>	Read-write

### Physical Memory Logging Status

<b>Name</b>	physicalMemoryLoggingStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.40.1.5
<b>Description</b>	Defines the status of the physical memory logging.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only



## Redundant Memory Unit Table

This table reports the status of redundant memory within a particular system chassis.

The following object sets up the Redundant Memory Unit Table:

<b>Name</b>	redundantMemoryUnitTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50
<b>Description</b>	Defines the Redundant Memory Unit Table.
<b>Syntax</b>	SEQUENCE OF RedundantMemoryUnitTableEntry
<b>Access</b>	Not accessible

## Redundant Memory Unit Table Entry

<b>Name</b>	redundantMemoryUnitTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1
<b>Description</b>	Defines the Redundant Memory Unit Table entry.
<b>Syntax</b>	RedundantMemoryUnitTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	redundantMemoryUnitChassisIndex, redundantMemoryUnitIndex

## Redundant Memory Unit Chassis Index

<b>Name</b>	redundantMemoryUnitChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.1
<b>Description</b>	Defines the index (one-based) of the chassis associated with the redundant memory unit.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Redundant Memory Unit Index

<b>Name</b>	redundantMemoryUnitIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.2
<b>Description</b>	Defines the index (one-based) of the redundant memory unit.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Redundant Memory Unit State Capabilities

<b>Name</b>	redundantMemoryUnitStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.3
<b>Description</b>	Defines the state capabilities of the redundant memory unit.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Redundant Memory Unit State Settings

<b>Name</b>	redundantMemoryUnitStatesettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.4
<b>Description</b>	Defines the state settings of the redundant memory unit.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Redundant Memory Unit Redundancy Status

<b>Name</b>	redundantMemoryUnitRedundancyStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.5
<b>Description</b>	Defines the redundancy status of the redundant memory unit.
<b>Syntax</b>	DellStatusRedundancy
<b>Access</b>	Read-only

### Redundant Memory Unit Name

<b>Name</b>	redundantMemoryUnitName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.6
<b>Description</b>	Defines the name of the redundant memory unit.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Redundant Memory Unit Status

<b>Name</b>	redundantMemoryUnitStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.50.1.7
<b>Description</b>	Defines the status of the redundant memory unit.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Physical Memory Card Table

This table defines the name of the memory card, the total number of device slots present on the memory card, and the number of memory device slots in use on the memory card.

The following objects set up the Physical Memory Card Table:

### Physical Memory Card Table

<b>Name</b>	physicalMemoryCardTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60
<b>Description</b>	Defines the Physical Memory Card Table.
<b>Syntax</b>	SEQUENCE OF PhysicalMemoryCardTableEntry
<b>Access</b>	Not accessible

### Physical Memory Card Table Entry

<b>Name</b>	physicalMemoryCardTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1
<b>Description</b>	Defines the Physical Memory Card Table Entry.
<b>Syntax</b>	PhysicalMemoryCardTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	physicalMemoryCardChassisIndex, physicalMemoryCardIndex

### Physical Memory Card Chassis Index

<b>Name</b>	physicalMemoryCardChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.1
<b>Description</b>	Defines the index (one based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Physical Memory Card Index

<b>Name</b>	physicalMemoryCardIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.2
<b>Description</b>	Defines the index (one based) of the Physical Memory Card.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Physical Memory Card State Capabilities

<b>Name</b>	physicalMemoryCardStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.3
<b>Description</b>	Defines the state capabilities of the Physical Memory Card.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Physical Memory Card State Settings

<b>Name</b>	physicalMemoryCardStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.4
<b>Description</b>	Defines the state settings of the Physical Memory Card.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Physical Memory Card Status

<b>Name</b>	physicalMemoryCardStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.5
<b>Description</b>	Defines the status of the Physical Memory Card.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Physical Memory Card Name

<b>Name</b>	physicalMemoryCardName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.6
<b>Description</b>	Defines the name of the Physical Memory Card.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### Physical Memory Card Total Number Sockets

<b>Name</b>	physicalMemoryCardTotalNumberSockets
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.7
<b>Description</b>	Defines the total number of memory sockets available on the Physical Memory Card. 2,147,483,647 indicates an unknown number of sockets.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Physical Memory Card In Use Number Sockets

<b>Name</b>	physicalMemoryCardInUseNumberSockets
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.8
<b>Description</b>	Defines the number of memory sockets in use on the Physical Memory Card. Zero indicates that the Physical Memory Card is not installed or has a configuration error.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Physical Memory Card Physical Memory Array Index Reference

<b>Name</b>	physicalMemoryCardPhyMemArrayIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1300.60.1.9
<b>Description</b>	Defines the index (one based) of the Physical Memory Array Table entry for the physical memory array with the same chassis index that this physical memory card is associated with.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Memory Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 15-1. Physical Memory Array Location**

---

<b>Variable Name:</b> DellPhysicalMemoryArrayLocation	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
memoryArrayLocationIsOther(1)	The memory array location is not one of the following:
memoryArrayUseIsUnknown(2)	The memory array use is unknown.
memoryArrayUseIsSystemMemory(3)	The memory array is system memory.
memoryArrayUseIsVideoMemory(4)	The memory array is video memory.
memoryArrayUseIsFLASHMemory(5)	The memory array is FLASH memory.
memoryArrayUseIsNonVolatileRAMMemory(6)	The memory array is nonvolatile RAM.
memoryArrayUseIsCacheMemory(7)	The memory array is cache memory.
memoryArrayLocationIsPCMCIA(8)	The memory array location is a Personal Computer Memory Card International Association (PCMCIA) option card.
memoryArrayLocationIsProprietary(9)	The memory array location is a proprietary option card.
memoryArrayLocationIsNUBUS(10)	The memory array location is a NuBus bus.
memoryArrayLocationIsPC98C20(11)	The memory array location is a PC-98/C20 option card.
memoryArrayLocationIsPC98C24(12)	The memory array location is a PC-98/C24 option card.
memoryArrayLocationIsPC98E(13)	The memory array location is a PC-98/E option card.
memoryArrayLocationIsPC98LocalBus(14)	The memory array location is a PC-98/Local bus option card.
memoryArrayLocationIsPC98Card(15)	The memory array location is a PC-98/Card slot option card.

---

**Table 15-2. Physical Memory Array ECC Type Definitions**

---

**Variable Name:** DellPhysicalMemoryArrayECCType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
memoryArrayECCTypeIsOther(1)	There is not one of the following:
memoryArrayECCTypeIsUnknown(2)	The memory array ECC type is unknown.
memoryArrayECCTypeIsNone(3)	The memory array ECC type is none.
memoryArrayECCTypeIsParity(4)	The memory array ECC type is parity.
memoryArrayECCTypeIsSingleBitECC(5)	The memory array ECC type is Correctable Memory Event ECC.
memoryArrayECCTypeIsMultiBitECC(6)	The memory array ECC type is Uncorrectable Memory Event ECC.
memoryArrayECCTypeIsCRC(7)	The memory array ECC type is CRC.

---

**Table 15-3. Physical Memory Configuration State Capabilities**

---

**Variable Name:** DellPhysicalMemoryConfigStateCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
If set to 0 (zero)	There are no state capabilities.
unknownCapabilities(1)	State capabilities are unknown.
enableCapable(2)	Object enable/disable is supported.
notReadyCapable(4)	Object "not ready" is supported.

---

**Table 15-4. Physical Memory Configuration State Settings**

---

**Variable Name:** DellPhysicalMemoryConfigStateSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
If set to 0 (zero)	There are no state settings.
unknown(1)	State settings are unknown.
enabled(2)	Object is disabled (offline) 0, or enabled (online) 1.
notReady(4)	Object "not ready."
redundantMemoryIsActive(8)	Redundant memory is active (in use)
enabledAndRedundantMemoryIsActive(10)	Redundant memory is enabled and in use.

---

**Table 15-5. Physical Memory Configuration Redundant Capabilities**

---

**Variable Name:** DellPhysicalMemoryConfigRedundantCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
If set to 0 (zero)	There are no redundant memory capabilities.
unknownCapabilities(1)	Redundant capabilities are unknown.
The redundant capabilities are:	
spareBankCapable(2)	Spare Bank is supported.
mirrorCapable(4)	Mirror is supported.
spareBankAndMirrorCapable(6)	Mirror and spare bank are supported.
raidCapable(8)	Redundant Array of Independent disks (RAID) is supported.

---



**Table 15-6. Physical Memory Configuration Redundant Settings**

<b>Variable Name:</b> DellPhysicalMemoryConfigRedundantSettings	
<b>Data Type:</b> Integer	
Possible Data Values	Meaning of Data Value
If set to 0 (zero)	There are no redundant memory settings enabled.
unknown(1)	Redundant settings are unknown.
The following redundant settings are mutually exclusive:	
spareBankEnabled(2)	Spare Bank support is enabled.
mirrorEnabled(4)	Mirror support is enabled.
raidEnabled(8)	RAID support is enabled.

**Table 15-7. Physical Memory Logging Capabilities**

<b>Variable Name:</b> DellPhysicalMemoryLoggingCapabilities	
<b>Data Type:</b> Integer	
Possible Data Values	Meaning of Data Value
If set to 0 (zero)	There are no logging capabilities.
unknown Capabilities(1)	Logging capabilities are unknown.
The logging capabilities are:	
enableCapable(2)	Logging enable/disable using Simple Network Management Protocol (SNMP) is supported.

**Table 15-8. Physical Memory Logging Settings**

<b>Variable Name:</b> DellPhysicalMemoryLoggingSettings	
<b>Data Type:</b> Integer	
Possible Data Values	Meaning of Data Value
If set to 0 (zero)	There are no logging settings enabled.
unknown Capabilities(1)	Logging capabilities are unknown.
The logging settings are:	
enabled(2)	Logging is disabled (0), or enabled (1).



## BIOS Setup Control Group

Basic Input/Output System (BIOS) Setup Control Group variables provide information about the functions that the BIOS performs in your system. This management information base (MIB) group includes variables for the boot sequence, speakers, diskettes, ports, network interface controllers (NICs), and the Wakeup on local area network (LAN) feature.

### BIOS Group Tables

The objects in this group define the BIOS control of devices and controller cards that are typically present in a system. The following MIB tables define the BIOS Setup Control Group:

- BIOS Setup Control Table
- SCSI Control Table
- Parallel Port Control Table
- Serial Port Control Table
- USB Control Table
- IDE Control Table
- Diskette Control Table
- Network Interface Control Table

### BIOS Setup Control Table

<b>Name</b>	biosSetUpControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10
<b>Description</b>	Defines the set of single devices in a chassis controlled by the BIOS.
<b>Syntax</b>	BiosSetUpControlTableEntry
<b>Access</b>	Not accessible

### BIOS Setup Control Table Entry

<b>Name</b>	biosSetUpControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1
<b>Description</b>	Defines the BIOS Control Device Table entry.
<b>Syntax</b>	BiosSetUpControlTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	biosSetUpControlchassisIndex

### BIOS Setup Control Chassis Index

<b>Name</b>	biosSetUpControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### BIOS Setup Control (BSUC) Pointing Device Control Capabilities

<b>Name</b>	bsUCpointingDeviceControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.2
<b>Description</b>	Defines the capabilities of the pointing device.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### BIOS Setup Control Pointing Device Control Settings

<b>Name</b>	bsUCpointingDeviceControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.3
<b>Description</b>	Defines the state of the pointing device.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### BIOS Setup Control Pointing Device Control Status

<b>Name</b>	bSUCpointingDeviceControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.4
<b>Description</b>	Defines the status of the pointing device.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### BIOS Setup Control Pointing Device Control Name

<b>Name</b>	bSUCpointingDeviceControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.5
<b>Description</b>	Defines the setup BIOS name of the pointing device.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### BIOS Setup Control Numeric Lock Control Capabilities

<b>Name</b>	bSUCnumLockControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.6
<b>Description</b>	Defines the capabilities of the numeric lock.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### BIOS Setup Control Numeric Lock Control Settings

<b>Name</b>	bSUCnumLockControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.7
<b>Description</b>	Defines the state of the numeric lock.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### **BIOS Setup Control Numeric Lock Control Status**

<b>Name</b>	bSUCnumLockControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.8
<b>Description</b>	Defines the status of the numeric lock.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### **BIOS Setup Control Numeric Lock Control Name**

<b>Name</b>	bSUCnumLockControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.9
<b>Description</b>	Defines the setup BIOS name of the numeric lock.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### **BIOS Setup Control Processor Serial Number Control Capabilities**

<b>Name</b>	bSUCprocessorSerialNumberControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.10
<b>Description</b>	Defines if the processor serial number can be returned.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### **BIOS Setup Control Processor Serial Number Control Settings**

<b>Name</b>	bSUCprocessorSerialNumberControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.11
<b>Description</b>	Defines the state of the processor serial number.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### **BIOS Setup Control Processor Serial Number Control Status**

<b>Name</b>	bSUCprocessorSerialNumberControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.12
<b>Description</b>	Defines the status of the processor serial number.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### **BIOS Setup Control Processor Serial Number Control Name**

<b>Name</b>	bSUCprocessorSerialNumberControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.13
<b>Description</b>	Defines the setup BIOS name of the processor serial number.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

### **BIOS Setup Control Speaker Control Capabilities Unique**

<b>Name</b>	bSUCspeakerControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.14
<b>Description</b>	Defines the capabilities of the speaker control.
<b>Syntax</b>	DellSpeakerControlCapabilitiesUnique (See Table 16-1.)
<b>Access</b>	Read-only

### **BIOS Setup Control Speaker Control Settings Unique**

<b>Name</b>	bSUCspeakerControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.15
<b>Description</b>	Defines the settings available for speaker control.
<b>Syntax</b>	DellSpeakerControlSettingsUnique (See Table 16-2.)
<b>Access</b>	Read-only

### BIOS Setup Control Speaker Control Status

<b>Name</b>	bSUCspeakerControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.16
<b>Description</b>	Defines the status of speaker control.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### BIOS Setup Control Speaker Control Name

<b>Name</b>	bSUCspeakerControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.17
<b>Description</b>	Defines the setup BIOS name of the speaker control.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### BIOS Setup Control NIF Wakeup on LAN Control Capabilities Unique

<b>Name</b>	bSUCnIFwakeonLanControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.18
<b>Description</b>	Defines the defines the capabilities of the network interface function (NIF) Wakeup on LAN.
<b>Syntax</b>	DellNIFwakeonLanControlCapabilitiesUnique (See Table 16-4.)
<b>Access</b>	Read-only

### BIOS Setup Control NIF Wakeup on LAN Control Settings Unique

<b>Name</b>	bSUCnIFwakeonLanControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.19
<b>Description</b>	Defines the state of the NIF Wakeup on LAN.
<b>Syntax</b>	DellNIFwakeonLanControlSettingsUnique (See Table 16-4.)
<b>Access</b>	Read-only



### **BIOS Setup Control NIF Wakeup on LAN Control Status**

<b>Name</b>	bSUCnIFwakeonLanControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.20
<b>Description</b>	Defines the status of the NIF Wakeup on LAN.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### **BIOS Setup Control NIF Wakeup on LAN Control Name**

<b>Name</b>	bSUCnIFwakeonLanControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.21
<b>Description</b>	Defines the setup BIOS name of the NIF Wakeup on LAN.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### **BIOS Setup Control Boot Sequence Control Capabilities Unique**

<b>Name</b>	bSUCbootSequenceControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.22
<b>Description</b>	Defines the capabilities of the boot sequence.
<b>Syntax</b>	DellBootSequenceControlCapabilitiesUnique (SeeTable 16-5.)
<b>Access</b>	Read-only

### **BIOS Setup Control Boot Sequence Control Settings Unique**

<b>Name</b>	DellBootSequenceControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.23
<b>Description</b>	Defines the state of the boot sequence.
<b>Syntax</b>	DellBootSequenceControlSettingsUnique (SeeTable 16-6.)
<b>Access</b>	Read-only

### **BIOS Setup Control Boot Sequence Control Status**

<b>Name</b>	bSUCbootSequenceControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.24
<b>Description</b>	Defines the status of the boot sequence.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### **BIOS Setup Control Boot Sequence Control Name**

<b>Name</b>	bSUCbootSequenceControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.25
<b>Description</b>	Defines the control name of the boot sequence.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

### **BIOS Setup Control Administrator Password Control Capabilities Unique**

<b>Name</b>	bSUCadministratorPasswordControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.26
<b>Description</b>	Defines the capabilities of the administrator password control.
<b>Syntax</b>	DellBIOSPasswordControlCapabilitiesUnique
<b>Access</b>	Read-only

### **BIOS Setup Control Administrator Password Control Settings Unique**

<b>Name</b>	bSUCadministratorPasswordControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.27
<b>Description</b>	Defines the settings for administrator password control.
<b>Syntax</b>	DellBIOSPasswordControlSettingsUnique (See Table 16-9.)
<b>Access</b>	Read-write

### **BIOS Setup Control Administrator Password Control Status**

<b>Name</b>	bSUCadministratorPasswordControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.28
<b>Description</b>	Defines the status for administrator password control.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### **BIOS Setup Control Administrator Password Verify Name**

<b>Name</b>	bSUCadministratorPasswordVerifyName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.29
<b>Description</b>	Defines the setup BIOS name for the current administrator password.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

### **BIOS Setup Control Administrator Password New Password Name**

<b>Name</b>	bSUCadministratorPasswordNewPasswordName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.30
<b>Description</b>	Defines the setup BIOS name of the new administrator password. To set a new administrator password, you must have successfully set the current administrator password immediately preceding this password change.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

### **BIOS Control Setup User Password Control Capabilities Unique**

<b>Name</b>	bSUCuserPasswordControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.31
<b>Description</b>	Defines the capabilities of user password control.
<b>Syntax</b>	DellBIOSPasswordControlCapabilitiesUnique
<b>Access</b>	Read-only

### BIOS Control Setup User Password Control Settings Unique

<b>Name</b>	bSUCuserPasswordControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.32
<b>Description</b>	Defines the control settings for user password control.
<b>Syntax</b>	DellBIOSPasswordControlSettingsUnique (See Table 16-9.)
<b>Access</b>	Read-write

### BIOS Control Setup User Password Control Status

<b>Name</b>	bSUCuserPasswordControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.33
<b>Description</b>	Defines the status of the user password control.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### BIOS Control Setup User Password Verify Name

<b>Name</b>	bSUCuserPasswordVerifyName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.34
<b>Description</b>	Defines the setup BIOS name of the current user password.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

### BIOS Control Setup User Password New Password Name

<b>Name</b>	bSUCuserPasswordNewPasswordName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.10.1.35
<b>Description</b>	Defines the setup BIOS name of the new user password. To set a new user password, a you must have successfully set the current user password immediately preceding this password change.
<b>Syntax</b>	DellString
<b>Access</b>	Read-write

## SCSI Control Table

<b>Name</b>	sCSIControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20
<b>Description</b>	Defines the Small Computer System Interface (SCSI) Control Table.
<b>Syntax</b>	SCSIControlTableEntry
<b>Access</b>	Not accessible

## SCSI Control Table Entry

<b>Name</b>	sCSIControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1
<b>Description</b>	Defines the SCSI Control Table entry.
<b>Syntax</b>	SCSIControlTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	sCSIControlchassisIndex, sCSIControlIndex

## SCSI Control Chassis Index

<b>Name</b>	sCSIControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## SCSI Control Index

<b>Name</b>	sCSIControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.2
<b>Description</b>	Defines the index (one-based) of the SCSI controller in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### SCSI Control Capabilities

<b>Name</b>	sSCSIControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.3
<b>Description</b>	Defines the capabilities of the SCSI controller.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### SCSI Control Settings

<b>Name</b>	sSCSIControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.4
<b>Description</b>	Defines the state of the SCSI controller.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### SCSI Control Status

<b>Name</b>	sSCSIControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.5
<b>Description</b>	Defines the status of the SCSI controller.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### SCSI Control Name

<b>Name</b>	sSCSIControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.20.1.6
<b>Description</b>	Defines the setup BIOS name of the SCSI controller.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Parallel Port Control Table

<b>Name</b>	parallelPortControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30
<b>Description</b>	Defines the Parallel Port Control Table.
<b>Syntax</b>	ParallelPortControlTableEntry
<b>Access</b>	Not accessible

## Parallel Port Control Table Entry

<b>Name</b>	parallelPortControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1
<b>Description</b>	Defines the Parallel Port Control Table entry.
<b>Syntax</b>	ParallelPortControlTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	parallelPortControlchassisIndex, parallelPortControlIndex

## Parallel Port Control Chassis Index

<b>Name</b>	parallelPortControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Parallel Port Control Index

<b>Name</b>	parallelPortControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.2
<b>Description</b>	Defines the index (one-based) of the parallel port in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Parallel Port Control Capabilities Unique

<b>Name</b>	parallelPortControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.3
<b>Description</b>	Defines the capabilities of the parallel port.
<b>Syntax</b>	DellParallelPortControlCapabilitiesUnique (See Table 16-10.)
<b>Access</b>	Read-only

### Parallel Port Control Settings Unique

<b>Name</b>	parallelPortControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.4
<b>Description</b>	Defines the state of the parallel port.
<b>Syntax</b>	DellParallelPortControlSettingsUnique (See Table 16-11.)
<b>Access</b>	Read-only

### Parallel Port Control Status

<b>Name</b>	parallelPortControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.5
<b>Description</b>	Defines the status of the parallel port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Parallel Port Control Name

<b>Name</b>	parallelPortControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.6
<b>Description</b>	Defines the setup BIOS name of the parallel port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only



### Parallel Port Control Mode Capabilities Unique

<b>Name</b>	parallelPortControlModeCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.7
<b>Description</b>	Defines the mode capabilities of the parallel port.
<b>Syntax</b>	DellParallelPortControlModeCapabilitiesUnique (See Table 16-12.)
<b>Access</b>	Read-only

### Parallel Port Control Mode Settings Unique

<b>Name</b>	parallelPortControlModeSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.30.1.8
<b>Description</b>	Defines the mode settings of the parallel port.
<b>Syntax</b>	DellParallelPortControlModeSettingsUnique (See Table 16-12.)
<b>Access</b>	Read-write

### Serial Port Control Table

<b>Name</b>	serialPortControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40
<b>Description</b>	Defines the Serial Port Control Table.
<b>Syntax</b>	SerialPortControlTableEntry
<b>Access</b>	Not accessible

### Serial Port Control Table Entry

<b>Name</b>	serialPortControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1
<b>Description</b>	Defines the Serial Port Control Table entry.
<b>Syntax</b>	SerialPortControlTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	serialPortControlchassisIndex, serialPortControlIndex

### Serial Port Control Chassis Index

<b>Name</b>	serialPortControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.1
<b>Description</b>	Defines index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	read-only

### Serial Port Control Index

<b>Name</b>	serialPortControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.2
<b>Description</b>	Defines the index (one-based) of the serial port in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	read-only

### Serial Port Control Capabilities Unique

<b>Name</b>	serialPortControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.3
<b>Description</b>	Defines the capabilities of the serial port.
<b>Syntax</b>	DellSerialPortControlCapabilitiesUnique (See Table 16-13.)
<b>Access</b>	Read-only

### Serial Port Control Settings Unique

<b>Name</b>	serialPortControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.4
<b>Description</b>	Defines the settings of the serial port.
<b>Syntax</b>	DellSerialPortControlSettingsUnique (See Table 16-14.)
<b>Access</b>	Read-only

## Serial Port Control Status

<b>Name</b>	serialPortControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.5
<b>Description</b>	Defines the status of the serial port.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Serial Port Control Name

<b>Name</b>	serialPortControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.40.1.6
<b>Description</b>	Defines the setup BIOS name of the serial port.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## USB Control Table

These objects enable you to track the attributes of your Universal Serial Bus (USB).

<b>Name</b>	usbControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50
<b>Description</b>	Defines the USB Table.
<b>Syntax</b>	UsbControlTableEntry
<b>Access</b>	Not accessible

## USB Control Table Entry

<b>Name</b>	usbControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1
<b>Description</b>	Defines the USB Table entry.
<b>Syntax</b>	UsbControlTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	usbControlchassisIndex, usbControlIndex

## USB Control Chassis Index

<b>Name</b>	usbControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.1
<b>Description</b>	Defines index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## USB Control Index

<b>Name</b>	usbControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.2
<b>Description</b>	Defines the index (one-based) of the USB in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## USB Control Capabilities

<b>Name</b>	usbControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.3
<b>Description</b>	Defines the capabilities of the USB.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## USB Control Settings

<b>Name</b>	usbControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.4
<b>Description</b>	Defines the control settings for the USB.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

## USB Control Status

<b>Name</b>	usbControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.5
<b>Description</b>	Defines the status of the USB.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## USB Control Name

<b>Name</b>	usbControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.50.1.6
<b>Description</b>	Defines the setup BIOS name of the USB.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## IDE Control Table

These objects enable you to track the attributes of Integrated Device Electronics (IDE) controller cards in your system.

<b>Name</b>	ideControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60
<b>Description</b>	Defines the IDE Control Table.
<b>Syntax</b>	IdeControlTableEntry
<b>Access</b>	Not accessible

## IDE Control Table Entry

<b>Name</b>	ideControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1
<b>Description</b>	Defines the IDE Control Table entry.
<b>Syntax</b>	IdeControlTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	ideControlchassisIndex, ideControlIndex

### IDE Control Chassis Index

<b>Name</b>	ideControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### IDE Control Index

<b>Name</b>	ideControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.2
<b>Description</b>	Defines the index (one-based) of the IDE controller in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### IDE Control Capabilities Unique

<b>Name</b>	ideControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.3
<b>Description</b>	Defines the capabilities of the IDE controller.
<b>Syntax</b>	DellideControlCapabilitiesUnique (See Table 16-15.)
<b>Access</b>	Read-only

### IDE Control Settings Unique

<b>Name</b>	ideControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.4
<b>Description</b>	Defines the settings for the IDE controller.
<b>Syntax</b>	DellideControlCapabilitiesUnique (See Table 16-15.)
<b>Access</b>	Read-only

## IDE Control Status

<b>Name</b>	ideControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.5
<b>Description</b>	Defines the status for the IDE controller.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## IDE Control Name

<b>Name</b>	ideControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.60.1.6
<b>Description</b>	Defines the setup BIOS name for the IDE controller.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Diskette Control Table

<b>Name</b>	disketteControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70
<b>Description</b>	Defines the Diskette Control Table.
<b>Syntax</b>	DisketteControlTableEntry
<b>Access</b>	Not accessible

## Diskette Control Table Entry

<b>Name</b>	disketteControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1
<b>Description</b>	Defines the Diskette Control Table entry.
<b>Syntax</b>	DellStatus
<b>Access</b>	Not accessible
<b>Index</b>	disketteControlchassisIndex, disketteControlIndex

### Diskette Control Chassis Index

<b>Name</b>	disketteControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Diskette Control Index

<b>Name</b>	disketteControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.2
<b>Description</b>	Defines the index of the diskette controllers in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Diskette Control Capabilities Unique

<b>Name</b>	disketteControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.3
<b>Description</b>	Defines the capabilities of the diskette controller.
<b>Syntax</b>	DellDisketteControlCapabilitiesUnique (See Table 16-17.)
<b>Access</b>	Read-only

### Diskette Control Settings Unique

<b>Name</b>	disketteControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.4
<b>Description</b>	Defines the control settings for the diskette controller.
<b>Syntax</b>	DellDisketteControlSettingsUnique
<b>Access</b>	Read-only



## Diskette Control Status

<b>Name</b>	disketteControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.5
<b>Description</b>	Defines the status of the diskette controller.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Diskette Control Name

<b>Name</b>	disketteControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.70.1.6
<b>Description</b>	Defines the setup BIOS name of the diskette controller.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Network Interface Control Table

These MIB objects enable you to track the attributes of the NIC card for your system.

<b>Name</b>	networkInterfaceControlTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80
<b>Description</b>	Defines the Network Interface Control Table.
<b>Syntax</b>	NetworkInterfaceControlTableEntry
<b>Access</b>	Not accessible

## Network Interface Control Table Entry

<b>Name</b>	networkInterfaceControlTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1
<b>Description</b>	Defines the Network Interface Control Table entry.
<b>Syntax</b>	NetworkInterfaceControlTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	networkInterfaceControlchassisIndex, networkInterfaceControlIndex

### Network Interface Control Chassis Index

<b>Name</b>	networkInterfaceControlchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Network Interface Control Index

<b>Name</b>	networkInterfaceControlIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.2
<b>Description</b>	Defines the index (one-based) of the network interface controller in this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Network Interface Control Capabilities Unique

<b>Name</b>	networkInterfaceControlCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.3
<b>Description</b>	Defines the capabilities of the NIC.
<b>Syntax</b>	DellNetworkInterfaceControlCapabilitiesUnique (See Table 16-17.)
<b>Access</b>	Read-only

### Network Interface Control Settings Unique

<b>Name</b>	networkInterfaceControlSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.4
<b>Description</b>	Defines the control settings for the NIC.
<b>Syntax</b>	DellNetworkInterfaceControlSettingsUnique (See Table 16-18.)
<b>Access</b>	Read-write

## Network Interface Control Status

<b>Name</b>	networkInterfaceControlStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.5
<b>Description</b>	Defines the status of the NIC.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Network Interface Control Name

<b>Name</b>	networkInterfaceControlName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1400.80.1.6
<b>Description</b>	Defines the setup BIOS name of the NIC.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

# BIOS Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 16-1. Speaker Control Capabilities Unique**

---

<b>Variable Name:</b> DellSpeakerControlCapabilitiesUnique	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Speaker control capabilities are unknown.
enableCapable(2)	Setup BIOS can enable speaker control.
lowCapable(4)	Setup BIOS can set the speaker volume to low.
mediumCapable(8)	Setup BIOS can set the speaker volume to medium.
highCapable(16)	Setup BIOS can set the speaker volume to high.
allVolumeCapable(30)	Setup BIOS can set the speaker volume to any of the three settings.

---

**Table 16-2. Speaker Control Settings Unique**

---

**Variable Name:** DellSpeakerControlSettingsUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Speaker control state is unknown.
enabled(2)	Speaker control is enabled.
low(4)	Speaker control volume is low.
medium(8)	Speaker control volume is medium.
high(16)	Speaker control volume is high.

---

**Table 16-3. Network Interface (NIF) Wakeup on LAN Capabilities Unique**

---

**Variable Name:** DellNIFwakeonLanControlCapabilitiesUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Setup BIOS Wakeup on LAN capabilities are unknown.
enableCapable(2)	Setup BIOS is capable of enabling the NIF Wakeup on LAN.
addInCardCapable(4)	Setup BIOS is capable of enabling Wakeup on LAN by option card.
onBoardCapable(8)	Setup BIOS is capable of enabling Wakeup on LAN by integrated NIF.
bothCapable(14)	Setup BIOS is capable of enabling Wakeup on LAN by either option card or integrated NIF.

---

**Table 16-4. NIF Wakeup on LAN Control Settings Unique**

---

**Variable Name:** DellNIFwakeonLanControlSettingsUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	NIF Wakeup on LAN state is unknown.
enabled(2)	NIF Wakeup on LAN is enabled.
addInCard(4)	NIF Wakeup on LAN is by option card.
onBoard(8)	NIF Wakeup on LAN is by integrated NIF.
addInCardOrOnBoard(12)	NIF Wakeup on LAN is by option card or integrated NIF.

---

**Table 16-5. Boot Sequence Control Capabilities Unique**

---

**Variable Name:** DellBootSequenceControlCapabilitiesUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
bootSequenceUnknown(1)	Boot sequence capabilities are unknown.
bootFromDisketteFirstCapable(2)	Setup BIOS can boot from a diskette first.
bootFromhardDriveFirstCapable(4)	Setup BIOS can boot from an IDE hard drive first.
bootFromDisketteORHardDriveFirstCapable(6)	Setup BIOS can boot from a diskette or an IDE hard drive first.
bootFromDeviceListCapable(8)	Setup BIOS can boot from a device list.
bootFromCDROMFirstCapable(16)	Setup BIOS can boot from a CD first.
allFirstCapable(30)	Setup BIOS can boot by any of the preceding methods first.

---

**Table 16-6. Boot Sequence Control Settings Unique**


---

**Variable Name:** DellBootSequenceControlSettingsUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
bootSequenceUnknown(1)	Boot sequence state is unknown.
bootFromDisketteFirst(2)	Setup BIOS is set to boot by diskette first.
bootFromHardDriveFirst(4)	Setup BIOS is set to boot by IDE hard drive first.
bootFromDeviceList(8)	Setup BIOS is set to boot by a device list.
bootFromCDROMFirst(16)	Setup BIOS is set to boot by CD first.

---

**Table 16-7. BIOS Password Control Capabilities**


---

**Variable Name:** DellBIOSPasswordControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
passwordControlCapabilitiesUnknown(1)	BIOS password capabilities are unknown.
passwordControlEnableCapable(2)	Setup BIOS is capable of enabling password changes.
passwordControlJumperDisableCapable(4)	Setup BIOS is capable of determining if password control can be jumper disabled.
passwordControlEnableANDJumperDisableCapable(6)	Setup BIOS is capable of enabling password changes and of determining if password control can be jumper disabled.

---

**Table 16-8. BIOS Password Control Settings Unique**


---

**Variable Name:** DellBIOSPasswordControlSettingsUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
passwordControlSettingsUnknown(1)	Setup BIOS password state is unknown.
passwordControlEnabled(2)	Setup BIOS has password changes enabled.
passwordControlJumperDisabled(4)	Setup BIOS has determined that password control has been disabled by a jumper.

---

**Table 16-9. BIOS Password Control Settings**

---

**Variable Name:** DellBIOSPasswordControlSettingsUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
passwordControlSettingsUnknown(1)	Setup BIOS password state is unknown.
passwordControlEnabled(2)	Setup BIOS has password changes enabled.
passwordControlJumperDisabled(4)	Setup BIOS has determined that password control has been disabled by a jumper.

---

**Table 16-10. Parallel Port Control Capabilities**

---

**Variable Name:** DellParallelPortControlCapabilitiesUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Setup BIOS parallel port capabilities are unknown.
enableCapable(2)	Setup BIOS can enable the parallel port.
lpt1Capable(4)	Setup BIOS can support parallel port 1.
lpt1andEnableCapable(6)	Setup BIOS has enabled parallel port 1.
lpt2Capable(8)	Setup BIOS can support parallel port 2.
lpt2andEnableCapable(10)	Setup BIOS has enabled parallel port 2.
lpt3Capable(16)	Setup BIOS can support parallel port 3.
lpt3andEnableCapable(18)	Setup BIOS has enabled parallel port 3.
allParallelPortCapable(30)	Setup BIOS can support any of the three parallel ports.

---

**Table 16-11. Parallel Port Control Settings**

---

**Variable Name:** DellParallelPortControlSettingsUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Parallel port state is unknown.
enabled(2)	Setup BIOS has enabled the parallel port.
lpt1(4)	Setup BIOS supports parallel port 1.
lpt1Enabled(6)	Setup BIOS has enabled parallel port 1.
lpt2(8)	Setup BIOS supports parallel port 2.
lpt2Enabled(10)	Setup BIOS has enabled parallel port 2.
lpt3(16)	Setup BIOS supports parallel port 3.

---

**Table 16-12. Parallel Port Control Mode Settings**

---

**Variable Name:** DellParallelPortControlModeSettingsUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Parallel port mode is unknown.
atModeEnabled(2)	Setup BIOS has set the parallel port to AT mode.
ps2ModeEnabled(4)	Setup BIOS has set the parallel port to Personal Systems/2 (PS/2) mode.
ecpModeEnabled(8)	Setup BIOS has set the parallel port to Extended Capabilities Port (ECP) mode.
eppModeEnabled(16)	Setup BIOS has set the parallel port to Enhanced Parallel Port (EPP) mode.

---



**Table 16-13. Serial Port Control Capabilities**

---

**Variable Name:** DellSerialPortControlCapabilitiesUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Setup BIOS serial port capabilities are unknown.
enableCapable(2)	Setup BIOS can enable the serial port.
com1Capable(4)	Setup BIOS can support serial port 1.
enableAndCom1Capable(6)	Setup BIOS can enable serial port 1.
com2Capable(8)	Setup BIOS can support serial port 2.
enableAndCom2Capable(10)	Setup BIOS is capable of enabling serial port 2.
com3Capable(16)	Setup BIOS can support serial port 3.
enableAndCom3Capable(18)	Setup BIOS is capable of enabling serial port 3.
com4Capable(32)	Setup BIOS can support serial port 4.
enableAndCom4Capable(34)	Setup BIOS is capable of enabling serial port 4.
autoConfigCapable(64)	Setup BIOS is capable of autoconfiguring all serial ports.
com1OrCom3CapableAndAutoConfigCapable(86)	Setup BIOS has enabled autoconfiguration of COM1 and COM3 serial ports.
com2OrCom4CapableAndAutoConfigCapable(106)	Setup BIOS has enabled autoconfiguration of COM2 and COM4 serial ports.
allcomCapable(126)	Setup BIOS is capable of enabling or autoconfiguring all serial ports.

---

**Table 16-14. Serial Port Control Settings**

---

**Variable Name:** DellSerialPortControlSettingsUnique

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Serial port state is unknown.
enabled(2)	Setup BIOS has enabled the serial port.
com1(4)	Setup BIOS has selected serial port 1.
com1Enabled(6)	Setup BIOS has enabled serial port 1.
com2(8)	Setup BIOS has selected serial port 2.
com2Enabled(10)	Setup BIOS has enabled serial port 2.
com3(16)	Setup BIOS has selected serial port 3.
com3Enabled(18)	Setup BIOS has enabled serial port 3.
com4(32)	Setup BIOS has selected serial port 4.
com4Enabled(34)	Setup BIOS has enabled serial port 4.
comPortsAutoConfig(64)	Setup BIOS has selected autoconfiguration of serial ports.
enabledAndAutoConfig(66)	Setup BIOS has enabled autoconfiguration of serial ports.

---

**Table 16-15. IDE Control Capabilities**


---

**Variable Name:** DellIdeControlCapabilitiesUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	IDE control capabilities are unknown.
ideControlAutoConfigOrEnableCapable(2)	IDE controller is autoconfigurable or enable capable.

---

**Table 16-16. Diskette Control Settings**


---

**Variable Name:** DellDisketteControlSettingsUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	Diskette control state is unknown.
disketteControlAutoConfigEnabledOrEnabled(2)	Diskette control is set as autoconfigurable or enabled.

---

**Table 16-17. Network Interface Control Capabilities**


---

**Variable Name:** DellNetworkInterfaceControlCapabilitiesUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	Unknown setup BIOS network interface capabilities.
enableCapable(2)	Setup BIOS is capable of enabling the network interface.
enableWithoutPXECapable(4)	Setup BIOS is capable of enabling the NIF without Pre-boot eXecution Environment (PXE).

---

**Table 16-18. Network Interface Control Settings**


---

**Variable Name:** DellNetworkInterfaceControlSettingsUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
unknown(1)	Network interface state is unknown.
enabled(2)	Network interface is enabled.
enabledWithoutPXE(4)	Network interface is enabled without PXE.

---



## Local Response Agent Group

The Local Response Agent Group provides information about various attributes of your system's local response agent (LRA). The LRA allows systems managers to predetermine how a system running the server administrator will respond to a particular event type, such as the loss of redundancy in a specific component or the elevation of temperature in a chassis. Systems managers can configure the LRA to respond to an event type with a specific action. When the condition of the critical component worsens, the systems manager can escalate the response to make it more obvious to the operator.

For example, when a voltage probe on a monitored machine reaches a warning condition, the systems manager may want to notify the operator by causing the machine to beep. When the voltage probe reaches failure, the systems manager might want to have the system that has a failing component send a broadcast message to the management system and power off the troubled system.

### LRA Group Tables

The following management information base (MIB) tables define LRA variable attributes:

- LRA Global Settings Table
- LRA Action Table

#### LRA Global Settings

The global settings table allows the systems manager to determine what LRA capabilities exist for a specific system that is running Server Administrator. Some machines may support all or some of the capabilities described in `DellLocalResponseAgentCapabilitiesUnique`. The LRA Global Settings Table also defines thermal shutdown capabilities and settings. In the event that a temperature probe determines the temperature is at or over the failure limit, the systems manager can set an action to be taken automatically.

## LRA Global Settings Table

<b>Name</b>	lRAGlobalSettingsTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10
<b>Description</b>	Defines the LRA Global Settings Table.
<b>Syntax</b>	SEQUENCE OF LRAGlobalSettingsTableEntry
<b>Access</b>	Not accessible

## LRA Global Settings Table Entry

<b>Name</b>	lRAGlobalSettingsTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1
<b>Description</b>	Defines the LRA Global Settings Table entry.
<b>Syntax</b>	LRAGlobalSettingsTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	lRAGlobalChassisIndex

## LRA Global Chassis Index

<b>Name</b>	lRAGlobalChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## LRA Global State

<b>Name</b>	lRAGlobalState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1.2
<b>Description</b>	Defines the state of the LRA global settings.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### LRA Global Settings Disable Time-out Value

<b>Name</b>	lRAGlobalSettingsDisableTimeoutValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1.3
<b>Description</b>	Defines the time-out duration countdown, in seconds, that the LRA global settings will be disabled after a system shutdown and reboot.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### LRA Global Settings Capabilities Unique

<b>Name</b>	lRAGlobalSettingsCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1.4
<b>Description</b>	Defines the set of global capabilities that all local response agents may or may not allow to be set or reset.
<b>Syntax</b>	DellLocalResponseAgentCapabilitiesUnique (See Table 17-1.)
<b>Access</b>	Read-only

### LRA Global Thermal Shutdown Capabilities Unique

<b>Name</b>	lRAGlobalThermalShutdownCapabilitiesUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1.5
<b>Description</b>	Defines the set of thermal shutdown capabilities that are supported by the LRA.
<b>Syntax</b>	DellLRAThermalShutdownCapabilitiesUnique
<b>Access</b>	Read-only

### LRA Global Thermal Shutdown State Settings Unique

<b>Name</b>	lRAGlobalThermalShutdownStateSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.10.1.6
<b>Description</b>	Defines the set of thermal shutdown state and settings that the local response agent supports.
<b>Syntax</b>	DellLRAThermalShutdownStateSettingsUnique
<b>Access</b>	Read-write

## LRA Action Table

The `DellLocalResponseAgentCapabilitiesUnique` variable in the global action table defines the capabilities that are allowed for a particular system. The LRA Action Table that follows selects which of the system's capabilities (global actions) are to be enabled.

<b>Name</b>	<code>lRAActionTableTable</code>
<b>Object ID</b>	<code>1.3.6.1.4.1.674.10892.1.1500.20</code>
<b>Description</b>	Defines the LRA Action Table.
<b>Syntax</b>	<code>SEQUENCE OF lRAActionTableTableEntry</code>
<b>Access</b>	Not accessible

## LRA Action Table Entry

<b>Name</b>	<code>lRAActionTableTableEntry</code>
<b>Object ID</b>	<code>1.3.6.1.4.1.674.10892.1.1500.20.1</code>
<b>Description</b>	Defines the LRA Action Table entry.
<b>Syntax</b>	<code>lRAActionTableTableEntry</code>
<b>Access</b>	Not accessible
<b>Index</b>	<code>lRAActionTablechassisIndex</code> , <code>lRAActionTableActionNumberIndex</code>

## LRA Action Table Chassis Index

<b>Name</b>	<code>lRAActionTablechassisIndex</code>
<b>Object ID</b>	<code>1.3.6.1.4.1.674.10892.1.1500.20.1.1</code>
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	<code>DellObjectRange</code>
<b>Access</b>	Read-only



## LRA Action Table Action Number Index

<b>Name</b>	lRAActionTableActionNumberIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.20.1.2
<b>Description</b>	Defines the LRA action number index. The action number indexes are as follows: <ul style="list-style-type: none"><li>160 — temperature failure action definition</li><li>168 — cooling device failure action definition</li><li>172 — voltage failure action definition</li><li>200 — temperature warning action definition</li><li>202 — voltage warning action definition</li><li>204 — cooling device warning action definition</li><li>206 — amperage failure action definition</li><li>208 — amperage warning action definition</li><li>210 — a power or cooling unit redundancy lost action definition</li><li>212 — a power or cooling unit redundancy degraded action definition</li><li>214 — power supply failed action definition</li><li>220 — chassis intrusion action definition</li><li>228 — memory device warning action definition</li><li>474 — memory device failure action definition</li><li>1006 — automatic system recovery (ASR) action definition</li><li>1353 — power supply warning action definition</li><li>1553 — log near full action definition</li><li>1554 — log full action definition</li><li>1603 — processor warning action definition</li><li>1604 — processor failure action definition</li></ul>
<b>Syntax</b>	DellUnsigned16BitRange
<b>Access</b>	Read-only

## LRA Action Table User Application Name

<b>Name</b>	lRAActionTableUserApplicationName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.20.1.3
<b>Description</b>	When the "execute application value" is set, provides the following user-assignable LRA information: <ul style="list-style-type: none"><li>• Name of the user application executable path</li><li>• File name to execute</li></ul>
<b>Syntax</b>	DisplayString (SIZE (0..256))
<b>Access</b>	Read-write

## LRA Action Table Settings Unique

<b>Name</b>	lRAActionTableSettingsUnique
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1500.20.1.4
<b>Description</b>	Defines the LRA settings.
<b>Syntax</b>	DellLocalResponseAgentSettingsUnique (See Table 17-3.)
<b>Access</b>	Read-write

## Local Response Agent Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 17-1. LRA Capabilities Definitions**

---

<b>Variable Name:</b> DellLocalResponseAgentCapabilitiesUnique	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
speakerControlCapable(1)	The LRA can issue a speaker beep.
consoleAlertCapable(2)	The LRA can alert the console.
broadcastMessageCapable(4)	The LRA can broadcast a message.
osShutDownCapable(8)	The LRA can shut down the operating system.
rebootCapable(16)	The LRA can reboot the system.
powerCycleCapable(32)	The LRA is capable of a system power cycle.
powerOFFCapable(64)	The LRA can shut the system power off.
executeApplicationCapable(256)	The LRA can execute a user mode application.
lraFullyCapable(383)	The LRA has all of the preceding capabilities.

---

**Table 17-2. LRA Thermal Shutdown Capabilities Unique**


---

**Variable Name:** DellLRAThermalShutdownCapabilitiesUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The LRA has no thermal shutdown capabilities.
Unknown capabilities(1)	The LRA's thermal shutdown capabilities are unknown.
enableCapable(2)	The LRA can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
warningCapable(4)	The LRA can carry out chassis-determined action(s) when a warning condition is detected.
enableOnWarningCapable(6)	The LRA enables activation of chassis-determined action(s) when a warning condition is detected.
failureCapable(8)	The LRA can carry out chassis-determined action(s) when a failure condition is detected.
enableOnFailureCapable(10)	The LRA enables activation of chassis-determined action(s) when a failure condition is detected.
enableOnWarningOrFailureCapable(14)	The LRA enables activation of chassis-determined action(s) when either a failure or a warning condition is detected.

---

**Table 17-3. Local Response Agent Settings Unique**


---

**Variable Name:** DellLocalResponseAgentSettingsUnique

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
speakerControl(1)	LRA is set to issue a speaker beep.
consoleAlert(2)	LRA is set to issue a console alert.
broadcastMessage(4)	LRA is set to issue a broadcast message.
osShutDown(8)	LRA is set to issue an operating system shutdown.
reboot(16)	LRA is set to issue a system reboot.
powerCycle(32)	LRA is set to issue a system power cycle.
powerOFF(64)	LRA is set to issue a system power off.
executeApplication(256)	LRA is set to start a user mode application.
allLRASettingsUnique(383)	LRA is set to all LRA settings combinations.

---



## Cost of Ownership Group

The Cost of Ownership (COO) Group provides a full set of cost-tracking objects, including fields for the computer's manufacturer, insurer, lessor, warranty, user, trouble tickets, and many others. You can use these management information base (MIB) objects to obtain accurate and complete measurements of the cost of each computer asset in your organization.

### Cost of Ownership Group Tables

The Cost of Ownership Group defines objects in the following MIB tables:

- Cost of Ownership Table
- COO Service Contract Table
- COO Cost Event Log Table
- COO Warranty Table
- COO Lease Information Table
- COO Schedule Number Table
- COO Options Table
- COO Maintenance Table
- COO Repair Table
- COO Support Information Table
- COO Trouble Ticket Table

### Cost of Ownership Table

The following MIB object sets up the Cost of Ownership Table.

<b>Name</b>	cooTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10
<b>Description</b>	Defines the Cost of Ownership Table.
<b>Syntax</b>	SEQUENCE OF CooTableEntry
<b>Access</b>	Not accessible

### Cost of Ownership Table Entry

<b>Name</b>	cooTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1
<b>Description</b>	Defines the Cost of Ownership Table entry.
<b>Syntax</b>	CooTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	coochassisIndex

### COO Chassis Index

<b>Name</b>	coochassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	CooTableEntry
<b>Access</b>	Read-only

### COO State

<b>Name</b>	cooState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.2
<b>Description</b>	Defines the acquisition state of the system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### COO Acquisition Purchase Cost

<b>Name</b>	cooAquisitionPurchaseCost
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.3
<b>Description</b>	Defines the purchase cost of the system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Acquisition Waybill Number**

<b>Name</b>	cooAquisitionWayBillNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.4
<b>Description</b>	Defines the waybill number of the system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Acquisition Install Date Name**

<b>Name</b>	cooAquisitionInstallDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.5
<b>Description</b>	Defines the installation date and time for the system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-write

### **COO Acquisition Purchase Order**

<b>Name</b>	cooAquisitionPurchaseOrder
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.6
<b>Description</b>	Defines the purchase order number of the system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Acquisition Purchase Date Name**

<b>Name</b>	cooAquisitionPurchaseDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.7
<b>Description</b>	Defines the purchase date and time of the system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-write

### **COO Acquisition Signing Authority Name**

<b>Name</b>	cooAquisitionSigningAuthorityName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.8
<b>Description</b>	Defines the name of the authorized person who signs for the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Original Machine Configuration Expensed**

<b>Name</b>	cooOriginalMachineConfigurationExpensed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.9
<b>Description</b>	Specifies whether the purchase of this system was expensed.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-write

### **COO Original Machine Configuration Vendor Name**

<b>Name</b>	cooOriginalMachineConfigurationVendorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.10
<b>Description</b>	Defines the vendor name of the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-only

### **COO Cost Center Information Vendor Name**

<b>Name</b>	cooCostCenterInformationVendorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.11
<b>Description</b>	Defines the cost center name of the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write



### **COO User Information User Name**

<b>Name</b>	cooUserInformationUserName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.12
<b>Description</b>	Defines the name of the user for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Extended Warranty Start Date Name**

<b>Name</b>	cooExtendedWarrantyStartDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.13
<b>Description</b>	Defines the extended warranty start date for this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-write

### **COO Extended Warranty End Date Name**

<b>Name</b>	cooExtendedWarrantyEndDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.14
<b>Description</b>	Defines the extended warranty end date for this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-write

### **COO Extended Warranty Cost**

<b>Name</b>	cooExtendedWarrantyCost
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.15
<b>Description</b>	Defines the extended warranty cost date for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Extended Warranty Provider Name**

<b>Name</b>	cooExtendedWarrantyProviderName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.16
<b>Description</b>	Defines the name of the extended warranty provider for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Ownership Code**

<b>Name</b>	cooOwnershipCode
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.17
<b>Description</b>	Defines the ownership code for this system.
<b>Syntax</b>	DellCooOwnershipCodes (See Table 18-1.)
<b>Access</b>	Read-write

### **COO Corporate Owner Name**

<b>Name</b>	cooCorporateOwnerName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.18
<b>Description</b>	Defines the name of the corporation that owns this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Hazardous Waste Code Name**

<b>Name</b>	cooHazardousWasteCodeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.19
<b>Description</b>	Defines the hazardous waste code for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Deployment Date Length

<b>Name</b>	cooDeploymentDateLength
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.20
<b>Description</b>	Defines the deployment time for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### COO Deployment Duration Type

<b>Name</b>	cooDeploymentDurationType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.21
<b>Description</b>	Defines the deployment time units for this system.
<b>Syntax</b>	DellCooHourDayDurationType (See Table 18-2.)
<b>Access</b>	Read-write

### COO Training Name

<b>Name</b>	cooTrainingName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.22
<b>Description</b>	Defines the training that the user has for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Outsourcing Problem Description Name

<b>Name</b>	cooOutsourcingProblemDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.23
<b>Description</b>	Defines a problem encountered with the outsourcing service provider.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Outsourcing Service Fee Name**

<b>Name</b>	cooOutsourcingServiceFeeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.24
<b>Description</b>	Defines amount that the outsourcing vendor charges for service.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Outsourcing Signing Authority Name**

<b>Name</b>	cooOutsourcingSigningAuthorityName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.25
<b>Description</b>	Defines the name of the person who can sign the authorization for service.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Outsourcing Provider Fee Name**

<b>Name</b>	cooOutsourcingProviderFeeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.26
<b>Description</b>	Defines any additional outsourcing charge for service.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Outsourcing Provider Service Level Name**

<b>Name</b>	cooOutsourcingProviderServiceLevelName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.27
<b>Description</b>	Defines the service level agreement for the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Insurance Company Name

<b>Name</b>	cooInsuranceCompanyName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.28
<b>Description</b>	Defines the name of the company that insures this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Box Asset Tag Name

<b>Name</b>	cooBoxAssetTagName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.29
<b>Description</b>	Defines the name of the asset tag.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Box System Name

<b>Name</b>	cooBoxSystemName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.30
<b>Description</b>	Defines the name of the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Box Central Processing Unit (CPU) Serial Number Name

<b>Name</b>	cooBoxCPUSerialNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.31
<b>Description</b>	Defines the name of the CPU serial number for the system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Operating System Upgrade Type Name

<b>Name</b>	cooOperatingSystemUpgradeTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.32
<b>Description</b>	Defines the name of the operating system on this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Operating System Upgrade Patch Level Name

<b>Name</b>	cooOperatingSystemUpgradePatchLevelName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.33
<b>Description</b>	Defines the name of the operating system patch level for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Operating System Upgrade Date

<b>Name</b>	cooOperatingSystemUpgradeDate
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.34
<b>Description</b>	Defines the upgrade file date for this operating system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Depreciation Duration

<b>Name</b>	cooDepreciationDuration
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.35
<b>Description</b>	Defines the length of depreciation for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Depreciation Duration Type**

<b>Name</b>	cooDepreciationDurationType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.36
<b>Description</b>	Defines the unit of time for the depreciation of this system.
<b>Syntax</b>	DellCooMonthYearDurationType
<b>Access</b>	Read-write

### **COO Depreciation Percentage**

<b>Name</b>	cooDepreciationPercentage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.37
<b>Description</b>	Defines the percentage of depreciation for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Depreciation Method Name**

<b>Name</b>	cooDepreciationMethodName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.38
<b>Description</b>	Defines the name of the depreciation method for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Registration Is Registered**

<b>Name</b>	cooRegistrationIsRegistered
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.10.1.39
<b>Description</b>	Specifies whether this system is registered or not.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-write

## COO Service Contract Table

The service contract table provides MIB objects that help you track the name, vendor, and type of service contract you have for your system.

<b>Name</b>	cooServiceContractTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20
<b>Description</b>	Defines the COO Service Contract Table.
<b>Syntax</b>	SEQUENCE OF CooServiceContractTableEntry
<b>Access</b>	not-accessible

## COO Service Contract Table Entry

<b>Name</b>	cooServiceContractTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1
<b>Description</b>	Defines the COO Service Contract Table entry.
<b>Syntax</b>	CooServiceContractTableEntry
<b>Access</b>	not-accessible
<b>Index</b>	cooServiceContractchassisIndex, cooServiceContractIndex

## COO Service Contract Chassis Index

<b>Name</b>	cooServiceContractchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## COO Service Contract Index

<b>Name</b>	cooServiceContractIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.2
<b>Description</b>	Defines the index (one-based) of this service contract.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only



### **COO Service Contract State**

<b>Name</b>	cooServiceContractState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.3
<b>Description</b>	Defines the status of the service contract for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### **COO Service Contract Was Renewed**

<b>Name</b>	cooServiceContractWasRenewed
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.4
<b>Description</b>	Specifies whether the service contract for this system was renewed.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-write

### **COO Service Contract Type Name**

<b>Name</b>	cooServiceContractTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.5
<b>Description</b>	Defines the name of the service contract type for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Service Contract Vendor Name**

<b>Name</b>	cooServiceContractVendorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.20.1.6
<b>Description</b>	Defines the name of the service contract provider for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

## COO Cost Event Log Table

The COO Cost Event Log Table provides MIB objects that allow you to track the duration and type of events that are logged for a particular system.

<b>Name</b>	cooCostEventLogTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30
<b>Description</b>	Defines the COO Cost Event Log Table.
<b>Syntax</b>	SEQUENCE OF COO CostEventLogTableEntry
<b>Access</b>	Not-accessible

## COO Cost Event Log Table Entry

<b>Name</b>	cooCostEventLogTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1
<b>Description</b>	Defines the COO Cost Event Log Table entry.
<b>Syntax</b>	cooCostEventLogTableEntry
<b>Access</b>	Not-accessible
<b>Index</b>	cooCostEventLogchassisIndex, cooCostEventLogIndex

## COO Cost Event Log Chassis Index

<b>Name</b>	cooCostEventLogchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## COO Cost Event Log Index

<b>Name</b>	cooCostEventLogIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.2
<b>Description</b>	Defines the index (one-based) of the cost event log.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Cost Event Log State

<b>Name</b>	cooCostEventLogState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.3
<b>Description</b>	Defines the cost event log state of this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### COO Cost Event Log Duration

<b>Name</b>	cooCostEventLogDuration
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.4
<b>Description</b>	Defines the duration of the event for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### COO Cost Event Log Duration Type

<b>Name</b>	cooCostEventLogDurationType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.5
<b>Description</b>	Defines the duration type of the event for this system.
<b>Syntax</b>	DellCOOHourDayDurationType (See Table 18-2.)
<b>Access</b>	Read-write

### COO Cost Event Log Description Name

<b>Name</b>	cooCostEventLogDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.30.1.6
<b>Description</b>	Defines the name of the event description.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

## COO Warranty Table

The COO Warranty Table objects enable you to track facts about the type and duration of the warranty for a particular system.

<b>Name</b>	cooWarrantyTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40
<b>Description</b>	Defines the COO Warranty Table.
<b>Syntax</b>	SEQUENCE OF CooWarrantyTableEntry
<b>Access</b>	Not accessible

## COO Warranty Table Entry

<b>Name</b>	cooWarrantyTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1
<b>Description</b>	Defines the COO Warranty Table entry.
<b>Syntax</b>	CooWarrantyTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	cooWarrantychassisIndex, cooWarrantyIndex

## COO Warranty Chassis Index

<b>Name</b>	cooWarrantychassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-write

## COO Warranty Index

<b>Name</b>	cooWarrantyIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.2
<b>Description</b>	Defines the index of the warranty for this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Warranty State

<b>Name</b>	cooWarrantyState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.3
<b>Description</b>	Defines the state of the warranty for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### COO Warranty Duration

<b>Name</b>	cooWarrantyDuration
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.4
<b>Description</b>	Defines the duration of the warranty.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### COO Warranty Duration Type

<b>Name</b>	cooWarrantyDurationType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.5
<b>Description</b>	Defines the warranty duration type for the system.
<b>Syntax</b>	DellCOODayMonthDurationType
<b>Access</b>	Read-write

### COO Warranty End Date Name

<b>Name</b>	cooWarrantyEndDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.6
<b>Description</b>	Defines the warranty end date for this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-write

## COO Warranty Cost

<b>Name</b>	cooWarrantyCost
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.40.1.7
<b>Description</b>	Defines the cost of the warranty for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

## COO Lease Information Table

The COO lease information MIB objects enable you to track information about your lessor, lease duration, and lease type for each system.

<b>Name</b>	cooLeaseInformationTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50
<b>Description</b>	Defines the COO Lease Information Table.
<b>Syntax</b>	SEQUENCE OF CooLeaseInformationTableEntry
<b>Access</b>	Not accessible

## COO Lease Information Table Entry

<b>Name</b>	cooLeaseInformationTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1
<b>Description</b>	Defines the COO Lease Information Table entry.
<b>Syntax</b>	CooLeaseInformationTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	cooLeaseInformationchassisIndex, cooLeaseInformationIndex

## COO Lease Information Chassis Index

<b>Name</b>	cooLeaseInformationchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Lease Information Index

<b>Name</b>	cooLeaseInformationIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.2
<b>Description</b>	Defines the index of the lease information for this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Lease Information State

<b>Name</b>	cooLeaseInformationState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.3
<b>Description</b>	Defines the lease information state for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### COO Lease Information Multiple Schedules

<b>Name</b>	cooLeaseInformationMultipleSchedules
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.4
<b>Description</b>	Defines whether there are multiple schedules for this lease.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

### COO Lease Information Buyout Amount

<b>Name</b>	cooLeaseInformationBuyOutAmount
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.5
<b>Description</b>	Defines the balance purchase price for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Lease Information Lease Rate Factor**

<b>Name</b>	cooLeaseInformationLeaseRateFactor
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.6
<b>Description</b>	Defines the rate factor for the lease on this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Lease Information End Date Name**

<b>Name</b>	cooLeaseInformationEndDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.7
<b>Description</b>	Defines the end date for the lease on this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-write

### **COO Lease Information Fair Market Value**

<b>Name</b>	cooLeaseInformationFairMarketValue
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.8
<b>Description</b>	Defines the fair market value of this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Lease Information Lessor Name**

<b>Name</b>	cooLeaseInformationLessorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.50.1.9
<b>Description</b>	Defines the name of the lessor of this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write



## COO Schedule Number Table

<b>Name</b>	cooScheduleNumberTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60
<b>Description</b>	Defines the COO Schedule Number Information Table.
<b>Syntax</b>	SEQUENCE OF CooScheduleNumberTableEntry
<b>Access</b>	Not accessible

## COO Schedule Number Table Entry

<b>Name</b>	cooScheduleNumberTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1
<b>Description</b>	Defines the COO Schedule Number Information Table entry.
<b>Syntax</b>	CooScheduleNumberTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	cooScheduleNumberchassisIndex, cooScheduleNumberIndex

## COO Schedule Number Chassis Index

<b>Name</b>	cooScheduleNumberchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## COO Schedule Number Index

<b>Name</b>	cooScheduleNumberIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.2
<b>Description</b>	Defines the index of the schedule number information.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Schedule Number State

<b>Name</b>	cooScheduleNumberState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.3
<b>Description</b>	Defines the schedule number information state of this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### COO Schedule Number Lease Information Index Reference

<b>Name</b>	cooScheduleNumberLeaseInformationIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.4
<b>Description</b>	Defines the lease information index number to reference the schedule number.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### COO Schedule Number Description Name

<b>Name</b>	cooScheduleNumberDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.60.1.5
<b>Description</b>	Describes the schedule number information.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Options Table

<b>Name</b>	cooOptionsTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70
<b>Description</b>	Defines the COO Options Table.
<b>Syntax</b>	SEQUENCE OF CooOptionsTableEntry
<b>Access</b>	Not accessible

### COO Options Table Entry

<b>Name</b>	cooOptionsTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1
<b>Description</b>	Defines the COO Options Table entry.
<b>Syntax</b>	CooOptionsTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	cooOptionschassisIndex

### COO Options Chassis Index

<b>Name</b>	cooOptionschassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Options Index

<b>Name</b>	cooOptionsIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.2
<b>Description</b>	Defines the index (one-based) of the option information for this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Options State

<b>Name</b>	cooOptionsState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.3
<b>Description</b>	Defines the option information state for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

## COO Options Lease Information Index Reference

<b>Name</b>	cooOptionsLeaseInformationIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.4
<b>Description</b>	Defines the lease information index of the option information for this system.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

## COO Options Description Name

<b>Name</b>	cooOptionsDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.70.1.5
<b>Description</b>	Defines the option information description name.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

## COO Maintenance Table

<b>Name</b>	cooMaintenanceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80
<b>Description</b>	Defines the COO Maintenance Table.
<b>Syntax</b>	SEQUENCE OF CooMaintenanceTableEntry
<b>Access</b>	Not accessible

## COO Maintenance Table Entry

<b>Name</b>	cooMaintenanceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1
<b>Description</b>	Defines the COO Maintenance Table entry.
<b>Syntax</b>	CooMaintenanceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	CooMaintenancechassisIndex, CooMaintenanceIndex

### COO Maintenance Chassis Index

<b>Name</b>	cooMaintenancechassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Maintenance Index

<b>Name</b>	cooMaintenanceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.2
<b>Description</b>	Defines the index of this system's maintenance information.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Maintenance State

<b>Name</b>	cooMaintenanceState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.3
<b>Description</b>	Defines the state of this system's maintenance information.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### COO Maintenance Start Date Name

<b>Name</b>	cooMaintenanceStartDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.4
<b>Description</b>	Defines the start date for maintenance on this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-write

### COO Maintenance End Date Name

<b>Name</b>	cooMaintenanceEndDateName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.5
<b>Description</b>	Defines the end date for maintenance on this system.
<b>Syntax</b>	DellDateName
<b>Access</b>	Read-write

### COO Maintenance Provider Name

<b>Name</b>	cooMaintenanceProviderName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.6
<b>Description</b>	Defines the maintenance provider's name.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### COO Maintenance Restrictions Name

<b>Name</b>	cooMaintenanceRestrictionsName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.80.1.7
<b>Description</b>	Defines the maintenance agreement restrictions.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### COO Repair Table

<b>Name</b>	cooRepairTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90
<b>Description</b>	Defines the COO Repair Table.
<b>Syntax</b>	SEQUENCE OF CooRepairTableEntry
<b>Access</b>	Not accessible

### COO Repair Table Entry

<b>Name</b>	cooRepairTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1
<b>Description</b>	Defines the COO Repair Table entry.
<b>Syntax</b>	CooRepairTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	cooRepairchassisIndex, cooRepairIndex

### COO Repair Chassis Index

<b>Name</b>	cooRepairchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Repair Index

<b>Name</b>	cooRepairIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.2
<b>Description</b>	Defines the index (one-based) of the repair information for this system.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Repair State

<b>Name</b>	cooRepairState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.3
<b>Description</b>	Defines the state of the repair information for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

## COO Repair Counter

<b>Name</b>	cooRepairCounter
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.4
<b>Description</b>	Defines the number of repairs that this system has undergone.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

## COO Repair Vendor Name

<b>Name</b>	cooRepairVendorName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.90.1.5
<b>Description</b>	Defines the name of the vendor that repairs this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

## COO Support Information Table

<b>Name</b>	cooSupportInformationTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100
<b>Description</b>	Defines the COO Support Information Table.
<b>Syntax</b>	SEQUENCE OF cooSupportInformationTableEntry
<b>Access</b>	Not accessible

## COO Support Information Table Entry

<b>Name</b>	cooSupportInformationTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1
<b>Description</b>	Defines the COO Support Information Table entry.
<b>Syntax</b>	cooSupportInformationTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	cooSupportInformationchassisIndex cooSupportInformationIndex



### COO Support Information Chassis Index

<b>Name</b>	cooSupportInformationchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Support Information Index

<b>Name</b>	cooSupportInformationIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.2
<b>Description</b>	Defines the index (one-based) for this system's support information.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Support Information State

<b>Name</b>	cooSupportInformationState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.3
<b>Description</b>	Defines the support information state for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### COO Support Information Is Outsourced

<b>Name</b>	cooSupportInformationIsOutsourced
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.4
<b>Description</b>	Specifies whether the support for this system is outsourced or not.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-write

### **COO Support Information Type**

<b>Name</b>	cooSupportInformationType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.5
<b>Description</b>	Defines the type of component, system, or network problem that occurred.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### **COO Support Information Help Desk Name**

<b>Name</b>	cooSupportInformationHelpDeskName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.6
<b>Description</b>	Defines the help desk information provided.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

### **COO Support Information Fix Type Name**

<b>Name</b>	cooSupportInformationFixTypeName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.100.1.7
<b>Description</b>	Defines the method used to fix the problem.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

## COO Trouble Ticket Table

The MIB objects in the Trouble Ticket Table enable you to track details of any trouble tickets that you open for your system.

<b>Name</b>	cooTroubleTicketTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110
<b>Description</b>	Defines the COO Trouble Ticket Table.
<b>Syntax</b>	SEQUENCE OF cooTroubleTicketTableEntry
<b>Access</b>	Not accessible

## COO Trouble Ticket Table Entry

<b>Name</b>	cooTroubleTicketTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1
<b>Description</b>	Defines the COO Trouble Ticket Table entry.
<b>Syntax</b>	cooTroubleTicketTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	cooTroubleTicketchassisIndex, cooTroubleTicketIndex

## COO Trouble Ticket Chassis Index

<b>Name</b>	cooTroubleTicketchassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## COO Trouble Ticket Index

<b>Name</b>	cooTroubleTicketIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.2
<b>Description</b>	Defines the index (one-based) of the system's trouble ticket information.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### COO Trouble Ticket State

<b>Name</b>	cooTroubleTicketState
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.3
<b>Description</b>	Defines the trouble ticket information state for this system.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-only

### COO Trouble Ticket Support Information Index Reference

<b>Name</b>	cooTroubleTicketSupportInformationIndexReference
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.4
<b>Description</b>	Defines the support information index that references the trouble ticket.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### COO Trouble Ticket Number Name

<b>Name</b>	cooTroubleTicketNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1600.110.1.5
<b>Description</b>	Defines the trouble ticket number for this system.
<b>Syntax</b>	DellCostofOwnershipString
<b>Access</b>	Read-write

# Cost of Ownership Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 18-1. COO Ownership Codes**

---

**Variable Name:** DellCooOwnershipCodes

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other(1)	The ownership code is not one of following:
unknown(2)	The ownership code is unknown.
owned(3)	The ownership code is owned.
leased(4)	The ownership code is leased.
rented(5)	The ownership code is rented.
offOfLease(6)	The ownership code is off of lease.
transfer(7)	The ownership code is transfer.

---

**Table 18-2. COO Hour Day Duration Type**

---

**Variable Name:** DellCooHourDayDurationType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Duration time type is unknown.
hours(2)	Duration time type is in hours.
days(3)	Duration time type is in days.

---

**Table 18-3. COO Day Month Duration Type**

---

**Variable Name:** DellCooDayMonthDurationType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Duration time type is unknown.
days(3)	Duration time type is in days.
months(4)	Duration time type is in months.

---

**Table 18-4. COO Month Year Duration Type**

---

**Variable Name:** DellCooMonthYearDurationType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	Duration time type is unknown.
months(4)	Duration time type is in months.
years(5)	Duration time type is in years.

---

## Remote Access Group

The Remote Access Group provides information about the remote access hardware that may be present in your system. In addition to providing general information about the capabilities and settings of the remote access hardware, this group provides information about administrative users, SNMP trap destinations, modem configuration for dial-up networking, dial-in configuration, and dial-out destinations.

### DRAC 4

The Remote Access Group defines Dell Remote Access Controller (DRAC) 4 objects in the Remote Access Table.

#### Remote Access Table

The following MIB object sets up the Remote Access Table.

<b>Name</b>	remoteAccessTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10
<b>Description</b>	Defines the Remote Access Table.
<b>Syntax</b>	SEQUENCE OF RemoteAccessTableEntry
<b>Access</b>	Not accessible

#### Remote Access Table Entry

<b>Name</b>	remoteAccessTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1
<b>Description</b>	Defines the Remote Access Table entry.
<b>Syntax</b>	RemoteAccessTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	remoteAccessChassisIndex, remoteAccessAdapterIndex

### Remote Access Chassis Index

<b>Name</b>	remoteAccessChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing the remote access hardware.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Access Adapter Index

<b>Name</b>	remoteAccessAdapterIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.2
<b>Description</b>	Defines the index (one-based) of the remote access hardware.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Access Type

<b>Name</b>	remoteAccessType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.3
<b>Description</b>	Defines the type of remote access hardware.
<b>Syntax</b>	DellRemoteAccessType (See Table 19-1.)
<b>Access</b>	Read-only

### Remote Access State Capabilities

<b>Name</b>	remoteAccessStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.4
<b>Description</b>	Defines the state capabilities of the remote access hardware.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only



### Remote Access State Settings

<b>Name</b>	remoteAccessStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.5
<b>Description</b>	Defines the state setting of the remote access hardware.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Remote Access Status

<b>Name</b>	remoteAccessStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.6
<b>Description</b>	Defines the status of the remote access hardware.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Remote Access Product Info Name

<b>Name</b>	remoteAccessProductInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.7
<b>Description</b>	Defines the name of the product providing the remote access functionality.
<b>Syntax</b>	DellDisplayString (SIZE (0..63))
<b>Access</b>	Read-only

### Remote Access Description Info Name

<b>Name</b>	remoteAccessDescriptionInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.8
<b>Description</b>	Defines the description of the product providing the remote access functionality.
<b>Syntax</b>	DellDisplayString (SIZE (0..255))
<b>Access</b>	Read-only

### Remote Access Version Info Name

<b>Name</b>	remoteAccessVersionInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.9
<b>Description</b>	Defines the version of the product providing the remote access functionality.
<b>Syntax</b>	DellDisplayString (SIZE (0..63))
<b>Access</b>	Read-only

### Remote Access Local Area Network (LAN) Capabilities

<b>Name</b>	remoteAccessLANCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.14
<b>Description</b>	Defines the LAN capabilities of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessLANCapabilities (See Table 19-6.)
<b>Access</b>	Read-only

### Remote Access LAN Settings

<b>Name</b>	remoteAccessLANSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.15
<b>Description</b>	Defines the LAN settings of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessLANSettings (See Table 19-7.)
<b>Access</b>	Read-write

### Remote Access Network Interface Controller (NIC) Static IP Address

<b>Name</b>	remoteAccessNICStaticIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.25
<b>Description</b>	Defines the static IP address to be used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Access NIC Static Netmask Address

<b>Name</b>	remoteAccessNICStaticNetmaskAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.26
<b>Description</b>	Defines the netmask for the static IP address to be used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Access NIC Static Gateway Address

<b>Name</b>	remoteAccessNICStaticGatewayAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.27
<b>Description</b>	Defines the IP address for the gateway associated with the static IP address to be used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Access Personal Computer Memory Card International Association (PCMCIA) Info Name

<b>Name</b>	remoteAccessPCMCIAInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.28
<b>Description</b>	Defines the information for the PCMCIA device used by the remote access hardware.
<b>Syntax</b>	DisplayString (SIZE (0..63))
<b>Access</b>	Read-only

### Remote Access Miscellaneous Information Name

<b>Name</b>	remoteAccessMiscInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.29
<b>Description</b>	Defines the miscellaneous information for the remote access hardware.
<b>Syntax</b>	DisplayString (SIZE (0..63))
<b>Access</b>	Read-write

### Remote Access NIC Current IP Address

<b>Name</b>	remoteAccessNICCurrentIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.30
<b>Description</b>	Defines the IP address currently being used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

### Remote Access NIC Current Netmask Address

<b>Name</b>	remoteAccessNICCurrentNetmaskAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.31
<b>Description</b>	Defines the netmask currently being used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

### Remote Access NIC Current Gateway Address

<b>Name</b>	remoteAccessNICCurrentGatewayAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.32
<b>Description</b>	Defines the IP address for the gateway currently being used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

### Remote Access NIC Current Information From Dynamic Host Configuration Protocol (DHCP)

<b>Name</b>	remoteAccessNICCurrentInfoFromDHCP
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.33
<b>Description</b>	Defines whether DHCP was used to obtain the NIC information currently being used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

## Remote Access Remote Connect URL

<b>Name</b>	remoteAccessRemoteConnectURL
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.34
<b>Description</b>	Defines the URL for launching the Remote Access Remote Connect Interface.
<b>Syntax</b>	DisplayString (SIZE (0..63))
<b>Access</b>	Mandatory

## DRAC III

The Remote Access Group defines DRAC III objects in the following MIB tables:

- Remote Access Table
- Remote User Administration Table
- Remote SNMP Trap Table
- Remote Dial-Up Table
- Remote User Dial-In Configuration Table
- Remote Dial-Out Table

### Remote Access Table

The following MIB object sets up the Remote Access Table.

<b>Name</b>	remoteAccessTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10
<b>Description</b>	Defines the Remote Access Table.
<b>Syntax</b>	SEQUENCE OF RemoteAccessTableEntry
<b>Access</b>	Not accessible

### Remote Access Table Entry

<b>Name</b>	remoteAccessTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1
<b>Description</b>	Defines the Remote Access Table entry.
<b>Syntax</b>	RemoteAccessTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	remoteAccessChassisIndex, remoteAccessAdapterIndex

### Remote Access Chassis Index

<b>Name</b>	remoteAccessChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing the remote access hardware.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Access Adapter Index

<b>Name</b>	remoteAccessAdapterIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.2
<b>Description</b>	Defines the index (one-based) of the remote access hardware.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Access Type

<b>Name</b>	remoteAccessType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.3
<b>Description</b>	Defines the type of remote access hardware.
<b>Syntax</b>	DellRemoteAccessType (See Table 19-1.)
<b>Access</b>	Read-only

### Remote Access State Capabilities

<b>Name</b>	remoteAccessStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.4
<b>Description</b>	Defines the state capabilities of the remote access hardware.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### Remote Access State Settings

<b>Name</b>	remoteAccessStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.5
<b>Description</b>	Defines the state setting of the remote access hardware.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### Remote Access Status

<b>Name</b>	remoteAccessStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.6
<b>Description</b>	Defines the status of the remote access hardware.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Remote Access Product Info Name

<b>Name</b>	remoteAccessProductInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.7
<b>Description</b>	Defines the name of the product providing the remote access functionality.
<b>Syntax</b>	DellDisplayString (SIZE (0..63))
<b>Access</b>	Read-only

### Remote Access Description Info Name

<b>Name</b>	remoteAccessDescriptionInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.8
<b>Description</b>	Defines the description of the product providing the remote access functionality.
<b>Syntax</b>	DellDisplayString (SIZE (0..255))
<b>Access</b>	Read-only

### Remote Access Version Info Name

<b>Name</b>	remoteAccessVersionInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.9
<b>Description</b>	Defines the version of the product providing the remote access functionality.
<b>Syntax</b>	DellDisplayString (SIZE (0..63))
<b>Access</b>	Read-only

### Remote Access Control Capabilities

<b>Name</b>	remoteAccessControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.10
<b>Description</b>	Defines the control capabilities of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessControlCapabilities (See Table 19-2.)
<b>Access</b>	Read-only

### Remote Access Control Settings

<b>Name</b>	remoteAccessControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.11
<b>Description</b>	Defines the control settings of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessControlSettings (See Table 19-3.)
<b>Access</b>	Read-write

### Remote Access Monitor Capabilities

<b>Name</b>	remoteAccessMonitorCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.12
<b>Description</b>	Defines the monitor capabilities of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessMonitorCapabilities (See Table 19-4.)
<b>Access</b>	Read-only



## Remote Access Monitor Settings

<b>Name</b>	remoteAccessMonitorSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.13
<b>Description</b>	Defines the monitor settings of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessMonitorSettings (See Table 19-5)
<b>Access</b>	Read-write

## Remote Access Local Area Network (LAN) Capabilities

<b>Name</b>	remoteAccessLANCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.14
<b>Description</b>	Defines the LAN capabilities of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessLANCapabilities (See Table 19-6.)
<b>Access</b>	Read-only

## Remote Access LAN Settings

<b>Name</b>	remoteAccessLANSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.15
<b>Description</b>	Defines the LAN settings of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessLANSettings (See Table 19-7.)
<b>Access</b>	Read-write

## Remote Access Host Capabilities

<b>Name</b>	remoteAccessHostCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.16
<b>Description</b>	Defines the host capabilities of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessHostCapabilities (See Table 19-8.)
<b>Access</b>	Read-only

### Remote Access Host Settings

<b>Name</b>	remoteAccessHostSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.17
<b>Description</b>	Defines the host settings of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessHostSettings (See Table 19-9.)
<b>Access</b>	Read-write

### Remote Access Out-of-Band Simple Network Management Protocol (SNMP) Capabilities

<b>Name</b>	remoteAccessOutOfBandSNMPCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.18
<b>Description</b>	Defines the out-of-band SNMP capabilities of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessOutOfBandSNMPCapabilities (See Table 19-10.)
<b>Access</b>	Read-only

### Remote Access Out-of-Band SNMP Settings

<b>Name</b>	remoteAccessOutOfBandSNMPSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.19
<b>Description</b>	Defines the out-of-band SNMP settings of the remote access hardware.
<b>Syntax</b>	DellRemoteAccessOutOfBandSNMPSettings (See Table 19-11.)
<b>Access</b>	Read-write

### Remote Access Simple Mail Transfer Protocol (SMTP) Server Internet Protocol (IP) Address

<b>Name</b>	remoteAccessSMTPServerIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.20
<b>Description</b>	Defines the IP address for the SMTP server used by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Access Floppy Trivial File Transfer Protocol (TFTP) IP Address

<b>Name</b>	remoteAccessFloppyTFTPIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.21
<b>Description</b>	Defines the IP address of the TFTP server providing the operating system image used by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Access Floppy TFTP Path Name

<b>Name</b>	remoteAccessFloppyTFTPPathName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.22
<b>Description</b>	Defines the file name of the operating system image obtained from the TFTP server used by the remote access hardware.
<b>Syntax</b>	DisplayString (SIZE (0..255))
<b>Access</b>	Read-write

### Remote Access Firmware Update IP Address

<b>Name</b>	remoteAccessFirmwareUpdateIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.23
<b>Description</b>	Defines the IP address of the update server providing the firmware image used by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Access Firmware Update Path Name

<b>Name</b>	remoteAccessFirmwareUpdatePathName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.24
<b>Description</b>	Defines the file name of the firmware image obtained from the update server used by the remote access hardware.
<b>Syntax</b>	DisplayString (SIZE (0..255))
<b>Access</b>	Read-write

### Remote Access Network Interface Controller (NIC) Static IP Address

<b>Name</b>	remoteAccessNICStaticIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.25
<b>Description</b>	Defines the static IP address to be used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Access NIC Static Netmask Address

<b>Name</b>	remoteAccessNICStaticNetmaskAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.26
<b>Description</b>	Defines the netmask for the static IP address to be used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Access NIC Static Gateway Address

<b>Name</b>	remoteAccessNICStaticGatewayAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.27
<b>Description</b>	Defines the IP address for the gateway associated with the static IP address to be used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Access Personal Computer Memory Card International Association (PCMCIA) Info Name

<b>Name</b>	remoteAccessPCMCIAInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.28
<b>Description</b>	Defines the information for the PCMCIA device used by the remote access hardware.
<b>Syntax</b>	DisplayString (SIZE (0..63))
<b>Access</b>	Read-only

### Remote Access Miscellaneous Information Name

<b>Name</b>	remoteAccessMiscInfoName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.29
<b>Description</b>	Defines the miscellaneous information for the remote access hardware.
<b>Syntax</b>	DisplayString (SIZE (0..63))
<b>Access</b>	Read-write

### Remote Access NIC Current IP Address

<b>Name</b>	remoteAccessNICCurrentIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.30
<b>Description</b>	Defines the IP address currently being used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

### Remote Access NIC Current Netmask Address

<b>Name</b>	remoteAccessNICCurrentNetmaskAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.31
<b>Description</b>	Defines the netmask currently being used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

### Remote Access NIC Current Gateway Address

<b>Name</b>	remoteAccessNICCurrentGatewayAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.32
<b>Description</b>	Defines the IP address for the gateway currently being used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

## Remote Access NIC Current Information From Dynamic Host Configuration Protocol (DHCP)

<b>Name</b>	remoteAccessNICCurrentInfoFromDHCP
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.10.1.33
<b>Description</b>	Defines whether DHCP was used to obtain the NIC information currently being used by the integrated NIC provided by the remote access hardware.
<b>Syntax</b>	DellBoolean
<b>Access</b>	Read-only

## Remote User Administration Table

<b>Name</b>	remoteUserAdminTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20
<b>Description</b>	Defines the Remote Access User Administration Table.
<b>Syntax</b>	SEQUENCE OF RemoteUserAdminTableEntry
<b>Access</b>	Not accessible

## Remote User Admin Table Entry

<b>Name</b>	remoteUserAdminTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1
<b>Description</b>	Defines the Remote Access User Administration Table entry.
<b>Syntax</b>	RemoteUserAdminTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	remoteUserAdminChassisIndex, remoteUserAdminAdapterIndex, remoteUserAdminUserIndex

## Remote User Admin Chassis Index

<b>Name</b>	remoteUserAdminChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing the remote access hardware.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote User Admin Adapter Index

<b>Name</b>	remoteUserAdminAdapterIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.2
<b>Description</b>	Defines the index (one-based) of the remote access hardware used by this remote access user.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote User Admin User Index

<b>Name</b>	remoteUserAdminUserIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.3
<b>Description</b>	Defines the index (one-based) of this remote access user.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote User Admin State Capabilities

<b>Name</b>	remoteUserAdminStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.4
<b>Description</b>	Defines the state capabilities for this remote access user.
<b>Syntax</b>	DellRemoteUserAdminStateCapabilities (See Table 19-12.)
<b>Access</b>	Read-only

### Remote User Admin State Settings

<b>Name</b>	remoteUserAdminStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.5
<b>Description</b>	Defines the state settings for this remote access user.
<b>Syntax</b>	DellRemoteUserAdminStateSettings (See Table 19-13.)
<b>Access</b>	Read-write

### Remote User Admin Status

<b>Name</b>	remoteUserAdminStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.6
<b>Description</b>	Defines the status for this remote access user.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Remote User Admin User Name

<b>Name</b>	remoteUserAdminUserName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.7
<b>Description</b>	Defines the user name for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..19))
<b>Access</b>	Read-write

### Remote User Admin User Password Name

<b>Name</b>	remoteUserAdminUserPasswordName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.8
<b>Description</b>	Defines the password for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..255))
<b>Access</b>	Read-write

### Remote User Admin User Privilege

<b>Name</b>	remoteUserAdminUserPrivilege
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.9
<b>Description</b>	Defines the privileges for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write



### Remote User Admin User Privilege Capabilities

<b>Name</b>	remoteUserAdminUserPrivilegeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.10
<b>Description</b>	Defines the privilege capabilities for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-only

### Remote User Admin Alert Filter DRS Events Mask

<b>Name</b>	remoteUserAdminAlertFilterDrsEventsMask
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.11
<b>Description</b>	Defines the DRS events filter mask for this remote access user.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote User Admin Alert Filter System Events Mask

<b>Name</b>	remoteUserAdminAlertFilterSysEventsMask
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.12
<b>Description</b>	Defines the system events filter mask for this remote access user.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote User Admin Alert Filter DRS Capabilities

<b>Name</b>	remoteUserAdminAlertFilterDrsCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.13
<b>Description</b>	Defines the DRS events filter capabilities for this remote access user.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Remote User Admin Alert Filter System Capabilities

<b>Name</b>	remoteUserAdminAlertFilterSysCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.14
<b>Description</b>	Defines the system events filter capabilities for this remote access user.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Remote User Admin Pager Numeric Number Name

<b>Name</b>	remoteUserAdminPagerNumericNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.15
<b>Description</b>	Defines the numeric pager number for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..95))
<b>Access</b>	Read-write

### Remote User Admin Pager Numeric Message Name

<b>Name</b>	remoteUserAdminPagerNumericMessageName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.16
<b>Description</b>	Defines the message to send to the numeric pager for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write

### Remote User Admin Pager Numeric Hang-up Delay

<b>Name</b>	remoteUserAdminPagerNumericHangupDelay
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.17
<b>Description</b>	Defines the numeric pager hang-up delay for this remote access user.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote User Admin Pager Alpha Phone Number Name

<b>Name</b>	remoteUserAdminPagerAlphaPhoneNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.18
<b>Description</b>	Defines the alphanumeric pager phone number for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..95))
<b>Access</b>	Read-write

### Remote User Admin Pager Alpha Protocol

<b>Name</b>	remoteUserAdminPagerAlphaProtocol
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.19
<b>Description</b>	Defines the protocol used by the alphanumeric pager provider for this remote access user.
<b>Syntax</b>	DellRemoteUserAdminAlphaProtocolType (See Table 19-16.)
<b>Access</b>	Read-write

### Remote User Admin Pager Alpha Baud Rate

<b>Name</b>	remoteUserAdminPagerAlphaBaudRate
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.20
<b>Description</b>	Defines the baud rate used by the alphanumeric pager provider for this remote access user.
<b>Syntax</b>	DellRemoteUserAdminAlphaBaudType (See Table 19-17.)
<b>Access</b>	Read-write

### Remote User Admin Pager Alpha Custom Message Name

<b>Name</b>	remoteUserAdminPagerAlphaCustomMessageName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.21
<b>Description</b>	Defines the message to be sent to the alphanumeric pager to inform the user of a call by this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write

### Remote User Admin Pager Alpha Modem Connect Time-out

<b>Name</b>	remoteUserAdminPagerAlphaModemConnectTimeout
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.22
<b>Description</b>	Defines the modem connection time-out for the alphanumeric pager for this remote access user.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote User Admin Pager Alpha Pager ID Name

<b>Name</b>	remoteUserAdminPagerAlphaPagerIdName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.23
<b>Description</b>	Defines the ID to be sent to the alphanumeric pager to inform the user of a call by this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write

### Remote User Admin Pager Alpha Password Name

<b>Name</b>	remoteUserAdminPagerAlphaPasswordName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.24
<b>Description</b>	Defines the password for the alphanumeric pager for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write

### Remote User Admin Pager Modem Init String Name

<b>Name</b>	remoteUserAdminPagerModemInitStringName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.25
<b>Description</b>	Defines the initialization string to be sent to the pager modem for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write

### Remote User Admin Pager Modem Port

<b>Name</b>	remoteUserAdminPagerModemPort
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.26
<b>Description</b>	Defines the port for the pager modem for this remote access user.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote User Admin E-Mail Address Name

<b>Name</b>	remoteUserAdminEmailAddressName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.27
<b>Description</b>	Defines the e-mail address for this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..63))
<b>Access</b>	Read-write

### Remote User Admin E-Mail Custom Message Name

<b>Name</b>	remoteUserAdminEmailCustomMessageName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.28
<b>Description</b>	Defines the e-mail message to send to this remote access user.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write

### Remote User Admin Control Capabilities

<b>Name</b>	remoteUserAdminControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.29
<b>Description</b>	Defines the control capabilities for this remote access user.
<b>Syntax</b>	DellRemoteUserAdminControlCapabilities (See Table 19-14.)
<b>Access</b>	Read-only

## Remote User Admin Control Settings

<b>Name</b>	remoteUserAdminControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.30
<b>Description</b>	Defines the control settings for this remote access user.
<b>Syntax</b>	DellRemoteUserAdminControlSettings (See Table 19-15.)
<b>Access</b>	Read-write

## Remote User Admin User Type

<b>Name</b>	remoteUserAdminUserType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.20.1.31
<b>Description</b>	Defines the type of user for this remote access user.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-write

## Remote SNMP Trap Table

<b>Name</b>	remoteSNMPTrapTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30
<b>Description</b>	Defines the Remote Access SNMP Trap Destination Table.
<b>Syntax</b>	SEQUENCE OF RemoteSNMPTrapTableEntry
<b>Access</b>	Not accessible

## Remote SNMP Trap Table Entry

<b>Name</b>	remoteSNMPTrapTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1
<b>Description</b>	Defines the Remote Access SNMP Trap Destination Table entry.
<b>Syntax</b>	RemoteSNMPTrapTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	remoteSNMPTrapChassisIndex, remoteSNMPTrapAdapterIndex, remoteSNMPTrapIndex

### Remote SNMP Trap Chassis Index

<b>Name</b>	remoteSNMPTrapChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing the remote access hardware.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote SNMP Trap Adapter Index

<b>Name</b>	remoteSNMPTrapAdapterIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.2
<b>Description</b>	Defines the index (one-based) of the remote access hardware that uses this SNMP trap destination.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote SNMP Trap Index

<b>Name</b>	remoteSNMPTrapIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.3
<b>Description</b>	Defines the index (one-based) of this remote access SNMP trap destination.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote SNMP Trap State Capabilities

<b>Name</b>	remoteSNMPTrapStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.4
<b>Description</b>	Defines the state capabilities of this remote access SNMP trap destination.
<b>Syntax</b>	DellRemoteSNMPTrapStateCapabilities (See Table 19-18.)
<b>Access</b>	Read-only

### Remote SNMP Trap State Settings

<b>Name</b>	remoteSNMPTrapStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.5
<b>Description</b>	Defines the state settings of this remote access SNMP trap destination.
<b>Syntax</b>	DellRemoteSNMPTrapStateSettings (See Table 19-19.)
<b>Access</b>	Read-write

### Remote SNMP Trap Status

<b>Name</b>	remoteSNMPTrapStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.6
<b>Description</b>	Defines the status of this remote access SNMP trap destination.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Remote SNMP Trap Destination IP Address

<b>Name</b>	remoteSNMPTrapDestinationIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.7
<b>Description</b>	Defines the IP address of this remote access SNMP trap destination.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote SNMP Trap SNMP Community Name

<b>Name</b>	remoteSNMPTrapSNMPCommunityName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.8
<b>Description</b>	Defines the community for traps sent to this remote access SNMP trap destination.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write



### Remote SNMP Trap Filter DRS Events Mask

<b>Name</b>	remoteSNMPTrapFilterDrsEventsMask
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.9
<b>Description</b>	Defines the DRS events filter mask for this remote access SNMP trap destination.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote SNMP Trap Filter System Events Mask

<b>Name</b>	remoteSNMPTrapFilterSysEventsMask
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.10
<b>Description</b>	Defines the system events filter mask for this remote access SNMP trap destination.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote SNMP Trap Filter DRS Capabilities

<b>Name</b>	remoteSNMPTrapFilterDrsCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.11
<b>Description</b>	Defines the DRS events filter capabilities for this remote access SNMP trap destination.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Remote SNMP Trap Filter System Capabilities

<b>Name</b>	remoteSNMPTrapFilterSysCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.12
<b>Description</b>	Defines the system events filter capabilities of this remote access SNMP trap destination.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-only

### Remote SNMP Trap Control Capabilities

<b>Name</b>	remoteSNMPTrapControlCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.13
<b>Description</b>	Defines the control capabilities of this remote access SNMP trap destination.
<b>Syntax</b>	DellRemoteSNMPTrapControlCapabilities (See Table 19-20.)
<b>Access</b>	Read-only

### Remote SNMP Trap Control Settings

<b>Name</b>	remoteSNMPTrapControlSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.30.1.14
<b>Description</b>	Defines the control settings of this remote access SNMP trap destination.
<b>Syntax</b>	DellRemoteSNMPTrapControlSettings (See Table 19-21.)
<b>Access</b>	Read-write

### Remote Dial-Up Table

<b>Name</b>	remoteDialUpTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40
<b>Description</b>	Defines the Remote Access Dial-Up Table.
<b>Syntax</b>	SEQUENCE OF RemoteDialUpTableEntry
<b>Access</b>	Not accessible

### Remote Dial-Up Table Entry

<b>Name</b>	remoteDialUpTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1
<b>Description</b>	Defines the Remote Access Dial-Up Table entry.
<b>Syntax</b>	RemoteDialUpTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	remoteDialUpChassisIndex, remoteDialUpAdapterIndex, remoteDialUpIndex

### Remote Dial-Up Chassis Index

<b>Name</b>	remoteDialUpChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing the remote access hardware.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Dial-Up Adapter Index

<b>Name</b>	remoteDialUpAdapterIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.2
<b>Description</b>	Defines the index (one-based) of the remote access hardware that supports this remote access dial-up functionality.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Dial-Up Index

<b>Name</b>	remoteDialUpIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.3
<b>Description</b>	Defines the index (one-based) of this remote access dial-up functionality.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Dial-Up State Capabilities

<b>Name</b>	remoteDialUpStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.4
<b>Description</b>	Defines the state capabilities of this remote access dial-up functionality.
<b>Syntax</b>	DellRemoteDialUpStateCapabilities (See Table 19-22.)
<b>Access</b>	Read-only

### Remote Dial-Up State Settings

<b>Name</b>	remoteDialUpStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.5
<b>Description</b>	Defines the state settings of this remote access dial-up functionality.
<b>Syntax</b>	DellRemoteDialUpStateSettings (See Table 19-23.)
<b>Access</b>	Read-write

### Remote Dial-Up Status

<b>Name</b>	remoteDialUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.6
<b>Description</b>	Defines the status of this remote access dial-up functionality.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Remote Dial-Up PPP Dial-In Base IP Address

<b>Name</b>	remoteDialUpPPPDialInBaseIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.7
<b>Description</b>	Defines the base IP address of the PPP server for this remote access dial-up functionality.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Dial-Up PPP Dial-In Idle Time-out

<b>Name</b>	remoteDialUpPPPDialInIdleTimeout
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.8
<b>Description</b>	Defines the PPP idle time-out value in seconds for this remote access dial-up functionality.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote Dial-Up PPP Dial-In Maximum Connection Time-out

<b>Name</b>	remoteDialUpPPPDialInMaxConnectTimeout
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.9
<b>Description</b>	Defines the PPP connect time-out value in seconds for this remote access dial-up functionality.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote Dial-Up Dial-Out Modem Connect Time-out

<b>Name</b>	remoteDialUpDialOutModemConnectTimeout
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.10
<b>Description</b>	Defines the modem dial-out time-out value in seconds for this remote access dial-up functionality.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote Dial-Up Modem Dial Type

<b>Name</b>	remoteDialUpModemDialType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.11
<b>Description</b>	Defines the dial type for the modem used by this remote access dial-up functionality.
<b>Syntax</b>	DellRemoteDialUpModemDialType (See Table 19-24.)
<b>Access</b>	Read-write

### Remote Dial-Up Modem Init String Name

<b>Name</b>	remoteDialUpModemInitStringName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.12
<b>Description</b>	Defines the initialization string to be sent to the modem for this remote access dial-up functionality.
<b>Syntax</b>	DisplayString (SIZE (0..63))
<b>Access</b>	Read-write

### Remote Dial-Up Modem Baud Rate

<b>Name</b>	remoteDialUpModemBaudRate
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.13
<b>Description</b>	Defines the baud rate for the modem used by this remote access dial-up functionality.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote Dial-Up Modem Port

<b>Name</b>	remoteDialUpModemPort
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.40.1.14
<b>Description</b>	Defines the port for the modem used by this remote access dial-up functionality.
<b>Syntax</b>	DellUnsigned32BitRange
<b>Access</b>	Read-write

### Remote User Dial-In Configuration Table

<b>Name</b>	remoteUserDialInCfgTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50
<b>Description</b>	Defines the Remote Access User Dial-In Configuration Table.
<b>Syntax</b>	SEQUENCE OF RemoteUserDialInCfgTableEntry
<b>Access</b>	Not accessible

### Remote User Dial-In Configuration Table Entry

<b>Name</b>	remoteUserDialInCfgTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1
<b>Description</b>	Defines the Remote Access User Dial-In Configuration Table entry.
<b>Syntax</b>	RemoteUserDialInCfgTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	remoteUserDialInCfgChassisIndex, remoteUserDialInCfgAdapterIndex, remoteUserDialInCfgUserIndex

### Remote User Dial-In Configuration Chassis Index

<b>Name</b>	remoteUserDialInCfgChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing the remote access hardware.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote User Dial-In Configuration Adapter Index

<b>Name</b>	remoteUserDialInCfgAdapterIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1.2
<b>Description</b>	Defines the index (one-based) of the remote access hardware that supports this remote access dial-in user.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote User Dial-In Configuration User Index

<b>Name</b>	remoteUserDialInCfgUserIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1.3
<b>Description</b>	Defines the index (one-based) of this remote access dial-in user.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote User Dial-In Configuration State Capabilities

<b>Name</b>	remoteUserDialInCfgStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1.4
<b>Description</b>	Defines the state capabilities of this remote access dial-in user.
<b>Syntax</b>	DellRemoteUserDialInStateCapabilities (See Table 19-25.)
<b>Access</b>	Read-only

### Remote User Dial-In Configuration State Settings

<b>Name</b>	remoteUserDialInCfgStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1.5
<b>Description</b>	Defines the state settings of this remote access dial-in user.
<b>Syntax</b>	DellRemoteUserDialInStateSettings (See Table 19-26.)
<b>Access</b>	Read-write

### Remote User Dial-In Configuration Status

<b>Name</b>	remoteUserDialInCfgStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1.6
<b>Description</b>	Defines the status of this remote access dial-in user.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Remote User Dial-In Configuration PPP Username

<b>Name</b>	remoteUserDialInCfgPPPUserName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1.7
<b>Description</b>	Defines the PPP user name of this remote access dial-in user.
<b>Syntax</b>	DisplayString (SIZE (0..15))
<b>Access</b>	Read-write

### Remote User Dial-In Configuration PPP User Password Name

<b>Name</b>	remoteUserDialInCfgPPPUserPasswordName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1.8
<b>Description</b>	Defines the PPP password of this remote access dial-in user.
<b>Syntax</b>	DisplayString (SIZE (0..15))
<b>Access</b>	Read-write



## Remote User Dial-In Configuration Callback Phone Number Name

<b>Name</b>	remoteUserDialInCfgCallbackPhoneNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.50.1.9
<b>Description</b>	Defines the callback phone number for this remote access dial-in user.
<b>Syntax</b>	DisplayString (SIZE (0..95))
<b>Access</b>	Read-write

## Remote Dial-Out Table

<b>Name</b>	remoteDialOutTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60
<b>Description</b>	Defines the Remote Access Dial-Out Table.
<b>Syntax</b>	SEQUENCE of RemoteDialOutTableEntry
<b>Access</b>	Not accessible

## Remote Dial-Out Table Entry

<b>Name</b>	remoteDialOutTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1
<b>Description</b>	Defines the Remote Access Dial-Out Table entry.
<b>Syntax</b>	RemoteDialOutTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	remoteDialOutChassisIndex, remoteDialOutAdapterIndex, remoteDialOutDialOutIndex

## Remote Dial-Out Chassis Index

<b>Name</b>	remoteDialOutChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.1
<b>Description</b>	Defines the index (one-based) of the chassis containing the remote access hardware.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Dial-Out Adapter Index

<b>Name</b>	remoteDialOutAdapterIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.2
<b>Description</b>	Defines the index (one-based) of the remote access hardware that supports this remote access dial-out functionality.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Dial-Out Dial-Out Index

<b>Name</b>	remoteDialOutDialOutIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.3
<b>Description</b>	Defines the index (one-based) of this remote access dial-out functionality.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### Remote Dial-Out State Capabilities

<b>Name</b>	remoteDialOutStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.4
<b>Description</b>	Defines the state capabilities of this remote access dial-out functionality.
<b>Syntax</b>	DellRemoteDialOutStateCapabilities (See Table 19-27.)
<b>Access</b>	Read-only

### Remote Dial-Out State Settings

<b>Name</b>	remoteDialOutStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.5
<b>Description</b>	Defines the state settings of this remote access dial-out functionality.
<b>Syntax</b>	DellRemoteDialOutStateSettings (See Table 19-28.)
<b>Access</b>	Read-write

### Remote Dial-Out Status

<b>Name</b>	remoteDialOutStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.6
<b>Description</b>	Defines the status of this remote access dial-out functionality.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Remote Dial-Out IP Address

<b>Name</b>	remoteDialOutIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.7
<b>Description</b>	Defines the IP address for this remote access dial-out destination.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-write

### Remote Dial-Out Phone Number Name

<b>Name</b>	remoteDialOutPhoneNumberName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.8
<b>Description</b>	Defines the phone number for this remote access dial-out destination.
<b>Syntax</b>	DisplayString (SIZE (0..95))
<b>Access</b>	Read-write

### Remote Dial-Out PPP Username

<b>Name</b>	remoteDialOutPPPUserName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.9
<b>Description</b>	Defines the PPP username for this remote access dial-out destination.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write

## Remote Dial-Out PPP Password Name

<b>Name</b>	remoteDialOutPPPPasswordName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1700.60.1.10
<b>Description</b>	Defines the PPP password for this remote access dial-out destination.
<b>Syntax</b>	DisplayString (SIZE (0..31))
<b>Access</b>	Read-write

## Remote Access Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 19-1. Remote Access Type**

---

<b>Variable Name:</b> DellRemoteAccessType	
<b>Data Type:</b> Integer	
Possible Data Values	Meaning of Data Value
remoteAccessTypeIsOther (1)	The remote access type is not one of the following:
remoteAccessTypeIsUnknown (2)	The remote access type is unknown.
remoteAccessTypeIsDRACIII (3)	The remote access type is DRAC III.
remoteAccessTypeIsERA (4)	The remote access type is ERA.

---

**Table 19-2. Remote Access Control Capabilities**

---

<b>Variable Name:</b> DellRemoteAccessControlCapabilities	
<b>Data Type:</b> Integer	
Possible Data Values	Meaning of Data Value
none (0)	The remote access hardware has no control capabilities.
unknownCapabilities (1)	The remote access hardware control capabilities are unknown.
logResetCapable (2)	The remote access hardware can reset its integrated logs.
hardResetCapable (4)	The remote access hardware can perform a hard reset.
softResetCapable (8)	The remote access hardware can perform a soft reset.
gracefulResetCapable (16)	The remote access hardware can gracefully shut down and perform a soft reset.
defaultConfigResetCapable (32)	The remote access hardware can reset to its default settings.
shutdownCapable (64)	The remote access hardware can shut down.

---

**Table 19-3. Remote Access Control Settings**

---

**Variable Name:** DellRemoteAccessControlSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The remote access hardware has no control settings.
unknown(1)	The remote access hardware control settings are unknown.
logReset(2)	The remote access hardware will reset its integrated logs.
hardReset(4)	The remote access hardware will perform a hard reset.
softReset(8)	The remote access hardware will perform a soft reset.
gracefulReset(16)	The remote access hardware will gracefully shut down and perform a soft reset.
defaultConfigReset(32)	The remote access hardware will reset to its default settings.
shutdown(64)	The remote access hardware will shut down.

---

**Table 19-4. Remote Access Monitor Capabilities**

---

**Variable Name:** DellRemoteAccessMonitorCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The remote access hardware has no monitor capabilities.
unknownCapabilities(1)	The remote access hardware monitor capabilities are unknown.
extPwrSupplyMonitorIfConnectedCapable(2)	The remote access hardware can be set to monitor the external power supply, if connected.
extPwrSupplyMonitorAlwaysEnabledCapable(4)	The remote access hardware can be set to always monitor the external power supply.

---

**Table 19-5. Remote Access Monitor Settings**


---

**Variable Name:** DellRemoteAccessMonitorSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The remote access hardware has no monitor settings.
unknown(1)	The remote access hardware monitor settings are unknown.
extPwrSupplyMonitorIfConnectedEnabled(2)	The remote access hardware will monitor the external power supply, if connected.
extPwrSupplyMonitorAlwaysEnabled(4)	The remote access hardware will always monitor the external power supply.

---

**Table 19-6. Remote Access Local Area Network (LAN) Capabilities**


---

**Variable Name:** DellRemoteAccessLANCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The remote access hardware has no LAN capabilities.
unknownCapabilities(1)	The remote access hardware LAN capabilities are unknown.
nicCapable(2)	The remote access hardware has a network interface controller (NIC).
nicDHCPCapable(4)	The remote access hardware NIC can use DHCP to obtain an IP address.

---

**Table 19-7. Remote Access LAN Settings**


---

**Variable Name:** DellRemoteAccessLANSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The remote access hardware has no LAN settings.
unknown(1)	The remote access hardware LAN settings are unknown.
nicEnabled(2)	The remote access hardware NIC is enabled.
nicDHCPEnabled(4)	The remote access hardware NIC will use DHCP to obtain an IP address.

---

**Table 19-8. Remote Access Host Capabilities**

---

**Variable Name:** DellRemoteAccessHostCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The remote access hardware has no host capabilities.
unknownCapabilities(1)	The remote access hardware host capabilities are unknown.
smtpEmailCapable(2)	The remote access hardware supports sending e-mail using SMTP.
tftpRemoteFloppyCapable(4)	The remote access hardware supports remote floppy boot using a TFTP server.
tftpRemoteFwUpdateCapable(8)	The remote access hardware supports remote firmware update using a TFTP server.

---

**Table 19-9. Remote Access Host Settings**

---

**Variable Name:** DellRemoteAccessHostSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The remote access hardware has no host settings.
unknown(1)	The remote access hardware host settings are unknown.
smtpEmailEnabled(2)	The remote access hardware SMTP client is enabled for sending e-mail.
tftpRemoteFloppyEnabled(4)	The remote access hardware TFTP client is enabled for remote floppy boot.
tftpRemoteFwUpdateEnabled(8)	The remote access hardware TFTP client is enabled for remote firmware update.

---

**Table 19-10. Remote Access Out-Of-Band Simple Network Management Protocol (SNMP) Capabilities**


---

**Variable Name:** DellRemoteAccessOutOfBandSNMPCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The remote access hardware has no out-of-band SNMP capabilities.
unknownCapabilities(1)	The remote access hardware out-of-band SNMP capabilities are unknown.
oobSNMPAgentCapable(2)	The remote access hardware has an out-of-band SNMP agent.
oobSNMPTrapsCapable(4)	The remote access hardware can send out-of-band SNMP traps.

---

**Table 19-11. Remote Access Out-Of-Band Simple Network Management Protocol (SNMP) Settings**


---

**Variable Name:** DellRemoteAccessOutOfBandSNMPSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The remote access hardware has no out-of-band SNMP settings.
unknown(1)	The remote access hardware out-of-band SNMP settings are unknown.
oobSNMPAgentEnabled(2)	The remote access hardware out-of-band SNMP agent is enabled.
oobSNMPTrapsEnabled(4)	The remote access hardware will send out-of-band SNMP traps.

---

**Table 19-12. Remote User Admin State Capabilities**


---

**Variable Name:** DellRemoteUserAdminStateCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The admin user has no state capabilities.
unknownCapabilities(1)	The admin user state capabilities are unknown.
enableCapable(2)	The admin user can be disabled or enabled.
notReadyCapable(4)	The admin user can be in the "not ready" state.
numericPagerCapable(8)	The admin user supports numeric paging.
alphaPagerCapable(16)	The admin user supports alphanumeric paging.
emailCapable(32)	The admin user supports e-mail.
privilegeCapable(64)	The admin user supports user privileges configuration.

---



**Table 19-13. Remote User Admin State Settings**


---

**Variable Name:** DellRemoteUserAdminStateSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The admin user has no state settings.
unknown(1)	The admin user state settings are unknown.
enabled(2)	The admin user is enabled.
notReady(4)	The admin user is in the "not ready" state.
numericPagerEnabled(8)	Numeric paging is enabled for the admin user.
alphaPagerEnabled(16)	Alphanumeric paging is enabled for the admin user.
emailEnabled(32)	E-mail is enabled for the admin user.

---

**Table 19-14. Remote User Admin Control Capabilities**


---

**Variable Name:** DellRemoteUserAdminControlCapabilities

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The admin user has no control capabilities.
unknownCapabilities(1)	The admin user control capabilities are unknown.
numericPagerTestCapable(2)	The admin user can support sending a test numeric page.
alphaPagerTestCapable(4)	The admin user can support sending a test alphanumeric page.
emailTestCapable(8)	The admin user can support sending a test e-mail.

---

**Table 19-15. Remote User Admin Control Settings**


---

**Variable Name:** DellRemoteUserAdminControlSettings

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
none(0)	The admin user has no control settings.
unknown(1)	The admin user control settings are unknown.
numericPagerTest(2)	A numeric pager test will be performed for the admin user.
alphaPagerTest(4)	An alphanumeric pager test will be performed for the admin user.
emailTest(8)	An e-mail test will be performed for the admin user.

---

**Table 19-16. Remote User Admin Alpha Protocol Type**

---

**Variable Name:** DellRemoteUserAdminAlphaProtocolType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other(1)	The remote user admin alpha protocol type is not one of the following:
unknown(2)	The remote user admin alpha protocol type is unknown.
alpha7E0(3)	The remote user admin alpha protocol type is 7E0.
alpha8N1(4)	The remote user admin alpha protocol type is 8N1.

---

**Table 19-17. Remote User Admin Alpha Baud Type**

---

**Variable Name:** DellRemoteUserAdminAlphaBaudType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other(1)	The remote user alphanumeric baud rate is not one of the following:
unknown(2)	The remote user alphanumeric baud rate is unknown.
alphaBaud300(3)	The remote user alphanumeric baud rate is 300.
alphaBaud1200(4)	The remote user alphanumeric baud rate is 1200.

---

**Table 19-18. Remote SNMP Trap State Capabilities**

---

**Variable Name:** DellRemoteSNMPTrapStateCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The SNMP trap destination has no state capabilities.
unknownCapabilities(1)	The SNMP trap destination state capabilities are unknown.
enableCapable(2)	The SNMP trap destination can be disabled or enabled.
notReadyCapable(4)	The SNMP trap destination can be in the "not ready" state.

---

**Table 19-19. Remote SNMP Trap State Settings**

---

**Variable Name:** DellRemoteSNMPTrapStateSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The SNMP trap destination has no state settings.
unknown(1)	The SNMP trap destination state settings are unknown.
enabled(2)	The SNMP trap destination is enabled.
notReady(4)	The SNMP trap destination is in the "not ready" state.

---

**Table 19-20. Remote SNMP Trap Control Capabilities**

---

**Variable Name:** DellRemoteSNMPTrapControlCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The SNMP trap destination has no control capabilities.
unknownCapabilities(1)	The SNMP trap destination control capabilities are unknown.
trapTestCapable(2)	A SNMP trap test can be performed for the SNMP trap destination.

---

**Table 19-21. Remote SNMP Trap Control Settings**

---

**Variable Name:** DellRemoteSNMPTrapControlSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The SNMP trap destination has no control settings.
unknown(1)	The SNMP trap destination control settings are unknown.
trapTestCapable(2)	A SNMP trap test will be performed for the SNMP trap destination.

---

**Table 19-22. Remote Dial-Up State Capabilities**

---

**Variable Name:** DellRemoteDialUpStateCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The dial-up functionality has no state capabilities.
unknownCapabilities(1)	The dial-up functionality state capabilities are unknown.
enableCapable(2)	The dial-up functionality can be disabled or enabled.
notReadyCapable(4)	The dial-up functionality can be in the "not ready" state.
dialInCapable(8)	The dial-up functionality can support the dial-in feature.
dialOutCapable(16)	The dial-up functionality can support the dial-out feature.
dialInDHCPCapable(32)	The dial-up functionality can support using DHCP to obtain an IP address for the dial-in feature.
dialInAuthAnyCapable(64)	The dial-up functionality can support any authentication type (including clear text) for the dial-in feature.
dialInAuthEncryptedCapable(128)	The dial-up functionality can support encrypted passwords (CHAP) authentication for the dial-in feature.
dialInAuthMschapCapable(256)	The dial-up functionality can support MSCHAP authentication type for the dial-in feature.

---

**Table 19-23. Remote Dial-Up State Settings**

---

**Variable Name:** DellRemoteDialUpStateSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The dial-up functionality has no state settings.
unknown(1)	The dial-up functionality state settings are unknown.
enabled(2)	The dial-up functionality is enabled.
notReadyCapable(4)	The dial-up functionality is in the "not ready" state.
dialInEnabled(8)	The dial-up functionality dial-in feature is enabled.
dialOutEnabled(16)	The dial-up functionality dial-out feature is enabled.

**Table 19-23. Remote Dial-Up State Settings (continued)**

<b>Variable Name:</b> DellRemoteDialUpStateSettings	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
dialInDHCPEnabled(32)	The dial-up functionality uses DHCP to obtain an IP address for the dial-in feature.
dialInAuthAnyEnabled(64)	The dial-up functionality accepts any authentication type (including clear text) for the dial-in feature.
dialInAuthEncryptedEnabled(128)	The dial-up functionality uses only encrypted passwords (CHAP) authentication type for the dial-in feature.
dialInAuthMschapEnabled(256)	The dial-up functionality uses only MSCHAP authentication type for the dial-in feature.

**Table 19-24. Remote Dial-Up Modem Dial Type**

<b>Variable Name:</b> DellRemoteDialUpModemDialType	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
remoteDialUpIsOther(1)	The remote dial type is not one of the following:
remoteDialUpIsUnknown(2)	The remote dial type is unknown.
remoteDialUpIsTone(3)	The remote dial type is tone.
remoteDialUpIsPulse(4)	The remote dial type is pulse.

**Table 19-25. Remote User Dial-In State Capabilities**

<b>Variable Name:</b> DellRemoteUserDialInStateCapabilities	
<b>Data Type:</b> Integer	
<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The dial-in user has no state capabilities.
unknownCapabilities(1)	The dial-in user state capabilities are unknown.
enableCapable(2)	The dial-in user can be disabled or enabled.
notReadyCapable(4)	The dial-in user can be in the "not ready" state.
dialInCallbackPresetNumberCapable(8)	The dial-in user can support callback using a preset number.
dialInCallbackUserSpecifiedCapable(16)	The dial-in user can support callback using a user-specified number.

**Table 19-26. Remote User Dial-In State Settings**

---

**Variable Name:** DellRemoteUserDialInStateSettings

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The dial-in user has no state settings.
unknown(1)	The dial-in user state settings are unknown.
enabled(2)	The dial-in user is enabled.
notReady(4)	The dial-in user is in the "not ready" state.
dialInCallbackPresetNumberEnabled(8)	Callback using a preset number is enabled for the dial-in user.
dialInCallbackUserSpecifiedEnabled(16)	Callback using a user-specified number is enabled for the dial-in user.

---

**Table 19-27. Remote Dial-Out State Capabilities**

---

**Variable Name:** DellRemoteDialOutStateCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The dial-out destination has no state capabilities.
unknownCapabilities(1)	The dial-out destination state capabilities are unknown.
enableCapable(2)	The dial-out destination can be disabled or enabled.
notReadyCapable(4)	The dial-out destination can be in the "not ready" state.
dialOutPPPAuthAnyCapable(8)	The dial-out destination can support any authentication type (including clear text) for PPP.
dialOutPPPAuthEncryptedCapable(16)	The dial-out destination can support encrypted passwords authentication type for PPP.
dialOutPPPAuthMschapCapable(32)	The dial-out destination can support MSCHAP authentication type for PPP.

---

**Table 19-28. Remote Dial-Out State Settings**

---

**Variable Name:** DellRemoteDialOutStateSettings**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
none(0)	The dial-out destination has no state settings.
unknown(1)	The dial-out destination state settings are unknown.
enabled(2)	The dial-out destination is disabled or enabled.
notReady(4)	The dial-out destination is in the "not ready" state.
dialOutPPPAuthAnyEnabled(8)	The dial-out destination accepts any authentication type (including clear text) for PPP.
dialOutPPPAuthEncryptedEnabled(16)	The dial-out destination uses only encrypted passwords authentication type for PPP.
dialOutPPPAuthMschapEnabled(32)	The dial-out destination uses only MSCHAP authentication type for PPP.

---





## Cluster Group

Clustering combines multiple systems in such a way that they provide services a single system could not. Clustering enhances higher availability, scalability, and management. Higher availability is achieved by using "failover" clusters, in which resources can automatically move between two or more systems in the event of a failure. Scalability is achieved by balancing the load of an application across several computer systems. Simpler management is achieved by using virtual servers, as opposed to managing each individual computer system.

### Cluster Group

The Cluster Group defines attributes such as the number of systems in the cluster, capabilities of the cluster, type of cluster, and name of the cluster.

#### Cluster Table

The following table defines the attributes of the cluster.

<b>Name</b>	clusterTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10
<b>Description</b>	Defines the Cluster Table.
<b>Syntax</b>	SEQUENCE OF ClusterTableEntry
<b>Access</b>	Not accessible

#### Cluster Table Entry

<b>Name</b>	clusterTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1
<b>Description</b>	Defines the Cluster Table entry.
<b>Syntax</b>	ClusterTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	clusterChassisIndex, clusterIndex

## Cluster Chassis Index

<b>Name</b>	clusterChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.1
<b>Description</b>	Defines the index (one-based) of this chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Cluster Index

<b>Name</b>	clusterIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.2
<b>Description</b>	Defines the index (one-based) of the cluster.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## Cluster State Capabilities

<b>Name</b>	clusterStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.3
<b>Description</b>	Defines the state capabilities of the cluster.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## Cluster State Settings

<b>Name</b>	clusterStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.4
<b>Description</b>	Defines the state settings of the cluster.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## Cluster Status

<b>Name</b>	clusterStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.5
<b>Description</b>	Defines the status of the cluster.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Cluster Type

<b>Name</b>	clusterType
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.6
<b>Description</b>	Defines the type of the cluster.
<b>Syntax</b>	DellClusterType
<b>Access</b>	Read-only

## Cluster Type Description Name

<b>Name</b>	clusterTypeDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.7
<b>Description</b>	Defines the description name for the type of the cluster.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## Cluster Name

<b>Name</b>	clusterName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1800.10.1.8
<b>Description</b>	Defines the name of the cluster.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

# Cluster Group Variable Values

This section includes definitions for Server Administrator-specific variable values used in this section.

**Table 20-1. Cluster Type**

---

**Variable Name:** DellClusterType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
unknown(1)	The cluster type is unknown.
highAvailabilityCluster(2)	The cluster type is a high-availability cluster.

---

## Baseboard Management Controller Group

The Baseboard Management Controller (BMC) monitors the system for critical events by communicating with various sensors on the system board and sends alerts and log events when certain parameters exceed their preset thresholds. The BMC Group provides information about the BMC that may be present in your system. In addition to providing general information about the BMC, this group provides information about the serial and local area network (LAN) interfaces of the BMC.

### Baseboard Management Controller Group Tables

The objects in the BMC group define information about the BMC and the serial and LAN interfaces that can be used to access the BMC remotely to perform management activities. Objects for the serial interface define the serial connection mode, flow control type and bit rate. Objects for the LAN interface define the media access control (MAC) address, internet protocol (IP) address, subnet mask and default gateway.

The following MIB tables define the BMC group:

- Baseboard Management Controller Table
- Baseboard Management Controller Serial Interface Table
- Baseboard Management Controller LAN Interface Table

#### Baseboard Management Controller Table

<b>Name</b>	bmcTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10
<b>Description</b>	Defines the Baseboard Management Controller Table.
<b>Syntax</b>	SEQUENCE OF BmcTableEntry
<b>Access</b>	Not accessible

## BMC Table Entry

<b>Name</b>	bmcTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1
<b>Description</b>	Defines the Baseboard Management Controller (BMC) Table Entry.
<b>Syntax</b>	BmcTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	bmcChassisIndex, bmcIndex

## BMC Chassis Index

<b>Name</b>	bmcChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.1
<b>Description</b>	Defines the index (one based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## BMC Index

<b>Name</b>	bmcIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.2
<b>Description</b>	Defines the index (one based) of the BMC.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

## BMC State Capabilities

<b>Name</b>	bmcStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.3
<b>Description</b>	Defines the state capabilities of the BMC.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

## BMC State Settings

<b>Name</b>	bmcStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.4
<b>Description</b>	Defines the state settings of the BMC.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

## BMC Status

<b>Name</b>	bmcStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.5
<b>Description</b>	Defines the status of the BMC.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## BMC Display Name

<b>Name</b>	bmcDisplayName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.6
<b>Description</b>	Defines the display name of the BMC.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## BMC Description Name

<b>Name</b>	bmcDescriptionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.7
<b>Description</b>	Defines the description of the BMC.
<b>Syntax</b>	DisplayString (SIZE (0..255))
<b>Access</b>	Read-only

## BMC IPMI Version Name

<b>Name</b>	bmcIPMIVersionName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.8
<b>Description</b>	Defines the version of the Intelligent Platform Management Interface (IPMI) specification that the BMC supports.
<b>Syntax</b>	DellString
<b>Access</b>	Read-only

## BMC GUID

<b>Name</b>	bmcGUID
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.10.1.9
<b>Description</b>	Defines the Globally Unique ID (GUID) of the BMC.
<b>Syntax</b>	OCTET STRING (SIZE(16))
<b>Access</b>	Read-only

## Baseboard Management Controller Serial Interface Table

<b>Name</b>	bmcSerialInterfaceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20
<b>Description</b>	Defines the BMC Serial Interface Table.
<b>Syntax</b>	SEQUENCE OF BmcSerialInterfaceTableEntry
<b>Access</b>	Not accessible

## BMC Serial Interface Table Entry

<b>Name</b>	bmcSerialInterfaceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1
<b>Description</b>	Defines the BMC Serial Interface Table Entry.
<b>Syntax</b>	BmcSerialInterfaceTableEntry
<b>Access</b>	Not accessible
<b>Index</b>	bmcSerialInterfaceChassisIndex, bmcSerialInterfaceBMCIndex, bmcSerialInterfaceIndex



### **BMC Serial Interface Chassis Index**

<b>Name</b>	bmcSerialInterfaceChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.1
<b>Description</b>	Defines the index (one based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### **BMC Serial Interface BMC Index**

<b>Name</b>	bmcSerialInterfaceBMCIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.2
<b>Description</b>	Defines the index (one based) of the associated BMC.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### **BMC Serial Interface Index**

<b>Name</b>	bmcSerialInterfaceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.3
<b>Description</b>	Defines the index (one based) of the BMC serial interface.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### **BMC Serial Interface State Capabilities**

<b>Name</b>	bmcSerialInterfaceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.4
<b>Description</b>	Defines the state capabilities of the BMC serial interface.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### **BMC Serial Interface State Settings**

<b>Name</b>	bmcSerialInterfaceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.5
<b>Description</b>	Defines the state settings of the BMC serial interface.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### **BMC Serial Interface Status**

<b>Name</b>	bmcSerialInterfaceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.6
<b>Description</b>	Defines the status of the BMC serial interface.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### **BMC Serial Interface Channel Number**

<b>Name</b>	bmcSerialInterfaceChannelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.7
<b>Description</b>	Defines the BMC channel number of the BMC serial interface.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

### **BMC Serial Interface Connection Mode Capabilities**

<b>Name</b>	bmcSerialInterfaceConnectionModeCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.8
<b>Description</b>	Defines the connection mode capabilities of the BMC serial interface.
<b>Syntax</b>	DellBMCSerialConnectionModeCapabilities
<b>Access</b>	Read-only

### **BMC Serial Interface Connection Mode Settings**

<b>Name</b>	bmcSerialInterfaceConnectionModeSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.9
<b>Description</b>	Defines the connection mode settings of the BMC serial interface.
<b>Syntax</b>	DellBMCSerialConnectionModeSettings
<b>Access</b>	Read-only

### **BMC Serial Interface Flow Control**

<b>Name</b>	bmcSerialInterfaceFlowControl
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.10
<b>Description</b>	Defines the flow control type of the BMC serial interface.
<b>Syntax</b>	DellBMCSerialFlowControlType
<b>Access</b>	Read-only

### **BMC Serial Interface Bit Rate**

<b>Name</b>	bmcSerialInterfaceBitRate
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.20.1.11
<b>Description</b>	Defines the bit rate of the BMC serial interface.
<b>Syntax</b>	DellBMCSerialBitRateType
<b>Access</b>	Read-only

### **Baseboard Management Controller LAN Interface Table**

<b>Name</b>	bmcLANInterfaceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30
<b>Description</b>	Defines the Baseboard Management Controller (BMC) LAN Interface Table.
<b>Syntax</b>	SEQUENCE OF BmcLANInterfaceTableEntry
<b>Access</b>	Not-accessible

### **BMC LAN Interface Table Entry**

<b>Name</b>	bmcLANInterfaceTableEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1
<b>Description</b>	Defines the Baseboard Management Controller (BMC) LAN Interface Table Entry.
<b>Syntax</b>	BmcLANInterfaceTableEntry
<b>Access</b>	Not-accessible
<b>Index</b>	bmcLANInterfaceChassisIndex, bmcLANInterfaceBMCIndex, bmcLANInterfaceIndex

### **BMC LAN Interface Chassis Index**

<b>Name</b>	bmcLANInterfaceChassisIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.1
<b>Description</b>	Defines the index (one based) of the associated chassis.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### **BMC LAN Interface BMC Index**

<b>Name</b>	bmcLANInterfaceBMCIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.2
<b>Description</b>	Defines the index (one based) of the associated BMC.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### **BMC LAN Interface Index**

<b>Name</b>	bmcLANInterfaceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.3
<b>Description</b>	Defines the index (one based) of the BMC LAN interface.
<b>Syntax</b>	DellObjectRange
<b>Access</b>	Read-only

### **BMC LAN Interface State Capabilities**

<b>Name</b>	bmcLANInterfaceStateCapabilities
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.4
<b>Description</b>	Defines the state capabilities of the BMC LAN interface.
<b>Syntax</b>	DellStateCapabilities
<b>Access</b>	Read-only

### **BMC LAN Interface State Settings**

<b>Name</b>	bmcLANInterfaceStateSettings
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.5
<b>Description</b>	Defines the state settings of the BMC LAN interface.
<b>Syntax</b>	DellStateSettings
<b>Access</b>	Read-write

### **BMC LAN Interface Status**

<b>Name</b>	bmcLANInterfaceStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.6
<b>Description</b>	Defines the status of the BMC LAN interface.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### **BMC LAN Interface Channel Number**

<b>Name</b>	bmcLANInterfaceChannelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.7
<b>Description</b>	Defines the BMC channel number of the BMC LAN interface.
<b>Syntax</b>	DellUnsigned8BitRange
<b>Access</b>	Read-only

### **BMC LAN Interface IP Address Source**

<b>Name</b>	bmcLANInterfaceIPAddressSource
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.8
<b>Description</b>	Defines the source type of the IP address of the BMC LAN interface.
<b>Syntax</b>	DellBMCLANIPAddressSourceType
<b>Access</b>	Read-only

### **BMC LAN Interface IP Address**

<b>Name</b>	bmcLANInterfaceIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.9
<b>Description</b>	Defines the IP address of the BMC LAN interface.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

### **BMC LAN Interface Subnet Mask Address**

<b>Name</b>	bmcLANInterfaceSubnetMaskAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.10
<b>Description</b>	Defines the subnet mask of the BMC LAN interface.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

### **BMC LAN Interface Default Gateway Address**

<b>Name</b>	bmcLANInterfaceDefaultGatewayAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.11
<b>Description</b>	Defines the IP address of the default gateway for the BMC LAN interface.
<b>Syntax</b>	IpAddress
<b>Access</b>	Read-only

## BMC LAN Interface MAC Address

<b>Name</b>	bmcLANInterfaceMACAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.12
<b>Description</b>	Defines the MAC address of the BMC LAN interface.
<b>Syntax</b>	DellMACAddress
<b>Access</b>	Read-only

## BMC LAN Interface Alert Community Name

<b>Name</b>	bmcLANInterfaceAlertCommunityName
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.1900.30.1.13
<b>Description</b>	Defines the SNMP community used for BMC LAN alerts (traps) sent on the BMC LAN interface.
<b>Syntax</b>	DisplayString (SIZE (0..32))
<b>Access</b>	Read-only

# Baseboard Management Controller Group Variable Values

This section includes definitions for server administrator-specific variable values used in this section.

**Table 21-1. BMC Serial Connection Mode Capabilities**

---

<b>Variable Name:</b> DellBMCSerialConnectionModeCapabilities	
<b>Data Type:</b> Integer	
<b>These values are bit masks; therefore, combination values are possible.</b>	
Possible Data Values	Meaning of Data Value
-- none(0)	No mode capabilities.
modemBasic(1)	BMC serial interface supports Modem Basic mode.
modemPPP(2)	BMC serial interface supports Modem Point to Point Protocol (PPP) mode.
modemTerminal(4)	BMC serial interface supports Modem Terminal mode.
directBasic(8)	BMC serial interface supports Direct Basic mode.
directPPP(16)	BMC serial interface supports Direct PPP mode.
directTerminal(32)	BMC serial interface supports Direct Terminal mode.

---

**Table 21-2. BMC Serial Connection Mode Settings**

---

**Variable Name:** DellBMCSerialConnectionModeSettings

**Data Type:** Integer

**These values are bit masks; therefore, combination values are possible.**

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
-- none(0)	No modes enabled.
modemBasic(1)	Modem Basic mode is enabled.
modemPPP(2)	Modem PPP mode is enabled.
modemTerminal(4)	Modem Terminal mode is enabled.
directBasic(8)	Direct Basic mode is enabled.
directPPP(16)	Direct PPP mode is enabled.
directTerminal(32)	Direct Terminal mode is enabled.

---

**Table 21-3. BMC Serial Flow Control Type**

---

**Variable Name:** DellBMCSerialFlowControlType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
-- none(0)	No flow control used.
rtscts(1)	RTS/CTS (hardware) flow control used.
xonXoff(2)	XON/XOFF flow control used.

---

**Table 21-4. BMC Serial Bit Rate Type**

---

**Variable Name:** DellBMCSerialBitRateType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
bps9600(6)	Bit rate is 9600 bps (bits per second)
bps19200(7)	Bit rate is 19200 bps
bps38400(8)	Bit rate is 38400 bps
bps57600(9)	Bit rate is 57600 bps
bps115200(10)	Bit rate is 115200 bps

---



**Table 21-5. BMC LAN IP Address Source Type**

---

**Variable Name:** DellBMCLANIPAddressSourceType

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
-- unspecified(0)	Source is unspecified.
static(1)	IP address is static.
dhcp(2)	Dynamic Host Configuration Protocol (DHCP) used to obtain IP address.
biosOrSystemSoftware(3)	BIOS or system software provided IP Address.
other(4)	Other protocol used to obtain IP address.

---



## Storage Services Group

The Storage Services Group is composed of the following:

- Storage Management Group—information about the software product and system status.
- Storage Management Information Group—properties about the Simple Network Management Protocol (SNMP) agent.
- Global Data Group—system status.
- Physical Devices Group—physical devices managed by the software.
- Logical Devices Group—logical devices managed by the software.
- Storage Management Event Group—SNMP traps.

## Storage Management Group

The Storage Management Information Base (MIB) Group defines the properties that identify information about the Storage Management software product and the current status of the system it manages.

### Software Version

<b>Name</b>	softwareVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.1
<b>Description</b>	Identifies the version number of the storage management component of the systems management software.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Global Status

<b>Name</b>	globalStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.2
<b>Description</b>	Identifies global health for the subsystem managed by the Storage Management software. This global status is customized for HP OpenView. Other applications should refer to the agentSystemGlobalStatus entry in the globalData object group. Possible values: 1: Critical 2: Warning 3: Normal 4: Unknown
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Software Manufacturer

<b>Name</b>	softwareManufacturer
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.3
<b>Description</b>	Identifies the manufacturer of the Storage Management software.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Software Product

<b>Name</b>	softwareProduct
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.4
<b>Description</b>	Identifies product information for the Storage Management software.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Software Description

<b>Name</b>	softwareDescription
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.5
<b>Description</b>	Identifies the product description for the Storage Management software.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

# Storage Management Information Group

The Storage Management Information MIB Group defines the properties that identify the Storage Management software SNMP agent.

## Display Name

<b>Name</b>	displayName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.100.1
<b>Description</b>	Identifies the name of this management software for display purposes.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Description

<b>Name</b>	description
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.100.2
<b>Description</b>	Provides a short description of this management software.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Agent Vendor

<b>Name</b>	agentVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.100.3
<b>Description</b>	Identifies the name of the management software manufacturer.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Agent Version

<b>Name</b>	agentVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.100.4
<b>Description</b>	This entry is obsolete. Refer to softwareVersion.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

# Global Data Group

The Global Data Management Information Base (MIB) Group defines the properties that identify status information about the system that the Storage Management software is managing and about the Storage Management SNMP agent.

## Agent System Global Status

<b>Name</b>	agentSystemGlobalStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.1
<b>Description</b>	This entry is obsolete. Use the value agentGlobalSystemStatus.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Agent Last Global Status

<b>Name</b>	agentLastGlobalStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.2
<b>Description</b>	This entry is obsolete. Use the value agentLastGlobalSystemStatus.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Agent Time Stamp

<b>Name</b>	agentTimeStamp
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.3
<b>Description</b>	Identifies the last time that the agent values have been updated. Universal time in sec since UTC 1/1/70.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Agent Get Timeout

<b>Name</b>	agentGetTimeout
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.4
<b>Description</b>	Indicates the suggested timeout value in milliseconds for how long the SNMP getter should wait while attempting to poll the SNMP agent.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Agent Modifiers

<b>Name</b>	agentModifiers
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.5
<b>Description</b>	Identifies the agent functional modifiers. When set, the modifier is active. Bit definitions: Bit 3: agent in debug mode. All other bits are product specific.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Agent Refresh Rate

<b>Name</b>	agentRefreshRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.6
<b>Description</b>	Identifies the rate, given in seconds, at which the cached data for SNMP is refreshed. The default value is 300 seconds, or 5 minutes.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Agent Hostname

<b>Name</b>	agentHostname
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.7
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Agent IP Address

<b>Name</b>	agentIPAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.8
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Agent Software Status

<b>Name</b>	agentSoftwareStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.9
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Agent SNMP Version

<b>Name</b>	agentSnmpVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.10
<b>Description</b>	This entry is obsolete. Refer to 0001 softwareVersion.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Agent MIB Version

<b>Name</b>	agentMibVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.11
<b>Description</b>	Identifies the version of the Storage Management MIB.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only



## Agent Management Software URL Name

<b>Name</b>	agentManagementSoftwareURLName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.12
<b>Description</b>	Identifies the Universal Resource Locator (URL) of the systems management software.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Agent Global System Status

<b>Name</b>	agentGlobalSystemStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.13
<b>Description</b>	<p>Global health information for the subsystem managed by the Storage Management software. This global status should be used by applications other than HP OpenView. HP OpenView should refer to the globalStatus in the root level object group. This is a rollup for the entire agent including any monitored devices. The status is intended to give initiative to an SNMP monitor to get further data when this status is abnormal. Possible values:</p> <ul style="list-style-type: none"><li>1: Other</li><li>2: Unknown</li><li>3: OK</li><li>4: Non-critical</li><li>5: Critical</li><li>6: Non-recoverable</li></ul>
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Agent Last Global System Status

<b>Name</b>	agentLastGlobalSystemStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.14
<b>Description</b>	The previous global status of the system managed by the Storage Management software. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Agent Smart Thermal Shutdown

<b>Name</b>	agentSmartThermalShutdown
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.110.15
<b>Description</b>	Indicates the status of smart thermal shutdown for PV220S and PV221S enclosures. Possible values: 1: Enabled 2: Disabled 3: Not applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Physical Devices Group

The Physical Devices MIB group provides information about the devices managed by the Storage Management software and their relationships to each other. The following MIB tables define objects and relationships (connections) among the objects.

- **Controller Table**—describes available properties for each controller on the managed system.
- **Channel Table**—describes available properties for each channel on the managed system.
- **Enclosure Table**—describes available properties for each enclosure on the managed system.
- **Array Disk Table**—describes available properties for each physical array disk on the managed system.
- **Array Disk Enclosure Connection Table**—describes the connections between Fibre Channel array disks, their enclosure, and their associated controller. For each object in the table, its object "number" corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.
- **Array Disk Channel Connection Table**—describes the connections between SCSI array disks, their channel, and their associated controller. For each object in the table, its object "number" corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.
- **Fan Table**—describes available properties for each fan on the managed system.
- **Fan Connection Table**—describes the connection between each fan on the managed system and its enclosure. Each enclosure "number" in the table corresponds to that enclosure instance in the Enclosure Table.
- **Power Supply Table**—describes available properties for each power supply on the managed system.
- **Power Supply Connection Table**—describes the connection between each power supply on the managed system and its enclosure. Each enclosure "number" in the table corresponds to that enclosure instance in the Enclosure Table.
- **Temperature Probe Table**—describes available properties for each temperature probe on the managed system.
- **Temperature Probe Connection Table**—describes the connection between each temperature probe on the managed system and its enclosure. Each enclosure "number" in the table corresponds to that enclosure instance in the Enclosure Table.
- **EMM Table**—describes available properties for each Enclosure Management Module (EMM) on the managed system.
- **EMM Connection Table**—describes the connection between each EMM on the managed system and its enclosure. Each enclosure "number" in the table corresponds to that enclosure instance in the Enclosure Table.
- **Battery Table**—describes available properties for each controller battery on the managed system.
- **Battery Connection Table**—describes the connection between each battery on the managed system and its controller. Each controller "number" in the table corresponds to that controller instance in the Controller Table.

## Controller Table

This table describes available properties for each controller on the managed system.

The following object sets up the Controller Table.

<b>Name</b>	controllerTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1
<b>Description</b>	Defines the controller table, which is a table of managed Redundant Array of Independent disks (RAID) controllers. The number of entries is related to the number of RAID controllers discovered in the system.
<b>Syntax</b>	SEQUENCE OF ControllerEntry
<b>Access</b>	Not accessible

## Controller Entry

<b>Name</b>	controllerEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1
<b>Description</b>	Defines the controller table entry, which is an entry in the table of RAID controllers. A row in this table cannot be created or deleted by SNMP operations on columns of the table.
<b>Syntax</b>	ControllerEntry
<b>Access</b>	Not accessible
<b>Index</b>	controllerNumber

## Controller Number

<b>Name</b>	controllerNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.1
<b>Description</b>	Identifies the instance number of the controller entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Controller Name

<b>Name</b>	controllerName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.2
<b>Description</b>	Identifies the name of the controller in this subsystem as represented in Storage Management. Includes the controller type and instance. For example: PERC 3/QC 1.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Controller Vendor

<b>Name</b>	controllerVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.3
<b>Description</b>	Identifies the controller's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Controller Type

<b>Name</b>	controllerType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.4
<b>Description</b>	Identifies the type of this controller: 1: SCSI 2: PV660F 3: PV662F 4: Integrated/Intelligent Drive Electronics (IDE) 5: Serial Advanced Technology Architecture (SATA) 6: Serial Attached SCSI (SAS)
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Controller State

<b>Name</b>	<code>controllerState</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.5
<b>Description</b>	Identifies the status of the controller's subsystem (which includes any devices connected to it). Possible states: 0: Unknown 1: Ready 2: Failed 3: Online 4: Offline 6: Degraded
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Controller Severity

<b>Name</b>	<code>controllerSeverity</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.6
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Controller Rebuild Rate in Percent

<b>Name</b>	<code>controllerRebuildRateInPercent</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.7
<b>Description</b>	Identifies the percent of the compute cycles dedicated to rebuilding failed array disks.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Firmware Version

<b>Name</b>	controllerFWVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.8
<b>Description</b>	Identifies the controller's current firmware version.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller Cache Size in Megabytes

<b>Name</b>	controllerCacheSizeInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.9
<b>Description</b>	Identifies the controller's current amount of cache memory in megabytes. If this size is 0, it is less than a megabyte.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Cache Size in Bytes

<b>Name</b>	controllerCacheSizeInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.10
<b>Description</b>	Identifies the controller's current amount of cache memory that is less than a megabyte. This combined with the controllerCacheSizeInMB will be the total amount of memory.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Physical Device Count

<b>Name</b>	controllerPhysicalDeviceCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.11
<b>Description</b>	Identifies the number of physical devices on the controller channel including both disks and the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Logical Device Count

<b>Name</b>	controllerLogicalDeviceCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.12
<b>Description</b>	Identifies the number of virtual disks on the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Partner Status

<b>Name</b>	controllerPartnerStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.13
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller Host Port Count

<b>Name</b>	controllerHostPortCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.14
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Memory Size in Megabytes

<b>Name</b>	controllerMemorySizeInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.15
<b>Description</b>	Identifies the size of memory in megabytes on the controller. If this size is 0, it is less than a megabyte.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only



### Controller Memory Size in Bytes

<b>Name</b>	controllerMemorySizeInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.16
<b>Description</b>	Identifies the size of memory on the controller that is less than a megabyte. This combined with the controllerMemorySizeInMB will be the total size of the memory.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Drive Channel Count

<b>Name</b>	controllerDriveChannelCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.17
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Fault Tolerant

<b>Name</b>	controllerFaultTolerant
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.18
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller C0 Port 0 World Wide Name

<b>Name</b>	controllerC0Port0WWN
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.19
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller C0 Port 0 Name

<b>Name</b>	controllerC0Port0Name
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.20
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller C0 Port 0 ID

<b>Name</b>	controllerC0Port0ID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.21
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller C0 Target

<b>Name</b>	controllerC0Target
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.22
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller C0 Channel

<b>Name</b>	controllerC0Channel
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.23
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller C0 Operating System Controller

<b>Name</b>	controllerC0OSController
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.24
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller C0 Battery State

<b>Name</b>	controllerC0BatteryState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.25
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller C1 Port 0 World Wide Name

<b>Name</b>	controllerC1Port0WWN
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.26
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller C1 Port 0 Name

<b>Name</b>	controllerC1Port0Name
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.27
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller C1 Port 0 ID

<b>Name</b>	controllerC1Port0ID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.28
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller C1 Target

<b>Name</b>	controllerC1Target
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.29
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller C1 Channel

<b>Name</b>	controllerC1Channel
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.30
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller C1 Operating System Controller

<b>Name</b>	controllerC1OSController
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.31
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller Battery State C1

<b>Name</b>	controllerC1BatteryState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.32
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Node World Wide Name

<b>Name</b>	controllerNodeWWN
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.33
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller C0 Port 1 World Wide Name

<b>Name</b>	controllerC0Port1WWN
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.34
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller C1 Port 1 World Wide Name

<b>Name</b>	controllerC1Port1WWN
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.35
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Controller Battery Charge Count

<b>Name</b>	controllerBatteryChargeCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.36
<b>Description</b>	This entry is obsolete. Fibre channel is not supported in Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Roll-Up Status

<b>Name</b>	controllerRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.37
<b>Description</b>	Indicates severity of the controller state. This is the combined status of the controller and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Component Status

<b>Name</b>	controllerComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.38
<b>Description</b>	Indicates the status of the controller itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Controller Nexus ID

<b>Name</b>	controllerNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.39
<b>Description</b>	Durable unique ID for this controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Controller Alarm State

<b>Name</b>	controllerAlarmState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.40
<b>Description</b>	Indicates state, or setting for the controller's alarm. Possible values: 1: Enabled 2: Disabled 3: Not Applicable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Controller Driver Version

<b>Name</b>	controllerDriverVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.41
<b>Description</b>	Indicates currently installed driver version of the controller
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Controller PCI Slot

<b>Name</b>	controllerPCISlot
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.42
<b>Description</b>	Indicates the PCI slot number or embedded number for controllers on the motherboard
<b>Syntax</b>	octet string
<b>Access</b>	Read-only

## Controller Cluster Mode

<b>Name</b>	<code>controllerClusterMode</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.43
<b>Description</b>	Identifies if the controller is in cluster mode. Possible values: 1: Enabled 2: Disabled 3: Active (enabled and active) 99: Not Applicable
<b>Syntax</b>	INTEGER { enabled(1), disabled(2), active(3), notApplicable(99) }
<b>Access</b>	Read-only

## Controller Minimum Firmware Version

<b>Name</b>	<code>controllerMinFWVersion</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.44
<b>Description</b>	The minimum firmware version for Storage Management to support the controller.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Controller Minimum Driver Version

<b>Name</b>	<code>controllerMinDriverVersion</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.45
<b>Description</b>	The minimum driver version for Storage Management to support the controller.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-write



### Controller SCSI Initiator ID

<b>Name</b>	controllerSCSIInitiatorID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.46
<b>Description</b>	The SCSI ID of the initiator.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Channel Count

<b>Name</b>	controllerChannelCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.47
<b>Description</b>	The number of channels on the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Reconstruct Rate

<b>Name</b>	controllerReconstructRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.48
<b>Description</b>	The rate for reconstruct on the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-write

### Controller Patrol Read Rate

<b>Name</b>	controllerPatrolReadRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.49
<b>Description</b>	The rate for patrol read on the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller BGI Rate

<b>Name</b>	controllerBGIRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.50
<b>Description</b>	The rate for background initialization on the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Check Consistency Rate

<b>Name</b>	controllerCheckConsistencyRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.51
<b>Description</b>	The rate for check consistency on the controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Controller Patrol Read Mode

<b>Name</b>	controllerPatrolReadMode
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.52
<b>Description</b>	Identifies the patrol read mode. Possible values: 1: Automatic (enabled) 2: Manual (enabled) 3: Disabled
<b>Syntax</b>	INTEGER { automatic(1), manual(2), disabled(3) }
<b>Access</b>	Read-only

## Controller Patrol Read State

<b>Name</b>	controllerPatrolReadState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.53
<b>Description</b>	The state of the patrol read. Possible values: 1: Stopped - not running 2: Ready - ready to start 4: Active - is running 8: Aborted - has aborted
<b>Syntax</b>	INTEGER { stopped(1), ready(2), active(4), aborted(8) }
<b>Access</b>	Read-only

## Controller Patrol Read Iterations

<b>Name</b>	controllerPatrolReadIterations
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.1.1.54
<b>Description</b>	The number of times Patrol Read has been run on this controller.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Channel Table

This table describes available properties for each channel on the managed system.

The following object sets up the Channel Table.

<b>Name</b>	channelTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2
<b>Description</b>	Defines the channel table.
<b>Syntax</b>	SEQUENCE OF ChannelEntry
<b>Access</b>	Not accessible

## Channel Entry

<b>Name</b>	channelEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1
<b>Description</b>	Defines the channel table entry.
<b>Syntax</b>	ChannelEntry
<b>Access</b>	Not accessible
<b>Index:</b>	channelNumber

## Channel Number

<b>Name</b>	channelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.1
<b>Description</b>	Identifies the instance number of the channel entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Channel Name

<b>Name</b>	channelName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.2
<b>Description</b>	Identifies the name of the channel as represented in Storage Management. The name will include the word channel and the instance. For example: Channel 1.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Channel State

<b>Name</b>	channelState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.3
<b>Description</b>	Identifies the current state of this channel. Possible states: 0: Unknown 1: Ready - The I/O has resumed. 2: Failed 3: Online 4: Offline - The I/O has paused. 6: Degraded
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Channel Severity

<b>Name</b>	channelSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.4
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Channel Termination

<b>Name</b>	channelTermination
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.5
<b>Description</b>	Identifies the type of SCSI termination on this channel. Termination is required for proper operation of this channel. Possible values: 1: Wide Termination (16 bit) 2: Narrow Termination (8 bit) 3: Not Terminated
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Channel SCSI ID

<b>Name</b>	channelSCSIID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.6
<b>Description</b>	Identifies the SCSI ID of the controller to which the channel belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Channel Roll-Up Status

<b>Name</b>	channelRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.7
<b>Description</b>	Identifies the severity of the channel state. This is the combined status of the channel and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Channel Component Status

<b>Name</b>	channelComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.8
<b>Description</b>	The status of the channel itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Channel Nexus ID

<b>Name</b>	channelNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.9
<b>Description</b>	Durable unique ID for this channel.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Channel Data Rate

<b>Name</b>	channelDataRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.10
<b>Description</b>	Identifies the data rate of this channel.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Channel Bus Type

<b>Name</b>	channelBusType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.2.1.11
<b>Description</b>	The bus type of the channel. Possible values: 1: SCSI 2: IDE 3: Fibre Channel 4: Serial Storage Architecture (SSA) 6: Universal Serial Bus (USB) 7: SATA 8: SAS
<b>Syntax</b>	INTEGER { scsi(1), ide(2), fibreChannel(3), ssa(4), usb(6), sata(7), sas(8) }
<b>Access</b>	Read-only

## Enclosure Table

This table describes available properties for each enclosure on the managed system. The following object sets up the Enclosure Table.

<b>Name</b>	enclosureTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3
<b>Description</b>	Defines the enclosure table.
<b>Syntax</b>	SEQUENCE OF EnclosureEntry
<b>Access</b>	Not accessible



## Enclosure Entry

<b>Name</b>	enclosureEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1
<b>Description</b>	Defines the enclosure table entry.
<b>Syntax</b>	EnclosureEntry
<b>Access</b>	Not accessible
<b>Index</b>	enclosureNumber

## Enclosure Number

<b>Name</b>	enclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.1
<b>Description</b>	Identifies the instance number of the enclosure entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Enclosure Name

<b>Name</b>	enclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.2
<b>Description</b>	Identifies the enclosure's name as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Enclosure Vendor

<b>Name</b>	enclosureVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.3
<b>Description</b>	Identifies the enclosure's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Enclosure State

<b>Name</b>	enclosureState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.4
<b>Description</b>	The current condition of the enclosure (which includes any devices connected to it.) Possible values: 0: Unknown 1: Ready 2: Failed 3: Online 4: Offline 6: Degraded
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Enclosure Severity

<b>Name</b>	enclosureSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Enclosure ID

<b>Name</b>	enclosureID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.6
<b>Description</b>	Identifies the SCSI address of the processor.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Enclosure Processor Version

<b>Name</b>	enclosureProcessorVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.7
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Service Tag

<b>Name</b>	enclosureServiceTag
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.8
<b>Description</b>	The enclosure identification used when consulting customer support.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Asset Tag

<b>Name</b>	enclosureAssetTag
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.9
<b>Description</b>	Customer definable asset tag for the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Asset Name

<b>Name</b>	enclosureAssetName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.10
<b>Description</b>	Customer definable asset name of the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Split Bus Part Number

<b>Name</b>	enclosureSplitBusPartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.11
<b>Description</b>	Identifies the enclosure's split bus part number.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Product ID

<b>Name</b>	enclosureProductID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.12
<b>Description</b>	Identifies the enclosure's product identification. This also corresponds to the enclosure type.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Kernel Version

<b>Name</b>	enclosureKernelVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.13
<b>Description</b>	Identifies the version of the enclosure's kernel (PV200S, PV201S, PV210S, and PV211S only.)
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure ESM1 Part Number

<b>Name</b>	enclosureESM1PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.14
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure ESM2 Part Number

<b>Name</b>	enclosureESM2PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.15
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Enclosure Type

<b>Name</b>	enclosureType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.16
<b>Description</b>	Indicates the type of the enclosure. Possible values: 1: Internal 2: Dell™ PowerVault™ 200S (PV201S) 3: Dell PV210S (PV211S) 4: Dell PV220S (PV221S) 5: Dell PV660F 6: Dell PV224F 7: Dell PV660F/PV224F 8: Dell MD1000
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Enclosure Processor2 Version

<b>Name</b>	enclosureProcessor2Version
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.17
<b>Description</b>	This entry is obsolete for Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Enclosure Configuration

<b>Name</b>	enclosureConfig
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.18
<b>Description</b>	Identifies the current configuration of the enclosure's backplane. Possible values: 1: Joined 2: Split Bus 3: Clustered
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure Channel Number

<b>Name</b>	enclosureChannelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.19
<b>Description</b>	Identifies the channel number, or bus, to which the enclosure is connected.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure Alarm

<b>Name</b>	enclosureAlarm
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.20
<b>Description</b>	Identifies the current status of the enclosure's alarm (PV220S and PV221S only.) Possible values: 1: Off 2: On
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure Backplane Part Number

<b>Name</b>	enclosureBackplanePartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.21
<b>Description</b>	Identifies the part number of the enclosure's backplane.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure SCSI ID

<b>Name</b>	enclosureSCSIID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.22
<b>Description</b>	Identifies the SCSI ID of the controller to which this enclosure is attached.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Enclosure Roll-Up Status

<b>Name</b>	enclosureRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.23
<b>Description</b>	Identifies the severity of the enclosure state. This is the combined status of the enclosure and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Enclosure Component Status

<b>Name</b>	enclosureComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.24
<b>Description</b>	The status of the enclosure itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Enclosure Nexus ID

<b>Name</b>	enclosureNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.25
<b>Description</b>	Durable unique ID for this enclosure.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure FirmWare Version

<b>Name</b>	enclosureFirmwareVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.26
<b>Description</b>	The firmware version of the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure SCSI Rate

<b>Name</b>	enclosureSCSIRate
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.27
<b>Description</b>	Actual SCSI rate in the enclosure.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

### Enclosure Part Number

<b>Name</b>	enclosurePartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.28
<b>Description</b>	The part number of the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### EnclosureSerial Number

<b>Name</b>	enclosureSerialNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.3.1.29
<b>Description</b>	Serial number of the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only



## Array Disk Table

This table describes available properties for each physical array disk on the managed system. The following object sets up the Array Disk Table.

<b>Name</b>	arrayDiskTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4
<b>Description</b>	Defines the array disk table.
<b>Syntax</b>	SEQUENCE OF ArrayDiskEntry
<b>Access</b>	Not accessible

## Array Disk Entry

<b>Name</b>	arrayDiskEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1
<b>Description</b>	Defines the array disk table entry.
<b>Syntax</b>	ArrayDiskEntry
<b>Access</b>	Not accessible
<b>Index</b>	arrayDiskNumber

## Array Disk Number

<b>Name</b>	arrayDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.1
<b>Description</b>	Identifies the instance number of the array disk entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Array Disk Name

<b>Name</b>	arrayDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.2
<b>Description</b>	Identifies the name of the array disk as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Array Disk Vendor

<b>Name</b>	arrayDiskVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.3
<b>Description</b>	The array disk's manufacturer's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Array Disk State

<b>Name</b>	arrayDiskState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.4
<b>Description</b>	Identifies the current state of the array disk. Possible states: 0: Unknown 1: Ready - Available for use, but no RAID configuration has been assigned. 2: Failed - Not operational. 3: Online - Operational. RAID configuration has been assigned. 4: Offline - The drive is not available to the RAID controller. 6: Degraded - Refers to a fault-tolerant array/virtual disk that has a failed disk. 7: Recovering - Refers to state of recovering from bad blocks on disks. 11: Removed - Indicates that array disk has been removed. 15: Resyncing - Indicates one of the following types of disk operations: Transform Type, Reconfiguration, and Check Consistency. 24: Rebuild 25: No Media - CD-ROM or removable disk has no media. 26: Formatting - In the process of formatting. 28: Diagnostics - Diagnostics are running. 34: Predictive Failure 35: Initializing: Applies only to virtual disks on PowerEdge RAID Controller (PERC), PERC 2/SC, and PERC 2/DC controllers. 39: Foreign 40: Clear 41: Unsupported
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Severity

<b>Name</b>	arrayDiskSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Product ID

<b>Name</b>	arrayDiskProductID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.6
<b>Description</b>	Identifies the model number of the array disk.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Serial Number

<b>Name</b>	arrayDiskSerialNo
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.7
<b>Description</b>	Identifies the array disk's unique identification number from the manufacturer.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Revision

<b>Name</b>	arrayDiskRevision
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.8
<b>Description</b>	Identifies the firmware version of the array disk.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Enclosure ID

<b>Name</b>	arrayDiskEnclosureID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.9
<b>Description</b>	Identifies the SCSI ID of the enclosure processor to which this array disk belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Channel

<b>Name</b>	arrayDiskChannel
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.10
<b>Description</b>	Identifies the bus to which this array disk is connected.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Length in Megabytes

<b>Name</b>	arrayDiskLengthInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.11
<b>Description</b>	Identifies the size in megabytes of the array disk. If this size is 0, it is smaller than a megabyte.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Length in Bytes

<b>Name</b>	arrayDiskLengthInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.12
<b>Description</b>	Identifies the size of the array disk in bytes that is less than a megabyte. This size plus the arrayDiskLengthInMB is the total size of the array disk.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Largest Contiguous Free Space in Megabytes

<b>Name</b>	arrayDiskLargestContiguousFreeSpaceInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.13
<b>Description</b>	The size in megabytes of the largest contiguous free space on the array disk. If this size is 0, it is less than a megabyte.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Largest Contiguous Free Space in Bytes

<b>Name</b>	arrayDiskLargestContiguousFreeSpaceInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.14
<b>Description</b>	The size of the largest contiguous free space on this array disk in bytes that is less than a megabyte. This size plus the arrayDiskLargestContiguousFreeSpaceInMB is the total size of the largest contiguous free space on the array disk.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Target ID

<b>Name</b>	arrayDiskTargetID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.15
<b>Description</b>	Identifies the SCSI target ID which this array disk is assigned.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk LUN ID

<b>Name</b>	arrayDiskLunID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.16
<b>Description</b>	Identifies the array disk's logical unit number.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Used Space in Megabytes

<b>Name</b>	arrayDiskUsedSpaceInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.17
<b>Description</b>	Identifies the amount in megabytes of the used space on the array disk. If this size is 0, it is smaller than a megabyte.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Used Space in Bytes

<b>Name</b>	arrayDiskUsedSpaceInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.18
<b>Description</b>	Identifies the size in bytes of the used space on the array disk that is smaller than a megabyte. This size plus the arrayDiskUsedSpaceInMB is the total amount of used space on the array disk.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Free Space in Megabytes

<b>Name</b>	arrayDiskFreeSpaceInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.19
<b>Description</b>	Identifies the amount in megabytes of the free space on the array disk. If this size is 0, it is smaller than a megabyte.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Free Space in Bytes

<b>Name</b>	arrayDiskFreeSpaceInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.20
<b>Description</b>	Identifies the size in bytes of the free space on the array disk that is smaller than a megabyte. This size plus the arrayDiskFreeSpaceInMB is the total amount of free space on the array disk.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Array Disk Bus Type

<b>Name</b>	arrayDiskBusType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.21
<b>Description</b>	Identifies the bus type of the array disk. Possible values: 1: SCSI 2: IDE 3: Fibre Channel 4: SSA 6: USB 7: SATA 8: SAS
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Array Disk Spare State

<b>Name</b>	arrayDiskSpareState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.22
<b>Description</b>	Identifies the status of the array disk as a spare. Possible states: 1: Disk is a member of a virtual disk 2: Disk is a member of a disk group 3: Disk is a global hot spare 4: Disk is a dedicated hot spare 5: Not a spare
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Roll-Up Status

<b>Name</b>	arrayDiskRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.23
<b>Description</b>	Severity of the array disk state. This is the combined status of the array disk and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Array Disk Component Status

<b>Name</b>	arrayDiskComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.24
<b>Description</b>	The status of the array disk itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Array Disk Device Name

<b>Name</b>	arrayDiskDeviceName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.25
<b>Description</b>	Identifies the operating system device name for this disk.
<b>Syntax</b>	Integer
<b>Access</b>	Integer



### Array Disk Nexus ID

<b>Name</b>	arrayDiskNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.26
<b>Description</b>	Indicates the durable unique ID for this array disk.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Part Number

<b>Name</b>	arrayDiskPartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.27
<b>Description</b>	Indicates the part number of the disk.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk SAS Address

<b>Name</b>	arrayDiskSASAddress
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.28
<b>Description</b>	Indicates the specified SAS address, if this is a SAS disk.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

### Array Disk Negotiated Speed

<b>Name</b>	arrayDiskNegotiatedSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.29
<b>Description</b>	Indicates the speed at which the drive is actually running in MPS (megabytes per second).
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Capable Speed

<b>Name</b>	arrayDiskCapableSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.30
<b>Description</b>	Indicates the maximum speed at which the drive is capable of negotiating in MPS (megabytes per second).
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Smart Alert Indication

<b>Name</b>	arrayDiskSmartAlertIndication
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.31
<b>Description</b>	Indicates whether the disk has received a predictive failure. Possible values: 1: No - disk has not received a predictive failure alert 2: Yes - disk has received a predictive failure alert
<b>Syntax</b>	INTEGER { no(1), yes(2) }
<b>Access</b>	Read-only

### Array Disk Manufacture Day

<b>Name</b>	arrayDiskManufactureDay
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.32
<b>Description</b>	Indicates the day of the week (1=Sunday through 7=Saturday) on which this disk was manufactured.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Manufacture Week


<b>Name</b>	arrayDiskManufactureWeek
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.33
<b>Description</b>	The week (1 through 53) in which this disk was manufactured.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Manufacture Year

<b>Name</b>	arrayDiskManufactureYear
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.4.1.34
<b>Description</b>	The four digit year in which this disk was manufactured.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Enclosure Connection Table

This table describes the connections among array disks, their enclosure, and their associated controller. For each object in the table, its object "number" corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.

 **NOTE:** Only array disks that are part of an enclosure will be listed in this table. Backplanes are considered enclosures by Storage Management.

The following object sets up the Array Disk Enclosure Connection Table.

<b>Name</b>	arrayDiskEnclosureConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5
<b>Description</b>	Defines the array disk enclosure connection table.
<b>Syntax</b>	SEQUENCE OF ArrayDiskEnclosureConnectionEntry
<b>Access</b>	Not accessible

### Array Disk Enclosure Connection Entry

<b>Name</b>	arrayDiskEnclosureConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1
<b>Description</b>	Defines the array disk enclosure connection table entry.
<b>Syntax</b>	ArrayDiskEnclosureConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	arrayDiskEnclosureConnectionNumber

### Array Disk Enclosure Connection Number

<b>Name</b>	arrayDiskEnclosureConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.1
<b>Description</b>	Identifies the instance number of the array disk enclosure connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Enclosure Connection Array Disk Name

<b>Name</b>	arrayDiskEnclosureConnectionArrayDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.2
<b>Description</b>	Identifies the name of the array disk in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Enclosure Connection Array Disk Number

<b>Name</b>	arrayDiskEnclosureConnectionArrayDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.3
<b>Description</b>	Identifies the instance number of the array disk in the arrayDiskTable in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Enclosure Connection Enclosure Name

<b>Name</b>	arrayDiskEnclosureConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this array disk belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Enclosure Connection Enclosure Number

<b>Name</b>	arrayDiskEnclosureConnectionEnclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.5
<b>Description</b>	Identifies the instance number in the enclosureTable of the enclosure to which this array disk belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Enclosure Connection Controller Name


<b>Name</b>	arrayDiskEnclosureConnectionControllerName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.6
<b>Description</b>	Identifies the name of the controller as represented in Storage Management to which this array disk is connected.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Enclosure Connection Controller Number

<b>Name</b>	arrayDiskEnclosureConnectionControllerNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.5.1.7
<b>Description</b>	Identifies the instance number in the controllerTable of the controller to which this array disk is connected.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Array Disk Channel Connection Table

This table describes the connections between array disks, their channel, and their associated controller. For each object in the table, its object "number" corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.

 **NOTE:** Only array disks that are NOT part of an enclosure will be listed in this table. Backplanes are considered enclosures by Storage Management.

The following object sets up the Array Disk Channel Connection Table.

<b>Name</b>	arrayDiskChannelConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.6
<b>Description</b>	Defines the array disk channel connection table.
<b>Syntax</b>	SEQUENCE OF ArrayDiskChannelConnectionEntry
<b>Access</b>	Not accessible

## Array Disk Channel Connection Entry

<b>Name</b>	arrayDiskChannelConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.6.1
<b>Description</b>	Defines the array disk channel connection table entry.
<b>Syntax</b>	ArrayDiskChannelConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	arrayDiskEnclosureConnectionNumber

## Array Disk Channel Connection Number

<b>Name</b>	arrayDiskChannelConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.6.1.1
<b>Description</b>	Identifies the instance number of the array disk channel connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Channel Connection Array Disk Name

<b>Name</b>	arrayDiskChannelConnectionArrayDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.6.1.2
<b>Description</b>	Identifies the name of the array disk in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Channel Connection Array Disk Number

<b>Name</b>	arrayDiskChannelConnectionArrayDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.6.1.3
<b>Description</b>	Identifies the instance number of the array disk in the arrayDiskTable in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Channel Connection Channel Name

<b>Name</b>	arrayDiskChannelConnectionChannelName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.6.1.4
<b>Description</b>	Identifies the name of the channel as represented in Storage Management to which is array disk is connected.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Channel Connection Channel Number

<b>Name</b>	arrayDiskChannelConnectionChannelNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.6.1.5
<b>Description</b>	Identifies the instance number of the channel in the channelTable to which this array disk is connected.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Channel Connection Controller Name

<b>Name</b>	arrayDiskChannelConnectionControllerName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.6.1.6
<b>Description</b>	Identifies the name of the controller as represented in Storage Management to which this array disk is connected.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Channel Connection Controller Number

<b>Name</b>	arrayDiskChannelConnectionControllerNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.6.1.7
<b>Description</b>	Identifies the instance number in the controllerTable of the controller to which this array disk is connected.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Fan Table

This table describes available properties for each fan on the managed system. The following object sets up the Fan Table.

<b>Name</b>	fanTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7
<b>Description</b>	Defines the fan table.
<b>Syntax</b>	SEQUENCE OF FanEntry
<b>Access</b>	Not accessible

### Fan Entry

<b>Name</b>	fanEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1
<b>Description</b>	Defines the fan table entry.
<b>Syntax</b>	FanEntry
<b>Access</b>	Not accessible
<b>Index</b>	fanNumber



## Fan Number

<b>Name</b>	fanNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.1
<b>Description</b>	Identifies the instance number of the fan entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Fan Name

<b>Name</b>	Fan Name
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.2
<b>Description</b>	Identifies the fan's name as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan Vendor

<b>Name</b>	fanVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.3
<b>Description</b>	Identifies the fan's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan State

<b>Name</b>	fanState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.4
<b>Description</b>	Identifies the current state of the fan. Possible states: 0: Unknown 1: Ready 2: Failed 3: Online 4: Offline 6: Degraded 21: Missing
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Fan Severity

<b>Name</b>	fanSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Fan Probe Unit

<b>Name</b>	fanProbeUnit
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.6
<b>Description</b>	This entry is obsolete for Storage Services.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan Probe Minimum Warning

<b>Name</b>	fanProbeMinimumWarning
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.7
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan Probe Minimum Critical

<b>Name</b>	fanProbeMinimumCritical
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.8
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Fan Probe Maximum Warning

<b>Name</b>	fanProbeMaximumWarning
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.9
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Fan Probe Maximum Critical

<b>Name</b>	fanProbeMaximumCritical
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.10
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Fan Probe Current Value

<b>Name</b>	fanProbeCurrValue
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.11
<b>Description</b>	Identifies the current speed of the fan.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Fan1 Part Number

<b>Name</b>	fan1PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.12
<b>Description</b>	Identifies the part number of the fan in the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan 2 Part Number

<b>Name</b>	fan2PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.13
<b>Description</b>	This entry is obsolete. This setting is not supported by fans managed under Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan Roll-Up Status

<b>Name</b>	fanRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.14
<b>Description</b>	Severity of the fan state. This is the combined status of the fan and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Fan Component Status

<b>Name</b>	fanComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.15
<b>Description</b>	The status of the fan itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan Nexus ID

<b>Name</b>	fanNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.16
<b>Description</b>	Durable unique ID for this fan.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan Revision

<b>Name</b>	fanRevision
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.7.1.17
<b>Description</b>	Indicates the revision number of the fan in the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan Connection Table

This table describes the connection between each fan on the managed system and its enclosure. Each enclosure "number" in the table corresponds to that enclosure instance in the enclosure Table.

The following object sets up the Fan Connection Table.

<b>Name</b>	fanConnectionTable
<b>Object ID</b>	fanConnectionTable
<b>Description</b>	Defines the fan connection table.
<b>Syntax</b>	SEQUENCE OF FanConnectionEntry
<b>Access</b>	Not accessible

## Fan Connection Entry

<b>Name</b>	fanConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1
<b>Description</b>	Defines the fan connection table entry.
<b>Syntax</b>	FanConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	fanConnectionNumber

### Fan Connection Number

<b>Name</b>	fanConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.1
<b>Description</b>	Identifies the instance number of the fan connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Fan Connection Fan Name

<b>Name</b>	fanConnectionFanName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.2
<b>Description</b>	Identifies the name of the fan in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Fan Connection Fan Number

<b>Name</b>	fanConnectionFanNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.3
<b>Description</b>	Identifies the instance number of the fan in the fanTable in the connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Fan Connection Enclosure Name

<b>Name</b>	fanConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this fan belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Fan Connection Enclosure Number

<b>Name</b>	fanConnectionEnclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.8.1.5
<b>Description</b>	Identifies the instance number of the enclosure in the enclosureTable to which this fan belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Power Supply Table

This table describes available properties for each power supply on the managed system. The following object sets up the Power Supply Table.

<b>Name</b>	powerSupplyTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9
<b>Description</b>	Defines the power supply table.
<b>Syntax</b>	SEQUENCE OF PowerSupplyEntry
<b>Access</b>	Not accessible

## Power Supply Entry

<b>Name</b>	powerSupplyEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1
<b>Description</b>	Defines the power supply table entry.
<b>Syntax</b>	PowerSupplyEntry
<b>Access</b>	Not accessible
<b>Index</b>	powerSupplyNumber

## Power Supply Number

<b>Name</b>	powerSupplyNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.1
<b>Description</b>	Identifies the instance number of the power supply entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Power Supply Name

<b>Name</b>	powerSupplyName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.2
<b>Description</b>	Identifies the power supply's name as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Power Supply Vendor

<b>Name</b>	powerSupplyVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.3
<b>Description</b>	Identifies the power supply's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Power Supply State

<b>Name</b>	powerSupplyState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.4
<b>Description</b>	Identifies the current state of the power supply. Possible states: 0: Unknown 1: Ready 2: Failed
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Power Supply Severity

<b>Name</b>	powerSupplySeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only



### Power Supply 1 Part Number

<b>Name</b>	powerSupply1PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.6
<b>Description</b>	Identifies the part number of the power supply of the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Power Supply 2 Part Number

<b>Name</b>	powerSupply2PartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.7
<b>Description</b>	This entry is obsolete. This setting is not supported by power supplies managed under Storage Management
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Power Supply Roll-Up Status

<b>Name</b>	powerSupplyRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.8
<b>Description</b>	Severity of the power supply state. This is the combined status of the power supply and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Power Supply Component Status

<b>Name</b>	powerSupplyComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.9
<b>Description</b>	Severity of the power supply state. This is the combined status of the power supply and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Power Supply NexusID

<b>Name</b>	powerSupplyNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.10
<b>Description</b>	Durable unique ID for this power supply.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Power Supply Revision

<b>Name</b>	powerSupplyRevision
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.9.1.11
<b>Description</b>	Indicates the revision number of the power supply in the enclosure.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Power Supply Connection Table

This table describes the connection between each power supply on the managed system and its enclosure. Each enclosure "number" in the table corresponds to that enclosure instance in the enclosure Table.

The following object sets up the Power Supply Connection Table.

<b>Name</b>	powerSupplyConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10
<b>Description</b>	Defines the power supply connection table.
<b>Syntax</b>	SEQUENCE OF PowerSupplyConnectionEntry
<b>Access</b>	Not accessible

## Power Supply Connection Entry

<b>Name</b>	powerSupplyConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1
<b>Description</b>	Defines the power supply connection table entry.
<b>Syntax</b>	PowerSupplyConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	powerSupplyConnectionNumber

## Power Supply Connection Number

<b>Name</b>	powerSupplyConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.1
<b>Description</b>	Identifies the instance number of the power supply connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Power Supply Connection Power Supply Name

<b>Name</b>	powerSupplyConnectionPowerSupplyName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.2
<b>Description</b>	Identifies the name of the power supply in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Power Supply Connection Power Supply Number

<b>Name</b>	powerSupplyConnectionPowerSupplyNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.3
<b>Description</b>	Identifies the instance number of the power supply in the powerSupplyTable in the connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Power Supply Connection Enclosure Name

<b>Name</b>	powerSupplyConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this power supply belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Power Supply Connection Enclosure Number

<b>Name</b>	powerSupplyConnectionEnclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.10.1.5
<b>Description</b>	Identifies the instance number of the enclosure in the enclosureTable to which this power supply belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Temperature Probe Table

This table describes available properties for each temperature probe on the managed system. The following object sets up the Temperature Probe Table.

<b>Name</b>	temperatureProbeTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11
<b>Description</b>	A table of managed temperature probes. The number of entries is related to the number of temperature probes discovered in the system. The maximum number of entries is implementation dependent. <b>NOTE:</b> The properties in this table may not be applicable to all entries.
<b>Syntax</b>	SEQUENCE OF TemperatureProbeEntry
<b>Access</b>	Not accessible

## Temperature Probe Entry

<b>Name</b>	temperatureProbeEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1
<b>Description</b>	An entry in the Temperature Probe Table. A row in this table cannot be created or deleted by SNMP operations on columns of the table.
<b>Syntax</b>	TemperatureProbeEntry
<b>Access</b>	Not accessible
<b>Index</b>	temperatureNumber

## Temperature Probe Number

<b>Name</b>	temperatureProbeNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.1
<b>Description</b>	Identifies the instance number of the temperature probe entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Temperature Probe Name

<b>Name</b>	temperatureProbeName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.2
<b>Description</b>	Identifies the temperature probe's name as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe Vendor

<b>Name</b>	temperatureProbeVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.3
<b>Description</b>	Identifies the temperature probe's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe State

<b>Name</b>	temperatureProbeState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.4
<b>Description</b>	Identifies the current state of the temperature probe. Possible states: 0: Unknown 1: Ready 2: Failed (Minimum Failure Threshold Exceeded, Maximum Failure Threshold Exceeded) 4: Offline 6: Degraded (Minimum Warning Threshold Exceeded, Maximum Warning Threshold Exceeded) 9: Inactive 21: Missing
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Temperature Probe Severity

<b>Name</b>	temperatureProbeSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Temperature Probe Unit

<b>Name</b>	temperatureProbeUnit
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.6
<b>Description</b>	The units that will be used to display temperatures for the temperature probe.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe Minimum Warning

<b>Name</b>	temperatureProbeMinimumWarning
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.7
<b>Description</b>	Identifies the minimum temperature that will force the probe into a warning state.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe Minimum Critical

<b>Name</b>	temperatureProbeMinCritical
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.8
<b>Description</b>	Identifies the minimum temperature that will force the probe into an error state.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe Maximum Warning

<b>Name</b>	temperatureProbeMaxWarning
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.9
<b>Description</b>	Identifies the maximum temperature that will force the probe into a warning state.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe Maximum Critical

<b>Name</b>	temperatureProbeMaxCritical
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.10
<b>Description</b>	Identifies the maximum temperature that will force the probe into an error state.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe Current Value

<b>Name</b>	temperatureProbeCurValue
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.11
<b>Description</b>	Identifies the current temperature of this probe.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe Roll-Up Status

<b>Name</b>	temperatureProbeRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.12
<b>Description</b>	Severity of the temperature probe state. This is the combined status of the temperature probe and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only



## Temperature Probe Component Status

<b>Name</b>	temperatureProbeComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.11.1.13
<b>Description</b>	The status of the temperature probe itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Temperature Probe Nexus ID

<b>Name</b>	temperatureProbeNexusID
<b>Object ID</b>	.3.6.1.4.1.674.10893.1.20.130.11.1.14
<b>Description</b>	Durable unique ID for this temperature probe.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Temperature Probe Connection Table

This table describes the connection between each temperature probe on the managed system and its enclosure. Each enclosure "number" in the table corresponds to that enclosure instance in the enclosure Table.

The following object sets up the Temperature Probe Connection Table.

<b>Name</b>	temperatureConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12
<b>Description</b>	Defines the temperature probe connection table.
<b>Syntax</b>	SEQUENCE OF TemperatureConnectionEntry
<b>Access</b>	Not accessible

### Temperature Probe Connection Entry

<b>Name</b>	temperatureConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1
<b>Description</b>	Defines the temperature probe connection table entry.
<b>Syntax</b>	TemperatureConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	temperatureConnectionNumber

### Temperature Probe Connection Number

<b>Name</b>	temperatureConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.1
<b>Description</b>	Identifies the instance number of the temperature probe connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Temperature Probe Connection Temperature Probe Name

<b>Name</b>	temperatureConnectionTemperatureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.2
<b>Description</b>	Identifies the name of the temperature probe in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe Connection Temperature Probe Number

<b>Name</b>	temperatureConnectionTemperatureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.3
<b>Description</b>	Identifies the instance number in the temperatureTable of the temperature probe in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Temperature Probe Connection Enclosure Name

<b>Name</b>	temperatureConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this temperature probe belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Temperature Probe Connection Enclosure Number

<b>Name</b>	temperatureConnectionEnclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.12.1.5
<b>Description</b>	Identifies the instance number of the enclosure in the enclosureTable to which this temperature probe belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Management Module Table

This table describes available properties for each enclosure management module on the managed system. The following object sets up the Enclosure Management Module Table.

<b>Name</b>	enclosureManagementModuleTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13
<b>Description</b>	Defines the enclosure management module table.
<b>Syntax</b>	SEQUENCE OF EnclosureManagementModuleEntry
<b>Access</b>	Not accessible

### Enclosure Management Module Entry

<b>Name</b>	EnclosureManagementModuleEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1
<b>Description</b>	Defines the enclosure management module table entry.
<b>Syntax</b>	EnclosureManagementModuleEntry
<b>Access</b>	Not accessible
<b>Index</b>	enclosureManagementModuleNumber

### Enclosure Management Module Number

<b>Name</b>	enclosureManagementModuleNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.1
<b>Description</b>	Identifies the instance number of the enclosure management module entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure Management Module Name

<b>Name</b>	enclosureManagementModuleName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.2
<b>Description</b>	Identifies the enclosure management module's name as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Management Module Vendor

<b>Name</b>	enclosureManagementModuleVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.3
<b>Description</b>	Identifies the enclosure management module's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Management Module State

<b>Name</b>	enclosureManagementModuleState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.4
<b>Description</b>	Identifies the current state of the enclosure management module. Possible states: 0: Unknown 1: Ready 2: Failed 3: Online 4: Offline 5: Not Installed 6: Degraded 21: Missing
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure Management Module Severity

<b>Name</b>	enclosureManagementModuleSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure Management Module Part Number

<b>Name</b>	enclosureManagementModulePartNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.6
<b>Description</b>	Identifies the part number of the enclosure memory module.
<b>Syntax</b>	Display String
<b>Access</b>	Read-only

### Enclosure Management Module Type

<b>Name</b>	enclosureManagementModuleType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.7
<b>Description</b>	Identifies the type of the enclosure management module. Possible values: 0: Unknown 1: EMM 2: Termination Card
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure Management Module Firmware Version

<b>Name</b>	enclosureManagementModuleFWVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.8
<b>Description</b>	Identifies the firmware version of the enclosure memory module.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Management Module Maximum Speed

<b>Name</b>	enclosureManagementModuleMaxSpeed
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.9
<b>Description</b>	Identifies the maximum bus speed of the enclosure management module.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Management Module Roll-Up Status

<b>Name</b>	enclosureManagementModuleRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.10
<b>Description</b>	Severity of the enclosure management module state. This is the combined status of the EMM and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Enclosure Management Module Component Status

<b>Name</b>	enclosureManagementModuleComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.11
<b>Description</b>	The status of the enclosure management module itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Enclosure Management Module Nexus ID

<b>Name</b>	enclosureManagementModuleNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.12
<b>Description</b>	Durable unique ID for this EMM.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Enclosure Management Module Revision

<b>Name</b>	enclosureManagementModuleRevision
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.13.1.13
<b>Description</b>	Identifies the revision number of the enclosure management module.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Enclosure Management Module Connection Table

This table describes the connection between each enclosure management module on the managed system and its enclosure. Each enclosure "number" in the table corresponds to that enclosure instance in the enclosure Table.

The following object sets up the Enclosure Management Module Connection Table.

<b>Name</b>	enclosureManagementModuleConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14
<b>Description</b>	Defines the enclosure memory module connection table.
<b>Syntax</b>	SEQUENCE OF EnclosureManagementModuleConnectionEntry
<b>Access</b>	Not accessible

## Enclosure Management Module Connection Entry

<b>Name</b>	enclosureManagementModuleConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1
<b>Description</b>	Defines the enclosure memory module connection table entry.
<b>Syntax</b>	EnclosureManagementModuleConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	enclosureManagementModuleConnectionNumber

## Enclosure Management Module Connection Number

<b>Name</b>	enclosureManagementModuleConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.1
<b>Description</b>	Identifies the instance number of the enclosure memory module connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only



### Enclosure Management Module Connection EMM Name

<b>Name</b>	enclosureManagementModuleConnectionEMMName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.2
<b>Description</b>	Identifies the name of the enclosure memory module in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Management Module Connection EMM Number

<b>Name</b>	enclosureManagementModuleConnectionEMMNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.3
<b>Description</b>	Identifies the instance number in the enclosureManagementModuleTable of the enclosure memory module in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Enclosure Management Module Connection Enclosure Name

<b>Name</b>	enclosureManagementModuleConnectionEnclosureName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.4
<b>Description</b>	Identifies the name of the enclosure as represented in Storage Management to which this enclosure memory module belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Enclosure Management Module Connection Enclosure Number

<b>Name</b>	enclosureManagementModuleConnectionEnclosureNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.14.1.5
<b>Description</b>	Identifies the instance number of the enclosure in the enclosureTable to which this enclosure memory module belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Battery Table

This table describes available properties for each controller battery on the managed system. The following object sets up the Battery Table.

<b>Name</b>	batteryTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15
<b>Description</b>	Defines the battery table.
<b>Syntax</b>	SEQUENCE OF BatteryEntry
<b>Access</b>	Not accessible

## Battery Entry

<b>Name</b>	batteryEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1
<b>Description</b>	Defines the battery table entry.
<b>Syntax</b>	BatteryEntry
<b>Access</b>	Not accessible
<b>Index</b>	batteryNumber

## Battery Number

<b>Name</b>	batteryNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.1
<b>Description</b>	Identifies the instance number of the battery entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Battery Name

<b>Name</b>	batteryName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.2
<b>Description</b>	Identifies the battery's name as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Battery Vendor

<b>Name</b>	batteryVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.3
<b>Description</b>	Identifies the battery's (re)seller's name.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Battery State

<b>Name</b>	batteryState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.4
<b>Description</b>	Identifies the current state of battery. Possible values: 0: Unknown 1: OK 2: Failed 6: Degraded 7: Reconditioning 9: High 10: Low 12: Charging 21: Missing 36: Learning
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Battery Roll-Up Status

<b>Name</b>	batteryRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.5
<b>Description</b>	Severity of the battery state. This is the combined status of the battery and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Battery Component Status

<b>Name</b>	batteryComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.6
<b>Description</b>	The status of the battery itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Battery Charge Count

<b>Name</b>	batteryChargeCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.7
<b>Description</b>	The number of charges that have been applied to the battery.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Battery Max Charge Count

<b>Name</b>	batteryMaxChargeCount
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.8
<b>Description</b>	The maximum number of charges that can be applied to the battery.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Battery Nexus ID

<b>Name</b>	batteryNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.9
<b>Description</b>	Durable unique ID for this EMM.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Battery Predicted Capacity

<b>Name</b>	batteryPredictedCapacity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.10
<b>Description</b>	Displays the battery's ability to be charged. Possible values: 1: Failed - The battery cannot be charged and needs to be replaced. 2: Ready - The battery can be charged to full capacity. 4: Unknown - The battery is completing a Learn cycle. The charge capacity of the battery cannot be determined until the Learn cycle is complete.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Battery Next Learn Time

<b>Name</b>	batteryNextLearnTime
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.11
<b>Description</b>	Indicates the time (in hours) the next learn cycle must be executed
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Battery Learn State

<b>Name</b>	batteryLearnState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.12
<b>Description</b>	Specifies the learn state activity of the battery. Possible values: 1: Failed 2: Active 4: Timed out 8: Requested 16: Idle
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Battery Maximum Learn Delay

<b>Name</b>	batteryMaxLearnDelay
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.15.1.14
<b>Description</b>	The maximum amount of time (in hours) that the battery learn cycle can be delayed.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Battery Connection Table

This table describes the connection between each controller battery on the managed system and its controller. Each controller "number" in the table corresponds to that controller instance in the controller Table.

The following object sets up the Battery Connection Table.

<b>Name</b>	batteryConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16
<b>Description</b>	Defines the battery connection table.
<b>Syntax</b>	SEQUENCE OF BatteryConnectionEntry
<b>Access</b>	Not accessible

## Battery Connection Entry

<b>Name</b>	batteryConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1
<b>Description</b>	Defines the battery connection table entry.
<b>Syntax</b>	BatteryConnectionEntry
<b>Access</b>	BatteryConnectionEntry
<b>Index</b>	BatteryConnectionNumber

## Battery Connection Number

<b>Name</b>	batteryConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1.1
<b>Description</b>	Identifies the instance number of the battery connection entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Battery Connection Battery Name

<b>Name</b>	batteryConnectionBatteryName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1.2
<b>Description</b>	Identifies the name of the battery in this connection as represented in Storage Management.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Battery Connection Battery Number

<b>Name</b>	batteryConnectionBatteryNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1.3
<b>Description</b>	Identifies the instance number in the batteryTable of the battery in this connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Battery Connection Controller Name

<b>Name</b>	batteryConnectionControllerName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1.4
<b>Description</b>	Identifies the name of the controller as represented in Storage Management to which this battery belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Battery Connection Controller Number

<b>Name</b>	batteryConnectionControllerNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.130.16.1.5
<b>Description</b>	Identifies instance number of the controller in the controllerTable to which this battery belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Logical Devices Group

The Logical Devices Management Information Base (MIB) group provides information about the logical devices managed by the Dell Storage Management Software and their relationships to each other.

This group and all of its associated tables and objects are not supported on Microsoft® Windows® Advanced Server Limited Edition 64-bit operating system (Windows.Net-64) on a Dell PowerEdge™ 7150. The following MIB tables define objects and relationships, or connections among the objects, in the Logical Devices Group:

- **Virtual Disk Table**—describes available properties for each virtual disk on the managed system.
- **Array Disk Logical Connection Table**—describes the connections between array disks, the virtual disk to which they belong, and their associated logical disk. For each object in the table, its object "number" corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.



## Virtual Disk Table

This table describes available properties for each virtual disk on the managed system.

The following object sets up the Virtual Disk Table.

<b>Name</b>	virtualDiskTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1
<b>Description</b>	Defines the virtual disk table.
<b>Syntax</b>	SEQUENCE OF VirtualDiskEntry
<b>Access</b>	Not accessible

## Virtual Disk Entry

<b>Name</b>	virtualDiskEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1
<b>Description</b>	Defines the virtual disk table entry.
<b>Syntax</b>	VirtualDiskEntry
<b>Access</b>	Not accessible
<b>Index</b>	virtualDiskNumber

## Virtual Disk Number

<b>Name</b>	virtualDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.1
<b>Description</b>	Identifies the instance number of the virtual disk entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Virtual Disk Name

<b>Name</b>	virtualDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.2
<b>Description</b>	Identifies the virtual disk's label generated by Storage Management or entered by the user.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Virtual Device Disk Name

<b>Name</b>	virtualDiskDeviceName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.3
<b>Description</b>	Identifies the device name used by this virtual disk's member disks.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Virtual Disk State

<b>Name</b>	virtualDiskState
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.4
<b>Description</b>	Identifies the current state of this virtual disk. Possible states: 0: Unknown 1: Ready - The disk is accessible and has no known problems. 2: Failed - The data on the virtual disk is no longer fault tolerant because one of the underlying disks is not online. 3: Online 4: Offline - The disk is not accessible. The disk may be corrupted or intermittently unavailable. 6: Degraded - The data on the virtual disk is no longer fault tolerant because one of the underlying disks is not online. 15: Resynching 16: Regenerating 24: Rebuilding 26: Formatting 32: Reconstructing 35: Initializing 36: Background Initialization
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Severity

<b>Name</b>	virtualDiskSeverity
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.5
<b>Description</b>	This entry is obsolete for Storage Management. It was replaced with RollUpStatus and ComponentStatus for each device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Length in Megabytes

<b>Name</b>	virtualDiskLengthInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.6
<b>Description</b>	Identifies the size of this virtual disk in megabytes. If this size is 0, it is smaller than a megabyte.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Length in Bytes

<b>Name</b>	virtualDiskLengthBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.7
<b>Description</b>	Identifies the portion of the virtual disk in bytes that is smaller than a megabyte. This size plus the virtualDiskLengthInMB is the total size of the virtual disk.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Free Space in Megabytes

<b>Name</b>	virtualDiskFreeSpaceInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.8
<b>Description</b>	This entry is obsolete. This property is not supported by virtual disks managed under Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Free Space in Bytes

<b>Name</b>	virtualDiskFreeSpaceInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.9
<b>Description</b>	This entry is obsolete. This property is not supported by virtual disks managed under Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Write Policy

<b>Name</b>	virtualDiskWritePolicy
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.10
<b>Description</b>	Indicates whether the controller's write cache will be used when writing to a virtual disk. Possible values: 1: Enabled - Adaptec Write Cache Enabled Protected 2: Disabled - Adaptec Write Cache Disabled 3: LSI Write Back 4: LIS Write Through
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Read Policy

<b>Name</b>	virtualDiskReadPolicy
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.11
<b>Description</b>	Indicates whether the controller's read cache will be used when reading from a virtual disk. Possible values: 1: Enabled - Adaptec Read Cache Enabled 2: Disabled - Adaptec Read Cache Disabled 3: LSI Read Ahead 4: LSI Adaptive Read Ahead 5: LSI No Read Ahead
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Virtual Disk Cache Policy

<b>Name</b>	virtualDiskCachePolicy
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.12
<b>Description</b>	Indicates whether the controller's cache is used when reading from or writing to a virtual disk. Possible values: 1: Direct I/O (LSI) 2: Cached I/O (LSI)
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Virtual Disk Layout

<b>Name</b>	virtualDiskLayout
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.13
<b>Description</b>	Indicates the virtual disk's RAID type. Possible values: 1: Concatenated 2: RAID-0 3: RAID-1 4: RAID-2 5: RAID-3 6: RAID-4 7: RAID-5 8: RAID-6 9: RAID-7 10: RAID-10 11: RAID-30 12: RAID-50 13: Add Spares 14: Delete Logical 15: Transform Logical 18: RAID-0-plus-1 (0+1)— Mylex only 19: Concatenated RAID 1 20: Concatenated RAID 5 21: No RAID 22: RAID Morph—Adapted only
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Current Stripe Size in Megabytes

<b>Name</b>	virtualDiskCurStripeSizeInMB
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.14
<b>Description</b>	Identifies the stripe size of this virtual disk in megabytes. If this size is 0, it is smaller than a megabyte.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Current Stripe Size in Bytes

<b>Name</b>	virtualDiskCurStripeSizeInBytes
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.15
<b>Description</b>	Identifies the portion of the stripe size in bytes that is smaller than a megabyte. This size plus the virtualDiskCurStripeSizeInMB is the total stripe size on the virtual disk.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Channel

<b>Name</b>	virtualDiskChannel
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.16
<b>Description</b>	This entry is obsolete. This property is not supported by virtual disks managed under Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Virtual Disk Target ID

<b>Name</b>	virtualDiskTargetID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.17
<b>Description</b>	Unique ID for the virtual disk.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Virtual Disk LUN ID

<b>Name</b>	virtualDiskLunID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.18
<b>Description</b>	This entry is obsolete. This property is not supported by virtual disks managed under Storage Management.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Virtual Disk Roll-Up Status

<b>Name</b>	virtualDiskRollUpStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.19
<b>Description</b>	Severity of the virtual disk state. This is the combined status of the virtual disk and its components. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

## Virtual Disk Component Status

<b>Name</b>	virtualDiskComponentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.20
<b>Description</b>	The status of the virtual disk itself without the propagation of any contained component status. Possible values: 1: Other 2: Unknown 3: OK 4: Non-critical 5: Critical 6: Non-recoverable
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Virtual Disk Nexus ID

<b>Name</b>	virtualDiskNexusID
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.21
<b>Description</b>	Durable unique ID for this virtual disk.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Virtual Disk Array Disk Type

<b>Name</b>	virtualDiskArrayDiskType
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.1.1.22
<b>Description</b>	Identifies the type of array (physical) disks used to create the virtual disk. Possible values: 1: SAS 2: SATA 3: SCSI 4: IDE 99: Unknown
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Array Disk Logical Connection Table

This table describes the connections between array disks, the virtual disk to which they belong, and their associated logical disk. For each object in the table, its object "number" corresponds to an instance number in the appropriate MIB table for that object where all of the object properties can be found.

The following object sets up the Array Disk Logical Connection Table.

<b>Name</b>	arrayDiskLogicalConnectionTable
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3
<b>Description</b>	Defines the array disk logical connection table.
<b>Syntax</b>	SEQUENCE OF arrayDiskLogicalConnectionEntry
<b>Access</b>	Not accessible



### Array Disk Logical Connection Entry

<b>Name</b>	arrayDiskLogicalConnectionEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1
<b>Description</b>	Defines the array disk logical connection table entry.
<b>Syntax</b>	ArrayDiskLogicalConnectionEntry
<b>Access</b>	Not accessible
<b>Index</b>	arrayDiskLogicalConnectionNumber

### Array Disk Logical Connection Number

<b>Name</b>	arrayDiskLogicalConnectionNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.1
<b>Description</b>	Identifies the instance number of the disk entry.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Logical Connection Array Disk Name

<b>Name</b>	arrayDiskLogicalConnectionArrayDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.2
<b>Description</b>	Identifies the name of the array disk in this logical connection.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Logical Connection Array Disk Number

<b>Name</b>	arrayDiskLogicalConnectionArrayDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.3
<b>Description</b>	Identifies the instance number of the array disk in this logical connection.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Logical Connection Virtual Disk Name

<b>Name</b>	arrayDiskLogicalConnectionVirtualDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.4
<b>Description</b>	Identifies the name of the virtual disk to which this array disk belongs.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Logical Connection Virtual Disk Number

<b>Name</b>	arrayDiskLogicalConnectionVirtualDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.5
<b>Description</b>	Identifies the instance number of the virtual disk to which this array disk belongs.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

### Array Disk Logical Connection Disk Name

<b>Name</b>	arrayDiskLogicalConnectionDiskName
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.6
<b>Description</b>	Identifies the name of the disk group to which this array disk belongs. This property is currently not supported.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Array Disk Logical Connection Disk Number

<b>Name</b>	arrayDiskLogicalConnectionDiskNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.140.3.1.7
<b>Description</b>	Identifies the instance number of the disk group to which this array disk belongs. This property is currently not supported.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

# Storage Management Event Group

The Storage Management Event Group defines the properties that will be sent with SNMP traps.

## Message ID Event

<b>Name</b>	messageIDEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.1
<b>Description</b>	Storage Management event message number.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Description Event

<b>Name</b>	descriptionEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.2
<b>Description</b>	Storage Management event message text describing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Location Event

<b>Name</b>	locationEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.3
<b>Description</b>	Additional information identifying the location of the object causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Object Name Event

<b>Name</b>	objectNameEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.4
<b>Description</b>	Name of the object as represented in Storage Management causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Object OID Event

<b>Name</b>	objectOIDEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.5
<b>Description</b>	MIB OID of the object causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Object Nexus Event

<b>Name</b>	objectNexusEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.6
<b>Description</b>	Durable, unique ID of the object causing the alert.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Current Status Event

<b>Name</b>	currentStatusEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.7
<b>Description</b>	Current status of object causing the alert, if applicable.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

### Previous Status Event

<b>Name</b>	previousStatusEvent
<b>Object ID</b>	1.3.6.1.4.1.674.10893.1.20.200.8
<b>Description</b>	Previous status of object causing the alert if applicable.
<b>Syntax</b>	DellStatus
<b>Access</b>	Read-only

# Change Management Group

The Change Management Group lets you monitor information about the Dell devices and software that are present on a particular managed computer chassis. This information is collected during an inventory scan.

## Inventory Group

The following objects describe the fields for inventory information.

### Inventory Locale

<b>Name</b>	inventoryLocale
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.1
<b>Description</b>	Defines the locale of the system.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Inventory Schema Version

<b>Name</b>	inventorySchemaVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.2
<b>Description</b>	Defines the inventory schema implemented by this system.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Inventory System ID

<b>Name</b>	inventorySystemID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.3
<b>Description</b>	Defines the System ID for the system.
<b>Syntax</b>	SystemID
<b>Access</b>	Read-only

# Device Group

The Device Group defines information about the devices discovered on the system during an inventory scan. Identifying information includes the Component ID, the Device ID, and the Vendor ID.

## Device Group Table

The following object sets up the Device Group Table.

<b>Name</b>	deviceTable
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5
<b>Description</b>	Defines the Device Table.
<b>Syntax</b>	SEQUENCE OF DeviceEntry
<b>Access</b>	Not accessible

## Device Entry

<b>Name</b>	deviceEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1
<b>Description</b>	Defines a device entry.
<b>Syntax</b>	DeviceEntry
<b>Access</b>	Not accessible

## Device Index

<b>Name</b>	deviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.1
<b>Description</b>	Defines the unique index for this device.
<b>Syntax</b>	Unsigned16BitRange
<b>Access</b>	Read-only

## Device Component ID

<b>Name</b>	deviceComponentID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.2
<b>Description</b>	Defines an optional component ID field for the device.
<b>Syntax</b>	Integer
<b>Access</b>	Read-only

## Device Display String

<b>Name</b>	deviceDisplayString
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.3
<b>Description</b>	Provides a displayable string that describes the device.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Device Vendor ID

<b>Name</b>	deviceVendorID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.4
<b>Description</b>	Defines the ID for the vendor supplying the device.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

## Device ID

<b>Name</b>	deviceDeviceID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.5
<b>Description</b>	Defines the ID for the device.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only


## Device Sub ID

<b>Name</b>	deviceSubID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.6
<b>Description</b>	Provides additional device identification.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

## Device Sub Vendor ID

<b>Name</b>	deviceSubVendorID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.5.1.7
<b>Description</b>	Provides additional vendor identification.
<b>Syntax</b>	Octet String
<b>Access</b>	Read-only

## Application Group

 **NOTE:** Dell updateable components such as Basic input/output system (BIOS) and FirmWare (FW) are considered applications. For example, the following would be returned for system BIOS:  
Application/DisplayString = BIOS  
Application/Version = A10

The Application Group defines information about the applications discovered on the system during an inventory scan. Identifying information includes the application type, the application version, and the application description.

### Application Group Table

The following object sets up the Application Group Table.

<b>Name</b>	applicationTable
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6
<b>Description</b>	Defines a table of application information for the system.
<b>Syntax</b>	SEQUENCE OF ApplicationEntry
<b>Access</b>	Not accessible

### Application Entry

<b>Name</b>	applicationEntry
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1
<b>Description</b>	Defines an application entry.
<b>Syntax</b>	ApplicationEntry
<b>Access</b>	Read-only



## Application Index

<b>Name</b>	applicationIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.1
<b>Description</b>	Defines the unique index for this application.
<b>Syntax</b>	Unsigned16BitRange
<b>Access</b>	Read-only

## Application Device Index

<b>Name</b>	applicationDeviceIndex
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.2
<b>Description</b>	Defines a cross-index to the device table for the application.
<b>Syntax</b>	Unsigned16BitRange
<b>Access</b>	Read-only

## Application Component Type

<b>Name</b>	applicationComponentType
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.3
<b>Description</b>	Identifies the type of application reported.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Application Version

<b>Name</b>	applicationVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.4
<b>Description</b>	Identifies the version of the application.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Application Display String

<b>Name</b>	applicationDisplayString
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.5
<b>Description</b>	A user visible display string that describes the application.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Application Sub-Component ID

<b>Name</b>	applicationSubComponentID
<b>Object ID</b>	1.3.6.1.4.1.674.10899.1.6.1.6
<b>Description</b>	The sub-component ID for the application. This is usually valid on ESM device reporting.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

# Operating System Group

The Operating System Group provides status and identifying information about a system's operating system. Identifying information includes the name, version, and service pack of the installed operating system.

The following objects describe the fields for Operating System Group.

## Operating System Vendor

<b>Name</b>	operatingSystemVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10899.2.1
<b>Description</b>	Defines the vendor of the Operating System.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Operating System Major Version

<b>Name</b>	operatingSystemMajorVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10899.2.2
<b>Description</b>	Defines the major version of the Operating System.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Operating System Minor Version

<b>Name</b>	<code>operatingSystemMinorVersion</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10899.2.3
<b>Description</b>	Defines the minor version of the Operating System.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Operating System Service Pack Major Version

<b>Name</b>	<code>operatingSystemSPMajorVersion</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10899.2.5
<b>Description</b>	Defines the Operating System's Service Pack major version.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Operating System Service Pack Minor Version

<b>Name</b>	<code>operatingSystemSPMinorVersion</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10899.2.6
<b>Description</b>	Defines the Operating System's Service Pack minor version.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Operating System Architecture

<b>Name</b>	<code>operatingSystemArchitecture</code>
<b>Object ID</b>	1.3.6.1.4.1.674.10899.2.7
<b>Description</b>	Defines the Operating System's architecture.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

# Inventory Collector Product Information

The following objects describe the fields for the Inventory Collector. The Inventory Collector product variables are scalar objects, meaning that they are not related to other Inventory Collector base (MIB) objects and are thus not placed in a table.

## Product ID Display Name

<b>Name</b>	productIDDisplayName
<b>Object ID</b>	1.3.6.1.4.1.674.10899.100.1
<b>Description</b>	Defines the display name of the product.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Product ID Description

<b>Name</b>	productIDDescription
<b>Object ID</b>	1.3.6.1.4.1.674.10899.100.2
<b>Description</b>	Provides a description of the product.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

## Product ID Vendor

<b>Name</b>	productIDVendor
<b>Object ID</b>	1.3.6.1.4.1.674.10899.100.3
<b>Description</b>	Provides name of the manufacturer of the product.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Product ID Version

<b>Name</b>	productIDVersion
<b>Object ID</b>	1.3.6.1.4.1.674.10899.100.4
<b>Description</b>	Describes the version of the product.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only

### Product ID Build Number

<b>Name</b>	productIDBuildNumber
<b>Object ID</b>	1.3.6.1.4.1.674.10899.100.5
<b>Description</b>	Describes the software build number of the product.
<b>Syntax</b>	DisplayString
<b>Access</b>	Read-only



## Traps

The Server Administrator generates events that result in Simple Network Management Protocol (SNMP) traps or operating system event logs. This section describes the traps, also known as alerts, generated by the SNMP subagent of Server Administrator.

The Server Administrator generates events in response to changes in the status of sensors and other monitored parameters. When an event with predefined characteristics occurs on your system, the SNMP subagent sends information about the event, along with trap variables, to the management console.

Each status change event generates a unique identifier called the trap ID and a trap description that describes the event. The trap ID and message uniquely describe the severity and cause of the event, and provide other relevant information such as the location of the event and the monitored item's previous state.

"Server Administrator SNMP Traps," found later in this section, lists all Server Administrator-supported trap IDs in numerical order and includes each trap ID's corresponding description, severity level, and cause. Description text in brackets (for example, *<State>*) describes the event-specific information provided by Server Administrator.

## Trap Variables

This section describes the variables that are sent to the management console to provide additional information about a trap or alert generated by some event on your system. The trap variables presented here apply to all Server Administrator traps. Trap variables are sent in the order listed and are reserved for use only in traps. When a varbind is created for a trap variable, a zero is appended to the object ID (OID) to create the OID for the varbind.

### System

<b>Variable Name</b>	alertSystem
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.1
<b>Description</b>	Identifies the system generating the alert.
<b>Syntax</b>	DisplayString (SIZE (0..255))

## Table Index OID

<b>Variable Name</b>	alertTableIndexOID
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.2
<b>Description</b>	Gives the object identifier for the index attribute in the table that contains the object causing the alert. Uniquely identifies the object causing the alert and can be used to correlate different alerts caused by the same object.
<b>Syntax</b>	OBJECT IDENTIFIER

## Message

<b>Variable Name</b>	alertMessage
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.3
<b>Description</b>	Describes the alert.
<b>Syntax</b>	DisplayString (SIZE (0..1024))

## Current Status

<b>Variable Name</b>	alertCurrentStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.4
<b>Description</b>	Gives the current status of the object causing the alert.
<b>Syntax</b>	DellStatus

## Previous Status

<b>Variable Name</b>	alertPreviousStatus
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.5
<b>Description</b>	Gives the previous status of the object causing the alert.
<b>Syntax</b>	DellStatus

## Data

<b>Variable Name</b>	alertData
<b>Object ID</b>	1.3.6.1.4.1.674.10892.1.5000.10.6
<b>Description</b>	Provides Server Administrator-defined data related to the alert.
<b>Syntax</b>	OCTET STRING (SIZE (0..1024))



## Understanding the Trap Description

Table 24-1 lists in alphabetical order each line item that may appear in the trap description.

**Table 24-1. Trap Description Reference**

Description Line Item	Explanation
Action performed was: <i>&lt;Action&gt;</i>	Specifies the automatic server recovery action that was performed, for example:  Action performed was: Power cycle
Action requested was: <i>&lt;Action&gt;</i>	Specifies the user initiated host control action that was requested, for example:  Action requested was: Reboot, shutdown OS first
<i>&lt;Additional power supply status information&gt;</i>	Specifies any additional power supply information pertaining to the event, for example:  Power supply input AC is off, Power supply POK (power OK) signal is not normal, Power supply is turned off
Chassis intrusion state: <i>&lt;Intrusion state&gt;</i>	Specifies the chassis intrusion state (open or closed), for example:  Chassis intrusion state: Open
Chassis location: <i>&lt;Name of chassis&gt;</i>	Specifies the name of the chassis that generated the message, for example:  Chassis location: Main System Chassis
Configuration error type: <i>&lt;type of configuration error&gt;</i>	Specifies the type of configuration error that occurred, for example:  Configuration error type: Revision mismatch
Current sensor value (in Amps): <i>&lt;Reading&gt;</i>	Specifies the current sensor value in amps, for example:  Current sensor value: 7.853
Date and time of action: <i>&lt;Date and time&gt;</i>	Specifies the date and time that an automatic server recovery action was performed, for example:  Date and time of action: Fri May 30 23:55:44 2003.
Discrete current state: <i>&lt;State&gt;</i>	Specifies the state of the current sensor, for example:  Discrete current state: Good
Discrete temperature state: <i>&lt;State&gt;</i>	Specifies the state of the temperature sensor, for example:  Discrete temperature state: Good

**Table 24-1. Trap Description Reference (continued)**

Description Line Item	Explanation
Discrete voltage state: <State>	Specifies the state of the voltage sensor, for example: Discrete voltage state: Good
Fan sensor value: <Reading>	Specifies the fan speed in revolutions per minute (RPMs) or On/Off, for example: Fan sensor value (in RPM): 2600 Fan sensor value: Off
Log type: <Log type>	Specifies the type of hardware log, for example: Log type: Embedded Server Management (ESM)
Memory device bank location: <Bank name in chassis>	Specifies the name of the memory bank in the system that generated the message, for example: Memory device bank location: Bank_1
Memory device location: <Device name in chassis>	Specifies the location of the memory module in the chassis, for example: Memory device location: DIMM_A
Number of devices required for full redundancy: <Number>	Specifies the number of power supply or cooling devices required to achieve full redundancy, for example: Number of devices required for full redundancy: 4
Possible memory module event cause: <list of causes>	Specifies a list of possible causes for the memory module event, for example: Possible memory module event cause: Single bit warning error rate exceeded Single bit error logging disabled
Power Supply type: <type of power supply>	Specifies the type of power supply, for example: Power Supply type: VRM
Pre-failure state was: <State>	Specifies the status of the previous memory message, for example: Pre-failure state was: Failed
Previous redundancy state was: <State>	Specifies the status of the previous redundancy message, for example: Previous redundancy state was: Lost
Previous state was: <State>	Specifies the previous state of the sensor, for example: Previous state was: OK (Normal)
Processor sensor status: <status>	Specifies the status of the processor sensor, for example: Processor sensor status: Configuration error

**Table 24-1. Trap Description Reference (continued)**

Description Line Item	Explanation
Redundancy unit: <Redundancy location in chassis>	Specifies the location of the redundant power supply or cooling unit in the chassis, for example: Redundancy unit: Fan Enclosure
Sensor location: <Location in chassis>	Specifies the location of the sensor in the specified chassis, for example: Sensor location: CPU1
Temperature sensor value (in degrees Celsius): <Reading>	Specifies the temperature in degrees Celsius, for example: Temperature sensor value (in degrees Celsius): 30
Voltage sensor value (in Volts): <Reading>	Specifies the voltage sensor value in volts, for example: Voltage sensor value: 1.693

## Understanding Trap Severity

Traps often contain information about values recorded by probes or sensors. Probes and sensors monitor critical components for values such as amperage, voltage, and temperature. When an event occurs on your system, the Server Administrator sends information about one of the following event types to the system management console:

- **Information/Informational** — An event that describes the successful operation of a unit, such as a power supply turning on or a sensor reading returning to normal.
- **Warning** — An event that is not necessarily significant, but may indicate a possible future problem, such as crossing a warning threshold.
- **Critical/Error** — A significant event that indicates actual or imminent loss of data or loss of function, such as crossing a failure threshold or a hardware failure.

## Server Administrator SNMP Traps

This section describes the traps that are generated by the SNMP subagent of Server Administrator. All of the traps documented in this section belong to the MIB enterprise identified by OID 1.3.6.1.4.1.674.10892.1 and are sent with all of the trap variables documented in the section, "Trap Variables." The trap variables are sent in the order in which they are listed. The messages in the **Description** fields below show the format of the message that is sent in the **alertMessage** varbind. If a message in a **Description** field has multiple lines, the message contains newline (0Ah) characters that are part of the value in the **alertMessage** varbind.

## Miscellaneous Traps

Miscellaneous traps inform you that certain alert systems are up and working.

**Table 24-2. Miscellaneous Traps**

Trap ID	Description	Severity	Cause
<b>System Up</b>			
1001	Server Administrator startup complete	Information	Server Administrator completed its initialization.
<b>Thermal Shutdown</b>			
1004	Thermal shutdown protection has been initiated	Error	This message is generated when a system is configured for thermal shutdown due to an error event. If a temperature sensor reading exceeds the error threshold for which the system is configured, the operating system shuts down and the system powers off. This event may also be initiated on certain systems when a fan enclosure is removed from the system for an extended period of time.
<b>Automatic System Recovery</b>			
1006	Automatic System Recovery (ASR) action was performed Action performed was: <Action> Date and time of action: <Date and time>	Error	This message is generated when an automatic system recovery action is performed due to a hung operating system. The action performed and the date and time of the action are provided.
<b>Host System Reset</b>			
1007	User initiated host system control action Action requested was: <Action>	Information	User requested a host system control action to reboot, power off, or power cycle the system or another event such as thermal shutdown protection initiated a power off, operating system shutdown.

## Temperature Probe Traps

Temperature probes help protect critical components by alerting the systems management console when temperatures become too high inside a chassis. The temperature probe traps use additional variables: sensor location, chassis location, previous state, and temperature sensor value reported in degrees Celsius.

**Table 24-3. Temperature Probe Traps**

Trap ID	Description	Severity	Cause
<b>Temperature Probe Normal</b>			
1052	Temperature sensor returned to a normal value Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> If sensor type is not discrete: Temperature sensor value (in degrees Celsius): <i>&lt;Reading&gt;</i> If sensor type is discrete: Discrete temperature state: <i>&lt;State&gt;</i>	Information	A temperature sensor on the backplane board, system board, or drive carrier in the specified system returned to a valid range after crossing a failure threshold. The sensor location, chassis location, previous state, and temperature sensor value are provided.
<b>Temperature Probe Warning</b>			
1053	Temperature sensor detected a warning value Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> If sensor type is not discrete: Temperature sensor value (in degrees Celsius): <i>&lt;Reading&gt;</i> If sensor type is discrete: Discrete temperature state: <i>&lt;State&gt;</i>	Warning	A temperature sensor on the backplane board, system board, or drive carrier in the specified system exceeded its warning threshold. The sensor location, chassis location, previous state, and temperature sensor value are provided.

**Table 24-3. Temperature Probe Traps (continued)**

Trap ID	Description	Severity	Cause
<b>Temperature Probe Failure</b>			
1054	<p>Temperature sensor detected a failure value</p> <p>Sensor location: &lt;Location in chassis&gt;</p> <p>Chassis location: &lt;Name of chassis&gt;</p> <p>Previous state was: &lt;State&gt;</p> <p>If sensor type is not discrete: Temperature sensor value (in degrees Celsius): &lt;Reading&gt;</p> <p>If sensor type is discrete: Discrete temperature state: &lt;State&gt;</p>	Error	<p>A temperature sensor on the backplane board, system board, or drive carrier in the specified system exceeded its failure threshold. The sensor location, chassis location, previous state, and temperature sensor value are provided.</p>
<b>Temperature Probe Nonrecoverable</b>			
1055	<p>Temperature sensor detected a non-recoverable value</p> <p>Sensor location: &lt;Location in chassis&gt;</p> <p>Chassis location: &lt;Name of chassis&gt;</p> <p>Previous state was: &lt;State&gt;</p> <p>If sensor type is not discrete: Temperature sensor value (in degrees Celsius): &lt;Reading&gt;</p> <p>If sensor type is discrete: Discrete temperature state: &lt;State&gt;</p>	Error	<p>A temperature sensor on the backplane board, system board, or drive carrier in the specified system detected an error from which it cannot recover. The sensor location, chassis location, previous state, and temperature sensor value are provided.</p>

## Cooling Device Traps

Cooling device traps monitor how well a fan is functioning.

**Table 24-4. Cooling Device Traps**

Trap ID	Description	Severity	Cause
<b>Cooling Device Normal</b>			
1102	Fan sensor returned to a normal value Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> Fan sensor value: <i>&lt;Reading&gt;</i>	Information	A fan sensor reading on the specified system returned to a valid range after crossing a warning threshold. The sensor location, chassis location, previous state, and fan sensor value are provided.
<b>Cooling Device Warning</b>			
1103	Fan sensor detected a warning value Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> Fan sensor value: <i>&lt;Reading&gt;</i>	Warning	A fan sensor reading in the specified system exceeded a warning threshold. The sensor location, chassis location, previous state, and fan sensor value are provided.
<b>Cooling Device Failure</b>			
1104	Fan sensor detected a failure value Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> Fan sensor value: <i>&lt;Reading&gt;</i>	Error	A fan sensor in the specified system detected the failure of one or more fans. The sensor location, chassis location, previous state, and fan sensor value are provided.
<b>Cooling Device Nonrecoverable</b>			
1105	Fan sensor detected a non-recoverable value Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> Fan sensor value: <i>&lt;Reading&gt;</i>	Error	A fan sensor detected an error from which it cannot recover. The sensor location, chassis location, previous state, and fan sensor value are provided.

## Voltage Probe Traps

Voltage probes monitor the number of volts across critical components.

**Table 24-5. Voltage Probe Traps**

Trap ID	Description	Severity	Cause
<b>Voltage Probe Normal</b>			
1152	<p>Voltage sensor returned to a normal value</p> <p>Sensor location: <i>&lt;Location in chassis&gt;</i></p> <p>Chassis location: <i>&lt;Name of chassis&gt;</i></p> <p>Previous state was: <i>&lt;State&gt;</i></p> <p>If sensor type is not discrete: Voltage sensor value (in Volts): <i>&lt;Reading&gt;</i></p> <p>If sensor type is discrete: Discrete voltage state: <i>&lt;State&gt;</i></p>	Information	<p>A voltage sensor in the specified system returned to a valid range after crossing a failure threshold. The sensor location, chassis location, previous state, and voltage sensor value are provided.</p>
<b>Voltage Probe Warning</b>			
1153	<p>Voltage sensor detected a warning value</p> <p>Sensor location: <i>&lt;Location in chassis&gt;</i></p> <p>Chassis location: <i>&lt;Name of chassis&gt;</i></p> <p>Previous state was: <i>&lt;State&gt;</i></p> <p>If sensor type is not discrete: Voltage sensor value (in Volts): <i>&lt;Reading&gt;</i></p> <p>If sensor type is discrete: Discrete voltage state: <i>&lt;State&gt;</i></p>	Warning	<p>A voltage sensor in the specified system exceeded its warning threshold. The sensor location, chassis location, previous state, and voltage sensor value are provided.</p>



**Table 24-5. Voltage Probe Traps (continued)**

Trap ID	Description	Severity	Cause
<b>Voltage Probe Failure</b>			
1154	<p>Voltage sensor detected a failure value</p> <p>Sensor location: <i>&lt;Location in chassis&gt;</i></p> <p>Chassis location: <i>&lt;Name of chassis&gt;</i></p> <p>Previous state was: <i>&lt;State&gt;</i></p> <p>If sensor type is not discrete: Voltage sensor value (in Volts): <i>&lt;Reading&gt;</i></p> <p>If sensor type is discrete: Discrete voltage state: <i>&lt;State&gt;</i></p>	Error	A voltage sensor in the specified system exceeded its failure threshold. The sensor location, chassis location, previous state, and voltage sensor value are provided.
<b>Voltage Probe Nonrecoverable</b>			
1155	<p>Voltage sensor detected a non-recoverable value</p> <p>Sensor location: <i>&lt;Location in chassis&gt;</i></p> <p>Chassis location: <i>&lt;Name of chassis&gt;</i></p> <p>Previous state was: <i>&lt;State&gt;</i></p> <p>If sensor type is not discrete: Voltage sensor value (in Volts): <i>&lt;Reading&gt;</i></p> <p>If sensor type is discrete: Discrete voltage state: <i>&lt;State&gt;</i></p>	Error	A voltage sensor in the specified system detected an error from which it cannot recover. The sensor location, chassis location, previous state, and voltage sensor value are provided.

## Amperage Probe Traps

Amperage probes measure the amount of current (in amperes) that is traversing critical components.

**Table 24-6. Amperage Probe Traps**

Trap ID	Description	Severity	Cause
<b>Amperage Probe Normal</b>			
1202	Current sensor returned to a normal value Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> If sensor type is not discrete: Current sensor value (in Amps): <i>&lt;Reading&gt;</i> If sensor type is discrete: Discrete current state: <i>&lt;State&gt;</i>	Information	A current sensor on the power supply for the specified system returned to a valid range after crossing a failure threshold. The sensor location, chassis location, previous state, and current sensor value are provided.
<b>Amperage Probe Warning</b>			
1203	Current sensor detected a warning value Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> If sensor type is not discrete: Current sensor value (in Amps): <i>&lt;Reading&gt;</i> If sensor type is discrete: Discrete current state: <i>&lt;State&gt;</i>	Warning	A current sensor on the power supply for the specified system exceeded its warning threshold. The sensor location, chassis location, previous state, and current sensor value are provided.

**Table 24-6. Amperage Probe Traps (continued)**

Trap ID	Description	Severity	Cause
<b>Amperage Probe Failure</b>			
1204	<p>Current sensor detected a failure value</p> <p>Sensor location: &lt;Location in chassis&gt;</p> <p>Chassis location: &lt;Name of chassis&gt;</p> <p>Previous state was: &lt;State&gt;</p> <p>If sensor type is not discrete: Current sensor value (in Amps): &lt;Reading&gt;</p> <p>If sensor type is discrete: Discrete current state: &lt;State&gt;</p>	Error	A current sensor on the power supply for the specified system exceeded its failure threshold. The sensor location, chassis location, previous state, and current sensor value are provided.
<b>Amperage Probe Nonrecoverable</b>			
1205	<p>Current sensor detected a non-recoverable value</p> <p>Sensor location: &lt;Location in chassis&gt;</p> <p>Chassis location: &lt;Name of chassis&gt;</p> <p>Previous state was: &lt;State&gt;</p> <p>If sensor type is not discrete: Current sensor value (in Amps): &lt;Reading&gt;</p> <p>If sensor type is discrete: Discrete current state: &lt;State&gt;</p>	Error	A current sensor in the specified system detected an error from which it cannot recover. The sensor location, chassis location, previous state, and current sensor value are provided.

## Chassis Intrusion Traps

Chassis intrusion traps are a security measure. Chassis intrusion means that someone is opening the cover to a system's chassis. Alerts are sent to prevent unauthorized removal of parts from a chassis.

**Table 24-7. Chassis Intrusion Traps**

Trap ID	Description	Severity	Cause
<b>Chassis Intrusion Normal</b>			
1252	Chassis intrusion returned to normal Sensor location: <Location in chassis> Chassis location: <Name of chassis> Previous state was: <State> Chassis intrusion state: <Intrusion state>	Information	A chassis intrusion sensor in the specified system detected that a cover was opened while the system was operating but has since been replaced. The sensor location, chassis location, previous state, and chassis intrusion state are provided.
<b>Chassis Intrusion Detected</b>			
1254	Chassis intrusion detected Sensor location: <Location in chassis> Chassis location: <Name of chassis> Previous state was: <State> Chassis intrusion state: <Intrusion state>	Error	A chassis intrusion sensor in the specified system detected that the system cover was opened while the system was operating. The sensor location, chassis location, previous state, and chassis intrusion state are provided.

## Redundancy Unit Traps

Redundancy means that a system chassis has more than one of certain critical components. Fans and power supplies, for example, are so important for preventing damage or disruption of a computer system that a chassis may have "extra" fans or power supplies installed. Redundancy allows a second or *n*th fan to keep the chassis components at a safe temperature when the primary fan has failed. Redundancy is normal when the intended number of critical components are operating. Redundancy is degraded when a component fails but others are still operating. Redundancy is lost when the number of components functioning falls below the redundancy threshold.

The number of devices required for full redundancy is provided as part of the trap message when applicable for the redundancy unit and the platform. For more details on redundancy computation, please refer to the respective platform documentation.

**Table 24-8. Redundancy Unit Traps**

Trap ID	Description	Severity	Cause
<b>Redundancy Normal</b>			
1304	Redundancy regained Redundancy unit: <Redundancy location in chassis> Chassis location: <Name of chassis> Previous redundancy state was: <State> Number of devices required for full redundancy: <Number>	Information	A redundancy sensor in the specified system detected that a "lost" redundancy device has been reconnected or replaced; full redundancy is in effect. The redundancy unit location, chassis location, and previous redundancy state are provided.
<b>Redundancy Degraded</b>			
1305	Redundancy degraded Redundancy unit: <Redundancy location in chassis> Chassis location: <Name of chassis> Previous redundancy state was: <State> Number of devices required for full redundancy: <Number>	Warning	A redundancy sensor in the specified system detected that one of the components of the redundancy unit has failed but the unit is still redundant. The redundancy unit location, chassis location, and previous redundancy state are provided.
<b>Redundancy Lost</b>			
1306	Redundancy lost Redundancy unit: <Redundancy location in chassis> Chassis location: <Name of chassis> Previous redundancy state was: <State> Number of devices required for full redundancy: <Number>	Warning or Error (depending on the number of units that are functional)	A redundancy sensor in the specified system detected that one of the components in the redundant unit has been disconnected, has failed, or is not present. The redundancy unit location, chassis location, and previous redundancy state are provided.

## Power Supply Traps

Power supply traps provide status and warning information for power supplies present in a particular chassis.

**Table 24-9. Power Supply Traps**

Trap ID	Description	Severity	Cause
<b>Power Supply Normal</b>			
1352	Power supply returned to normal Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> Power Supply type: <i>&lt;type of power supply&gt;</i> <i>&lt;Additional power supply status information&gt;</i> If in configuration error state: Configuration error type: <i>&lt;type of configuration error&gt;</i>	Information	A power supply has been reconnected or replaced. The sensor location, chassis location, previous state, and additional information about the power supply event are provided.
<b>Power Supply Warning</b>			
1353	Power supply detected a warning Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> Power Supply type: <i>&lt;type of power supply&gt;</i> <i>&lt;Additional power supply status information&gt;</i> If in configuration error state: Configuration error type: <i>&lt;type of configuration error&gt;</i>	Warning	A power supply sensor has detected a warning condition. The sensor location, chassis location, previous state, and additional power supply status information are provided.

**Table 24-9. Power Supply Traps (continued)**

Trap ID	Description	Severity	Cause
<b>Power Supply Failure</b>			
1354	Power supply detected a failure Sensor location: <Location in chassis> Chassis location: <Name of chassis> Previous state was: <State> Power Supply type: <type of power supply> <Additional power supply status information> If in configuration error state: Configuration error type: <type of configuration error>	Error	A power supply has been disconnected or has failed. The sensor location, chassis location, previous state, and additional information about the power supply event are provided.

## Memory Device Traps

Memory device messages provide status and warning information for memory modules present in a particular system. Memory devices determine health status by counting the number of ECC memory corrections.



**NOTE:** A value of `failure` or `non-recoverable` does not indicate a system failure or loss of data, but rather that the specified system exceeded the specified ECC correction threshold. Although the system continues to function, you should perform system maintenance as described in Table 24-10.

**Table 24-10. Memory Device Messages**

Trap ID	Description	Severity	Cause
1403	Memory device status is <status> Memory device location: <Location in chassis> Possible memory module event cause: <list of causes>	Warning	A memory device correction rate exceeded an acceptable value. The memory device status and location are provided.

**Table 24-10. Memory Device Messages (continued)**

Trap ID	Description	Severity	Cause
1404	Memory device status is <i>&lt;Status&gt;</i> Memory device location: <i>&lt;Location in chassis&gt;</i> <i>Possible memory module event</i> <i>cause: &lt;list of causes&gt;</i>	Error	A memory device correction rate exceeded an acceptable value, a memory spare bank was activated, or a Uncorrectable Memory Event occurred. The system continues to function normally (except for a Uncorrectable Memory Event). Clear the memory error on Uncorrectable Memory Event. Replace the memory module identified in the message during the system's next scheduled maintenance. The memory device status and location are provided.

## Fan Enclosure Traps

Some systems are equipped with a protective enclosure for fans. Fan enclosure traps monitor enclosures for whether foreign objects are present and for how long a fan enclosure is absent from a chassis.

**Table 24-11. Fan Enclosure Traps**

Trap ID	Description	Severity	Cause
<b>Fan Enclosure Insertion</b>			
1452	Fan enclosure inserted into system Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i>	Information	A fan enclosure has been inserted into the specified system. The sensor location and chassis location are provided.
<b>Fan Enclosure Removal</b>			
1453	Fan enclosure removed from system Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i>	Warning	A fan enclosure has been removed from the specified system. The sensor location and chassis location are provided.
<b>Fan Enclosure Extended Removal</b>			
1454	Fan enclosure removed from system for an extended amount of time Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i>	Error	A fan enclosure has been removed from the specified system for a user-definable length of time. The sensor location and chassis location are provided.



## AC Power Cord Traps

The AC power cord sensor monitors the presence of AC power for an AC power cord. AC power cord traps provide status and warning information for power cords that are part of an AC power switch, if your system supports AC switching.

**Table 24-12. AC Power Cord Traps**

Trap ID	Description	Severity	Cause
<b>AC Power Cord No Power Nonredundant</b>			
1501	AC power cord is not being monitored Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i>	Information	The AC power cord status is not being monitored. This occurs when a system's expected AC power configuration is set to <b>nonredundant</b> . The sensor location and chassis location information are provided.
<b>AC Power Cord Normal</b>			
1502	AC power has been restored Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i>	Information	An AC power cord that did not have AC power has had the power restored. The sensor location and chassis location information are provided.
<b>AC Power Cord Failure</b>			
1504	AC power has been lost Sensor location: <i>&lt;Location in chassis&gt;</i> Chassis location: <i>&lt;Name of chassis&gt;</i>	Error	An AC power cord has lost its power. The sensor location and chassis location information are provided.

## Hardware Log Traps

Hardware logs provide hardware status messages to systems management software. On certain systems, the hardware log is implemented as a circular queue. When the log becomes full, the oldest status messages are overwritten when new status messages are logged. On some systems, the log is not circular. On these systems, when the log becomes full, subsequent hardware status messages are lost. Hardware log sensor messages provide status and warning information about the noncircular logs that may fill up, resulting in lost status messages.

**Table 24-13. Hardware Log Traps**

Trap ID	Description	Severity	Cause
<b>Hardware Log Normal</b>			
1552	Log size is no longer near or at capacity Log type: <Log type>	Information	The hardware log on the specified system is no longer near or at its capacity, usually as the result of clearing the log. The log type information is provided.
<b>Hardware Log Warning</b>			
1553	Log size is near or at capacity Log type: <Log type>	Warning	The size of a hardware log on the specified system is near or at the capacity of the hardware log. The log type information is provided.
<b>Hardware Log Full</b>			
1554	Log size is full Log type: <Log type>	Error	The size of a hardware log on the specified system is at the capacity of the hardware log. The log type information is provided.

### Processor Device Status Traps

The BMC on some systems reports the status of processor devices. Processor device status traps provide status and warning information for processor devices present in a system with a BMC that reports the status of processor devices.

**Table 24-14. Processor Device Status Traps**

Trap ID	Description	Severity	Cause
<b>Processor Device Status Normal</b>			
1602	Processor sensor returned to a normal value Sensor Location: <Location in chassis> Chassis Location: <Name of chassis> Previous state was: <State> Processor sensor status: <status>	Information	A processor sensor in the specified system transitioned back to a normal state. The sensor location, chassis location, previous state and processor sensor status are provided.

**Table 24-14. Processor Device Status Traps**

Trap ID	Description	Severity	Cause
<b>Processor Device Status Warning</b>			
1603	Processor sensor detected a warning value Sensor Location: <i>&lt;Location in chassis&gt;</i> Chassis Location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> Processor sensor status: <i>&lt;status&gt;</i>	Warning	A processor sensor in the specified system is in a throttled state. The sensor location, chassis location, previous state and processor sensor status are provided.
<b>Processor Device Status Failure</b>			
1604	Processor sensor detected a failure value Sensor Location: <i>&lt;Location in chassis&gt;</i> Chassis Location: <i>&lt;Name of chassis&gt;</i> Previous state was: <i>&lt;State&gt;</i> Processor sensor status: <i>&lt;status&gt;</i>	Error	A processor sensor in the specified system is disabled, has a configuration error, or experienced a thermal trip. The sensor location, chassis location, previous state and processor sensor status are provided.

## Pluggable Device Traps

Server Administrator monitors the addition and removal of pluggable devices such as memory cards. Device traps provide information about the addition and removal of such devices.

**Table 24-15. Pluggable Device Traps**

Trap ID	Description	Severity	Cause
1651	Device added to system Device Location: <i>&lt;Location in chassis&gt;</i> Chassis Location: <i>&lt;Name of chassis&gt;</i> Additional Details: <i>&lt;Additional details for the events&gt;</i>	Information	A device was added to the specified system. The device location, chassis location, and additional event details, if available, are provided.
1652	Device removed from system Device Location: <i>&lt;Location in chassis&gt;</i> Chassis Location: <i>&lt;Name of chassis&gt;</i> Additional Details: <i>&lt;Additional details for the events&gt;</i>	Information	A device was removed from the specified system. The device location, chassis location, and additional event details, if available, are provided.

**Table 24-15. Pluggable Device Traps**

Trap ID	Description	Severity	Cause
1653	Device configuration error detected Device Location: <Location in chassis> Chassis Location: <Name of chassis> Additional Details: <Additional details for the events>	Error	A configuration error was detected for a pluggable device in the specified system. The device may have been added to the system incorrectly. The device location, chassis location, and additional event details, if available, are provided.

## RAC Traps

This section describes the traps that are generated by the SNMP agent of the Remote Access Controller (RAC). All of the enterprise-specific traps documented in this section belong to the MIB enterprise identified by OID 1.3.6.1.4.1.674.10892.2 and are sent with all of the trap variables documented in the section “Traps”. The trap variables are sent in the order in which they are listed.

**Table 24-16. Generic Traps**

Trap ID	Name	Description	Severity	Category	Cause	Supported by RAC Platform
0	CodeStart	SNMP agent is initializing itself	Information	Status	RAC power on or reset.	All
1	Authentication Failure	Request received with an invalid community name	Critical	Error	SNMP request with an invalid community name.	All

**Table 24-17. Enterprise-specific Traps**

Trap ID	Name	Description	Severity	Category	Cause	Supported by RAC Platform
1001	alertDrscTest TrapEvent	The RAC generated a test trap event in response to a user request	Information	Status	A test SNMP trap generated by a RAC.	All
1002	alertDrscAuth Error	RAC Authentication failures during a time period have exceeded a threshold	Minor	Error	RAC login failure caused by authentication failure, number of concurrent logins exceed limit, or permission denied.	All

**Table 24-17. Enterprise-specific Traps (continued)**

Trap ID	Name	Description	Severity	Category	Cause	Supported by RAC Platform
1003	alertDrscLost ESM	The RAC cannot communicate with the baseboard management controller (ESM)	Critical	Error	RAC lost communication with ESM.	Dell Remote Access Controller (DRAC) III
1004	alertDrscFound ESM	The RAC is communicating normally with the baseboard management controller (ESM)	Information	Error	RAC recovered communication with ESM.	DRAC III
1005	alertDrscPower Off	The RAC has detected a system power state change to powered-off	Critical	Error	RAC detected a system power state change to power-off.	DRAC III
1006	alertDrscPower On	The RAC has detected a system power state change to powered-on	Information	Error	RAC detected a system power state change to power-on.	DRAC III
1007	alertDrsc Watchdog Expired	The RAC has detected that the system watchdog has expired indicating a system hang	Critical	Event	RAC has detected the system watchdog expired (normally indicating a system hang).	DRAC III
1008	alertDrscBatt Low	The RAC Battery charge is below 25% indicating that the battery may only be able to power the DRSC for 8-10 minutes	Minor	Error	RAC detected its battery charge is below 25% full.	DRAC III
1009	alertDrscTemp Normal	The RAC Temperature probe has returned to a normal value	Information	Status	RAC temperature probe reading returned to normal.	DRAC III

**Table 24-17. Enterprise-specific Traps (continued)**

Trap ID	Name	Description	Severity	Category	Cause	Supported by RAC Platform
1010	alertDrscTemp Warning	The RAC Temperature probe has detected a Warning value	Minor	Status	RAC temperature probe reading exceeded warning threshold.	DRAC III
1011	alertDrscTemp Critical	The RAC Temperature probe has detected a failure (or critical) value	Critical	Error	RAC temperature probe reading exceeded critical threshold.	DRAC III
1012	alertDrscVolt Normal	The RAC voltage has returned to a normal value	Information	Error	RAC voltage probe reading returns to normal.	DRAC III
1013	alertDrscVolt Warning	The RAC voltage probe has detected a warning value	Minor	Error	RAC voltage probe reading exceeded warning threshold.	DRAC III
1014	alertDrscVolt Critical	The RAC voltage probe has detected a failure (or critical) value	Critical	Error	RAC voltage probe reading exceeded critical threshold.	DRAC III
1015	alertDrscSEL Warning	The RAC has detected a new event in the System Event Log with Severity: Warning	Major	Error	RAC detected a new system event log with warning severity (detailed log info is in drsAlert Message varbind).	All
1016	alertDrscSEL Critical	The RAC has detected a new event in the System Event Log with Severity: Critical	Critical	Error	RAC detected a new system event log with critical severity (detailed log info is in drsAlert Message varbind).	All
1017	alertDrscSEL 80 percentFull	The RAC system event log is 80% full	Major	Status	RAC detected system event log is 80% full.	All
1018	alertDrscSEL 90 percentFull	The RAC system event log is 90% full	Major	Status	RAC detected system event log is 90% full.	All

**Table 24-17. Enterprise-specific Traps (continued)**

Trap ID	Name	Description	Severity	Category	Cause	Supported by RAC Platform
1019	alertDrscSEL100percentFull	The RAC system event log is 100% full	Major	Status	RAC detected system event log is 100% full.	All
1020	alertDrscSELNormal	The RAC has detected a new event in the System Event Log with Severity: Normal	Information	Error	RAC detected a new system event log with normal severity (detailed log info is in drsAlert Message varbind).	All

## BMC Traps

The BMC monitors the system for critical events by communicating with various sensors on the system board and by sending alerts and log events when certain parameters exceed their preset thresholds. All of the traps documented in this section belong to the MIB enterprise identified by OID 1.3.6.1.4.1.3183.1.1.1.

**Table 24-18. BMC Traps**

Trap ID	Description	Severity
262402	Generic Critical Fan Failure	Critical
262530	Generic Critical Fan Failure Cleared	Informational
131330	Under-Voltage Problem (Lower Critical - going low)	Critical
131458	Under-Voltage Problem Cleared	Informational
131841	Generic Critical Voltage Problem	Critical
131840	Generic Critical Voltage Problem Cleared	Informational
65792	Under-Temperature Warning (Lower non-critical, going low)	Minor
65920	Under-Temperature Warning Cleared	Informational
65794	Under-Temperature Problem (Lower Critical - going low)	Critical
65922	Under-Temperature Problem Cleared	Informational
65799	Over-Temperature warning (Upper non-critical, going high)	Minor
65927	Over-Temperature warning Cleared	Informational
65801	Over-Temperature Problem (Upper Critical - going high)	Critical
65929	Over-Temperature Problem Cleared	Informational
356096	Chassis Intrusion - Physical Security Violation	Critical

**Table 24-18. BMC Traps (continued)**

<b>Trap ID</b>	<b>Description</b>	<b>Severity</b>
356224	Chassis Intrusion (Physical Security Violation) Event Cleared	Informational
264961	Fan Redundancy Lost	Critical
264960	Fan redundancy Has Returned to Normal	Informational
527105	Power Supply Redundancy Lost	Critical
527104	Power Supply Redundancy Has Returned to Normal	Informational
487169	CPU Thermal Trip (Over Temperature Shutdown)	Critical
487297	CPU Thermal Trip (Over Temperature Shutdown) Cleared	Informational
487168	CPU Internal Error	Critical
487296	CPU Internal Error Cleared	Informational
487173	CPU Configuration Error	Critical
487301	CPU Configuration Error Cleared	Informational
487175	CPU Presence (Processor Presence detected)	Informational
487303	CPU Not Present (Processor Not Present)	Critical
552704	Power Supply Inserted	Informational
552832	Power Supply Removed	Minor
552705	Power Supply Failure	Critical
552833	Power Supply Failure Cleared	Informational
552706	Power Supply Warning	Minor
552834	Power Supply Warning Cleared	Informational
552707	Power Supply AC Lost	Critical
552835	Power Supply AC Restored	Informational
1076996	System Event Log (SEL) Full (Logging Disabled)	Critical
2322176	ASR (Automatic System Recovery) Timer Expired	Critical
2322177	ASR (Automatic System Recovery) Reset Occurred	Critical
2322178	ASR (Automatic System Recovery) Power Down Occurred	Critical
2322179	ASR (Automatic System Recovery) Power Cycle Occurred	Critical



# Storage Management Alert Reference

Storage Management's alert or event management features let you monitor the health of storage resources such as controllers, channels, array disks, and virtual disks.

## Alert Monitoring and Logging

The Storage Management Service performs alert monitoring and logging. By default, the Storage Management Service starts when the managed system starts up. If you stop the Disk Management Service, then alert monitoring and logging stops. Alert monitoring does the following:

- Updates the status of the storage object that generated the alert.
- Propagates the storage object's status to all the related higher objects in the storage hierarchy. For example, the status of a lower-level object will be propagated up to the status displayed on the Health tab for the top-level storage object.
- Logs an alert into the Alert log and Microsoft® Windows® application log.
- Sends an Simple Network Management Protocol (SNMP) trap if the operating system's SNMP service is installed and enabled.



**NOTE:** Storage Management does not log alerts regarding the data I/O path. These alerts are logged by the respective RAID drivers in the system alert log.

## Viewing Alerts

Storage Management generates alerts that are added to the Windows application alert log and to the Server Administrator Alert log. To view these alerts in Server Administrator:

- 1 Select the **System** object in the tree view.
- 2 Select the **Logs** tab.
- 3 Select the **Alert** subtab.



**NOTE:** You can also view these alerts in the Windows Event Viewer. Every alert consists of the following:

- **Severity** — Shows the severity of alert.
- **Date and Time** — Date and time when Storage Management logged the alert.
- **Description** — A brief description of the alert. To expand or collapse the alert description, click the **Description** column heading.

# Alert Severity Levels

Each alert message in the Storage Management alert log has a severity level. The severity level is displayed in the **Severity** field of the alert message. The severity level indicates the nature of the alert.

The alert severity levels are as follows:

**Table 25-1. Storage Management Alert Severity**

Alert Severity	Component Status
OK/Normal/Informational	No action is required. The alert is provided for informational purposes and does not indicate an error condition. For example, the alert may indicate the normal start or stop of an operation.
Warning/Non-critical	A component requires attention. This alert indicates a potential problem, but does not necessarily mean that the system has currently lost data or is nonfunctional. For example, a Warning/Non-critical alert may indicate that a component (such as a temperature probe in an enclosure) has crossed a warning threshold.
Critical/Failure/Error	A component has either failed or failure is imminent. This alert indicates a serious problem such as data loss or a loss of function. For example, a Critical/Failure/Error alert may indicate that an array disk has failed.

## SNMP Support for Storage Management Alerts

By default, Storage Management installs SNMP trap forwarding support. For this support to function, you should have SNMP installed on the managed system prior to installing Storage Management.



**NOTE:** For more information on installation requirements and SNMP, see the Server Administrator documentation.

### SNMP Trap Forwarding

The Storage Management alerts are displayed in the Server Administrator alert log and are forwarded to the Windows application alert log. If you have SNMP installed on the managed system (and the SNMP service is running), the Storage Management alerts in the Windows application alert log will be forwarded as SNMP traps. In order for these traps to be viewable, however, a target system or application must be configured to receive these traps. SNMP traps that are generated by Storage Management can be viewed in any standard SNMP-compatible enterprise management console.

The Windows SNMP service must be configured to forward the SNMP traps to the target system or application. When forwarding to an application, the application should also be configured to receive the SNMP traps. The IT Assistant application is already configured to receive the SNMP traps generated by Storage Management.

See your Windows operating system documentation for information on configuring the operating system to forward SNMP traps. This information may be located under such topics as “setting up SNMP” or “SNMP traps.” When configuring SNMP for Windows, be sure that the SNMP traps are forwarded to the correct server. For information on configuring an application to receive SNMP traps, see the documentation for that application.

## SNMP Trap Definitions

The Storage Management management information base (MIB) defines the SNMP traps that Storage Management generates. These traps correspond to the alerts documented in the “Alert Descriptions and Corrective Actions” section. The MIB is located in `.\sm\mibs\dcstorag.mib`, a subdirectory of the Storage Management installation directory.



**NOTE:** Storage Management supports trap forwarding on both 32-bit and 64-bit operating systems.

## SNMP Trap Variables

The Storage Management SNMP traps use a set of variables that are included with every trap. These variables are the following:

- `messageIDEvent`
- `descriptionEvent`
- `locationEvent`
- `objectNameEvent`
- `objectOIDEvent`
- `objectNexusEvent`
- `currentStatusEvent`
- `previousStatusEvent`

## Viewing SNMP Traps

SNMP traps that are generated by Storage Management can be viewed in any standard SNMP-compatible enterprise management console. These traps are defined in the Storage Management MIB. These traps correspond to the alerts documented in the “Alert Descriptions and Corrective Actions” section. For more information on the MIB and its structure, as well as a change history of the SNMP traps, see the “Introduction” section. For more information on configuring SNMP, see “SNMP Support for Storage Management Alerts.”

## Alert Descriptions and Corrective Actions

The following sections describe alerts generated by the Redundant Array of Independent disks (RAID) or Small Computer System Interface (SCSI) controllers supported by Storage Management. The alerts are displayed in the Server Administrator Alert subtab or through Windows Event Viewer. These alerts can also be forwarded as SNMP traps to other applications.

SNMP traps are generated for the alerts listed in the following sections. These traps are included in the Storage Management MIB. The SNMP traps for these alerts use all of the SNMP trap variables. For more information on SNMP support and the MIB, see "SNMP Support for Storage Management Alerts."

To locate an alert, scroll through the following table to find the alert number displayed on the Server Administrator Alert tab or search this HTML file for the alert message text or number. See "Alert Severity Levels" for more information on severity levels.

For more information regarding alert descriptions and the appropriate corrective actions, see the online help.

**Table 25-2. Storage Management Messages**

Event ID	Description	Severity	Cause and Action	SNMP Trap Numbers	Array Manager Event Number
2048	Device failed	Critical / Failure / Error	<p>Cause: A storage component such as an array disk or an enclosure has failed. The failed component may have been identified by the controller while performing a task such as a rescan or a check consistency.</p> <p>Action: Replace the failed component. You can identify which component has failed by locating the component that has a red "X" for its status. Perform a rescan after replacing the failed component.</p>	754, 804, 854, 904, 954, 1004, 1054, 1104, 1154, 1204	500
2049	Array disk removed	Warning / Non-critical	<p>Cause: A physical disk has been removed from the array. A user may have also executed the "Prepare to Remove" task. This alert can also be caused by loose or defective cables or by problems with the enclosure.</p> <p>Action: If a physical disk was removed from the array, either replace the disk or restore the original disk. You can identify which disk has been removed by locating the disk that has a red "X" for its status. Perform a rescan after replacing or restoring the disk. If a disk has not been removed from the array, then check for problems with the cables. See the online help for more information on checking the cables. Make sure that the enclosure is powered on. If the problem persists, check the enclosure documentation for further diagnostic information.</p>	903	501

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2050	Array disk offline	Warning / Non-critical	<p>Cause: A physical disk in the array is offline. A disk can be made offline during a Prepare to Remove operation or because a user manually put the disk offline.</p> <p>Action: Perform a rescan. You can also select the offline disk and perform a Make Online operation.</p>	903	502
2051	Array disk is degraded	Warning / Non-critical	<p>Cause: An array disk has reported an error condition and may be degraded. The array disk may have reported the error condition in response to a consistency check or other operation.</p> <p>Action: Replace the degraded array disk. You can identify which disk is degraded by locating the disk that has a red "X" for its status. Perform a rescan after replacing the disk.</p>	903	503
2052	Array disk inserted	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	901	504
2053	Virtual disk created	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	505
2054	Virtual disk deleted	Warning / Non-critical	<p>Cause: A virtual disk has been deleted. "Performing a Reset Configuration" may detect that a virtual disk has been deleted and generate this alert.</p> <p>Action: None.</p>	1203	506
2055	Virtual disk configuration changed	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	507
2056	Virtual disk failed	Critical / Failure / Error	<p>Cause: One or more physical disks included in the virtual disk have failed. If the virtual disk is non-redundant (does not use mirrored or parity data), then the failure of a single physical disk can cause the virtual disk to fail. If the virtual disk is redundant, then more physical disks have failed than can be rebuilt using mirrored or parity information.</p> <p>Action: Create a new virtual disk and restore from a backup.</p>	1204	508

**Table 25-2. Storage Management Messages (continued)**

Event ID	Description	Severity	Cause and Action	SNMP Trap Numbers	Array Manager Event Number
2057	Virtual disk degraded	Warning/ Non-critical	<p>Cause 1: This alert message occurs when a physical disk included in a redundant virtual disk fails. Because the virtual disk is redundant (uses mirrored or parity information) and only one physical disk has failed, the virtual disk can be rebuilt.</p> <p>Action 1: Configure a hot spare for the virtual disk if one is not already configured. Rebuild the virtual disk. When using a PowerEdge RAID Controller (PERC) 2/SC, 3/SC, 2/DC, 3/DCL, 3/DC, 3/QC, 4/SC, 4/DC, 4e/DC, 4/Di, 5/E or CERC ATA100/4ch controller, rebuild the virtual disk by first configuring a hot spare for the disk, and then initiating a write operation to the disk. The write operation will initiate a rebuild of the disk.</p> <p>Cause 2: A physical disk in the array has been removed.</p> <p>Action 2: If a physical disk was removed from the array, either replace the disk or restore the original disk. You can identify which disk has been removed by locating the disk that has a red "X" for its status. Perform a rescan after replacing the disk.</p>	1203	509
2058	Virtual disk check consistency started	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	520
2059	Virtual disk format started	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	521
2061	Virtual disk initialization started	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	523
2063	Virtual disk reconfiguration started	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	525
2064	Virtual disk rebuild started	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	526
2065	Array disk rebuild started	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	901	527

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2067	Virtual disk check consistency cancelled	OK/Normal/ Informational	<p>Cause: The check consistency operation cancelled because a physical disk in the array has failed or because a user cancelled the check consistency operation.</p> <p>Action: If the physical disk failed, then replace the physical disk. You can identify which disk failed by locating the disk that has a red “X” for its status. Perform a rescan after replacing the disk. When performing a consistency check, be aware that the consistency check can take a long time. The time it takes depends on the size of the physical disk or the virtual disk.</p>	1201	529
2070	Virtual disk initialization cancelled	OK/Normal/ Informational	<p>Cause: The virtual disk initialization cancelled because a physical disk included in the virtual disk has failed or because a user cancelled the virtual disk initialization.</p> <p>Action: If a physical disk failed, then replace the physical disk. You can identify which disk has failed by locating the disk that has a red “X” for its status. Perform a rescan after replacing the disk. Restart the format array disk operation. Restart the virtual disk initialization.</p>	1201	532
2074	Array Disk rebuild cancelled	OK/Normal/ Informational	<p>Cause: A user has cancelled the rebuild operation.</p> <p>Action: Restart the rebuild operation.</p>	901	536
2076	Virtual disk check consistency failed	Critical / Failure / Error	<p>Cause: An array disk included in the virtual disk failed or there is an error in the parity information. A failed array disk can cause errors in parity information.</p> <p>Action: Replace the failed array disk. You can identify which disk has failed by locating the disk that has a red “X” for its status. Rebuild the array disk. When finished, restart the check consistency operation.</p>	1204	538
2077	Virtual disk format failed	Critical / Failure / Error	<p>Cause: An array disk included in the virtual disk failed.</p> <p>Action: Replace the array disk. You can identify which array disk has failed by locating the disk that has a red "X" for its status. Rebuild the array disk. When finished, restart the virtual disk format operation.</p>	1204	539

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2079	Virtual disk initialization failed	Critical / Failure / Error	Cause: An array disk included in the virtual disk has failed or a user has cancelled the initialization.  Action: If an array disk has failed, then replace the array disk.	1204	541
2080	Array disk initialize failed	Critical / Failure / Error	Cause: The array disk has failed or is corrupt.  Action: Replace the failed or corrupt disk. You can identify a disk that has failed by locating the disk that has a red "X" for its status. Restart the initialization.	904	542
2081	Virtual disk reconfiguration failed	Critical / Failure / Error	Cause: An array disk included in the virtual disk has failed or is corrupt. A user may also have cancelled the reconfiguration.  Action: Replace the failed or corrupt disk. You can identify a disk that has failed by locating the disk that has a red "X" for its status. If the array disk is part of a redundant array, then rebuild the array disk. When finished, restart the reconfiguration.	1204	543
2082	Virtual disk rebuild failed	Critical / Failure / Error	Cause: An array disk included in the virtual disk has failed or is corrupt. A user may also have cancelled the rebuild.  Action: Replace the failed or corrupt disk. You can identify a disk that has failed by locating the disk that has a red "X" for its status. Restart the virtual disk rebuild.	1204	544
2083	Array disk rebuild failed	Critical / Failure / Error	Cause: An array disk included in the virtual disk has failed or is corrupt. A user may also have cancelled the rebuild.  Action: Replace the failed or corrupt disk. You can identify a disk that has failed by locating the disk that has a red "X" for its status. Rebuild the virtual disk rebuild.	904	545
2085	Virtual disk check consistency completed	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	1201	547



**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2086	Virtual disk format completed	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	1201	548
2088	Virtual disk initialization completed	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	1201	550
2089	Array disk initialize completed	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	901	551
2090	Virtual disk reconfiguration completed	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	1201	552
2091	Virtual disk rebuild completed	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	1201	553
2092	Array disk rebuild completed	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	901	554

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2094	<p>Predictive Failure reported. If this disk is part of a redundant virtual disk, select the 'Offline' option and then replace the disk. Then configure a hot spare and it will start the rebuild automatically. If this disk is a hot spare, select the 'Prepare to Remove' option and then replace the disk. If this disk is part of a non-redundant disk, you should back up your data immediately. If the disk fails, you will not be able to recover the data.</p>	Warning/ Non-critical	<p><b>Cause:</b> The array disk is predicted to fail. Many array disks contain Self Monitoring Analysis and Reporting Technology (S.M.A.R.T.). When enabled, SMART monitors the health of the disk based on indications such as the number of write operations that have been performed on the disk.</p> <p><b>Action:</b> Replace the array disk. Even though the disk may not have failed yet, it is strongly recommended that you replace the disk. Review the message text for additional information.</p>	903	570

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2095	SCSI sense data. If this disk is part of a redundant virtual disk, select the 'Offline' option and then replace the disk. Then configure a hot spare and it will start the rebuild automatically. If this disk is a hot spare, select the 'Prepare to Remove' option and then replace the disk. If this disk is part of a non-redundant disk, you should back up your data immediately. If the disk fails, you will not be able to recover the data.	Warning/ Non-critical	<p>Cause: An array disk has failed, is corrupt, or is otherwise experiencing a problem.</p> <p>Action: Replace the array disk. Even though the disk may not have failed yet, it is strongly recommended that you replace the disk. Review the message text for additional information.</p>	903	571
2098	Global hot spare assigned	OK/Normal/ Informational	<p>Cause: A user has assigned an array disk as a global hot spare. This alert is provided for informational purposes.</p> <p>Action: None.</p>	901	574

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2099	Global hot spare unassigned	OK/Normal/ Informational	<p>Cause: An array disk that was assigned as a hot spare has been unassigned and is no longer functioning as a hot spare. The array disk may have been unassigned by a user or automatically unassigned by Storage Management. Storage Management unassigns hot spares that have been used to rebuild data. Once data is rebuilt onto the hot spare, the hot spare becomes a member of the virtual disk and is no longer assigned as a hot spare. You need to assign a new hot spare to maintain data protection in this situation.</p> <p>On the PERC 2/Si, 3/Si, 3/Di, CERC SATA1.5/6ch, and Cost Effective Raid Controller (CERC) Serial Advanced Technology Attachment (SATA)1.5/2s controllers, if you use another application such as the Basic Input/Output System (BIOS) to include a hot spare in a virtual disk, then Storage Management unassigns the array disk as a hot spare.</p> <p>Action: Although this alert is provided for informational purposes, you may need to assign a new hot spare to the virtual disk.</p>	901	575
2100	Temperature exceeded the maximum warning threshold	Warning/ Non-critical	<p>Cause: The array disk enclosure is too hot. A variety of factors can cause the excessive temperature. For example, a fan may have failed, the thermostat may be set too high, or the room temperature may be too hot.</p> <p>Action: Check for factors that may cause overheating. For example, verify that the enclosure fan is working. You should also check the thermostat settings and examine whether the enclosure is located near a heat source. Make sure the enclosure has enough ventilation and that the room temperature is not too hot. See the enclosure documentation for more diagnostic information.</p>	1053	591
2101	Temperature dropped below the minimum warning threshold	Warning/ Non-critical	<p>Cause: The array disk enclosure is too cool.</p> <p>Action: Check whether the thermostat setting is too low and whether the room temperature is too cool.</p>	1053	592

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2102	Temperature exceeded the maximum failure threshold	Critical / Failure / Error	<p>Cause: The array disk enclosure is too hot. A variety of factors can cause the excessive temperature. For example, a fan may have failed, the thermostat may be set too high, or the room temperature may be too hot.</p> <p>Action: Check for factors that may cause overheating. For example, verify that the enclosure fan is working. You should also check the thermostat settings and examine whether the enclosure is located near a heat source. Make sure the enclosure has enough ventilation and that the room temperature is not too hot. See the enclosure documentation for more diagnostic information.</p>	1054	593
2103	Temperature dropped below the minimum failure threshold	Critical / Failure / Error	<p>Cause: The array disk enclosure is too cool.</p> <p>Action: Check whether the thermostat setting is too low and whether the room temperature is too cool.</p>	1054	594
2104	Controller battery is reconditioning	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1151	581
2105	Controller battery recondition is completed	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1151	582
2106	Smart FPT exceeded	Warning/ Non-critical	<p>Cause: A disk on the specified controller has received a SMART alert (predictive failure) indicating that the disk is likely to fail in the near future.</p> <p>Action: Replace the disk that has received the SMART alert. If the array disk is a member of a non-redundant virtual disk, then back up the data before replacing the disk. Removing an array disk that is included in a non-redundant virtual disk will cause the virtual disk to fail and may cause data loss.</p>	903	585

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2107	Smart configuration change	Critical / Failure / Error	<p>Cause: A disk has received a SMART alert (predictive failure) after a configuration change. The disk is likely to fail in the near future.</p> <p>Action: Replace the disk that has received the SMART alert. If the array disk is a member of a non-redundant virtual disk, then back up the data before replacing the disk. Removing an array disk that is included in a non-redundant virtual disk will cause the virtual disk to fail and may cause data loss</p>	904	586
2108	Smart warning	Warning / Non-critical	<p>Cause: A disk has received a SMART alert (predictive failure). The disk is likely to fail in the near future.</p> <p>Action: Replace the disk that has received the SMART alert. If the array disk is a member of a non-redundant virtual disk, then back up the data before replacing the disk. Removing an array disk that is included in a non-redundant virtual disk will cause the virtual disk to fail and may cause data loss.</p>	903	587
2109	Smart warning temperature	Warning / Non-critical	<p>Cause: A disk has reached an unacceptable temperature and received a SMART alert (predictive failure). The disk is likely to fail in the near future.</p> <p>First Action: Determine why the array disk has reached an unacceptable temperature. A variety of factors can cause the excessive temperature. For example, a fan may have failed, the thermostat may be set too high, or the room temperature may be too hot or cold. Verify that the fans in the server or enclosure are working. If the array disk is in an enclosure, you should check the thermostat settings and examine whether the enclosure is located near a heat source. Make sure the enclosure has enough ventilation and that the room temperature is not too hot. See the enclosure documentation for more diagnostic information.</p> <p>Second Action: If you cannot identify why the disk has reached an unacceptable temperature, then replace the disk. If the array disk is a member of a non-redundant virtual disk, then back up the data before replacing the disk. Removing an array disk that is included in a non-redundant virtual disk will cause the virtual disk to fail and may cause data loss.</p>	903	588

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2110	Smart warning degraded	Warning / Non-critical	<p>Cause: A disk is degraded and has received a SMART alert (predictive failure). The disk is likely to fail in the near future.</p> <p>Action: Replace the disk that has received the SMART alert. If the array disk is a member of a non-redundant virtual disk, then back up the data before replacing the disk. Removing an array disk that is included in a non-redundant virtual disk will cause the virtual disk to fail and may cause data loss.</p>	903	589
2111	Failure prediction threshold exceeded due to test - No action needed	Warning / Non-critical	<p>Cause: A disk has received a SMART alert (predictive failure) due to test conditions.</p> <p>Action: None.</p>	903	590
2112	Enclosure was shut down	Critical / Failure / Error	<p>Cause: The array disk enclosure is either hotter or cooler than the maximum or minimum allowable temperature range.</p> <p>Action: Check for factors that may cause overheating or excessive cooling. For example, verify that the enclosure fan is working. You should also check the thermostat settings and examine whether the enclosure is located near a heat source. Make sure the enclosure has enough ventilation and that the room temperature is not too hot or too cold. See the enclosure documentation for more diagnostic information.</p>	854	602
2114	A consistency check on a virtual disk has been paused (suspended)	OK/Normal/ Informational	<p>Cause: The check consistency operation on a virtual disk was paused by a user.</p> <p>Action: To resume the check consistency operation, right-click the virtual disk in the Storage Management tree view and select Resume Check Consistency.</p>	1201	604
2115	A consistency check on a virtual disk has been resumed	OK/Normal/ Informational	<p>Cause: The check consistency operation on a virtual disk has resumed processing after being paused by a user.</p> <p>Action: This alert is provided for informational purposes.</p>	1201	605

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2116	A virtual disk and its mirror have been split	OK/Normal/ Informational	<p>Cause: A user has caused a mirrored virtual disk to be split. When a virtual disk is mirrored, its data is copied to another virtual disk in order to maintain redundancy. After being split, both virtual disks retain a copy of the data, although because the mirror is no longer intact, updates to the data are no longer copied to the mirror.</p> <p>Action: This alert is provided for informational purposes.</p>	1201	606
2117	A mirrored virtual disk has been unmirrored	OK/Normal/ Informational	<p>Cause: A user has caused a mirrored virtual disk to be unmirrored. When a virtual disk is mirrored, its data is copied to another virtual disk in order to maintain redundancy. After being unmirrored, the disk formerly used as the mirror returns to being an array disk and becomes available for inclusion in another virtual disk.</p> <p>Action: This alert is provided for informational purposes.</p>	1201	607
2118	Change write policy	OK/Normal/ Informational	<p>Cause: A user has changed the write policy for a virtual disk.</p> <p>Action: This alert is provided for informational purposes.</p>	1201	601
2120	Enclosure firmware mismatch	Warning/ Non-critical	<p>Cause: The firmware on the Expanded Memory Manager (EMM) modules is not the same version. It is required that both modules have the same version of the firmware. This alert may be caused when a user attempts to insert an EMM module that has a different firmware version than an existing module.</p> <p>Action: Download the same version of the firmware to both EMM modules.</p>	853	672
2121	Device returned to normal	OK/Normal/ Informational	<p>Cause: A device that was previously in an error state has returned to a normal state. For example, if an enclosure became too hot and subsequently cooled down, then you may receive this alert.</p> <p>Action: This alert is provided for informational purposes.</p>	752, 802, 852, 902, 952, 1002, 1052, 1102, 1152, 1202	None



**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2122	Redundancy degraded	Warning/ Non-critical	<p>Cause: One or more of the enclosure components has failed. For example, a fan or power supply may have failed. Although the enclosure is currently operational, the failure of additional components could cause the enclosure to fail.</p> <p>Action: Identify and replace the failed component. To identify the failed component, select the enclosure in the tree view and click the Health subtab. Any failed component will be identified with a red X on the enclosure's Health subtab. Alternatively, you can select the Storage object and click the Health subtab. The controller status displayed on the Health subtab indicates whether a controller has a failed or degraded component. See the enclosure documentation for information on replacing enclosure components and for other diagnostic information.</p>	1305	None
2123	Redundancy lost	Warning/ Non-critical	<p>Cause: A virtual disk or an enclosure has lost data redundancy. In the case of a virtual disk, one or more array disks included in the virtual disk have failed. Due to the failed array disk or disks, the virtual disk is no longer maintaining redundant (mirrored or parity) data. The failure of an additional array disk will result in lost data. In the case of an enclosure, more than one enclosure component has failed. For example, the enclosure may have suffered the loss of all fans or all power supplies.</p> <p>Action: Identify and replace the failed components. To identify the failed component, select the Storage object and click the Health subtab. The controller status displayed on the Health subtab indicates whether a controller has a failed or degraded component. Click the controller that displays a Warning or Failed status. This action displays the controller Health subtab which displays the status of the individual controller components. Continue clicking the components with a Warning or Health status until you identify the failed component. See the online help for more information. See the enclosure documentation for information on replacing enclosure components and for other diagnostic information.</p>	1306	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2124	Redundancy normal	OK/Normal/ Informational	Cause: Data redundancy has been restored to a virtual disk or an enclosure that previously suffered a loss of redundancy.  Action: This alert is provided for informational purposes.	1304	None
2126	SCSI sense sector reassign	Warning / Non-critical	Cause: A sector of the disk is corrupted and data cannot be maintained on this portion of the disk.  Action: If the disk is part of a non-redundant virtual disk, then replace the disk. Any data residing on the corrupt portion of the disk may be lost and you may need to restore from backup. If the disk is part of a redundant virtual disk, then any data residing on the corrupt portion of the disk will be reallocated elsewhere in the virtual disk.	903	None
2127	Background initialization started	OK/Normal/ Informational	Cause: Background initialization of a virtual disk has started. This alert is provided for informational purposes.  Action: None.	1201	683
2128	Background initialization cancelled	OK/Normal/ Informational	Cause: Background initialization of a virtual disk has been cancelled. A user or the firmware may have stopped background initialization.  Action: None.	1201	684
2129	Background initialization failed	Critical / Failure / Error	Cause: Background initialization of a virtual disk has failed.  Action: None.	1204	685
2130	Background initialization completed	OK/Normal/ Informational	Cause: Background initialization of a virtual disk has completed. This alert is provided for informational purposes.  Action: None.	1201	686

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2131	Firmware version mismatch	Warning/ Non-critical	<p>Cause: The firmware on the controller is not a supported version.</p> <p>Action: Install a supported version of the firmware. If you do not have a supported version of the firmware available, it can be downloaded from the Dell support site at <a href="http://support.dell.com">support.dell.com</a>. If you do not have a supported version of the firmware available, check with your support provider for information on how to obtain the most current firmware.</p>	753	None
2132	Driver version mismatch	Warning/ Non-critical	<p>Cause: The controller driver is not a supported version.</p> <p>Action: Install a supported version of the driver. If you do not have a supported driver version available, it can be downloaded from the Dell support site at <a href="http://support.dell.com">support.dell.com</a>. If you do not have a supported version of the driver available, check with your support provider for information on how to obtain the most current driver.</p>	753	None
2135	Array Manager is installed on the system	Warning/ Non-critical	<p>Cause: Storage Management has been installed on a system that has an Array Manager installation.</p> <p>Action: Installing Storage Management and Array Manager on the same system is not a supported configuration. Uninstall either Storage Management or Array Manager.</p>	103	None
2136	Virtual disk initialization	OK/Normal/ Informational	<p>Cause: Virtual disk initialization is in progress. This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	None

**Table 25-2. Storage Management Messages (continued)**

Event ID	Description	Severity	Cause and Action	SNMP Trap Numbers	Array Manager Event Number
2137	Communication timeout	Warning/ Non-critical	<p>Cause: The controller is unable to communicate with an enclosure. There are several reasons why communication may be lost. For example, there may be a bad or loose cable. An unusual amount of I/O may also interrupt communication with the enclosure. In addition, communication loss may be caused by software, hardware, or firmware problems, bad or failed power supplies, and enclosure shutdown.</p> <p>When viewed in the Alert Log, the description for this event displays several variables: controller name, enclosure name, type of communication problem, return code, and SCSI status.</p> <p>Action: Check for problems with the cables. See the online help for more information on checking the cables. You should also check to see if the enclosure has degraded or failed components. To do so, select the enclosure object in the tree view and click the Health subtab. The Health subtab displays the status of the enclosure components. Verify that the controller has supported driver and firmware versions installed and that the enclosure management modules (EMMs) are each running the same version of supported firmware.</p>	853	688, 610, 611
2138	Enclosure alarm enabled	OK/Normal/ Informational	<p>Cause: A user has enabled the enclosure alarm. This alert is provided for informational purposes.</p> <p>Action: None.</p>	851	676
2139	Enclosure alarm disabled	OK/Normal/ Informational	<p>Cause: A user has disabled the enclosure alarm.</p> <p>Action: None.</p>	851	677
2140	Dead disk segments restored	OK/Normal/ Informational	<p>Cause: Disk space that was formerly “dead” or inaccessible to a redundant virtual disk has been restored. This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	None
2141	Array disk dead segments recovered	OK/Normal/ Informational	<p>Cause: Portions of the array disk that were formerly inaccessible have been recovered. Any data residing on these dead segments has been lost. This alert is provided for informational purposes.</p> <p>Action: None.</p>	901	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2142	Controller rebuild rate has changed	OK/Normal/ Informational	Cause: A user has changed the controller rebuild rate. This alert is provided for informational purposes.  Action: None.	751	680
2143	Controller alarm enabled	OK/Normal/ Informational	Cause: A user has enabled the controller alarm. This alert is provided for informational purposes.  Action: None.	751	678
2144	Controller alarm disabled	OK/Normal/ Informational	Cause: A user has disabled the controller alarm. This alert is provided for informational purposes.  Action: None.	751	679
2145	Controller battery low	Critical / Failure / Error	Cause: The controller battery charge is low. On batteries that automatically recharge or recondition, this alert may indicate that the recharge limit has been reached.  Action: Recondition the battery. See the online help for more information	1154	580
2146	Bad block replacement error	Warning / Non-critical	Cause: A portion of an array disk is damaged.  Action: See the Storage Management online help or the <i>Dell OpenManage™ Server Administrator Storage Management User's Guide</i> for more information.	753	691
2147	Bad block sense error	Warning / Non-critical	Cause: A portion of an array disk is damaged. See the online help for more information.  Action: See the online help for more information.	753	691
2148	Bad block medium error	Warning / Non-critical	Cause: A portion of an array disk is damaged. See the online help for more information.  Action: See the online help for more information.	753	691
2149	Bad block extended sense error	Warning / Non-critical	Cause: A portion of an array disk is damaged. See the online help for more information.  Action: See the online help for more information.	753	691
2150	Bad block extended medium error	Warning / Non-critical	Cause: A portion of an array disk is damaged. See the online help for more information.  Action: See the online help for more information.	753	691

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2151	Asset tag changed	OK/Normal/Informational	Cause: A user has changed the enclosure asset tag. This alert is provided for informational purposes. Action: None.	851	None
2152	Asset name changed	OK/Normal/Informational	Cause: A user has changed the enclosure asset name. This alert is provided for informational purposes. Action: None.	851	None
2153	Service tag changed	Warning/Non-critical	Cause: An enclosure service tag was changed. In most circumstances, this service tag should only be changed by Dell™ support or your service provider. Action: Ensure that the tag was changed under authorized circumstances.	853	None
2154	Maximum temperature probe warning threshold value changed	OK/Normal/Informational	Cause: A user has changed the value for the maximum temperature probe warning threshold. This alert is provided for informational purposes. Action: None	1051	None
2155	Minimum temperature probe warning threshold value changed	OK/Normal/Informational	Cause: A user has changed the value for the minimum temperature probe warning threshold. This alert is provided for informational purposes. Action: None.	1051	None
2156	Controller alarm has been tested	OK/Normal/Informational	Cause: The controller alarm test has run successfully. This alert is provided for informational purposes. Action: None.	751	None
2157	Controller configuration has been reset	OK/Normal/Informational	Cause: A user has reset the controller configuration. See the online help for more information. This alert is provided for informational purposes. Action: None.	751	None
2158	Array disk online	OK/Normal/Informational	Cause: An offline array disk has been made online. This alert is provided for informational purposes. Action: None.	901	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2159	Virtual disk renamed	OK/Normal/ Informational	<p>Cause: A user has renamed a virtual disk. This alert is provided for informational purposes.</p> <p>When renaming a virtual disk on a PERC 2, 2/Si, 3/Si, 3/Di, CERC SATA1.5/6ch, and CERC SATA1.5/2s controller, this alert displays the new virtual disk name. On the PERC 2/SC, 2/DC, 3/SC, 3/DCL, 3/DC, 3/QC, 4/SC, 4/DC, 4e/DC, 4/Di, 4/IM, 4e/Si, 4e/Di, 5/E, and CERC SATA100/4ch controllers, this alert displays the original virtual disk name.</p> <p>Action: None.</p>	1201	608
2160	Dedicated hotspare assigned	OK/Normal/ Informational	<p>Cause: A user has assigned an array disk as a dedicated hot spare to a virtual disk. See the online help for more information. This alert is provided for informational purposes.</p> <p>Action: None.</p>	901	574
2161	Dedicated hotspare unassigned	OK/Normal/ Informational	<p>Cause: An array disk that was assigned as a hot spare has been unassigned and is no longer functioning as a hot spare. The array disk may have been unassigned by a user or automatically unassigned by Storage Management. Storage Management unassigns hot spares that have been used to rebuild data. Once data is rebuilt onto the hot spare, the hot spare becomes a member of the virtual disk and is no longer assigned as a hot spare. You need to assign a new hot spare to maintain data protection in this situation.</p> <p>On the PERC 2/Si, 3/Si, 3/Di, CERC SATA1.5/6ch, and CERC SATA1.5/2s controllers, if you use another application such as the BIOS to include a hot spare in a virtual disk, then Storage Management unassigns the array disk as a hot spare.</p> <p>Action: Although this alert is provided for informational purposes, you may need to assign a new hot spare to the virtual disk.</p>	901	575
2162	Communication regained	OK/Normal/ Informational	<p>Cause: Communication with an enclosure has been restored. This alert is provided for informational purposes.</p> <p>Action: None.</p>	851	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2163	Rebuild completed with errors	Critical / Failure / Error	Cause: See the online help for more information. Action: See the online help for more information.	904	690
2164	See readme.txt for a list of validated controller driver versions	OK/Normal/ Informational	Cause: Storage Management is unable to determine whether the system has the minimum required versions of the RAID controller drivers.  Action: This alert is generated for informational purposes. See the Readme file for driver and firmware requirements. In particular, if Storage Management experiences performance problems, you should verify that you have the minimum supported versions of the drivers and firmware installed.	101	None
2165	The RAID controller firmware and driver validation was not performed. The configuration file cannot be opened.	Warning/ Non-critical	Cause: Storage Management is unable to determine whether the system has the minimum required versions of the RAID controller firmware and drivers. This situation may occur for a variety of reasons. For example, the installation directory path to the configuration file may not be correct. The configuration file may also have been removed or renamed.  Action: Reinstall Storage Management	753	None
2166	The RAID controller firmware and driver validation was not performed. The configuration file is out of date or corrupted.	Warning/ Non-critical	Cause: Storage Management is unable to determine whether the system has the minimum required versions of the RAID controller firmware and drivers. This situation has occurred because a configuration file is unreadable or missing data. The configuration file may be corrupted.  Action: Reinstall Storage Management	753	None



**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2167	The current kernel version and the non-RAID SCSI driver version are older than the minimum required levels. See readme.txt for a list of validated kernel and driver versions.	Warning/ Non-critical	<p>Cause: The version of the kernel and the driver do not meet the minimum requirements. Storage Management may not be able to display the storage or perform storage management functions until you have updated the system to meet the minimum requirements.</p> <p>Action: See the Readme file for kernel and driver requirements. Update the system to meet the minimum requirements and then reinstall Storage Management.</p>	103	None
2168	The non-RAID SCSI driver version is older than the minimum required level. See readme.txt for the validated driver version.	Warning/ Non-critical	<p>Cause: The version of the driver does not meet the minimum requirements. Storage Management may not be able to display the storage or perform storage management functions until you have updated the system to meet the minimum requirements.</p> <p>Action: See the Readme file for the driver requirements. Update the system to meet the minimum requirements and then reinstall Storage Management.</p>	103	None
2169	The controller battery needs to be replaced.	Critical/Failure /Error	<p>Cause: The controller battery cannot recharge. The battery may be old or it may have been already recharged the maximum number of times. In addition, the battery charger may not be working.</p> <p>Action: Replace the battery pack.</p>	1154	None
2170	The controller battery charge level is normal.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1151	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2171	The controller battery temperature is above normal.	Warning/ Non-critical	<p>Cause: The battery may be in the process of recharging. The room temperature may also be too hot. The fan in the system may also be degraded or failed.</p> <p>Action: If this alert was generated due to a battery recharge, then the situation will correct itself when the recharge is complete. You should also verify that the room temperature is normal and that system components such as the fan are functioning properly.</p>	1153	None
2172	The controller battery temperature is normal.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1151	None
2174	The controller battery has been removed.	Warning/ Non-critical.	<p>Cause: The controller cannot communicate with the battery. The battery may be removed. The contact point between the controller and the battery may also be burned or corroded.</p> <p>Action: Verify whether the battery is present. Replace the battery if it is not present. If the contact point between the battery and the controller is burned or corroded, you will need to replace either the battery or the controller or both. Refer to the hardware documentation for information on how to safely access, remove, and replace the battery.</p>	1153	None
2175	The controller battery has been replaced.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1151	None
2176	The controller battery Learn cycle has started.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1151	None
2177	The controller battery Learn cycle has completed.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1151	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2178	The controller battery Learn cycle has timed out.	Warning/ Non-critical	Cause: The controller battery must be fully charged before the Learn cycle can begin. The battery may be unable to maintain a full charge causing the Learn cycle to timeout. In addition, the battery must be able to maintain cached data for a specified period of time in the event of a power loss. For example, some batteries maintain cached data for 24 hours. If the battery is unable to maintain cached data for the required period of time, then the Learn cycle will timeout.  Action: Replace the battery pack. The battery is unable to maintain a full charge.	1153	None
2179	The controller battery Learn cycle has been postponed.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes.  Action: None.	1151	None
2180	The controller battery Learn cycle will start in % days.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes.  Action: None.	1151	None
2181	The controller battery Learn cycle will start in % hours.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes.  Action: None.	1151	None
2182	An invalid SAS configuration has been detected.	Critical/ Failure/ Error	Cause: The controller and attached enclosures are not cabled correctly.  Action: See the hardware documentation for information on correct cabling configurations.	754	None
2186	The controller cache has been discarded.	Warning/ Non-critical	Cause: The controller has flushed the cache and any data in the cache has been lost. This may occur when the system has memory or battery problems that cause the controller to distrust the cache. Although user data may have been lost, this alert does not always indicate that relevant or user data has been lost.  Action: Verify that the battery and memory are functioning properly.	753	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2187	Single-bit ECC error limit exceeded.	Warning/ Non-critical	Cause: The system memory is malfunctioning. Action: Replace the battery pack.	753	None
2188	The controller write policy has been changed to Write Through.	Warning/ Non-critical	Cause: The controller battery is unable to maintain cached data for the required period of time. For example, if the required period of time is 24 hours, then the battery is unable to maintain cached data for 24 hours. It is normal to receive this alert during the battery Learn cycle. This is because the Learn cycle discharges the battery before recharging it. When discharged, the battery cannot maintain cached data. Action: Verify the health of the battery. If the battery is not healthy, then replace the battery pack.	1153	None
2189	The controller write policy has been changed to Write Back.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	1151	None
2191	There are too many enclosures attached to the controller. This is an unsupported configuration.	Critical/ Failure/ Error	Cause: There are too many enclosures attached to the controller port. When the enclosure limit is exceeded, the controller loses contact with all enclosures attached to the port. Action: Remove the last enclosure. You must remove the enclosure that has been added last and is causing the enclosure limit to be exceeded.	854	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2192	The virtual disk Check Consistency has made corrections and completed.	OK/Normal/ Informational	<p>Cause: The virtual disk Check Consistency has identified errors and made corrections. For example, the Check Consistency may have encountered a bad disk block and remapped the disk block to restore data consistency. This alert is provided for informational purposes.</p> <p>Action: Monitor the battery health and the cache health to make sure the battery and cache are functioning properly. Monitor the Alert Log for events related to the battery and to write policy changes. You should also monitor the Alert Log for events related to disk errors. If you suspect that the battery or a disk have problems, then replace the battery pack or the disk.</p>	1203	None
2193	The virtual disk reconfigure has resumed.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	None
2194	The virtual disk read policy has changed.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	None
2199	The virtual disk cache policy has changed.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	None
2201	A global hot spare failed.	Warning/ Non-critical	<p>Cause: The controller is not able to communicate with a disk that is assigned as a global hot spare. The disk may have failed or been removed. There may also be a bad or loose cable.</p> <p>Action: Verify that the disk is healthy and that it has not been removed. Check the cables. If necessary, replace the disk and reassign the hot spare.</p>	903	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2202	A global hot spare has been removed.	Warning/ Non-critical	<p>Cause: The controller is not able to communicate with a disk that is assigned as a global hot spare. The disk may have been removed. There may also be a bad or loose cable.</p> <p>Action: Verify that the disk is healthy and that it has not been removed. Check the cables. If necessary, replace the disk and reassign the hot spare.</p>	903	None
2203	A dedicated hot spare failed.	Warning/ Non-critical	<p>Cause: The controller is not able to communicate with a disk that is assigned as a dedicated hot spare. The disk may have failed or been removed. There may also be a bad or loose cable.</p> <p>Action: Verify that the disk is healthy and that it has not been removed. Check the cables. If necessary, replace the disk and reassign the hot spare.</p>	903	None
2204	A dedicated hot spare has been removed.	Warning/ Non-critical	<p>Cause: The controller is not able to communicate with a disk that is assigned as a dedicated hot spare. The disk may have been removed. There may also be a bad or loose cable.</p> <p>Action: Verify that the disk is healthy and that it has not been removed. Check the cables. If necessary, replace the disk and reassign the hot spare.</p>	903	None
2205	A dedicated hot spare has been automatically unassigned.	Warning/ Non-critical	<p>Cause: The hot spare is no longer required because the virtual disk it was assigned to has been deleted.</p> <p>Action: None.</p>	903	None
2206	The only hot spare available is a SATA disk. SATA disks cannot replace SAS disks.	Warning/ Non-critical	<p>Cause: The only array disk available to be assigned as a hot spare is using SATA technology. The array disks in the virtual disk are using Serial Attached SCSI (SAS) technology. Because of this difference in technology, the hot spare cannot rebuild data if one of the array disks in the virtual disk fails.</p> <p>Action: Add a SAS disk that is large enough to be used as the hot spare and assign the new disk as a hot spare.</p>	903	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2207	The only hot spare available is a SAS disk. SAS disks cannot replace SATA disks.	Warning/ Non-critical	Cause: The only array disk available to be assigned as a hot spare is using SAS technology. The array disks in the virtual disk are using SATA technology. Because of this difference in technology, the hot spare cannot rebuild data if one of the array disks in the virtual disk fails.  Action: Add a SATA disk that is large enough to be used as the hot spare and assign the new disk as a hot spare.	903	None
2211	The physical disk is not supported.	Warning/ Non-critical	Cause: The physical disk may not have a supported version of the firmware or the disk may not be supported by Dell.  Action: If the disk is supported by Dell, then update the firmware to a supported version. If the disk is not supported by Dell, then replace the disk with one that is supported.	903	None
2232	The controller alarm is silenced.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2233	The background initialization (BGI) rate has changed.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2234	The Patrol Read rate has changed.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2235	The Check Consistency rate has changed.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2237	A controller rescan has been initiated.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2238	The controller debug log file has been exported.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2239	A foreign configuration has been cleared.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2240	A foreign configuration has been imported.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2241	The Patrol Read mode has changed.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2242	The Patrol Read has started.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2243	The Patrol Read has stopped.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2244	A virtual disk blink has been initiated.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	1201	None
2245	A virtual disk blink has ceased.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	1201	None
2246	The controller battery is degraded.	Warning/Non-critical	Cause: The controller battery charge is weak. As the battery charge weakens, the battery charger should automatically recharge the battery. If the battery has already met its recharge limit, then the battery pack needs to be replaced.  Action: Monitor the battery to make sure that it recharges successfully. If the battery does not recharge, then replace the battery pack.	1153	None
2247	The controller battery is charging.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	245	None



**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2248	The controller battery is executing a Learn cycle.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	1151	None
2249	The array disk Clear operation has started.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2251	The array disk blink has initiated.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2252	The array disk blink has ceased.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2254	The Clear operation has cancelled.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2255	The array disk has started.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2259	An enclosure blink operation has initiated.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None
2260	An enclosure blink has ceased.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None
2261	A global rescan has initiated.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	101	None
2262	Smart thermal shutdown is enabled.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	101	None
2263	Smart thermal shutdown is disabled.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	101	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2264	A device is missing.	Warning/ Non-critical	<p>Cause: The controller cannot communicate with a device. The device may be removed. There may also be a bad or loose cable.</p> <p>Action: Verify that the device is present and not removed. If it is present, then check the cables. You should also check the connection to the controller battery and the battery health. A battery with a weak or depleted charge may cause this alert.</p>	753, 803, 853, 903, 953, 1003, 1053, 1103, 1153, 1203	None
2265	A device is in an unknown state.	Warning/ Non-critical	<p>Cause: The controller cannot communicate with a device. The state of the device cannot be determined. There may be a bad or loose cable. The system may also be experiencing problems with the application programming interface (API). There could also be a problem with the driver or firmware.</p> <p>Action: Check the cables. Verify that the controller has a supported version of the driver and firmware. You can download the most current version of the driver and firmware from <a href="http://support.dell.com">support.dell.com</a>. Rebooting the system may also resolve this problem.</p>	753, 803, 853, 903, 953, 1003, 1053, 1103, 1153, 1203	None
2266	Controller log file entry:%1	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	751	None
2267	The controller reconstruct rate has changed.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	751	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2268	%1, Storage Management has lost communication with this RAID controller and attached storage. An immediate reboot is strongly recommended to avoid further problems. If the reboot does not restore communication, then there may be a hardware failure.	Critical/Failure/Error	<p>Cause: Storage Management has lost communication with a device. There may be faulty hardware or loose or defective cables.</p> <p>Action: Reboot the system. If the problem is not resolved, check for hardware failures. Any failed component must be replaced. Make sure the cables are attached securely. Refer to the hardware documentation for more diagnostics information.</p>	104	None
2269	The array disk Clear operation has completed.	OK/Normal/Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	901	None
2270	The array disk Clear operation failed.	Critical/Failure/Error	<p>Cause: A Clear task was being performed on an array disk but the task was interrupted and did not complete successfully. The controller may have lost communication with the disk. They disk may have been removed or the cables may be loose or defective.</p> <p>Action: Verify that the disk is present and not in a Failed state. Make sure the cables are attached securely. Restart the Clear task.</p>	904	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2271	The Patrol Read corrected a media error.	OK/Normal/ Informational	Cause: The Patrol Read task has encountered an error such as a bad disk block and remapped data to correct the error. Action: None.	901	None
2272	Patrol Read found an uncorrectable media error.	Critical/ Failure/ Error	Cause: The Patrol Read task has encountered an error that cannot be corrected. There may be a bad disk block that cannot be remapped. Action: Replace the array disk to avoid future data loss.	903	None
2273	Bad media.	Critical/ Failure/ Error	Cause: A source (array) disk in a redundant virtual disk has a bad disk block. The algorithm that maintains redundant data has created a similar bad block on the target redundant disk in order to maintain consistency in disk block addressing. Data has been lost. Action: Restore from backup.	904	None
2274	The array disk rebuild has resumed.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2276	The dedicated hot spare is too small.	Warning/ Non-critical	Cause: The dedicated hot spare is not large enough to protect all virtual disks that reside on the disk group. Action: Assign a larger disk as the dedicated hot spare.	903	None
2277	The global hot spare is too small.	Warning/ Non-critical	Cause: The global hot spare is not large enough to protect all virtual disks that reside on the controller. Action: Assign a larger disk as the global hot spare.	903	None
2278	The controller battery charge level is below a normal threshold.	Critical/ Failure/ Error	Cause: The battery is discharging. A battery discharge is a normal activity during the battery Learn cycle. Before completing, the battery Learn cycle recharges the battery. You should receive alert 2179 when the recharge occurs. Action: Verify whether the battery Learn cycle is in progress. Alert 2176 indicates that the battery Learn cycle has initiated. The battery also displays the Learn state while the Learn cycle is in progress. If a Learn cycle is not in progress, then replace the battery pack.	1154	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2279	The controller battery charge level is above a normal threshold.	OK/Normal/Informational	<p>Cause: This alert is provided for informational purposes. This alert indicates that the battery is recharging during the battery Learn cycle.</p> <p>Action: None.</p>	1151	None
2280	A disk media error has been corrected.	OK/Normal/Informational	<p>Cause: A disk media error was detected while the controller was completing a background task. A bad disk block was identified. The disk block has been remapped.</p> <p>Action: Consider replacing the disk. If you receive this alert frequently, be sure to replace the disk. You should also routinely back up your data.</p>	1201	None
2281	Virtual disk has inconsistent data.	OK/Normal/Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1201	None
2282	Hot spare SMART polling failed.	Critical/Failure/Error	<p>Cause: The controller firmware attempted to do SMART polling on the hot spare but was not able to complete the SMART polling. The controller has lost communication with the hot spare.</p> <p>Action: Verify the health of the disk assigned as a hot spare. You may need to replace the disk and reassign the hot spare. Make sure the cables are attached securely.</p>	904	None
2283	A redundant path is broken.	Warning/Non-critical	<p>Cause: The controller has two connectors that are connected to the same enclosure. The communication path on one connector has lost connection with the enclosure. The communication path on the other connector is reporting this loss.</p> <p>Action: Make sure the cables are attached securely, and that both enclosure management modules (EMMs) are healthy.</p>	903	None
2284	A redundant path has been restored.	OK/Normal/Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	901	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2285	A disk media error was corrected during recovery.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2286	A Learn cycle start is pending while the battery charges.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	1151	None
2287	The Patrol Read is paused.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2288	The patrol read has resumed.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2289	Multi-bit ECC error.	Critical/Failure/Error	Cause: An error involving multiple bits has been encountered during a read or write operation. The error correction algorithm recalculates parity data during read and write operations. If an error involves only a single bit, it may be possible for the error correction algorithm to correct the error and maintain parity data. An error involving multiple bits, however, generally indicates data loss. In some cases, if the multi-bit error occurs during a read operation, then the data on the disk may be OK. If the multi-bit error occurs during a write operation, then data loss has occurred.  Action: Replace the dual in-line memory module (DIMM). The DIMM is a part of the controller battery pack. Refer to your hardware documentation for information on replacing the DIMM. You may need to restore data from backup.	754	None
2290	Single-bit ECC error.	Warning/Non-critical	Cause: An error involving a single bit has been encountered during a read or write operation. The error correction algorithm has corrected this error.  Action: None.	753	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2291	An enclosure management module (EMM) has been discovered.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None
2292	Communication with the enclosure has been lost.	Critical/Failure/Error	Cause: The controller has lost communication with an EMM. The cables may be loose or defective. Action: Make sure the cables are attached securely. Reboot the system.	854	None
2293	The enclosure management module (EMM) has failed.	Critical/Failure/Error	Cause: An EMM has failed. The failure may be caused by a loss of power to the EMM. The EMM self test may also have identified a failure. There could also be a firmware problem or a multi-bit error. Action: Replace the EMM. See the hardware documentation for information on replacing the EMM.	854	None
2294	A device has been inserted.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	752, 802, 852, 902, 952, 1002, 1052, 1102, 1152, 1202	None
2295	A device has been removed.	Critical/Failure/Error	Cause: A device has been removed and the system is no longer functioning in optimal condition. Action: Replace the device.	754, 804, 854, 904, 954, 1004, 1054, 1104, 1154, 1204	None
2296	An enclosure management module (EMM) has been inserted.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2297	An enclosure management module (EMM) has been removed.	Critical/ Failure/ Error	Cause: An EMM has been removed.  Action: Replace the EMM. See the hardware documentation for information on replacing the EMM.	854	None
2298	There is a bad sensor on an enclosure.	Warning/ Non-critical	Cause: The enclosure has a bad sensor. The enclosure sensors monitor the fan speeds, temperature probes, and so on.  Action: Refer to the hardware documentation for more information.	853	None
2299	Bad PHY %1	Critical/ Failure/ Error	Cause: There is a problem with a physical connection or PHY.  Action: Replace the EMM that contains the bad PHY. See the hardware documentation for information on replacing the EMM. Attach the storage to a different connector if one is available. Make sure the cables are attached securely.	854	None
2300	The enclosure is unstable.	Critical/ Failure/ Error	Cause: The controller is not receiving a consistent response from the enclosure. There could be a firmware problem or an invalid cabling configuration. If the cables are too long, they will degrade the signal.  Action: Completely power down all enclosures attached to the system and reboot the system. If the problem persists, upgrade the firmware to the latest supported version. You can download the most current version of the driver and firmware from <a href="http://support.dell.com">support.dell.com</a> . Make sure the cable configuration is valid. See the hardware documentation for valid cabling configurations.	854	None
2301	The enclosure has a hardware error.	Critical/ Failure/ Error	Cause: The enclosure or an enclosure component is in a Failed or Degraded state.  Action: Verify the health of the enclosure and its components. Replace any hardware that is in a Failed state. See the hardware documentation for more information.	854	None



**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2302	The enclosure is not responding.	Critical/ Failure/ Error	Cause: The enclosure or an enclosure component is in a Failed or Degraded state.  Action: Verify the health of the enclosure and its components. Replace any hardware that is in a Failed state. See the hardware documentation for more information.	854	None
2303	The enclosure cannot support both SAS and SATA array disks. Array disks may be disabled.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None
2304	An attempt to hot plug an enclosure management module (EMM) has been detected. This type of hot plug is not supported.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None
2305	The array disk is too small to be used for a rebuild.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2306	Bad block table is 80% full.	Warning/ Non-critical	Cause: The bad block table is the table used for remapping bad disk blocks. This table fills as bad disk blocks are remapped. When the table is full, bad disk blocks can no longer be remapped which means that disk errors can no longer be corrected. At this point, data loss can occur. The bad block table is now 80% full.  Action: Back up your data. Replace the disk generating this alert and restore from back up.	903	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2307	Bad block table is full. Unable to log block %1	Critical/ Failure/ Error	<p>Cause: The bad block table is the table used for remapping bad disk blocks. This table fills as bad disk blocks are remapped. When the table is full, bad disk blocks can no longer be remapped which means that disk errors can no longer be corrected. At this point, data loss can occur.</p> <p>Action: Replace the disk generating this alert and restore from backup. You may have lost data.</p>	904	None
2309	An array disk is incompatible.	Warning/ Non-critical	<p>Cause: You have attempted to replace a disk with another disk that is using an incompatible technology. For example, you may have replaced one side of a mirror with a SAS disk when the other side of the mirror is using SATA technology.</p> <p>Action: Refer to the hardware documentation for information on replacing disks</p>	903	None
2310	A virtual disk is permanently degraded.	Critical/ Failure/ Error	<p>Cause: A redundant virtual disk has lost redundancy. This may occur when the virtual disk suffers the failure of more than one array disk. In this case, both the source array disk and the target disk with redundant data have failed. A rebuild is not possible because there is no longer redundancy.</p> <p>Action: Replace the failed disks and restore from backup.</p>	1204	None
2311	The firmware on the enclosure management modules (EMMs) is not the same version. EMM0 %1 EMM1 %2	Warning/ Non-critical	<p>Cause: The firmware on the EMM modules is not the same version. It is required that both modules have the same version of the firmware. This alert may be caused when a user attempts to insert an EMM module that has a different firmware version than an existing module.</p> <p>Action: Upgrade to the same version of the firmware on both EMM modules.</p>	853	None
2312	A power supply in the enclosure has an AC failure.	Warning/ Non-critical	<p>Cause: The power supply has an AC failure.</p> <p>Action: Replace the power supply.</p>	1003	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2313	A power supply in the enclosure has a DC failure.	Warning/ Non-critical	Cause: The power supply has a DC failure. Action: Replace the power supply.	1003	None
2314	The initialization sequence of SAS components failed during system startup. SAS management and monitoring is not possible.	Critical/ Failure/ Error	Cause: Storage Management is unable to monitor or manage SAS devices. Action: Reboot the system. If problem persists, make sure you have supported versions of the drivers and firmware. You may need to reinstall Storage Management or Server Administrator. You may be missing some of the installation components.	104	None
2315	Diagnostic message %1	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2316	Diagnostic message %1	Critical/ Failure/Error	Cause: A diagnostics test failed. The text for this alert is generated by the utility that ran the diagnostics. Action: See the documentation for the utility that ran the diagnostics for more information.	754	None
2317	Background initialization (BGI) terminated due to loss of ownership in a cluster configuration.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	1201	None
2318	Problems with the battery or the battery charger have been detected. The battery health is poor.	Critical/ Failure/ Error	Cause: The battery or the battery charger is not functioning properly. Action: Replace the battery pack.	1154	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2319	Single-bit ECC error. The dual in-line memory module (DIMM) is degrading.	Warning/ Non-critical	Cause: The DIMM is beginning to malfunction.  Action: Replace the DIMM to avoid data loss or data corruption. The DIMM is a part of the controller battery pack. Refer to your hardware documentation for information on replacing the DIMM.	753	None
2320	Single-bit ECC error. The dual in-line memory module (DIMM) is critically degraded.	Critical/ Failure/ Error	Cause: The DIMM is malfunctioning. Data loss or data corruption may be imminent.  Action: Replace the DIMM immediately to avoid data loss or data corruption. The DIMM is a part of the controller battery pack. Refer to your hardware documentation for information on replacing the DIMM.	754	None
2321	Single-bit ECC error. The dual in-line memory module (DIMM) is critically degraded. There will be no further reporting.	Critical/ Failure/ Error	Cause: The dual in-line memory module DIMM is malfunctioning. Data loss or data corruption is imminent. The DIMM must be replaced immediately. No further alerts will be generated.  Action: Replace the DIMM immediately. The DIMM is a part of the controller battery pack. Refer to your hardware documentation for information on replacing the DIMM.	754	None
2322	The DC power supply is switched off.	Critical/ Failure/ Error	Cause: The power supply unit is switched off. Either a user switched off the power supply unit or it is defective.  Action: Check to see whether the power switch is turned off or on. If it is turned off, turn it on. If the problem is not corrected, verify that the power cord is attached and functional. If the problem is still not corrected or if the power switch is already turned on, then replace the power supply unit.	1004	None
2323	The power supply is switched on.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes.  Action: None.	1001	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2324	The AC power supply cable has been removed.	Critical/ Failure/ Error	Cause: The power cable may be pulled out or removed. The power cable may also have overheated and become warped and nonfunctional.  Action: Replace the power cable.	1004	None
2325	The power supply cable has been inserted.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes.  Action: None.	1001	None
2326	A foreign configuration has been detected.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. The controller has array disks that were moved from another controller. These array disks contain virtual disks that were created on the other controller.  Action: None.	751	None
2327	The NVRAM has corrupted data. The controller is reinitializing the NVRAM.	Warning/ Non-critical	Cause: The Non-Volatile Random-Access Memory (NVRAM) has corrupted data. This may occur after a power surge, a battery failure, or for other reasons. The controller is reinitializing the NVRAM.  Action: None. The controller is taking the required corrective action. If this alert is generated often (such as during each reboot), then replace the controller.	753	None
2328	The NVRAM has corrupt data.	Warning/ Non-critical	Cause: The NVRAM has corrupt data. The controller is unable to correct the situation.  Action: Replace the controller.	753	None
2329	SAS port report: %1	Warning/ Non-critical	Cause: The text for this alert is generated by the controller and can vary depending on the situation.  Action: Make sure the cables are attached securely. If the problem is not resolved, replace the cable with a valid cable according to SAS specifications. If the problem persists, you may need to replace devices such as the controller or EMM. Refer to the hardware documentation for more information.	753	None
2330	SAS port report: %1	OK/Normal/ Informational	Cause: This alert is provided for informational purposes.  Action: None.	751	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2331	A bad disk block has been reassigned.	Warning/ Non-critical	<p>Cause: The disk has a bad block. Data has been readdressed to another disk block. No data loss has occurred.</p> <p>Action: Monitor the disk for other alerts or indications of poor health. For example, you may receive alert 2306. Replace the disk if you suspect there is a problem.</p>	903	None
2332	A controller hot plug has been detected.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	751	None
2333	An enclosure temperature sensor differential has been detected.	Warning/ Non-critical	<p>Cause: The firmware has detected a temperature sensor differential in the enclosure.</p> <p>Action: Monitor the enclosure for other alerts related to the temperature. For example, you may receive alerts related to the fan or temperature probes. Verify the health of the enclosure and its components. Replace any component that is failed.</p>	853	None
2334	Controller event log: %1	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	751	None
2335	Controller event log: %1	Warning/ Non-critical	<p>Cause: The text for this alert is generated by the controller and can vary depending on the situation. This text is from events in the controller event log that were generated while Storage Management was not running.</p> <p>Action: If there is a problem, review the controller event log and the Server Administrator Alert Log for significant events or alerts that may assist in diagnosing the problem. Verify the health of the storage components. See the hardware documentation for more information.</p>	753	None
2336	Controller event log: %1	Critical/ Failure/ Error	<p>Cause: The text for this alert is generated by the controller and can vary depending on the situation. This text is from events in the controller event log that were generated while Storage Management was not running.</p> <p>Action: See the hardware documentation for more information.</p>	754	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2337	The controller is unable to recover cached data from the battery backup unit (BBU).	Critical/ Failure/ Error	Cause: The controller was unable to recover data from the cache.  Action: Verify that the battery is charged and in good health. When the battery charge is unacceptably low, the battery cannot maintain cached data. Verify whether the battery has met its recharge limit. The battery may need to be recharged or replaced.	1154	None
2338	The controller has recovered cached data from the battery backup unit (BBU).	OK/Normal/ Informational	Cause: This alert is provided for informational purposes.  Action: None.	1151	None
2339	The factory default settings have been restored.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes.  Action: None.	751	None
2340	The background initialization (BGI) completed with uncorrectable errors.	Critical/ Failure/ Error	Cause: The BGI task encountered errors that cannot be corrected. The virtual disk contains array disks that have unusable disk space or disk errors that cannot be corrected.  Action: Replace the array disk that contains the disk errors. Review other alert messages to identify the array disk that has errors. If the virtual disk is redundant, you can replace the array disk and continue using the virtual disk. If the virtual disk is non-redundant, you may need to recreate the virtual disk after replacing the array disk. After replacing the array disk, run a Check Consistency to verify the data.	1204	None
2341	The Check Consistency made corrections and completed.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes.  Action: None.	1201	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2342	The Check Consistency found inconsistent parity data. Data redundancy may be lost.	Warning/ Non-critical	Cause: The data on a source disk and the redundant data on a target disk is inconsistent.  Action: Restart the Check Consistency task. If you receive this alert again, verify the health of the array disks included in the virtual disk. Review the alert messages for significant alerts related to the array disks. If you suspect that an array disk has a problem, replace it and restore from backup.	1203	None
2343	The Check Consistency logging of inconsistent parity data is disabled.	Warning/ Non-critical	Cause: The Check Consistency can no longer report errors in the parity data.  Action: See the hardware documentation for more information.	1203	None
2344	The virtual disk initialization terminated.	Warning/ Non-critical	Cause: A user has cancelled the virtual disk initialization.  Action: Restart the initialization.	1203	None
2345	The virtual disk initialization failed.	Critical/ Failure/ Error	Cause: The controller cannot communicate with attached devices. A disk may be removed or contain errors. Cables may also be loose or defective.  Action: Verify the health of attached devices. Review the Alert Log for significant events. Make sure the cables are attached securely.	1204	None
2346	Error occurred: %1	Warning/ Non-critical	Cause: The text for this alert is generated by the firmware and can vary depending on the situation.  Action: Verify the health of attached devices. Review the Alert Log for significant events. You may need to replace faulty hardware. Make sure the cables are attached securely. See the hardware documentation for more information.	903	None
2347	The rebuild failed due to errors on the source physical disk.	Critical/ Failure/ Error	Cause: You are attempting to rebuild data that resides on a defective disk.  Action: Replace the source disk and restore from backup.	904	None



**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2348	The rebuild failed due to errors on the target physical disk.	Critical/ Failure/ Error	Cause: You are attempting to rebuild data onto a disk that is defective.  Action: Replace the target disk. If a rebuild does not automatically start after replacing the disk, then initiate the Rebuild task. You may need to assign the new disk as a hot spare in order to initiate the rebuild.	904	None
2349	A bad disk block could not be reassigned during a write operation.	Critical/ Failure/ Error	Cause: A write operation could not complete because the disk contains bad disk blocks that could not be reassigned. Data loss may have occurred. Data redundancy may also be lost.  Action: Replace the disk.	904	None
2350	There was an unrecoverable disk media error during the rebuild.	Critical/ Failure/ Error	Cause: The rebuild encountered an unrecoverable disk media error.  Action: Replace the disk.	904	None
2351	A physical disk is marked as missing.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2352	A physical disk that was marked as missing has been replaced.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2353	The enclosure temperature has returned to normal.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None
2354	Enclosure firmware download in progress.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None

**Table 25-2. Storage Management Messages (continued)**

Event ID	Description	Severity	Cause and Action	SNMP Trap Numbers	Array Manager Event Number
2355	Enclosure firmware download failed.	Warning/ Non-critical	<p>Cause: The system was unable to download firmware to the enclosure. The controller may have lost communication with the enclosure. There may have been problems with the data transfer or the download media may be corrupt.</p> <p>Action: Attempt to download the enclosure firmware again. If problems continue, verify that the controller can communicate with the enclosure. Make sure that the enclosure is powered on. Check the cables. Verify the health of the enclosure and its components. To verify the health of the enclosure, select the enclosure object in the tree view. The Health subtab displays a red "X" or yellow exclamation point for enclosure components that are failed or degraded.</p>	853	None
2356	SAS Management Protocol (SMP) communications error %1.	Critical/ Failure/ Error	<p>Cause: The text for this alert is generated by the firmware and can vary depending on the situation. The reference to SMP in this text refers to SAS Management Protocol.</p> <p>Action: There may be a SAS topology error. See the hardware documentation for information on correct SAS topology configurations. There may be problems with the cables such as a loose connection or an invalid cabling configuration. See the hardware documentation for information on correct cabling configurations. Verify that the firmware is a supported version.</p>	754	None
2357	SAS expander error: %1	Critical/ Failure/ Error	<p>Cause: The text for this alert is generated by the firmware and can vary depending on the situation.</p> <p>Action: There may be a problem with the enclosure. Verify the health of the enclosure and its components. To verify the health of the enclosure, select the enclosure object in the tree view. The Health subtab displays a red "X" or yellow exclamation point for enclosure components that are failed or degraded. See the enclosure documentation for more information.</p>	754	None
2358	The battery charge cycle is complete.	OK/Normal/ Informational	<p>Cause: This alert is provided for informational purposes.</p> <p>Action: None.</p>	1151	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2359	The physical disk is not certified.	Warning/ Non-critical	Cause: The physical disk does not comply with the standards set by Dell and is not supported.  Action: Replace the physical disk with a physical disk that is supported.	903	None
2360	A user has discarded data from the controller cache.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2361	Array disk(s) that are part of a virtual disk have been removed while the system was shut down. This removal was discovered during system start-up.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2362	Array disk(s) have been removed from a virtual disk. The virtual disk will be in Failed state during the next system reboot.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2363	A virtual disk and all of its member array disks have been removed while the system was shut down. This removal was discovered during system start-up.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2364	All virtual disks are missing from the controller. This situation was discovered during system start-up.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	751	None
2365	The speed of the enclosure fan has changed.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None
2366	Dedicated spare imported as global due to missing arrays.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None
2367	Rebuild not possible as SAS/SATA is not supported in the same virtual disk.	OK/Normal/ Informational	Cause: This alert is provided for informational purposes. Action: None.	901	None

**Table 25-2. Storage Management Messages (continued)**

<b>Event ID</b>	<b>Description</b>	<b>Severity</b>	<b>Cause and Action</b>	<b>SNMP Trap Numbers</b>	<b>Array Manager Event Number</b>
2368	The Scalable Encryption Processor (SEP) has been rebooted as part of the firmware download operation and will be unavailable until the operation completes.	OK/Normal/Informational	Cause: This alert is provided for informational purposes. Action: None.	851	None



# Standard Data Type Definitions

This appendix contains definitions for data types that are standard in most contexts across the information technology industry. These are the most common data types for expressing variable values defined in the `10892.mib` and `dcs3rmt.mib`. Server Administrator-specific variable values are defined in the last section of the section in which they are introduced.

## Common Data Types

Common data types include several types of strings, the object range, signed and unsigned bit ranges, and the familiar Boolean (true or false) data type.

**Table A-1. Common Data Types**

<b>Variable Name:</b>	<b>Definition</b>
DellString	DisplayString (SIZE (0..64))
DellSecurityString	DisplayString (SIZE (0..255))
DellCostofOwnershipString	DisplayString (SIZE (0..64))
DellObjectRange	INTEGER (1..128)
DellUnsigned8BitRange	INTEGER (1..256)
DellUnsigned16BitRange	INTEGER (1..65535)
DellUnsigned32BitRange	INTEGER (1..2147483647)
DellSigned32BitRange	INTEGER (-2147483647..2147483647)
DellBoolean	INTEGER (0..1 (FALSE = 0, TRUE = 1))

# Variables with Data Types of State Capabilities and State Capabilities Unique

Variables with definitions of `<variable name>StateCapabilities` or `<variable name>StateCapabilitiesUnique` are integers representing a series of bit definitions. They are NOT enumerations and should be treated as bit fields. The value is passed as a decimal value. The decimal value should be converted to hex and the appropriate bits should be parsed from hex. Some of the more common bit combinations are defined in some variables, but not all combinations are or will be defined.

**Table A-2. Dell State Capabilities**

---

**Variable Name:** `DellStateCapabilities`

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
<code>if set to zero(0)</code>	The object has no capabilities.
<code>unknownCapabilities(1)</code>	The object's capabilities are unknown.
<code>enableCapable(2)</code>	The object can be disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
<code>notReadyCapable(4)</code>	The object is not ready.
<code>enableAndNotReadyCapable(6)</code>	Enable and not ready capable.

---

**Table A-3. Dell State Settings**

---

**Variable Name:** `DellStateSettings`

**Data Type:** Integer

Possible Data Values	Meaning of Data Value
<code>if set to zero(0)</code>	The object has no settings capabilities and its state is disabled.
<code>unknown(1)</code>	The object's state is unknown.
<code>enabled(2)</code>	The object's state is disabled (offline, a binary 0 value) or enabled (online, a binary 1 value).
<code>notReady(4)</code>	The object is not ready.
<code>enableAndNotReady(6)</code>	The object is enabled and not ready.

---



**Table A-4. Dell Probe Capabilities**

---

**Variable Name:** DellProbeCapabilities

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
if set to zero(0)	The object has no capabilities.
upperNonCriticalThresholdSetCapable(1)	The upper noncritical threshold can be set.
lowerNonCriticalThresholdSetCapable(2)	The lower noncritical threshold can be set.
upperNonCriticalThresholdDefaultCapable(4)	The upper noncritical threshold can be set to default.
lowerNonCriticalThresholdDefaultCapable(8)	The lower noncritical threshold can be set to default.

---

## Dell Status Data Types

Status data types include DellStatus, DellStatusRedundancy, and DellStatusProbe.

**Table A-5. Dell Status**

---

**Variable Name:** DellStatus

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other(1)	The object's status is not one of the following:
unknown(2)	The object's status is unknown.
ok(3)	The object's status is OK.
nonCritical(4)	The object's status is warning, noncritical.
critical(5)	The object's status is critical (failure).
nonRecoverable(6)	The object's status is nonrecoverable (dead).

---

**Table A-6. Dell Status Redundancy**

---

**Variable Name:** DellStatusRedundancy

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other(1)	The object's status is not one of the following:
unknown(2)	The object's redundancy status is unknown.
full(3)	The object is fully redundant.
degraded(4)	The object's redundancy has been degraded.
lost(5)	The object's redundancy has been lost.
notRedundant(6)	Redundancy does not apply or it is not redundant.

---

**Table A-7. Dell Status Probe**

---

**Variable Name:** DellStatusProbe

**Data Type:** Integer

<b>Possible Data Values</b>	<b>Meaning of Data Value</b>
other(1)	The object's status is not one of the following:
unknown(2)	The status of the object is unknown.
ok(3)	The status of the object is OK.
nonCriticalUpper(4)	The object is at the noncritical upper limit.
CriticalUpper(5)	The object is at the critical upper limit.
nonRecoverableUpper(6)	The object is at the nonrecoverable upper limit.
nonCriticalLower(7)	The object is at the noncritical lower limit.
criticalLower(8)	The object is at the critical lower limit.
nonRecoverableLower(9)	The object is at the nonrecoverable lower limit.
failed(10)	The status of the object is failed.

---





## SNMP Sample Output

This sample output from the Simple Network Management Protocol (SNMP) covers the first three groups of the **10892.mib**. Values are shown for each object identifier (OID) in the management information base (MIB) Version Group, the Systems Management Software Group, the System State Group, the Chassis Information Table, and Event Log Table. The data is from a Dell PowerEdge™ 2650 server.

```
Walk .1.3.6.1.4.1.674.10892 (Agent: 'SERVER01', Community: 'public')
```

```
.iso.org.dod.internet.private.enterprises.dell.server3
```

```
1.3.6.1.4.1.674.10892.1.1.1.0 = 5
1.3.6.1.4.1.674.10892.1.1.2.0 = 3
1.3.6.1.4.1.674.10892.1.1.3.0 = 0
1.3.6.1.4.1.674.10892.1.100.1.0 = 'Server Administrator'
1.3.6.1.4.1.674.10892.1.100.2.0 = '5.3.0'
1.3.6.1.4.1.674.10892.1.100.3.0 = 4522
1.3.6.1.4.1.674.10892.1.100.4.0 = 'Management software for Dell
systems.'
1.3.6.1.4.1.674.10892.1.100.5.0 = 1
1.3.6.1.4.1.674.10892.1.100.6.0 = 1
1.3.6.1.4.1.674.10892.1.100.7.0 = 'No Updates'
1.3.6.1.4.1.674.10892.1.100.8.0 = 'https://1.2.3.4:1311'
1.3.6.1.4.1.674.10892.1.100.9.0 = 'en_US'
1.3.6.1.4.1.674.10892.1.100.10.0 = '2.2.0'
1.3.6.1.4.1.674.10892.1.100.11.0 = 0
1.3.6.1.4.1.674.10892.1.100.12.0 = 1
1.3.6.1.4.1.674.10892.1.100.13.0 = 'Dell Inc.'
```



```
1.3.6.1.4.1.674.10892.1.300.10.1.1.1 = 1
1.3.6.1.4.1.674.10892.1.300.10.1.2.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.3.1 = 2
1.3.6.1.4.1.674.10892.1.300.10.1.4.1 = 3
1.3.6.1.4.1.674.10892.1.300.10.1.5.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.6.1 = 23
1.3.6.1.4.1.674.10892.1.300.10.1.7.1 = 'Main System Chassis'
1.3.6.1.4.1.674.10892.1.300.10.1.8.1 = 'Dell Inc.'
1.3.6.1.4.1.674.10892.1.300.10.1.9.1 = 'PowerEdge 2650'
1.3.6.1.4.1.674.10892.1.300.10.1.10.1 = 'ASSETTAG'
1.3.6.1.4.1.674.10892.1.300.10.1.11.1 = '1234567'
1.3.6.1.4.1.674.10892.1.300.10.1.12.1 = 254
1.3.6.1.4.1.674.10892.1.300.10.1.13.1 = 289
1.3.6.1.4.1.674.10892.1.300.10.1.14.1 = 4
1.3.6.1.4.1.674.10892.1.300.10.1.15.1 = 'SERVER01'
1.3.6.1.4.1.674.10892.1.300.10.1.16.1 = '20050513095213.000000-360'
1.3.6.1.4.1.674.10892.1.300.10.1.17.1 = '20050513100052.000000-360'
1.3.6.1.4.1.674.10892.1.300.10.1.18.1 = 'Please set the value'
1.3.6.1.4.1.674.10892.1.300.10.1.19.1 = 'Please set the value'
1.3.6.1.4.1.674.10892.1.300.10.1.20.1 = 'Please set the value'
1.3.6.1.4.1.674.10892.1.300.10.1.21.1 = 3
1.3.6.1.4.1.674.10892.1.300.10.1.22.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.23.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.24.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.25.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.26.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.27.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.28.1 = 8
1.3.6.1.4.1.674.10892.1.300.10.1.29.1 = 2
```

```
1.3.6.1.4.1.674.10892.1.300.10.1.30.1 = 1
1.3.6.1.4.1.674.10892.1.300.10.1.31.1 = 15
1.3.6.1.4.1.674.10892.1.300.10.1.32.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.33.1 = 27
1.3.6.1.4.1.674.10892.1.300.10.1.34.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.35.1 = 1
1.3.6.1.4.1.674.10892.1.300.10.1.36.1 = 480
1.3.6.1.4.1.674.10892.1.300.10.1.37.1 = 1
1.3.6.1.4.1.674.10892.1.300.10.1.38.1 = 2
1.3.6.1.4.1.674.10892.1.300.10.1.39.1 = 2
1.3.6.1.4.1.674.10892.1.300.10.1.44.1 = 0
1.3.6.1.4.1.674.10892.1.300.10.1.45.1 = 0
1.3.6.1.4.1.674.10892.1.300.40.1.1.1.1 = 1
1.3.6.1.4.1.674.10892.1.300.40.1.2.1.1 = 1
1.3.6.1.4.1.674.10892.1.300.40.1.3.1.1 = 8
1.3.6.1.4.1.674.10892.1.300.40.1.4.1.1 = 2
1.3.6.1.4.1.674.10892.1.300.40.1.5.1.1 = 'Log cleared'
1.3.6.1.4.1.674.10892.1.300.40.1.6.1.1 = 2
1.3.6.1.4.1.674.10892.1.300.40.1.7.1.1 = 3
1.3.6.1.4.1.674.10892.1.300.40.1.8.1.1 = '20050513100047.000000-360'
```



# Glossary

The following list defines or identifies technical terms, abbreviations, and acronyms used in Dell™ user documents.

## **A**

Abbreviation for ampere(s).

## **AC**

Abbreviation for alternating current.

## **AC power switch**

A switch with two AC power inputs that provides AC power redundancy by failing over to a standby AC input in the event of a failure to the primary AC input.

## **access**

Refers to the actions a user can take on a variable value. Examples include read-only and read-write.

## **adapter card**

An expansion card that plugs into an expansion-card connector on the computer's system board. An adapter card adds some specialized function to the computer by providing an interface between the expansion bus and a peripheral device. Examples of adapter cards include network cards, sound cards, and SCSI adapters.

## **ADB**

Abbreviation for assign database.

## **AGP**

Abbreviation for Advanced Graphics Port. A high performance graphics interface becoming available for Pentium Pro systems.

## **ASCII**

Acronym for American Standard Code for Information Interchange. A text file containing only characters from the ASCII character set (usually created with a text editor, such as Notepad in Microsoft® Windows®), is called an ASCII file.

## **ASIC**

Acronym for application-specific integrated circuit.

## **ASPI**

Advanced SCSI programming interface.

## **ASR**

Abbreviation for automatic system recovery.

## **asset tag code**

An individual code assigned to a computer, usually by a system administrator, for security or tracking purposes.

## **attribute**

An attribute, or property, contains a specific piece of information related to a component. Attributes can be combined to form groups. If an attribute is defined as read-write, it may be defined by a management application.

## **autoexec.bat file**

The **autoexec.bat** file is executed when you boot your computer (after executing any commands in the **config.sys** file). This start-up file contains commands that define the characteristics of each device connected to your computer, and it finds and executes programs stored in locations other than the active directory.

**backup**

A copy of a program or data file. As a precaution, you should back up your computer's hard drive on a regular basis. Before making a change to the configuration of your computer, you should back up important start-up files from your operating system.

**baud rate**

A measurement of data transmission speed. For example, modems are designed to transmit data at one or more specified baud rate(s) through the COM (serial) port of a computer.

**beep code**

A diagnostic message in the form of a pattern of beeps from your computer's speaker. For example, one beep, followed by a second beep, and then a burst of three beeps is beep code 1-1-3.

**BGA**

Abbreviation for Ball Grid Array, an IC package that uses an array of solder balls, instead of pins, to connect to a PC board.

**binary**

A base-2 numbering system that uses 0 and 1 to represent information. The computer performs operations based on the ordering and calculation of these numbers.

**BIOS**

Acronym for basic input/output system. Your computer's BIOS contains programs stored on a flash memory chip. The BIOS controls the following:

Communications between the microprocessor and peripheral devices, such as the keyboard and the video adapter

Miscellaneous functions, such as system messages

**bit**

The smallest unit of information interpreted by your computer.

**BMC**

Abbreviation for baseboard management controller, which is a controller that provides the intelligence in the IPMI structure.

**boot routine**

When you start your computer, it clears all memory, initializes devices, and loads the operating system. Unless the operating system fails to respond, you can reboot (also called *warm boot*) your computer by pressing <Ctrl><Alt><Del>; otherwise, you must perform a cold boot by pressing the reset button or by turning the computer off and then back on.

**bootable diskette**

You can start your computer from a diskette. To make a bootable diskette, insert a diskette in the diskette drive, type `sys a:` at the command line prompt, and press <Enter>. Use this bootable diskette if your computer will not boot from the hard drive.

**bpi**

Abbreviation for bits per inch.

**bps**

Abbreviation for bits per second.

**BTU**

Abbreviation for British thermal unit.

**bus**

An information pathway between the components of a computer. Your computer contains an expansion bus that allows the microprocessor to communicate with controllers for all the various peripheral devices connected to the computer. Your computer also contains an address bus and a data bus for communications between the microprocessor and RAM.

**byte**

Eight contiguous bits of information, the basic data unit used by your computer.

## C

Abbreviation for Celsius.

### **cache**

A fast storage area that keeps a copy of data or instructions for quicker data retrieval. For example, your computer's BIOS may cache ROM code in faster RAM. Or, a disk-cache utility may reserve RAM in which to store frequently accessed information from your computer's disk drives; when a program makes a request to a disk drive for data that is in the cache, the disk-cache utility can retrieve the data from RAM faster than from the disk drive.

### **capability**

Refers to the actions that an object can perform, or actions that can be taken on a managed object. For example, if a card is hot-pluggable, it is capable of being replaced while the system power is ON.

### **CDRAM**

Abbreviation for cached DRAM, which is a high-speed DRAM memory chip developed by Mitsubishi that includes a small SRAM cache.

### **CD-ROM**

Abbreviation for compact disc read-only memory. CD drives use optical technology to read data from CDs. CDs are read-only storage devices; you cannot write new data to a CD with standard CD drives.

### **chip**

A set of microminiaturized, electronic circuits that are designed for use as processors and memory in computers. Small chips can hold from a handful to tens of thousands of transistors. They look like tiny chips of aluminum, no more than 1/16" square by 1/30" thick, which is where the term "chip" came from. Large chips, which can be more than a half inch square, hold millions of transistors. It is actually only the top one thousandth of an inch of a chip's surface that holds the circuits. The rest of it is just a base.

## **CIM**

Acronym for Common Information Model, which is a model for describing management information from the DMTF. CIM is implementation independent, allowing different management applications to collect the required data from a variety of sources.

CIM includes schemas for systems, networks, applications and devices, and new schemas will be added. It provides mapping techniques for interchange of CIM data with MIB data from SNMP agents and MIF data from DMI-compliant systems.

## **CIMOM**

Acronym for common information model object manager.

## **CI/O**

Acronym for comprehensive input/output.

## **cm**

Abbreviation for centimeter(s).

## **CMOS**

Acronym for complementary metal-oxide semiconductor. In computers, CMOS memory chips are often used for NVRAM storage.

## **COM *n***

The device names for the first through fourth serial ports on your computer are COM1, COM2, COM3, and COM4. The default interrupt for COM1 and COM3 is IRQ4, and the default interrupt for COM2 and COM4 is IRQ3. Therefore, you must be careful when configuring software that runs a serial device so that you don't create an interrupt conflict.

## **component**

As they relate to DMI, manageable components are operating systems, computer systems, expansion cards, or peripherals that are compatible with DMI. Each component is made up of groups and attributes that are defined as relevant to that component.

**config.sys file**

The `config.sys` file is executed when you boot your computer (before running any commands in the `autoexec.bat` file). This start-up file contains commands that specify which devices to install and which drivers to use. This file also contains commands that determine how the operating system uses memory and controls files.

**controller**

A chip that controls the transfer of data between the microprocessor and memory or between the microprocessor and a peripheral device such as a disk drive or the keyboard.

**control panel**

The part of the computer that contains indicators and controls, such as the power switch, hard drive access indicator, and power indicator.

**conventional memory**

The first 640 KB of RAM. Conventional memory is found in all computers. Unless they are specially designed, MS-DOS<sup>®</sup> programs are limited to running in conventional memory.

**COO**

Acronym for cost of ownership.

**cooling unit**

Sets of fans or other cooling devices in a system chassis.

**coprocessor**

A chip that relieves the computer's microprocessor of specific processing tasks. A math coprocessor, for example, handles numeric processing. A graphics coprocessor handles video rendering. The Intel<sup>®</sup> Pentium<sup>®</sup> microprocessor, for example, includes a built-in math coprocessor.

**cpi**

Abbreviation for characters per inch.

**CPU**

Abbreviation for central processing unit. See also `<tem>`.

**CRC**

Abbreviation for cyclic redundancy code, which is a number derived from, and stored or transmitted with, a block of data in order to detect corruption. By recalculating the CRC and comparing it to the value originally transmitted, the receiver can detect some types of transmission errors.

**cursor**

A marker, such as a block, underscore, or pointer that represents the position at which the next keyboard or mouse action will occur.

**DAT**

Acronym for digital audio tape.

**dB**

Abbreviation for decibel(s).

**dBa**

Abbreviation for adjusted decibel(s).

**DC**

Abbreviation for direct current.

**device driver**

A program that allows the operating system or some other program to interface correctly with a peripheral device, such as a printer. Some device drivers—such as network drivers—must be loaded from the `config.sys` file (with a `device=` statement) or as memory-resident programs (usually, from the `autoexec.bat` file). Others—such as video drivers—must load when you start the program for which they were designed.

**DIMM**

Acronym for dual in-line memory module. A small circuit board containing DRAM chips that connects to the system board.

**DIN**

Acronym for *Deutsche Industrie Norm* which is the standards-setting organization for Germany.

A DIN connector is a connector that conforms to one of the many standards defined by DIN. DIN connectors are used widely in personal computers. For example, the keyboard connector for PCs is a DIN connector.

**DIP**

Acronym for dual in-line package. A circuit board, such as a system board or expansion card, may contain DIP switches for configuring the circuit board. DIP switches are always toggle switches, with an ON position and an OFF position.

**directory**

Directories help keep related files organized on a disk in a hierarchical, "inverted tree" structure. Each disk has a "root" directory; for example, a `c:\>` prompt normally indicates that you are at the root directory of hard-drive C. Additional directories that branch off of the root directory are called *subdirectories*. Subdirectories may contain additional directories branching off of them.

**display adapter**

See **video adapter**.

**DMA**

Abbreviation for direct memory access. A DMA channel allows certain types of data transfer between RAM and a device to bypass the microprocessor.

**DMI**

Abbreviation for Desktop Management Interface. DMI enables the management of your computer system's software and hardware. DMI collects information about the system's components, such as the operating system, memory, peripherals, expansion cards, and asset tag. Information about the system's components is displayed as a MIF file or through the Dell Inspector program.

**DMTF**

Abbreviation for Distributed Management Task Force, a consortium of companies representing hardware and software providers, of which Dell is a member.

**dpi**

Abbreviation for dots per inch.

**DPMS**

Abbreviation for Display Power Management Signaling. A standard developed by the Video Electronics Standards Association (VESA<sup>®</sup>) that defines the hardware signals sent by a video controller to activate power management states in a monitor. A monitor is said to be DPMS-compliant when it is designed to enter a power management state after receiving the appropriate signal from a computer's video controller.

**DRAC**

Abbreviation for Dell Remote Access Card.

**DRAM**

Acronym for dynamic random-access memory. A computer's RAM is usually made up entirely of DRAM chips. Because DRAM chips cannot store an electrical charge indefinitely, your computer continually refreshes each DRAM chip in the computer.

**drive-type number**

Your computer can recognize a number of specific hard drives. Each is assigned a drive-type number that is stored in NVRAM. The hard drive(s) specified in your computer's System Setup program must match the actual drive(s) installed in the computer. The System Setup program also allows you to specify physical parameters (logical cylinders, logical heads, cylinder number, and logical sectors per pack) for drives not included in the table of drive types stored in NVRAM.

**DTE**

Abbreviation for data terminal equipment. Any device, such as a computer system, that can send data in digital form by means of a cable or communications line. The DTE is connected to the cable or communications line through a data communications equipment (DCE) device, such as a modem.

**ECC**

Abbreviation for error checking and correction.

**ECP**

Abbreviation for Extended Capabilities Port.

**EDO**

Acronym for extended data output dynamic random access memory which is a type of DRAM that is faster than conventional DRAM. EDO RAM can start fetching the next block of memory at the same time that it sends the previous block to the CPU.

**EEPROM**

Acronym for electrically erasable programmable read-only memory.

**EIDE**

Abbreviation for enhanced integrated drive electronics. EIDE devices add one or more of the following enhancements to the traditional IDE standard:

Data transfer rates of up to 16 MB/sec

Support for drives other than just hard drives, such as CD and tape drives

Support for hard drives with capacities greater than 528 MB

Support for up to two controllers, each with up to two devices attached

**EISA**

Acronym for Extended Industry-Standard Architecture, a 32-bit expansion-bus design. The expansion-card connectors in an EISA computer are also compatible with 8- or 16-bit ISA expansion cards.

To avoid a configuration conflict when installing an EISA expansion card, you must use the EISA Configuration Utility. This utility allows you to specify which expansion slot contains the card and obtains information about the card's required system resources from a corresponding EISA configuration file.

**EMC**

Abbreviation for Electromagnetic Compatibility.

**EMI**

Abbreviation for electromagnetic interference.

**EMM**

Abbreviation for expanded memory manager. A utility that uses extended memory to emulate expanded memory on computers with an Intel386™ or higher microprocessor.

**EMS**

Abbreviation for Expanded Memory Specification.

**EPP**

Abbreviation for Enhanced Parallel Port which provides improved bidirectional data transmission. Many devices are designed to take advantage of the EPP standard, especially devices, such as network or SCSI adapters that connect to the parallel port of a portable computer.

**EPROM**

Acronym for erasable programmable read-only memory.

**ESD**

Abbreviation for electrostatic discharge.

**ESM**

Abbreviation for Embedded Systems Management.

**expanded memory**

A technique for accessing RAM above 1 MB.

To enable expanded memory on your computer, you must use an EMM. You should configure your system to support expanded memory only if you run application programs that can use (or require) expanded memory.

**expansion bus**

Your computer contains an expansion bus that allows the microprocessor to communicate with controllers for peripheral devices, such as a network card or an internal modem.

**expansion-card connector**

A connector on the computer's system board or riser board for plugging in an expansion card.

**extended memory**

RAM above 1 MB. Most software that can use it, such as the Windows operating system, requires that extended memory be under the control of an XMM.

**external cache memory**

A RAM cache using SRAM chips. Because SRAM chips operate at several times the speed of DRAM chips, the microprocessor can retrieve data and instructions faster from external cache memory than from RAM.

**F**

Abbreviation for Fahrenheit.

**FAT**

Acronym for file allocation table. The file system structure used by MS-DOS<sup>®</sup> to organize and keep track of file storage. The Windows NT<sup>®</sup> operating systems can optionally use a FAT file system structure.

**FCC**

Abbreviation for Federal Communications Commission.

**FEPRM**

Acronym for Flash Erasable Programmable Read-Only Memory. Flash memory is a kind of non-volatile storage device similar to EEPROM, but the erasing is done only in blocks or the entire chip.

**flash BIOS**

A PC BIOS that is stored in flash memory rather than in a ROM. A flash BIOS chip can be updated in place, whereas a ROM BIOS must be replaced with a newer chip.

**flash memory**

A type of EEPROM chip that can be reprogrammed from a utility on diskette while still installed in a computer; most EEPROM chips can only be rewritten with special programming equipment.

**format**

To prepare a hard drive or diskette for storing files. An unconditional format deletes all data stored on the disk.

**FPBGA**

Acronym for field programmable gate array, a programmable logic chip (PLD) with a high density of gates.

**FRU**

Acronym for field replaceable unit.

**ft**

Abbreviation for feet.

**FTP**

Abbreviation for file transfer protocol.

**g**

Abbreviation for gram(s).

**G**

Abbreviation for gravities.

**GB**

Abbreviation for gigabyte(s). A gigabyte equals 1,024 megabytes or 1,073,741,824 bytes.

**graphics coprocessor**

See **coprocessor**.

**graphics mode**

A video mode that can be defined as  $x$  horizontal by  $y$  vertical pixels by  $z$  colors.

**group**

As it relates to DMI, a group is a data structure that defines common information, or attributes, about a manageable component.

**GTL**

Abbreviation for ground termination logic.

**GUI**

Acronym for graphical user interface.

**h**

Abbreviation for hexadecimal. A base-16 numbering system, often used in programming to identify addresses in the computer's RAM and I/O memory addresses for devices. The sequence of decimal numbers from 0 through 16, for example, is expressed in hexadecimal notation as: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F, 10. In text, hexadecimal numbers are often followed by *h*.

**heat sink**

A metal plate with metal pegs or ribs that help dissipate heat. Most microprocessors include a heat sink.

**HIP**

Abbreviation for Hardware Instrumentation Package (HIP).

**HMA**

Abbreviation for high memory area. The first 64 KB of extended memory above 1 MB. A memory manager that conforms to the XMS can make the HMA a direct extension of conventional memory. See also **upper memory area** and **XMM**.

**host adapter**

A host adapter implements communication between the computer's bus and the controller for a peripheral device. (hard-drive controller subsystems include integrated host adapter circuitry.) To add a SCSI expansion bus to your system, you must install or connect the appropriate host adapter.

**hot plug**

The ability to remove and replace a redundant part while the system is being used. Also called a "hot spare."

**HPFS**

Abbreviation for the High Performance File System option in the Windows NT operating systems.

**Hz**

Abbreviation for hertz.

**ICES**

Abbreviation for Interface-Causing Equipment Standard (in Canada).

**ICU**

Abbreviation for ISA Configuration Utility.

**IDE**

Abbreviation for Integrated Device Electronics. IDE is a computer system interface, used primarily for hard drives and CDs.



**I/O**

Abbreviation for input/output. The keyboard is an input device, and a printer is an output device. In general, I/O activity can be differentiated from computational activity. For example, when a program sends a document to the printer, it is engaging in output activity; when the program sorts a list of terms, it is engaging in computational activity.

**ID**

Abbreviation for identification.

**IHV**

Acronym for independent hardware vendor. IHVs often develop their own MIBs for components that they manufacture.

**interlacing**

A technique for increasing video resolution by only updating alternate horizontal lines on the screen. Because interlacing can result in noticeable screen flicker, most users prefer noninterlaced video adapter resolutions.

**internal microprocessor cache**

An instruction and data cache built in to the microprocessor. The Intel Pentium microprocessor includes a 16-KB internal cache, which is set up as an 8-KB read-only instruction cache and an 8-KB read/write data cache.

**IP Address**

Abbreviation for Internet Protocol address. See TCP/IP.

**IPMI**

Abbreviation for Intelligent Platform Management Interface, which is an industry standard for management of peripherals used in enterprise computers based on Intel architecture. The key characteristic of IPMI is that inventory, monitoring, logging, and recovery control functions are available independent of the main processors, BIOS, and operating system.

**IPX**

Acronym for internetwork packet exchange.

**IRQ**

Abbreviation for interrupt request. A signal that data is about to be sent to or received by a peripheral device travels by an IRQ line to the microprocessor. Each peripheral connection must be assigned an IRQ number. For example, the first serial port in your computer (COM1) is assigned to IRQ4 by default. Two devices can share the same IRQ assignment, but you cannot operate both devices simultaneously.

**ISA**

Acronym for Industry-Standard Architecture. A 16-bit expansion bus design. The expansion-card connectors in an ISA computer are also compatible with 8-bit ISA expansion cards.

**ITE**

Abbreviation for information technology equipment.

**jumper**

Jumpers are small blocks on a circuit board with two or more pins emerging from them. Plastic plugs containing a wire fit down over the pins. The wire connects the pins and creates a circuit. Jumpers provide a simple and reversible method of changing the circuitry in a printed circuit board.

**K**

Abbreviation for kilo-, indicating 1,000.

**KB**

Abbreviation for kilobyte(s), 1,024 bytes.

**KB/sec**

Abbreviation for kilobyte(s) per second.

**Kbit(s)**

Abbreviation for kilobit(s), 1,024 bits.

**Kbit(s)/sec**

Abbreviation for kilobit(s) per second.

**key combination**

A command requiring you to press multiple keys at the same time. For example, you can reboot your computer by pressing the <Ctrl><Alt><Del> key combination.

**kg**

Abbreviation for kilogram(s), 1,000 grams.

**kHz**

Abbreviation for kilohertz, 1,000 hertz.

**LAN**

Acronym for local area network. A LAN system is usually confined to the same building or a few nearby buildings, with all equipment linked by wiring dedicated specifically to the LAN.

**lb**

Abbreviation for pound(s).

**LCC**

Acronym for leaded or leadless chip carrier.

**LIF**

Acronym for low insertion force. Some computers use LIF sockets and connectors to allow devices, such as the microprocessor chip, to be installed or removed with minimal stress to the device.

**LED**

Abbreviation for light-emitting diode. An electronic device that lights up when a current is passed through it.

**local bus**

On a computer with local-bus expansion capability, certain peripheral devices (such as the video adapter circuitry) can be designed to run much faster than they would with a traditional expansion bus. Some local-bus designs allow peripherals to run at the same speed and with the same width data path as the computer's microprocessor.

**LPTn**

The device names for the first through third parallel printer ports on your computer are LPT1, LPT2, and LPT3.

**LRA**

Acronym for local response agent.

**m**

Abbreviation for meter(s).

**mA**

Abbreviation for milliamper(e)s.

**mAh**

Abbreviation for milliamper(e)-hour(s).

**math coprocessor**

See **coprocessor**.

**Mb**

Abbreviation for megabit.

**MB**

Abbreviation for megabyte(s). The term *megabyte* means 1,048,576 bytes; however, when referring to hard-drive storage, the term is often rounded to mean 1,000,000 bytes.

**MB/sec**

Abbreviation for megabytes per second.

**Mbps**

Abbreviation for megabits per second.

**MBR**

Abbreviation for master boot record.

**MCA**

Abbreviation for Micro Channel Architecture, which is designed for multiprocessing. MCA eliminates potential conflicts that arise when installing new peripheral devices. MCA is not compatible with either EISA or XT bus architecture, so older cards cannot be used with it.

**memory**

A computer can contain several different forms of memory, such as RAM, ROM, and video memory. Frequently, the word *memory* is used as a synonym for RAM; for example, an unqualified statement such as "a computer with 16 MB of memory" refers to a computer with 16 MB of RAM.

**memory address**

A specific location, usually expressed as a hexadecimal number, in the computer's RAM.

**memory manager**

A utility that controls the implementation of memory in addition to conventional memory, such as extended or expanded memory.

**memory module**

A small circuit board containing DRAM chips that connects to the system board.

**MHz**

Abbreviation for megahertz.

**MIB**

Acronym for management information base. MIB is used to send detailed status/commands from or to an SNMP managed device.

**microprocessor**

The primary computational chip inside the computer that controls the interpretation and execution of arithmetic and logic functions. Software written for one microprocessor must usually be revised to run on another microprocessor. *CPU* is a synonym for microprocessor.

**MIDI**

Abbreviation for musical instrument digital interface.

**MIF**

Acronym for management information format. A MIF file contains information, status, and links to component instrumentation. MIF files are installed into the MIF database by the DMI service layer. The content of a MIF is defined by a DTMF working committee and is published in the form of a MIF definition document. This document identifies the groups and attributes that are relevant to DMI-manageable components.

**mm**

Abbreviation for millimeter(s).

**modem**

A device that allows your computer to communicate with other computers over telephone lines.

**MOF**

Acronym for managed object format, which is an ASCII file that contains the formal definition of a CIM schema.

**mouse**

A pointing device that controls the movement of the cursor on a screen. Mouse-aware software allows you to activate commands by clicking a mouse button while pointing at objects displayed on the screen.

**MPEG**

Acronym for Motion Picture Experts Group. MPEG is a digital video file format.

**ms**

Abbreviation for millisecond(s).

**MS-DOS**

Abbreviation for Microsoft Disk Operating System.

**MTBF**

Abbreviation for mean time between failures.

**multifrequency monitor**

A monitor that supports several video standards. A multifrequency monitor can adjust to the frequency range of the signal from a variety of video adapters.

**mV**

Abbreviation for millivolt(s).

**name**

The name of an object or variable is the exact string that identifies it in an SNMP Management Information Base (MIB) file, or in a DMI Management Information Format (MIF) file, or in a CIM Management Object File (MOF).

**NDIS**

Abbreviation for Network Driver Interface Specification.

**NIC**

Acronym for network interface controller.

**NIF**

Acronym for network interface function. This term is equivalent to NIC.

**NMI**

Abbreviation for nonmaskable interrupt. A device sends an NMI to signal the microprocessor about hardware errors, such as a parity error.

**noninterlaced**

A technique for decreasing screen flicker by sequentially refreshing each horizontal line on the screen.

**ns**

Abbreviation for nanosecond(s), one billionth of a second.

**NTFS**

Abbreviation for the NT File System option in the Windows NT operating system.

**NuBus**

Proprietary expansion bus used on Apple Macintosh personal computers.

**NVRAM**

Acronym for nonvolatile random-access memory. Memory that does not lose its contents when you turn off your computer. NVRAM is used for maintaining the date, time, and system configuration information.

**OID**

Abbreviation for object identifier. An implementation-specific integer or pointer that uniquely identifies an object.

**online access service**

A service that typically provides access to the Internet, E-mail, bulletin boards, chat rooms, and file libraries.

**OTP**

Abbreviation for one-time programmable.

**parallel port**

An I/O port used most often to connect a parallel printer to your computer. You can usually identify a parallel port on your computer by its 25-hole connector.

**parameter**

A value or option that you specify to a program. A parameter is sometimes called a *switch* or an *argument*.

**partition**

You can divide a hard drive into multiple physical sections called *partitions* with the **fdisk** command. Each partition can contain multiple logical drives.

After partitioning the hard drive, you must format each logical drive with the **format** command.

**PC 98**

The third PC 9x specification, which defines five categories (Consumer, Office, Mobile, Entertainment and Workstation). It eliminates the ISA bus and pushes the minimum requirements to a 200MHz CPU with 32MB of RAM and 256K of L2 cache. PC 98 machines must support OnNow, and the BIOS must support booting from a CD and be Y2K compliant. Systems cannot ship with ISA cards installed, but may have an ISA bus for legacy devices.

**PC card**

A credit-card sized, removable module for portable computers standardized by PCMCIA. PC Cards are also known as "PCMCIA cards." PC Cards are 16-bit devices that are used to attach modems, network adapters, sound cards, radio transceivers, solid state disks and hard disks to a portable computer. The PC Card is a "plug and play" device, which is configured automatically by the Card Services software.

**PCI**

Abbreviation for Peripheral Component Interconnect. A standard for local-bus implementation developed by Intel Corporation.

**PCIX**

Abbreviation for PCI extended.

**PCMCIA**

Personal Computer Memory Card International Association. An international trade association that has developed standards for devices, such as modems and external hard drives, that can be plugged into portable computers.

**PERC**

Acronym for PowerEdge Expandible RAID controller.

**peripheral device**

An internal or external device—such as a printer, a disk drive, or a keyboard—connected to a computer.

**PGA**

Abbreviation for pin grid array, a type of microprocessor socket that allows you to remove the microprocessor chip.

**physical memory array**

The physical memory array is the entire physical memory of a system. Variables for physical memory array include maximum size, total number of memory slots on the motherboard, and total number of slots in use.

**physical memory array mapped**

The physical memory array mapped refers to the way physical memory is divided. For example, one mapped area may have 640 KB and the other mapped area may have between 1 Megabyte and 127 Megabytes.

**PIC**

Acronym for programmable interrupt controller.

**PIP**

Acronym for peripheral interchange program. A CP/M utility program that was used to copy files.

**pixel**

A single point on a video display. Pixels are arranged in rows and columns to create an image. A video resolution, such as 640 x 480, is expressed as the number of pixels across by the number of pixels up and down.

**PLCC**

Acronym for plastic leaded chip carrier.

**Plug and Play**

An industry-standard specification that makes it easier to add hardware devices to personal computers. Plug and Play provides automatic installation and configuration, compatibility with existing hardware, and dynamic support of mobile computing environments.

**PME**

Abbreviation for Power Management Event. A PME is a pin on a peripheral component interconnect that allows a PCI device to assert a wake event.

**POST**

Acronym for power-on self-test. Before the operating system loads when you turn on your computer, the POST tests various system components such as RAM, the disk drives, and the keyboard.

**power supply**

An electrical system that converts AC current from the wall outlet into the DC currents required by the computer circuitry. The power supply in a personal computer typically generates multiple voltages.

**power unit**

A set of power supplies in a system chassis.

**ppm**

Abbreviation for pages per minute.

**PQFP**

Abbreviation for plastic quad flat pack, a type of microprocessor socket in which the microprocessor chip is permanently mounted.

**protected mode**

An operating mode supported by 80286 or higher microprocessors, protected mode allows operating systems to implement:

- A memory address space of 16 MB (80286 microprocessor) to 4 GB (Intel386 or higher microprocessor)
- Multitasking
- Virtual memory, a method for increasing addressable memory by using the hard drive

Windows, OS/2, and UNIX<sup>®</sup> 32-bit operating systems run in protected mode. MS-DOS cannot run in protected mode; however, some programs that you can start from MS-DOS, such as the Windows operating system, are able to put the computer into protected mode.

**provider**

A provider is an extension of a CIM schema that communicates with managed objects and accesses data and event notifications from a variety of sources. Providers forward this information to the CIM Object Manager for integration and interpretation.

**PS/2**

Abbreviation for Personal System/2.

**PXE**

Abbreviation for Pre-boot eXecution Environment.

**QFP**

Acronym for quad flat pack.

**RAID**

Acronym for redundant array of independent drives.

**RAM**

Acronym for random-access memory. The computer's primary temporary storage area for program instructions and data. Each location in RAM is identified by a number called a *memory address*. Any information stored in RAM is lost when you turn off your computer.

**RAMBUS**

Acronym for Rambus DRAM, a type of memory (DRAM) developed by Rambus, Inc.

**RAMDAC**

Acronym for random-access memory digital-to-analog converter.

**RAW**

Unprocessed. The term refers to data that is passed along to an I/O device without being interpreted. In contrast, *cooked* refers to data that is processed before being passed to the I/O device.

It often refers to uncompressed text that is not stored in any proprietary format. The term comes from UNIX, which supports cooked and raw modes for data output to a terminal.

**RDRAM**

Acronym for Rambus DRAM. A dynamic RAM chip technology from Rambus, Inc. Direct RDRAMs are used in computers. Direct RDRAM chips are housed in RIMM modules, which are similar to DIMMs but have different pin settings. The chips can be built with dual channels, doubling the transfer rate to 3.2 GB/sec.

**read-only file**

A read-only file is one that you are prohibited from editing or deleting. A file can have read-only status if: Its read-only attribute is enabled.

It resides on a physically write-protected diskette or on a diskette in a write-protected drive.

It is located on a network in a directory to which the system administrator has assigned read-only rights to you.

**readme file**

A text file included with a software package or hardware product that contains information supplementing or updating the documentation for the software or hardware. Typically, readme files provide installation information, describe new product enhancements or corrections that have not yet been documented, and list known problems or other things you need to be aware of as you use the software or hardware.

**real mode**

An operating mode supported by 80286 or higher microprocessors, real mode imitates the architecture of an 8086 microprocessor.

**refresh rate**

The rate at which the monitor redraws the video image on the monitor screen. More precisely, the refresh rate is the frequency, measured in Hz, at which the screen's horizontal lines are recharged (sometimes also referred to as its *vertical frequency*). The higher the refresh rate, the less video flicker can be seen by the human eye. The higher refresh rates are also noninterlaced.

**RFI**

Abbreviation for radio frequency interference.

**RGB**

Abbreviation for red/green/blue.

**RIMM**

Acronym for Rambus In-line Memory Module, which is the Rambus equivalent of a DIMM module.

**ROM**

Acronym for read-only memory. Your computer contains some programs essential to its operation in ROM code. Unlike RAM, a ROM chip retains its contents even after you turn off your computer. Examples of code in ROM include the program that initiates your computer's boot routine and the POST.

**rpm**

Abbreviation for revolutions per minute.

**RTC**

Abbreviation for real-time clock. Battery-powered clock circuitry inside the computer that keeps the date and time after you turn off the computer.

**SCA**

Acronym for single connector attachment.

**schema**

A collection of class definitions that describes managed objects in a particular environment. A CIM schema is a collection of class definitions used to represent managed objects that are common to every management environment, which is why CIM is called the Common Information Model.

**SCSI**

Acronym for small computer system interface. An I/O bus interface with faster data transmission rates than standard ports. You can connect up to seven devices (15 for some newer SCSI types) to one SCSI interface.

**SDMS**

Abbreviation for SCSI device management system.

**sec**

Abbreviation for second(s).

**SEC**

Abbreviation for single-edge contact.

**serial port**

An I/O port used most often to connect a modem to your computer. You can usually identify a serial port on your computer by its 9-pin connector.

**settings**

Settings are conditions of a manageable object help to determine what happens when a certain value is detected in a component. For example, a user can set the upper critical threshold of a temperature probe to 75 degrees Celsius. If the probe reaches that temperature, the setting results in an alert being sent to the management console so that user intervention can be taken. Some settings, when reached, can trigger a system shutdown or other response that can prevent damage to the system.

**service tag number**

A bar code label on the computer that identifies it when you call Dell for customer or technical support.

**SGRAM**

Acronym for synchronous graphics RAM.

**shadowing**

A computer's system and video BIOS code is usually stored on ROM chips. Shadowing refers to the performance-enhancement technique that copies BIOS code to faster RAM chips in the upper memory area (above 640 KB) during the boot routine.

**SIMD**

Abbreviation for Single Instruction Multiple Data.

**SIMM**

Acronym for single in-line memory module. A small circuit board containing DRAM chips that connects to the system board.

**SIP**

Acronym for single in-line package, which is a type of housing for electronic components in which the connecting pins protrude from one side. A SIP is also called a Single In-line Pin Package (SIPP).

**SKU**

Acronym for stock keeping unit.

**SMART**

Acronym for Self-Monitoring Analysis Reporting Technology. A technology that allows hard drives to report errors and failures to the system BIOS, which then displays an error message on the screen. To take advantage of this technology, you must have a SMART-compliant hard drive and the proper support in the system BIOS.

**SMBIOS**

Acronym for system management BIOS.

**SMD**

Acronym for surface mount device.

**SNMP**

Abbreviation for Simple Network Management Protocol. SNMP is an industry-standard interface that allows a network manager to remotely monitor and manage workstations.

**SODIMM**

Acronym for small outline-DIMM. A DIMM module with a thinner profile due to the use of TSOP chip packages. SODIMMs are commonly used in laptop computers.

**SOIC**

Acronym for Small Outline IC, a small-dimension, plastic, rectangular, surface mount chip package that uses gull-wing pins extending outward.

**SOJ**

Acronym for small outline package J-lead, a small-dimension, plastic, rectangular surface mount chip package with j-shaped pins on its two long sides.



**SRAM**

Abbreviation for static random-access memory. Because SRAM chips do not require continual refreshing, they are substantially faster than DRAM chips.

**state**

Refers to the condition of an object that can have more than one condition. For example, an object may be in the "not ready" state.

**status**

Refers to the health or functioning of an object. For example, a temperature probe can have the status normal if the probe is measuring acceptable temperatures. When the probe begins reading temperatures that exceed limits set by the user, it reports a critical status.

**SVGA**

Abbreviation for super video graphics array. VGA and SVGA are video standards for video adapters with greater resolution and color display capabilities than previous standards.

To display a program at a specific resolution, you must install the appropriate video drivers and your monitor must support the resolution. Similarly, the number of colors that a program can display depends on the capabilities of the monitor, the video driver, and the amount of video memory installed in the computer.

**switch**

On a computer system board, switches control various circuits or functions in your computer system. These switches are known as *DIP switches*; they are normally packaged in groups of two or more switches in a plastic case. Two common DIP switches are used on system boards: *slide* switches and *rocker* switches. The names of the switches are based on how the settings (on and off) of the switches are changed.

**syntax**

The rules that dictate how you must type a command or instruction so that the computer understands it. A variable's syntax indicates its data type.

**system board**

As the main circuit board, the system board usually contains most of your computer's integral components, such as the following:

- Microprocessor
- RAM
- Controllers for standard peripheral devices, such as the keyboard
- Various ROM chips

Frequently used synonyms for system board are *motherboard* and *logic board*.

**system configuration information**

Data stored in memory that tells a computer what hardware is installed and how the computer should be configured for operation.

**system diskette**

System diskette is a synonym for *bootable diskette*.

**system memory**

System memory is a synonym for *RAM*.

**System Setup program**

A BIOS-based program that allows you to configure your computer's hardware and customize the computer's operation by setting such features as password protection and energy management. Some options in the System Setup program require that you reboot the computer (or the computer may reboot automatically) in order to make a hardware configuration change. Because the System Setup program is stored in NVRAM, any settings remain in effect until you change them again.

**system.ini file**

A start-up file for the Windows operating system. When you start Windows, it consults the **system.ini** file to determine a variety of options for the Windows operating environment. Among other things, the **system.ini** file records which video, mouse, and keyboard drivers are installed for Windows.

Running the Control Panel or Windows Setup program may change options in the **system.ini** file. On other occasions, you may need to change or add options to the **system.ini** file manually with a text editor, such as Notepad.

**table**

In SNMP MIBs, a table is a two dimensional array that describes the variables that make up a managed object.

**TCP/IP**

Abbreviation for Transmission Control Protocol/Internet Protocol. A system for transferring information over a computer network containing dissimilar systems, such as systems running Windows and UNIX.

**termination**

Some devices (such as the last device at each end of a SCSI cable) must be terminated to prevent reflections and spurious signals in the cable. When such devices are connected in a series, you may need to enable or disable the termination on these devices by changing jumper or switch settings on the devices or by changing settings in the configuration software for the devices.

**text editor**

An application program for editing text files consisting exclusively of ASCII characters. Windows Notepad is a text editor, for example. Most word processors use proprietary file formats containing binary characters, although some can read and write text files.

**text mode**

A video mode that can be defined as *x* columns by *y* rows of characters.

**threshold values**

Systems are normally equipped with various sensors that monitor temperature, voltage, current, and fan speed. The sensor's threshold values specify the ranges (min and max values) for determining whether the sensor is operating under normal, noncritical, critical or fatal conditions. Dell-supported threshold values are

UpperThresholdFatal

UpperThresholdCritical

UpperThresholdNon-critical

Normal

LowerThresholdNon-critical

LowerThresholdCritical

LowerThresholdFatal

**time-out**

A specified period of system inactivity that must occur before an energy conservation feature is activated.

**tpi**

Abbreviation for tracks per inch.

**TQFP**

Acronym for thin quad flat pack.

**TSR**

Abbreviation for terminate-and-stay-resident. A TSR program runs "in the background." Most TSR programs implement a predefined key combination (sometimes referred to as a *hot key*) that allows you to activate the TSR program's interface while running another program. When you finish using the TSR program, you can return to the other application program and leave the TSR program resident in memory for later use.

TSR programs can sometimes cause memory conflicts. When troubleshooting, rule out the possibility of such a conflict by rebooting your computer without starting any TSR programs.

**TSOP**

Acronym for thin small outline package. A very-thin, plastic, rectangular surface mount chip package with gull-wing pins on its two short sides. TSOPs are about a third as thick as SOJ chips.

**UART**

Acronym for universal asynchronous receiver transmitter, the electronic circuit that makes up the serial port.

**UDP**

Acronym for user datagram protocol.

**UL**

Abbreviation for Underwriters Laboratories.

**UMB**

Abbreviation for upper memory blocks.

**unicode**

A fixed width, 16-bit world wide character encoding, developed and maintained by the Unicode Consortium.

**upper memory area**

The 384 KB of RAM located between 640 KB and 1 MB. If the computer has an Intel386 or higher microprocessor, a utility called a *memory manager* can create UMBs in the upper memory area, in which you can load device drivers and memory-resident programs.

**UPS**

Abbreviation for uninterruptible power supply. A battery-powered unit that automatically supplies power to your computer in the event of an electrical failure.

**USB**

Abbreviation for Universal Serial Bus. A USB connector provides a single connection point for multiple USB-compliant devices, such as mice, keyboards, printers, and computer speakers. USB devices can also be connected and disconnected while the system is running.

**utility**

A program used to manage system resources—memory, disk drives, or printers, for example.

**UTP**

Abbreviation for unshielded twisted pair.

**UUID**

Acronym for Universal Unique Identification.

**V**

Abbreviation for volt(s).

**VAC**

Abbreviation for volt(s) alternating current.

**varbind**

An algorithm used to assign an object identifier or OID. The varbind gives rules for arriving at the decimal prefix that uniquely identifies an enterprise, as well as the formula for specifying a unique identifier for the objects defined in that enterprise's MIB.

**variable**

A component of a managed object. A temperature probe, for example, has a variable to describe its capabilities, its health or status, and certain indexes that you can use to help you in locating the right temperature probe.

**VCCI**

Abbreviation for Voluntary Control Council for Interference.

**VCR**

Abbreviation for video cassette recorder.

**VDC**

Abbreviation for volt(s) direct current.

**VESA**

Acronym for Video Electronics Standards Association.

**VGA**

Abbreviation for video graphics array. VGA and SVGA are video standards for video adapters with greater resolution and color display capabilities than previous standards. To display a program at a specific resolution, you must install the appropriate video drivers and your monitor must support the resolution. Similarly, the number of colors that a program can display depends on the capabilities of the monitor, the video driver, and the amount of video memory installed for the video adapter.

**VGA feature connector**

On some systems with a built-in VGA video adapter, a VGA feature connector allows you to add an enhancement adapter, such as a video accelerator, to your computer. A VGA feature connector can also be called a *VGA pass-through connector*.

**video adapter**

The logical circuitry that provides—in combination with the monitor—your computer's video capabilities. A video adapter may support more or fewer features than a specific monitor offers. Typically, a video adapter comes with video drivers for displaying popular application programs and operating systems in a variety of video modes.

On some Dell computers, a video adapter is integrated into the system board. Also available are many video adapter cards that plug into an expansion-card connector.

Video adapters often include memory separate from RAM on the system board. The amount of video memory, along with the adapter's video drivers, may affect the number of colors that can be simultaneously displayed. Video adapters can also include their own coprocessor for faster graphics rendering.

**video driver**

A program that allows graphics-mode application programs and operating systems to display at a chosen resolution with the desired number of colors. A software package may include some "generic" video drivers. Any additional video drivers may need to match the video adapter installed in the computer.

**video memory**

Most VGA and SVGA video adapters include memory chips in addition to your computer's RAM. The amount of video memory installed primarily influences the number of colors that a program can display (with the appropriate video drivers and monitor capabilities).

**video mode**

Video adapters normally support multiple text and graphics display modes. Character-based software displays in text modes that can be defined as  $x$  columns by  $y$  rows of characters. Graphics-based software displays in graphics modes that can be defined as  $x$  horizontal by  $y$  vertical pixels by  $z$  colors.

**video resolution**

Video resolution—800 x 600, for example—is expressed as the number of pixels across by the number of pixels up and down. To display a program at a specific graphics resolution, you must install the appropriate video drivers and your monitor must support the resolution.

**virtual memory**

A method for increasing addressable RAM by using the hard drive. For example, in a computer with 16 MB of RAM and 16 MB of virtual memory set up on the hard drive, the operating system would manage the system as though it had 32 MB of physical RAM.

**virus**

A self-starting program designed to inconvenience you. Virus programs have been known to corrupt the files stored on a hard drive or to replicate themselves until a computer or network runs out of memory.

The most common way that virus programs move from one computer to another is via "infected" diskettes, from which they copy themselves to the hard drive. To guard against virus programs, you should do the following:

- Periodically run a virus-checking utility on your computer's hard drive
- Always run a virus-checking utility on any diskettes (including commercially sold software) before using them

**VLSI**

Abbreviation for very-large-scale integration.

**VLVESA**

Acronym for very low voltage enterprise system architecture.

**vpp**

Abbreviation for peak-point voltage.

**VRAM**

Acronym for video random-access memory. Some video adapters use VRAM chips (or a combination of VRAM and DRAM) to improve video performance. VRAM is dual-ported, allowing the video adapter to update the screen and receive new image data at the same time.

**VRM**

Abbreviation for voltage regulator module.

**W**

Abbreviation for watt(s).

**Wakeup on LAN**

The ability for the power in a client station to be turned on by the network. Remote wake-up enables software upgrading and other management tasks to be performed on users' machines after the work day is over. It also enables remote users to gain access to machines that have been turned off. Intel calls remote wake-up "Wake-on-LAN."

**WH**

Abbreviation for watt-hour(s).

**win.ini file**

A start-up file for the Windows operating system. When you start Windows, it consults the **win.ini** file to determine a variety of options for the Windows operating environment. Among other things, the **win.ini** file records what printer(s) and fonts are installed for Windows. The **win.ini** file also usually includes sections that contain optional settings for Windows application programs that are installed on the hard drive.

Running the Control Panel or Windows Setup program may change options in the **win.ini** file. On other occasions, you may need to change or add options to the **win.ini** file manually with a text editor such as Notepad.

**Windows 95**

An integrated and complete Microsoft Windows operating system that does not require MS-DOS and that provides advanced operating system performance, improved ease of use, enhanced workgroup functionality, and simplified file management and browsing.

**Windows NT**

High-performance server and workstation operating system software developed by Microsoft that is intended for technical, engineering, and financial applications.

**write-protected**

Read-only files are said to be *write-protected*. You can write-protect a 3.5-inch diskette by sliding its write-protect tab to the open position or by setting the write-protect feature in the System Setup program.

**XMM**

Abbreviation for extended memory manager, a utility that allows application programs and operating systems to use extended memory in accordance with the XMS.

**XMS**

Abbreviation for eXtended Memory Specification.

**ZIF**

Acronym for zero insertion force. Some computers use ZIF sockets and connectors to allow devices such as the microprocessor chip to be installed or removed with no stress applied to the device.

**ZIP**

A 3.5 inch removable disk drive from Iomega. Originally, it provided a 100 MB removable cartridges. The drive is bundled with software that can catalog the disks and lock the files for security.

A 250 MB version of the Zip drive also reads and writes the 100 MB Zip cartridges.

# Index

## Numerics

1403, 559	2070, 575	2107, 582
1404, 560	2076, 575	2108, 582
1602, 562	2077, 575	2109, 582
1603, 563	2079, 576	2110, 583
1604, 563	2080, 576	2111, 583
1651, 563	2081, 576	2112, 583
1652, 563	2082, 576	2114, 583
1653, 564	2083, 576	2115, 583
2048, 572	2085, 576	2116, 584
2049, 572	2086, 577	2117, 584
2050, 573	2088, 577	2118, 584
2051, 573	2089, 577	2120, 584
2052, 573	2090, 577	2121, 584
2053, 573	2091, 577	2122, 585
2054, 573	2092, 577	2123, 585
2055, 573	2094, 578	2124, 586
2056, 573	2095, 579	2126, 586
2057, 574	2098, 579	2127, 586
2058, 574	2099, 580	2128, 586
2059, 574	2100, 580	2129, 586
2061, 574	2101, 580	2130, 586
2063, 574	2102, 581	2131, 587
2064, 574	2103, 581	2132, 587
2065, 574	2104, 581	2135, 587
2067, 575	2105, 581	2136, 587
	2106, 581	2137, 588

2138, 588	2168, 593	2211, 599
2139, 588	2169, 593	2232, 599
2140, 588	2170, 593	2233, 599
2141, 588	2171, 594	2234, 599
2142, 589	2172, 594	2235, 599
2143, 589	2174, 594	2237, 599
2144, 589	2175, 594	2238, 599
2145, 589	2176, 594	2239, 600
2146, 589	2177, 594	2240, 600
2147, 589	2178, 595	2241, 600
2148, 589	2179, 595	2242, 600
2149, 589	2180, 595	2243, 600
2150, 589	2181, 595	2244, 600
2151, 590	2182, 595	2245, 600
2152, 590	2186, 595	2246, 600
2153, 590	2187, 596	2247, 600
2154, 590	2188, 596	2248, 601
2155, 590	2189, 596	2249, 601
2156, 590	2191, 596	2251, 601
2157, 590	2192, 597	2252, 601
2158, 590	2193, 597	2254, 601
2159, 591	2194, 597	2255, 601
2160, 591	2199, 597	2259, 601
2161, 591	2201, 597	2260, 601
2162, 591	2202, 598	2261, 601
2163, 592	2203, 598	2262, 601
2164, 592	2204, 598	2263, 601
2165, 592	2205, 598	2264, 602
2166, 592	2206, 598	2265, 602
2167, 593	2207, 599	2266, 602



2267, 602	2298, 608	2329, 613
2268, 603	2299, 608	2330, 613
2269, 603	2300, 608	2331, 614
2270, 603	2301, 608	2332, 614
2271, 604	2302, 609	2333, 614
2272, 604	2303, 609	2334, 614
2273, 604	2304, 609	2335, 614
2274, 604	2305, 609	2336, 614
2276, 604	2306, 609	2337, 615
2277, 604	2307, 610	2338, 615
2278, 604	2309, 610	2339, 615
2279, 605	2310, 610	2340, 615
2280, 605	2311, 610	2341, 615
2281, 605	2312, 610	2342, 616
2282, 605	2313, 611	2343, 616
2283, 605	2314, 611	2344, 616
2284, 605	2315, 611	2345, 616
2285, 606	2316, 611	2346, 616
2286, 606	2317, 611	2347, 616
2287, 606	2318, 611	2348, 617
2288, 606	2319, 612	2349, 617
2289, 606	2320, 612	2350, 617
2290, 606	2321, 612	2351, 617
2291, 607	2322, 612	2352, 617
2292, 607	2323, 612	2353, 617
2293, 607	2324, 613	2354, 617
2294, 607	2325, 613	2355, 618
2295, 607	2326, 613	2356, 618
2296, 607	2327, 613	2357, 618
2297, 608	2328, 613	2358, 618

2359, 619  
2360, 619  
2361, 619  
2362, 619  
2363, 620  
2364, 620  
2365, 620  
2366, 620  
2367, 620  
2368, 621

## A

A consistency check on a virtual disk has been paused (suspended), 583  
A consistency check on a virtual disk has been resumed, 583  
A device has been removed, 607  
A mirrored virtual disk has been unmirrored, 584  
A virtual disk and its mirror have been split, 584  
AC power supply cable has been removed, 613  
Application, 536  
Application Group, 536  
Array disk Clear operation failed, 603  
Array disk dead segments recovered, 588

Array disk degraded, 573  
Array disk initialize completed, 577  
Array disk initialize failed, 576  
Array disk inserted, 573  
Array disk offline, 573  
Array disk online, 590  
Array disk rebuild completed, 577  
Array disk rebuild failed, 576  
Array disk rebuild started, 574  
Array disk removed, 572  
Array Manager is installed on the system, 587  
Asset name changed, 590  
Asset tag changed, 590

## B

Background initialization (BGI) completed with uncorrectable errors., 615  
Background initialization cancelled, 586  
Background initialization completed, 586  
Background initialization failed, 586  
Background initialization started, 586  
Bad block extended medium error, 589

Bad block extended sense error, 589  
Bad block medium error, 589  
Bad block replacement error, 589  
Bad block sense error, 589  
Bad block table is full, 610  
Bad disk block could not be reassigned during a write operation., 617

Bad media, 604

Bad PHY %1, 608

BIOS Group

BIOS Setup Control Table, 291

Diskette Control Table, 311

IDE Control Table, 309

Network Interface Control Table, 313

Parallel Port Control Table, 303

SCSI Control Table, 301

Serial Port Control Table, 305

USB Control Table, 307

BIOS Group tables, 291

BIOS Setup Control Group, 291

variable values, 315

## C

Change, 533

Change Management Group, 533

Change write policy, 584

- Chassis Information Group tables, 55
  - Chassis Information Table, 55
  - Event Log Table, 71
  - Firmware Table, 79
  - Intrusion Table, 82, 85
  - POST Log Table, 69
  - System BIOS Table, 73
  - UUID Table, 67
  - Variable Values, 89
- Cluster Group, 417
  - Cluster Table, 417
  - variable values, 420
- Communication regained, 591
- Communication timeout, 588
- Communication with the enclosure has been lost, 607
- Controller alarm disabled, 589
- Controller alarm enabled, 589
- Controller alarm has been tested, 590
- Controller battery charge level is below a normal threshold, 604
- Controller battery is reconditioning, 581
- Controller battery Learn cycle has timed out, 595
- Controller battery low, 589
- Controller battery needs to be replaced, 593
- Controller battery recondition is completed, 581

- Controller battery temperature is above normal, 594
- Controller configuration has been reset, 590
- Controller event log %1, 614
- Controller rebuild rate has changed, 589
- Controller unable to recover cached data from the Battery Backup Unit (BBU), 615
- Cost of Ownership Group
  - COO Cost Event Log Table, 346
  - COO Lease Information Table, 350
  - COO Maintenance Table, 356
  - COO Options Table, 354
  - COO Repair Table, 358
  - COO Schedule Number Table, 353
  - COO Service Contract Table, 344
  - COO Support Information Table, 360
  - COO Trouble Ticket Table, 363
  - COO Warranty Table, 348
  - Cost of Ownership Table, 333
  - Cost of Ownership tables, 333
- Current kernel & non-RAID SCSI driver versions older than minimum required levels, 593

## D

- data types
  - common, 623
  - state capabilities, 624
  - state settings, 624-625
  - status, 625
  - status probe, 626
  - status redundancy, 626
- DC power supply is switched off, 612
- Dead disk segments restored, 588
- Dedicated hotspare assigned, 591
- Dedicated hotspare unassigned, 591
- Device added to system, 563
- Device configuration error detected, 564
- Device failed, 572
- Device Group, 534
  - Cache Device Table, 223
  - Generic Device Table, 238
  - Keyboard Device Table, 214
  - Memory Device Mapped Address Table, 235
  - Memory Device Table, 229
  - PCI Device Configuration Space Table, 244
  - PCI Device Table, 240
  - Pointing Device Table, 211
  - Processor Device Table, 216
  - variable values, 247
- Device removed from system, 563

Device returned to normal, 584  
Diagnostic message %1, 611  
Driver version mismatch, 587

## E

Enclosure alarm disabled, 588  
Enclosure alarm enabled, 588  
Enclosure firmware mismatch, 584  
Enclosure has a hardware error, 608  
Enclosure is unstable, 608  
Enclosure Management Module (EMM) has been removed, 608  
Enclosure Management Module (EMM) has failed., 607  
Enclosure was shut down, 583  
Event Log  
viewing entries, 569

## F

Failure prediction threshold exceeded due to test, 583  
Firmware version mismatch, 587

## G

Global Data Group, 438  
Global hot spare assigned, 579  
Global hot spare unassigned, 580

## H

Hot spare SMART polling failed, 605

## I

Introduction  
Server Administrator Change Management MIB, 17  
Server Administrator Instrumentation MIB, 14  
Server Administrator Remote Access MIB, 16  
Server Administrator Storage Management MIB, 16  
Invalid SAS configuration has been detected, 595

Inventory, 533  
Inventory Group, 533

## L

Local Response Agent Group  
LRA Action Table, 328  
LRA Global Settings, 325  
LRA Global Settings Table, 326  
variable values, 330

Local Response Agent Group tables, 325

Logical Devices Group, 520

## M

Maximum temperature probe warning threshold value changed, 590

Memory device correction rate crossed a warning threshold, 559

Memory device ECC Correctable error count crossed a warning threshold, 559

Memory Group  
Physical Memory Tables, 269  
variable values, 277, 283

Memory Group Variable Values, 286

messages  
storage management, 572

MIB  
minor version number, 29

MIB Major Version Number, 29

Minimum temperature probe warning threshold value changed, 590

Multi-bit ECC error, 606

## **N**

Non-RAID SCSI driver  
version older than  
minimum required  
level, 593

## **O**

Operating System Group, 538  
Memory Table, 103  
Operating System Table, 101  
Operating System Memory  
Table, 103

## **P**

Patrol Read found an  
uncorrectable media  
error, 604  
Physical Devices Group, 443  
Physical Memory Card  
Table, 283  
Pluggable Device Traps, 563  
Port Group  
Keyboard Port Table, 182  
Memory Device Port  
Table, 188  
Monitor Port Table, 191  
Parallel Port Table, 196  
Pointing Port Table, 179  
Processor Port Table, 185  
Serial Port Table, 200  
Small Computer System  
Interface Port Table, 194  
variable values, 207

Power Group  
Amperage Probe Table, 138  
Power Supply Table, 129  
Power Unit Table, 127  
variable values, 148  
Voltage Probe Table, 133  
Power Group tables, 127  
Predictive Failure  
reported, 578  
Problems with the battery or  
the battery charger, 611  
Processor Device Status  
Traps, 562  
Processor sensor detected a  
failure value, 563  
Processor sensor detected a  
warning value, 563  
Processor sensor returned to a  
normal state, 562

## **R**

RAID controller firmware and  
driver validation was not  
performed., 592  
Rebuild completed with  
errors, 592  
Rebuild failed due to errors  
on the source physical  
disk., 616  
Rebuild failed due to errors  
on the target physical  
disk., 617  
Redundancy degraded, 585  
Redundancy lost, 585

Redundancy normal, 586  
Redundant Memory Unit  
Table, 281  
Remote Access Group  
Remote Access Table, 373  
Remote SNMP Trap  
Table, 390  
Remote User Administration  
Table, 382  
Remote User Dial-In  
Configuration Table, 398  
Remote User Dial-Out  
Table, 401  
Remote Flash BIOS Group  
variable values, 176

## **S**

sample SNMP output, 629  
SAS components  
initialization sequence  
failed during system  
startup, 611  
SCSI sense data, 579  
SCSI sense sector  
reassign, 586  
See readme.txt for a list of  
validated controller driver  
versions, 592  
Service tag changed, 590  
Single-bit ECC error DIMM  
critically degraded., 612  
Single-bit ECC error DIMM  
critically degraded. No  
further reporting., 612

- Slot Group
  - System Slot Table, 257
  - variable values, 261
- Smart configuration
  - change, 582
- Smart FPT exceeded, 581
- Smart warning, 582
- Smart warning degraded, 583
- Smart warning
  - temperature, 582
- SNMP
  - introduction to, 25
  - SNMP MIB OIDs, 26
  - SNMP security, 27
  - SNMP traps, 28
- SNMP basic terminology
  - fields, 20
  - managed object, 19
  - MIB, 19
  - SNMP, 18
  - variable, 19
- SNMP support,
  - configuring, 570
- SNMP tables, 21
  - example, 22
  - reference guide content, 23
- SNMP traps, 571
- Storage Management Event Group, 531
- Storage Management has lost communication with this RAID controller and attached storage, 603
- Storage Management Information Group, 437

- System Resource Group
  - Direct Memory Access Table, 121
  - Input/Output Port Table, 112
  - Interrupt Table, 118
  - Map Table, 107
  - Memory Table, 115
  - Owner Table, 109
  - variable values, 124
- System State Table, 37, 257
- systems management
  - software, 32
  - build number systems, 32
  - description name, 33
  - name, 32, 34
  - preferred protocol, 33
  - supported protocol, 33
  - version number name, 32

## T

- Temperature dropped below the minimum failure threshold, 581
- Temperature dropped below the minimum warning threshold, 580
- Temperature exceeded the maximum failure threshold, 581
- Temperature exceeded the maximum warning threshold, 580
- The RAID controller firmware and driver validation was not performed., 592
- Thermal Group
  - Cooling Device Table, 157
  - Cooling Unit Table, 155
  - Temperature Probe Table, 163
  - variable values, 168
- Too many enclosures attached to the controller., 596
- trap variables, 543
  - current status, 544
  - data, 544
  - message, 544
  - previous status, 544
  - system, 543
  - table index OID, 544
- traps, 547
  - AC power cord traps, 561
  - amperage probe traps, 554
  - chassis intrusion traps, 556
  - cooling device traps, 551
  - fan enclosure traps, 560
  - hardware log traps, 561
  - memory device traps, 559
  - miscellaneous traps, 548
  - power supply traps, 558
  - redundancy unit traps, 556
  - temperature probe traps, 549
  - understanding the trap descriptions, 545
  - understanding trap severity, 547
  - voltage probe traps, 552

## U

- Unrecoverable disk media
  - error during the rebuild, 617
- User Security Table, 171, 173

## V

- variable names
  - capability, 21
  - settings, 21
  - state, 21
  - status, 21
- Viewing
  - SNMP traps, 571
- Virtual, 587
- Virtual disk check consistency
  - cancelled, 575
  - completed, 576
  - failed, 575
  - started, 574
- Virtual disk configuration
  - changed, 573
- Virtual disk created, 573
- Virtual disk degraded, 574
- Virtual disk deleted, 573
- Virtual disk failed, 573
- Virtual disk format
  - completed, 577
  - failed, 575
  - started, 574
- Virtual disk initialization
  - cancelled, 575
  - completed, 577
  - failed, 576
  - failed., 616
  - started, 574
- Virtual disk permanently degraded, 610
- Virtual disk rebuild
  - completed, 577
  - failed, 576
  - started, 574
- Virtual disk reconfiguration
  - completed, 577
  - failed, 576
  - started, 574
- Virtual disk renamed, 591

