

Service  
Service  
Service



# Simplified

# Service Manual

## Important Safety Notice

Proper service and repair is important to the safe, reliable operation of all DELL Company Equipment. The service procedures recommended by DELL and described in this service manual are effective methods of performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tools should be used when and as recommended.

It is important to note that this manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It is also important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. DELL could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, DELL has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by DELL must first satisfy himself thoroughly that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

Hereafter throughout this manual, DELL Company will be referred to as DELL.

### WARNING

Use of substitute replacement parts, which do not have the same, specified safety characteristics may create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from DELL. DELL assumes no liability, express or implied, arising out of any unauthorized modification of design.

Servicer assumes all liability.

### FOR PRODUCTS CONTAINING LASER:

DANGER-Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

CAUTION-Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


CAUTION -The use of optical instruments with this product will increase eye hazard.

TO ENSURE THE CONTINUED RELIABILITY OF THIS PRODUCT, USE ONLY ORIGINAL MANUFACTURER'S REPLACEMENT PARTS, WHICH ARE LISTED WITH THEIR PART NUMBERS IN THE PARTS LIST SECTION OF THIS SERVICE MANUAL.

Take care during handling the LCD module with backlight unit


- Must mount the module using mounting holes arranged in four corners.
- Do not press on the panel, edge of the frame strongly or electric shock as this will result in damage to the screen.
- Do not scratch or press on the panel with any sharp objects, such as pencil or pen as this may result in damage to the panel.
- Protect the module from the ESD as it may damage the electronic circuit (C-MOS).
- Make certain that treatment person's body is grounded through wristband.
- Do not leave the module in high temperature and in areas of high humidity for a long time.
- Avoid contact with water as it may a short circuit within the module.
- If the surface of panel becomes dirty, please wipe it off with a soft material. (Cleaning with a dirty or rough cloth may damage the panel.)

# 1. Exploded view diagram with list of items

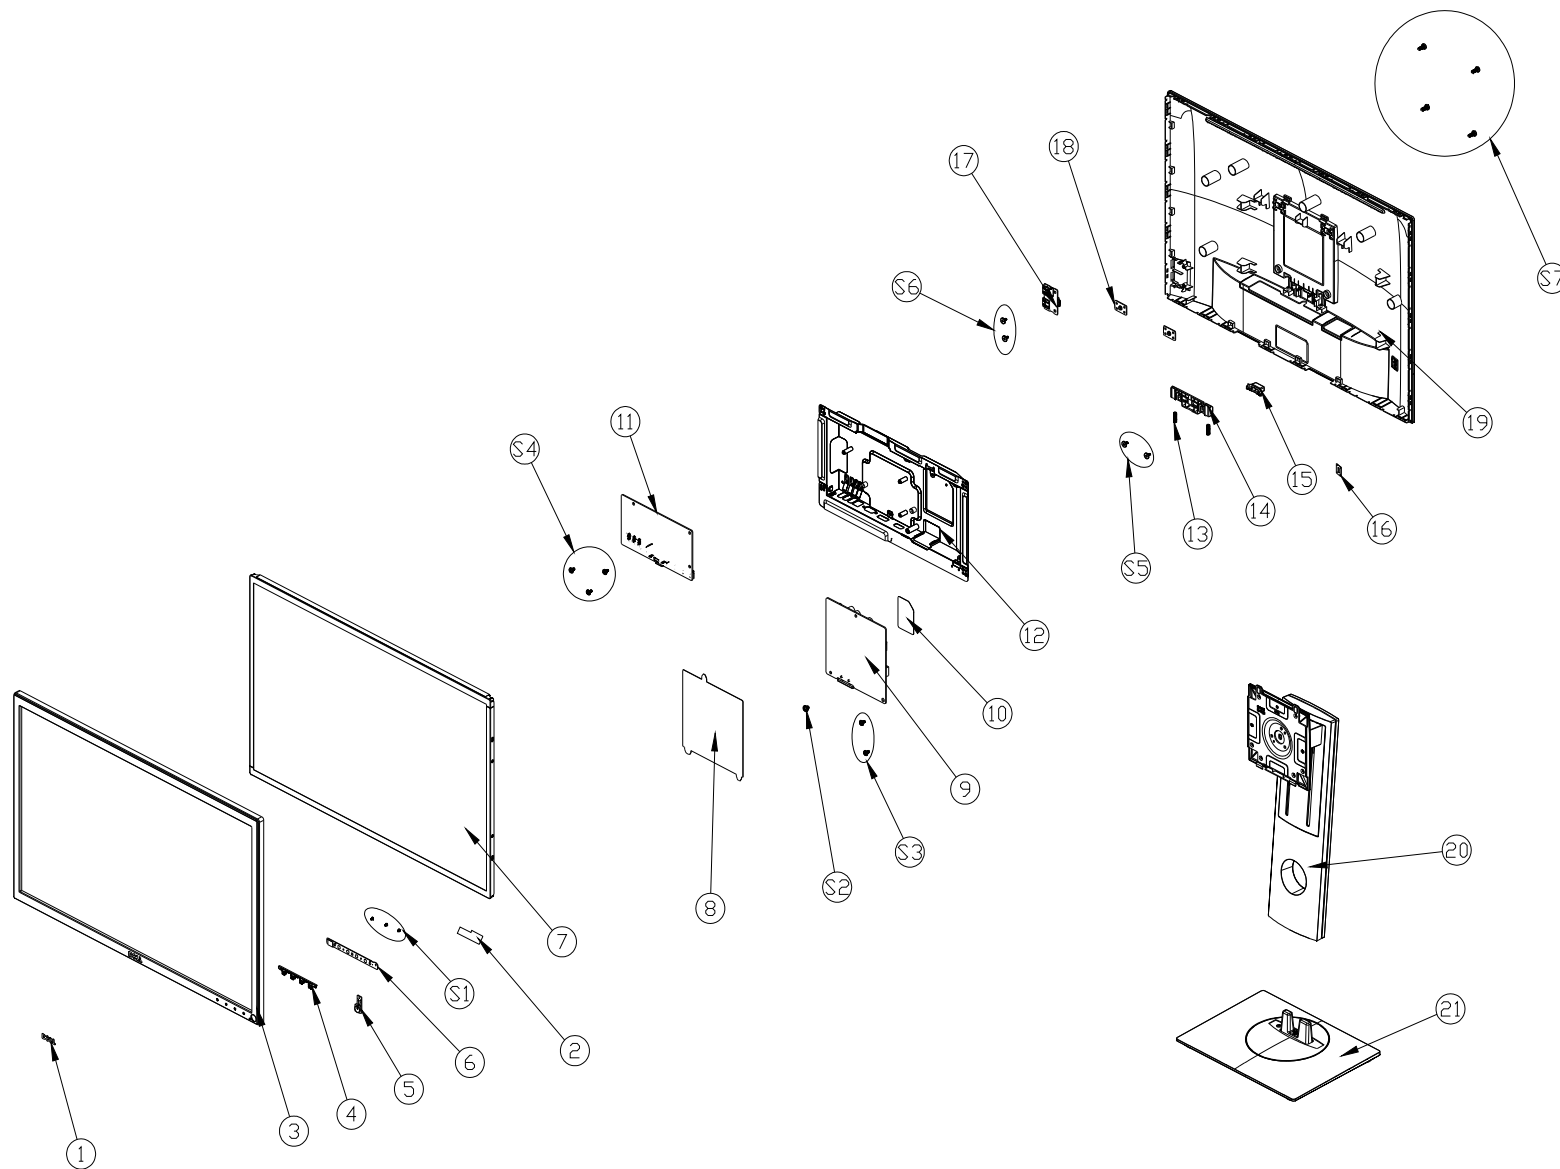

No.	Description	Q'ty				
1	LOGO	1				
2	INSULATING SHEET	1				
3	BEZEL	1				
4	KEY_FUNCTION	1				
5	KEY_POWER	1				
6	KEY_BOARD	1				
7	PANEL	1				
8	INSULATING SHEET	1				
9	ADAPTER BOARD	1				
10	INSULATING SHEET	1				
11	MAIN BOARD PCB	1				
12	MAINFRAME	1				
13	spring	2				
14	KNOB	1	No.	Part No.	Description	Q'ty
15	KEY_FRAME	1	S1	0Q1G6019 1	SCREW(FOR KEY BOARD)	3
16	MAINFRAME	1	S2	QM1G26400601200AXL	SCREW(FOR POWER BOARD GROUND)	1
17	USB BOARD	1	S3	0M1G1030 6120	SCREW(FOR POWER BOARD)	2
18	PLATE	2	S4	0M1G1030 6120	SCREW(FOR MAIN BOARD)	3
19	REAR_COVER	1	S5	0Q1G2030 6120	SCREW(FOR RELEASE SLIDER)	2
20	stand ass'y	1	S6	QQ1G35300400470ARA	SCREW(FOR USB BOARD)	2
21	BASE_ASS'Y	1	S7	0M1G2940 10225 CR3	SCREW(FOR VESA)	4

## 2. Wiring connectivity diagram

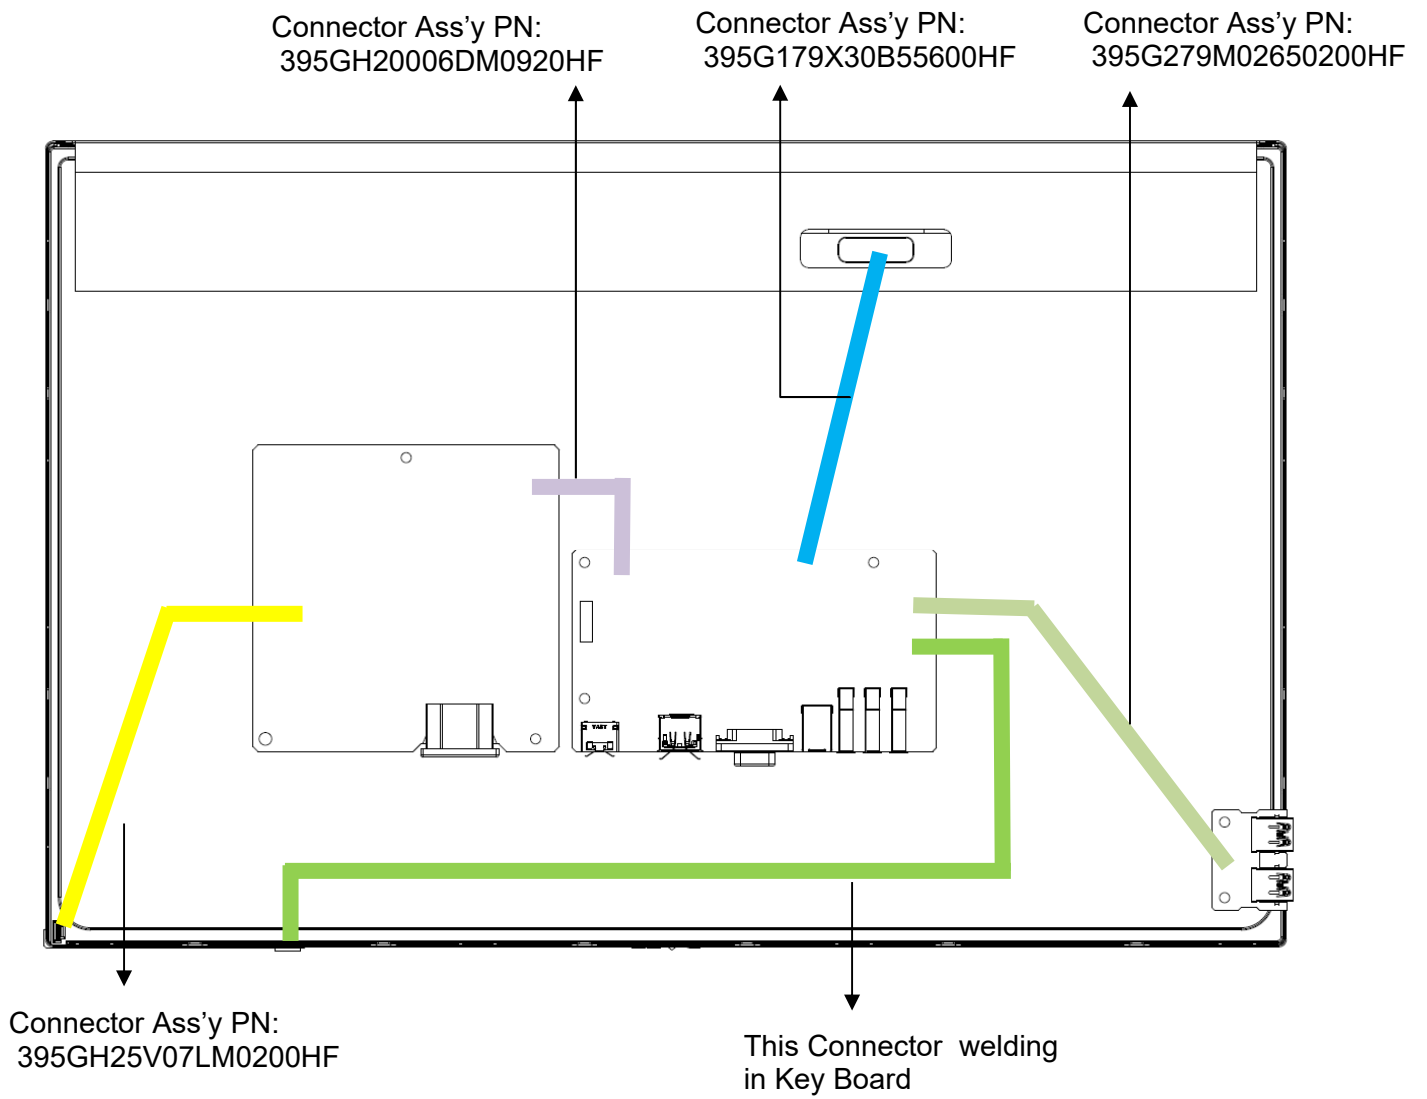

### **3. Mechanical Instruction**

#### **Tools Required**



List the type and size of the tools that would typically can be used to disassemble the product to a point where components and materials requiring selective treatment can be removed.

Phillip head Screwdriver


Hex Screwdriver

Penknife

3.1 Disassembly Procedures:




Step	Figure	Remark
<p><b>S1.Before disassemble</b></p>		<p>Turn off power, Unplug external cables from product</p>
<p><b>S2. Remove the STAND-BASE ASS'Y</b></p>		<p>Press the button on the red then pull out the stand upward, stand will be remove.</p> <p><b>Note:</b> To prevent scratches on the LCD screen while removing the stand, ensure that the monitor is placed on a soft, clean surface.</p>

**S3.Remove the REAR COVER**

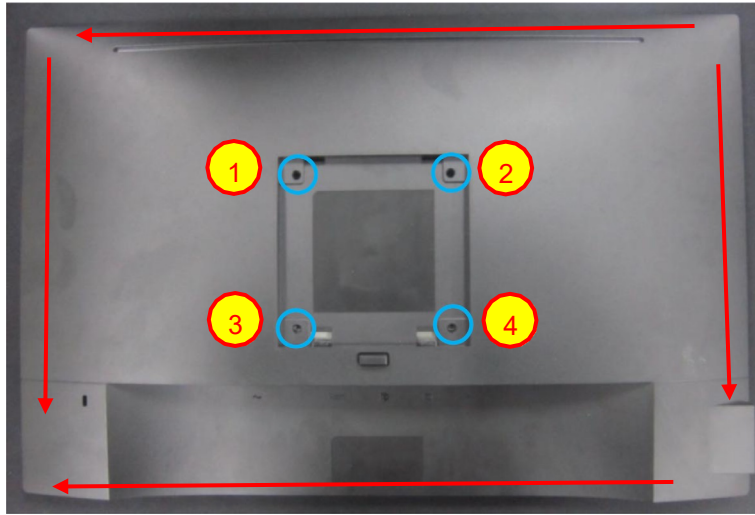

Use a Philips-head screwdriver to remove 4 screws for unlocking mechanisms.  
(No.1~4 screw size=M4x10;  
Torque=12±2kgf.cm  
2. Use Penknife to separate the bezel and rear cove follow the arrows in sequence, then you can take out rear cover..


**S4.Remove the Cables and key board**

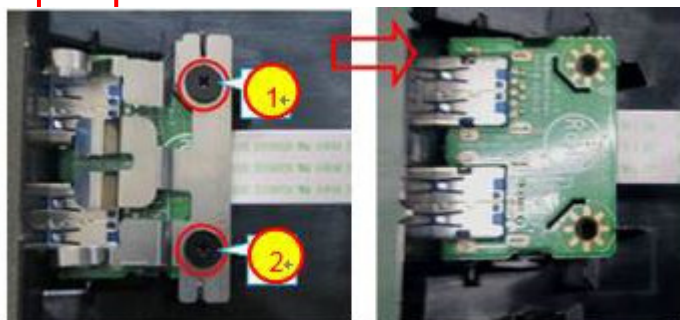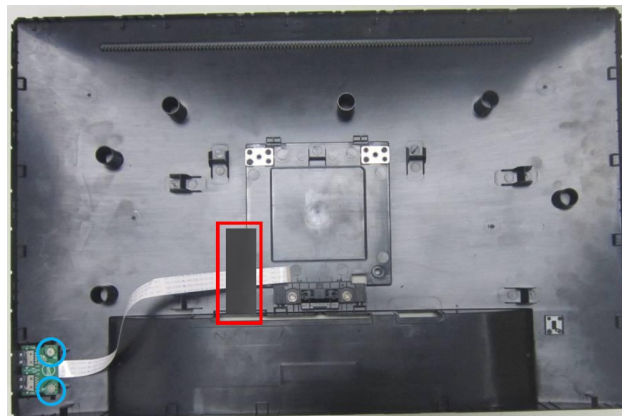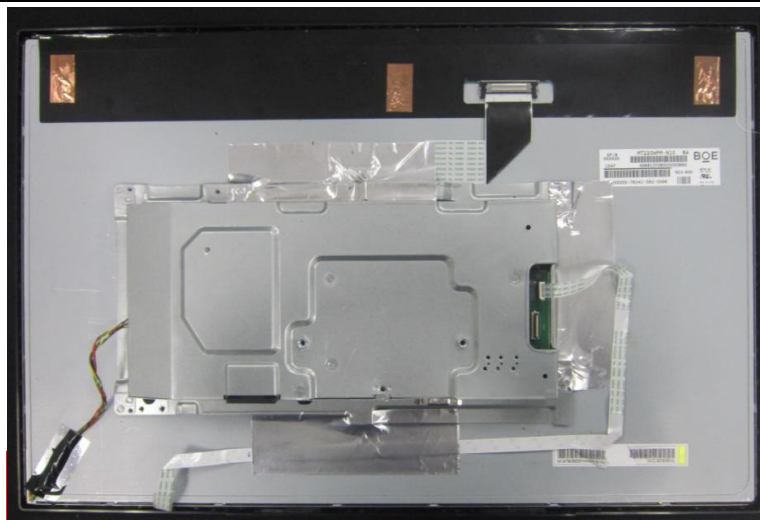

Disconnect the pins.




Use a Philips-head screwdriver to remove 2 screws for unlocking USB board.  
(No.1~2 screw size=Q3x4;  
Torque=4±1kgf.cm)



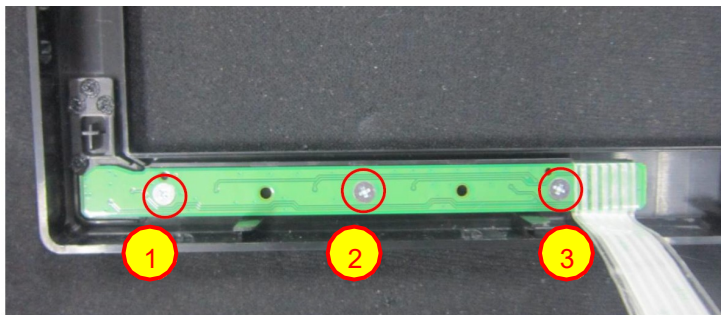

Use a Philips-head screwdriver to remove 3 screws for unlocking key board  
 (No.1~3 screw size=M2x2.5; Torque=0.9±0.4kgf.cm )

**S5.Remove the Main and Power Board**

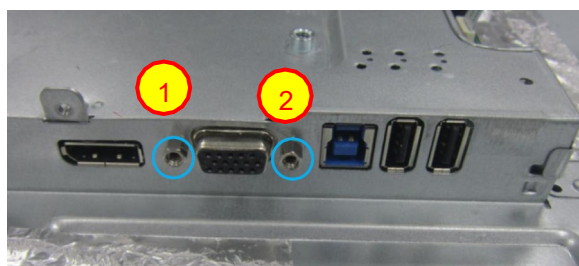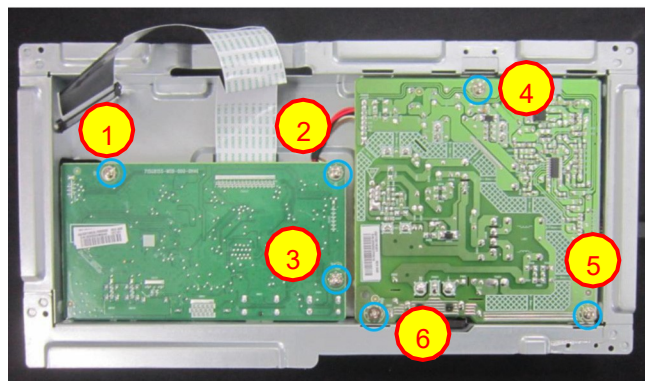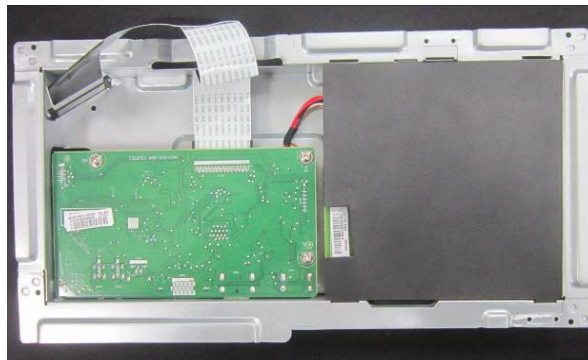


Remove the mylar

Use a Philips-head screwdriver to remove 6 screws for unlocking Main board and Power board  
 (No.1~5 screw size=D3x6; Torque=6±1kgf.cm  
 No.6 screw size=M4x6; Torque=6±1kgf.cm)



Use a hex screwdriver to remove 2 screws for unlocking mainboard  
 ( No.1~2 Hex screw Torque= 4.5±0.5kgf.cm)

**S6.The  
Mainframe**



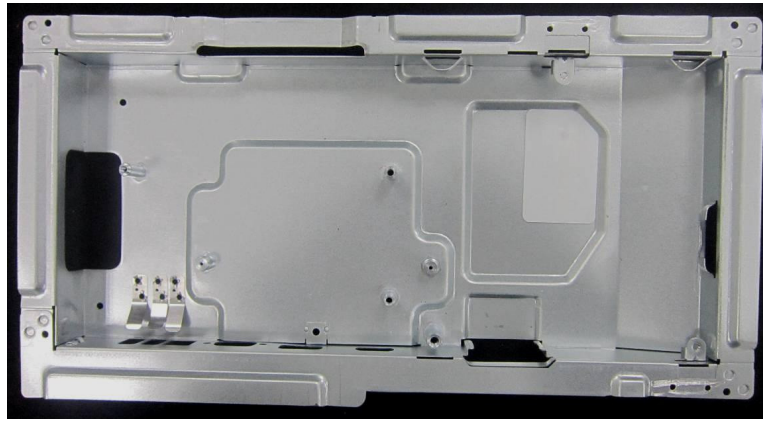


Mainframe

### 3.2 Assembly Procedures:

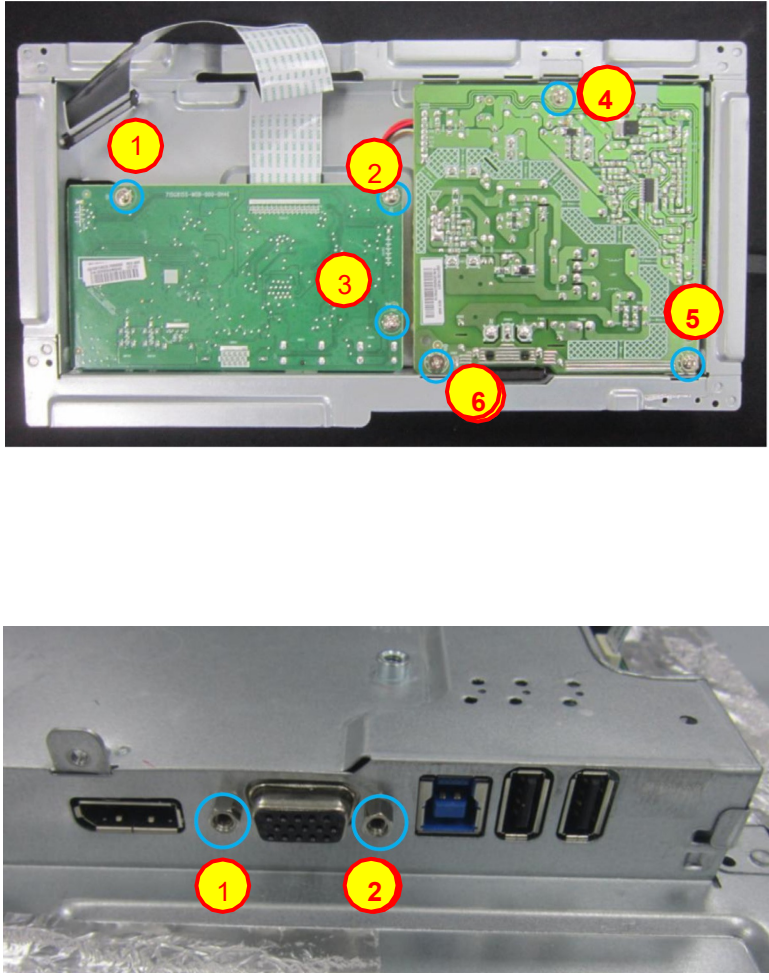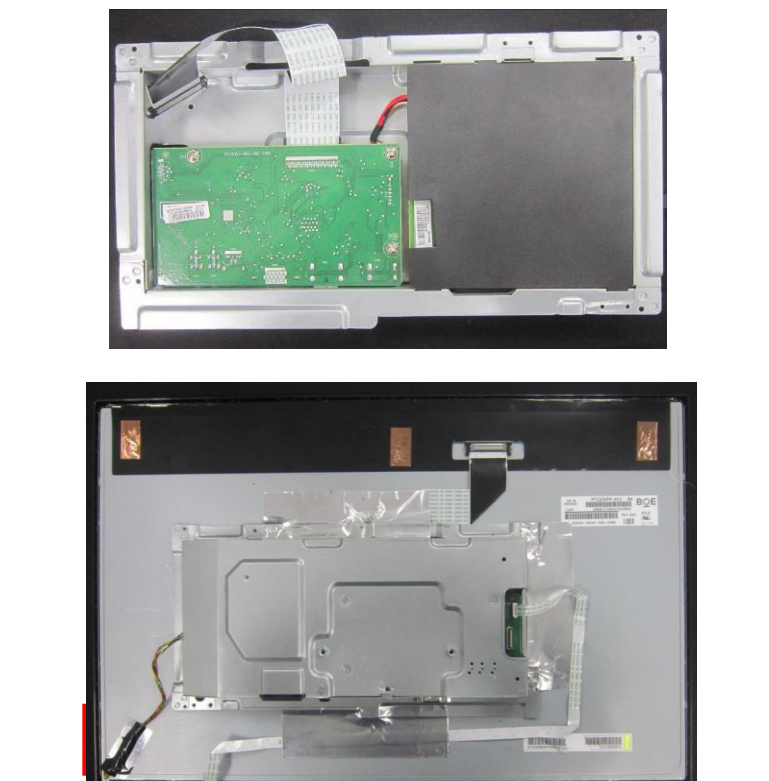Step	Figure	Remark
<p><b>S1.Assemble the Main and Power Board</b></p>		<p>Use a Philips-head screwdriver to screw 6 screws for locking Main board and Power board          (No.1~5 screw size=D3x6; Torque=6±1kgf.cm          No.6 screw size=M4x6; Torque=6±1kgf.cm)</p> <p>Use a hex screwdriver to screw 2 screws for locking mainboard          ( No.1~2 Hex screw Torque= 4.5±0.5kgf.cm)</p>
<p><b>S2.Assemble the main frame</b></p>		<p>Assembly the Maylar sheet</p> <p>Connect the Pins and paste the tapes</p>

**S3.Assemble the USBboard and key board**

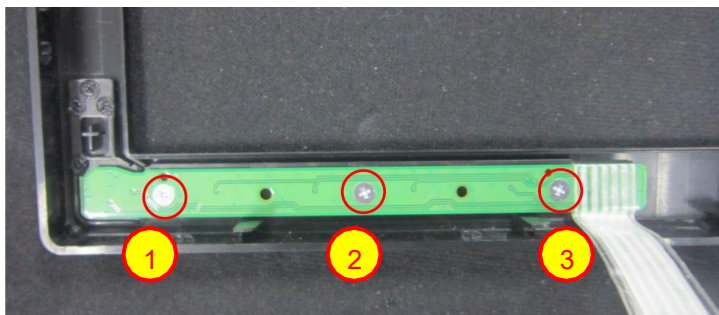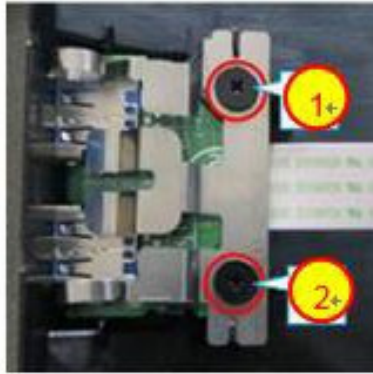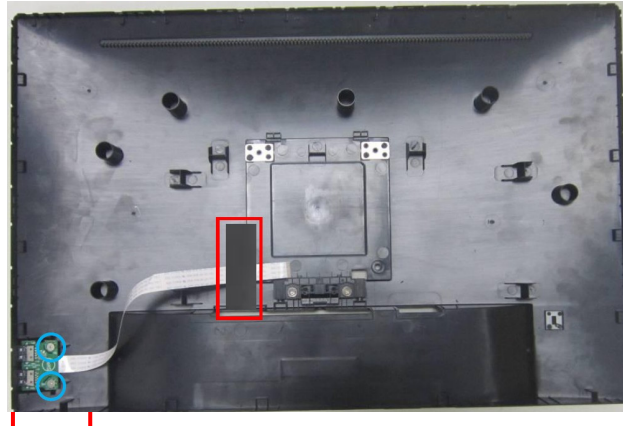

Connect the pin

Use a Philips-head screwdriver to screw 2 screws for locking USB board.

(No.1~2 screw

size=Q3x4;

Torque=4±1kgf.cm)

Use a Philips-head screwdriver to screw 3 screws for locking key board


(No.1~3 screw

size=M2x2.5;

Torque=0.9±0.4kgf.cm

)

**S4.Assembly  
the REAR  
COVER**

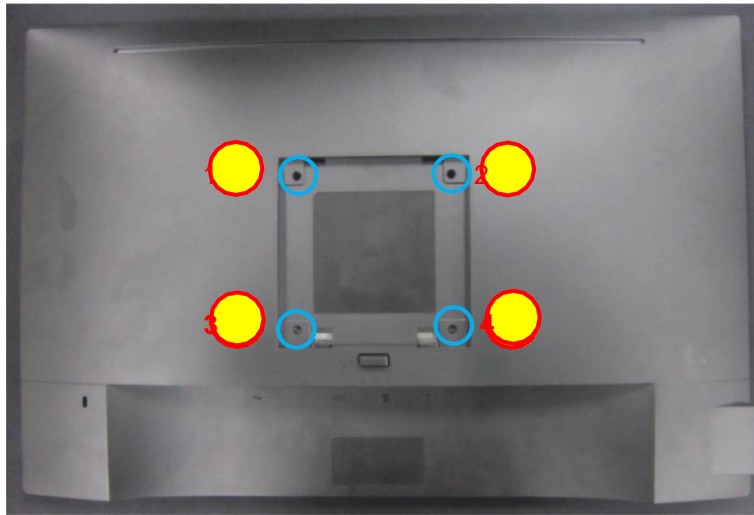


Use a Philips-head screwdriver to screw 4 screws for locking mechanisms.  
(No.1~4 screw size=M4x10;  
Torque=12±2kgf.cm

**S5. Assembly  
stand**



## 4. Trouble shooting instructions




 **WARNING:** Before you begin any of the procedures in this section, follow the [Safety instructions](#).

### Self-test

Your monitor provides a self-test feature that allows you to check if your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:


1. Turn off both your computer and the monitor.
2. Disconnect all video cables from the monitor. This way, the computer doesn't have to be involved.
3. Turn on the monitor.

If the monitor is working correctly, it detects that there is no signal and one of the following message appears. While in self-test mode, the power LED remains white.

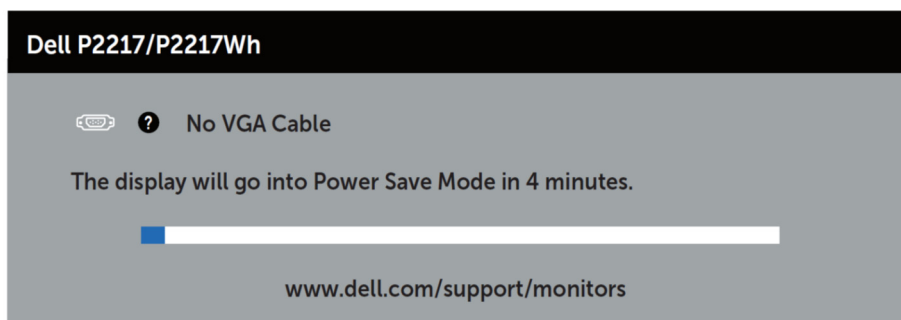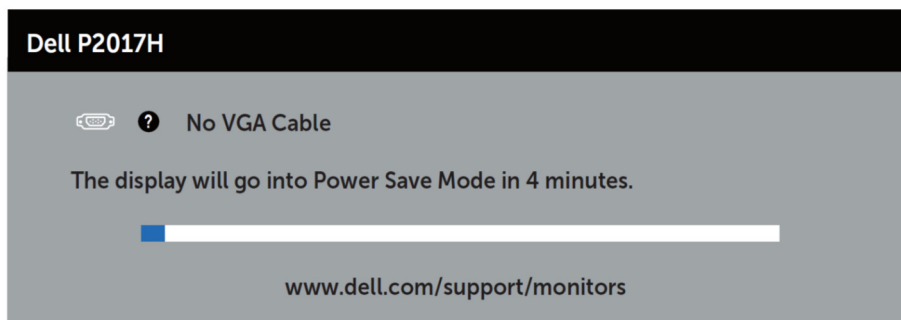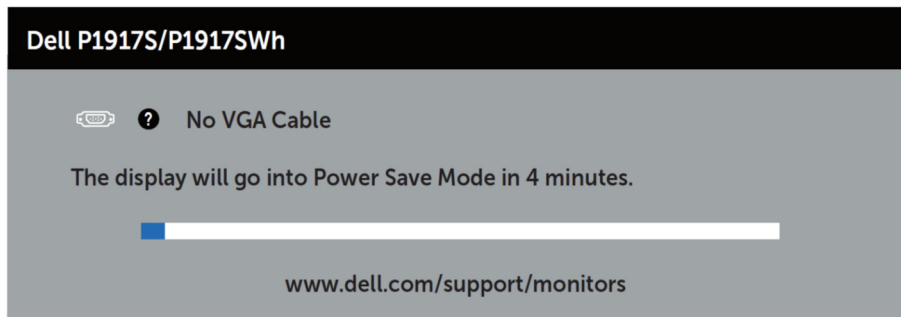

or

### Dell P1917S/P1917SWh


 ? No HDMI Cable

The display will go into Power Save Mode in 4 minutes.



[www.dell.com/support/monitors](http://www.dell.com/support/monitors)

### Dell P2017H


 ? No HDMI Cable

The display will go into Power Save Mode in 4 minutes.




[www.dell.com/support/monitors](http://www.dell.com/support/monitors)

### Dell P2217/P2217Wh

 ? No HDMI Cable


The display will go into Power Save Mode in 4 minutes.

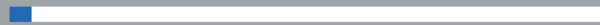

[www.dell.com/support/monitors](http://www.dell.com/support/monitors)

or

### Dell P1917S/P1917SWh


 ? No DP Cable

The display will go into Power Save Mode in 4 minutes.




[www.dell.com/support/monitors](http://www.dell.com/support/monitors)


### Dell P2017H


 ? No DP Cable

The display will go into Power Save Mode in 4 minutes.

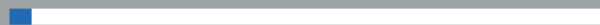

[www.dell.com/support/monitors](http://www.dell.com/support/monitors)

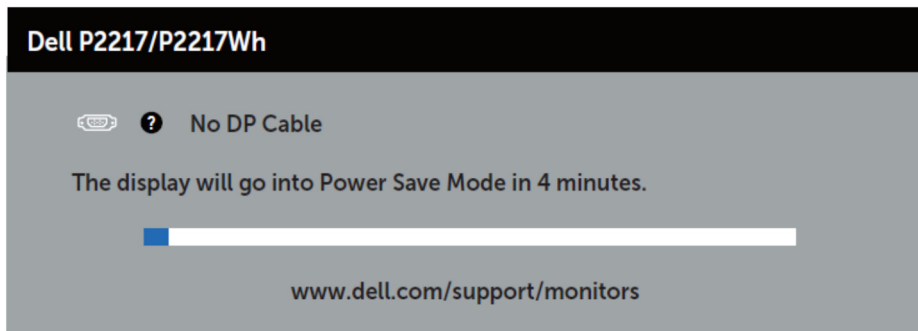

 **NOTE:** This box also appears during normal system operation, if the video cable is disconnected or damaged.


4. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.


If your monitor remains dark after you reconnect the cables, check your video controller and computer.



## Built-in diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if any screen abnormality you experience is an inherent problem with your monitor, or with your computer and video card.

 **NOTE:** You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in *self-test mode*.

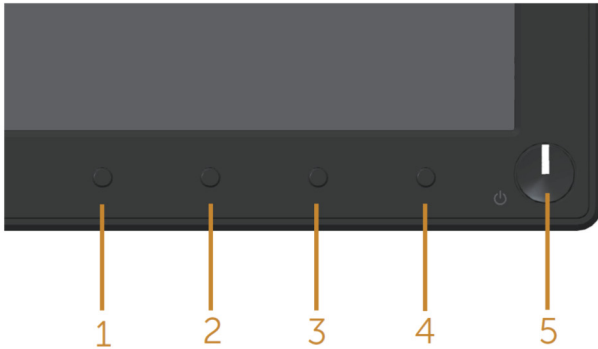

To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
3. Press and hold button 1 for 5 seconds. A gray screen appears.
4. Carefully inspect the screen for abnormalities.
5. Press button 1 on the front panel again. The color of the screen changes to red.
6. Inspect the display for any abnormalities.
7. Repeat steps 5 and 6 to inspect the display in green, blue, black, white and text screens.

The test is complete when the text screen appears. To exit, press button 4 again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.

# Common problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

Common Symptoms	Possible Solutions
No video/power LED off	<ul style="list-style-type: none"><li>• Ensure that the video cable connecting the monitor and the computer is properly connected and secure.</li><li>• Verify that the power outlet is functioning properly using any other electrical equipment.</li><li>• Ensure that the correct input source is selected via the <a href="#">Input source</a> menu.</li></ul>
No video/power LED on	<ul style="list-style-type: none"><li>• Increase brightness and contrast controls using the OSD.</li><li>• Perform monitor self-test feature check.</li><li>• Check for bent or broken pins in the video cable connector.</li><li>• Run the built-in diagnostics.</li><li>• Ensure that the correct input source is selected via the <a href="#">Input source</a> menu.</li></ul>
Poor focus	<ul style="list-style-type: none"><li>• Eliminate video extension cables.</li><li>• Reset the monitor to Factory Settings (<b>Factory Reset</b>).</li><li>• Change the video resolution to the correct aspect ratio.</li></ul>
Shaky/jittery video	<ul style="list-style-type: none"><li>• Reset the monitor to Factory Settings (<b>Factory Reset</b>).</li><li>• Check environmental factors.</li><li>• Relocate the monitor and test in another room.</li></ul>
Missing pixels	<ul style="list-style-type: none"><li>• Cycle power on-off.</li><li>• Pixel that is permanently Off is a natural defect that can occur in LCD technology.</li><li>• For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at <a href="http://www.dell.com/support/monitors">www.dell.com/support/monitors</a>.</li></ul>
Stuck-on pixels	<ul style="list-style-type: none"><li>• Cycle power on-off.</li><li>• Pixel that is permanently off is a natural defect that can occur in LCD technology.</li><li>• For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at <a href="http://www.dell.com/support/monitors">www.dell.com/support/monitors</a>.</li></ul>
Brightness problems	<ul style="list-style-type: none"><li>• Reset the monitor to Factory Settings (<b>Factory Reset</b>).</li><li>• Adjust brightness &amp; contrast controls via OSD.</li></ul>
Geometric distortion	<ul style="list-style-type: none"><li>• Reset the monitor to Factory Settings (<b>Factory Reset</b>).</li><li>• Adjust horizontal &amp; vertical controls via OSD.</li></ul>
Horizontal/vertical lines	<ul style="list-style-type: none"><li>• Reset the monitor to Factory Settings (<b>Factory Reset</b>).</li><li>• Perform monitor self-test feature check and determine if these lines are also in self-test mode.</li><li>• Check for bent or broken pins in the video cable connector.</li><li>• Run the built-in diagnostics.</li></ul>

Synchronization problems	<ul style="list-style-type: none"> <li>• Reset the monitor to Factory Settings (<b>Factory Reset</b>).</li> <li>• Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode.</li> <li>• Check for bent or broken pins in the video cable connector.</li> <li>• Restart the computer in the <i>safe mode</i>.</li> </ul>
Safety related issues	<ul style="list-style-type: none"> <li>• Do not perform any troubleshooting steps.</li> <li>• Contact Dell immediately.</li> </ul>
Intermittent problems	<ul style="list-style-type: none"> <li>• Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>• Reset the monitor to Factory Settings (<b>Factory Reset</b>).</li> <li>• Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.</li> </ul>
Missing color	<ul style="list-style-type: none"> <li>• Perform monitor self-test feature check.</li> <li>• Ensure that the video cable connecting the monitor to the computer is connected properly and is secure.</li> <li>• Check for bent or broken pins in the video cable connector.</li> </ul>
Wrong color	<ul style="list-style-type: none"> <li>• Change the <b>Color Setting Mode</b> in the <b>Color Settings</b> OSD to <b>Graphics</b> or <b>Video</b> depending on the application.</li> <li>• Try different <b>Preset Modes</b> in <b>Color</b> settings OSD. Adjust <b>R/G/B</b> value in <b>Custom Color</b> in <b>Color</b> settings OSD.</li> <li>• Change the <b>Input Color Format</b> to <b>RGB</b> or <b>YPbPr</b> in the <b>Color</b> settings OSD.</li> <li>• Run the built-in diagnostics.</li> </ul>
Image retention from a static image left on the monitor for a long period of time	<ul style="list-style-type: none"> <li>• Use the Power Management feature to turn off the monitor at all times when not in use (for more information, see <a href="#">Power management modes</a>).</li> <li>• Alternatively, use a dynamically changing screensaver.</li> </ul>
Video ghosting or overshooting	<ul style="list-style-type: none"> <li>• Change the <b>Response Time</b> in the <b>Display</b> OSD to <b>Fast</b> or <b>Normal</b> depending on your application and usage.</li> </ul>