

Inspiron 14 5415

Service Manual



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Chapter 1: Working inside your computer	6
Before working inside your computer	6
Safety instructions	6
Radiation Exposure Statement	7
Electrostatic discharge—ESD protection	7
ESD field service kit	8
Transporting sensitive components	9
After working inside your computer	9
Chapter 2: Removing and installing components	10
Recommended tools	10
Screw list	10
Major components of Inspiron 14 5415	11
Base cover	12
Removing the base cover	12
Installing the base cover	14
Battery cable	16
Removing the 3-cell battery cable	16
Installing the 3-cell battery cable	17
Removing the 4-cell battery cable	18
Installing the 4-cell battery cable	19
Battery	20
Lithium-ion battery precautions	20
Removing the 3-cell battery	21
Installing the 3-cell battery	21
Removing the 4-cell battery	22
Installing the 4-cell battery	23
Coin-cell battery	24
Removing the coin-cell battery	24
Installing the coin-cell battery	25
Solid-state drive	26
Removing the M.2 2230 solid-state drive	26
Installing the M.2 2230 solid-state drive	27
Removing the M.2 2280 solid-state drive	28
Installing the M.2 2280 solid-state drive	29
Installing the solid-state drive mounting bracket	30
Memory module	32
Removing the memory	32
Installing the memory	33
Wireless card	34
Removing the wireless card	34
Installing the wireless card	35
Power-adaptor port	36
Removing the power-adaptor port	36


Installing the power-adapter port.....	37
Display assembly.....	38
Removing the display assembly.....	38
Installing the display assembly.....	39
I/O board.....	41
Removing the I/O board.....	41
Installing the I/O board.....	42
Speakers.....	43
Removing the speakers.....	43
Installing the speakers.....	44
Touchpad.....	45
Removing the touchpad.....	45
Installing the touchpad.....	46
Fan.....	47
Removing the fan.....	47
Installing the fan.....	48
Heat sink.....	49
Removing the heat sink.....	49
Installing the heat sink.....	50
Power button with optional fingerprint reader.....	51
Removing the power-button with optional fingerprint reader.....	51
Installing the power-button with optional fingerprint reader.....	51
System board.....	52
Removing the system board.....	52
Installing the system board.....	55
Palm-rest and keyboard assembly.....	59
Removing the palm-rest and keyboard assembly.....	59
Installing the palm-rest and keyboard assembly.....	60
Chapter 3: Drivers and downloads.....	62
Chapter 4: System setup.....	63
Entering BIOS setup program.....	63
Navigation keys.....	63
Boot Sequence.....	64
System setup options.....	64
System and setup password.....	69
Assigning a system setup password.....	69
Deleting or changing an existing system setup password.....	70
Clearing CMOS settings.....	70
Clearing BIOS (System Setup) and System passwords.....	70
Updating the BIOS.....	71
Updating the BIOS in Windows.....	71
Updating the BIOS using the USB drive in Windows.....	71
Updating the BIOS in Linux and Ubuntu.....	71
Updating the BIOS from the F12 One-Time boot menu.....	71
Chapter 5: Troubleshooting.....	73
Handling swollen Lithium-ion batteries.....	73

Locate the Service Tag or Express Service Code of your Dell computer	73
System-diagnostic lights.....	74
SupportAssist On-board Diagnostics.....	75
Recovering the operating system.....	75
WiFi power cycle.....	75
Drain residual flea power (perform hard reset).....	76
 Chapter 6: Getting help and contacting Dell.....	 77




Working inside your computer

Before working inside your computer

About this task


 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.


Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. Click **Start** >  **Power** > **Shut down**.
 **NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
3. Disconnect your computer and all attached devices from their electrical outlets.
4. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
 **CAUTION:** To disconnect a network cable, first unplug the cable from your computer and then unplug the cable from the network device.
5. Remove any media card and optical disc from your computer, if applicable.

Safety instructions


Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that you have read the safety information that shipped with your computer.


 **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


 **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.

 **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.

 **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.

 **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that is shipped with the product or at www.dell.com/regulatory_compliance.

 **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.

 **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable.

When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the ports and the connectors are correctly oriented and aligned.

 **CAUTION:** Press and eject any installed card from the media-card reader.

 **CAUTION:** Exercise caution when handling Lithium-ion batteries in laptops. Swollen batteries should not be used and should be replaced and disposed properly.


 **NOTE:** The color of your computer and certain components may appear differently than shown in this document.

Radiation Exposure Statement

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W

 **NOTE:** Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory DIMMs, and system boards. Very slight charges can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Due to the increased density of semiconductors used in recent Dell products, the sensitivity to static damage is now higher than in previous Dell products. For this reason, some previously approved methods of handling parts are no longer applicable.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory DIMM that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The DIMM receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, etc.

The more difficult type of damage to recognize and troubleshoot is the intermittent (also called latent or "walking wounded") failure.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. The use of wireless anti-static straps is no longer allowed; they do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, ensure that you discharge static electricity from your body.
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

ESD field service kit

The unmonitored Field Service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

Components of an ESD field service kit

The components of an ESD field service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the mat and to any bare metal on the system being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the mat. ESD-sensitive items are safe in your hand, on the ESD mat, in the system, or inside a bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the ESD mat is not required, or connected to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the ESD mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, mat, and bonding wire. Never use wireless wrist straps. Always be aware that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside of an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap prior to each service call, and at a minimum, test once per week. A wrist strap tester is the best method for doing this test. If you do not have your own wrist strap tester, check with your regional office to find out if they have one. To perform the test, plug the wrist-strap's bonding-wire into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.
- **Insulator Elements** – It is critical to keep ESD sensitive devices, such as plastic heat sink casings, away from internal parts that are insulators and often highly charged.
- **Working Environment** – Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or portable environment. Servers are typically installed in a rack within a data center; desktops or portables are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of system that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as Styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.
- **ESD Packaging** – All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged part using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the ESD mat, in the system, or inside an anti-static bag.
- **Transporting Sensitive Components** – When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

ESD protection summary


It is recommended that all field service technicians use the traditional wired ESD grounding wrist strap and protective anti-static mat at all times when servicing Dell products. In addition, it is critical that technicians keep sensitive parts separate from all insulator parts while performing service and that they use anti-static bags for transporting sensitive components.

Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

Lifting equipment


Adhere to the following guidelines when lifting heavy weight equipment:

 **CAUTION:** Do not lift greater than 50 pounds. Always obtain additional resources or use a mechanical lifting device.

1. Get a firm balanced footing. Keep your feet apart for a stable base, and point your toes out.
2. Tighten stomach muscles. Abdominal muscles support your spine when you lift, offsetting the force of the load.
3. Lift with your legs, not your back.
4. Keep the load close. The closer it is to your spine, the less force it exerts on your back.
5. Keep your back upright, whether lifting or setting down the load. Do not add the weight of your body to the load. Avoid twisting your body and back.
6. Follow the same techniques in reverse to set the load down.

After working inside your computer

About this task

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.

Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, discs, or any other parts that you removed before working on your computer.
4. Connect your computer and all attached devices to their electrical outlets.
5. Turn on your computer.

Removing and installing components

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #1
- Plastic scribe

Screw list

NOTE: When removing screws from a component, it is recommended to note the screw type, the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.

NOTE: Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.

NOTE: Screw color may vary with the configuration ordered.

Table 1. Screw list
















Component	Secured to	Screw type	Quantity	Screw image
Base cover	Palm-rest and keyboard assembly	M2x4	5	
Base cover	Palm-rest and keyboard assembly	M2x7 (captive)	2	
Battery	Palm-rest and keyboard assembly	M2x3	<ul style="list-style-type: none"> • 3-cell: 4 • 4-cell: 5 	
Solid-state drive	Palm-rest and keyboard assembly	M2x3	1 per solid-state drive	
Fan	Palm-rest and keyboard assembly	M2x2	2	
Wireless-card bracket	System board	M2x4	1	
Touchpad	Palm-rest and keyboard assembly	M2x1.8	2	
Touchpad bracket	Palm-rest and keyboard assembly	M1.6x2	3	
Power-button with optional fingerprint reader	Palm-rest and keyboard assembly	M2x3	1	

Table 1. Screw list (continued)

Component	Secured to	Screw type	Quantity	Screw image
Power-adapter port	Palm-rest and keyboard assembly	M2x3	1	
Type-C port bracket	System board	M2x4	2	
Display hinges	Palm-rest and keyboard assembly	M2.5x4	4	
I/O board	Palm-rest and keyboard assembly	M2x3	1	
System board	Palm-rest and keyboard assembly	M2x2	2	

Major components of Inspiron 14 5415

The following image shows the major components of Inspiron 14 5415.

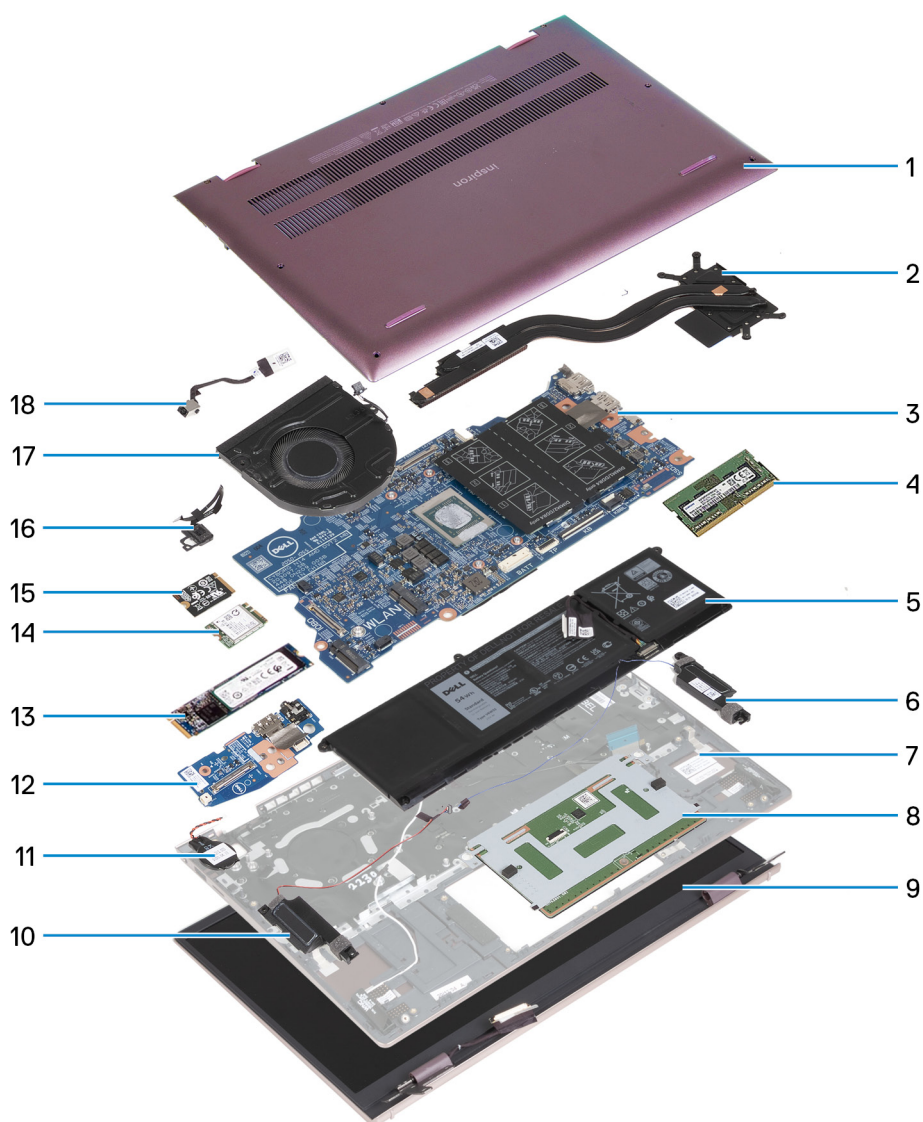

1. Base cover
2. Heat sink
3. System board
4. Memory
5. Battery
6. Right speaker
7. Palm-rest and keyboard assembly
8. Touchpad
9. Display assembly
10. Left speaker
11. Coin-cell battery
12. I/O board
13. M.2 2280 solid-state drive, if installed
14. Wireless card
15. M.2 2230 solid-state drive, if installed
16. Power-button with optional fingerprint-reader
17. Fan
18. Power-adaptor port

NOTE: Dell provides a list of components and their part numbers for the original system configuration purchased. These parts are available according to warranty coverages purchased by the customer. Contact your Dell sales representative for purchase options.

Base cover

Removing the base cover

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

About this task

NOTE: Before removing the base cover, ensure that there is no micro-SD card installed in the micro-SD card slot on your computer.

The following image(s) indicate the location of the base cover and provides a visual representation of the removal procedure.



5x
M2x4






2x

1



2

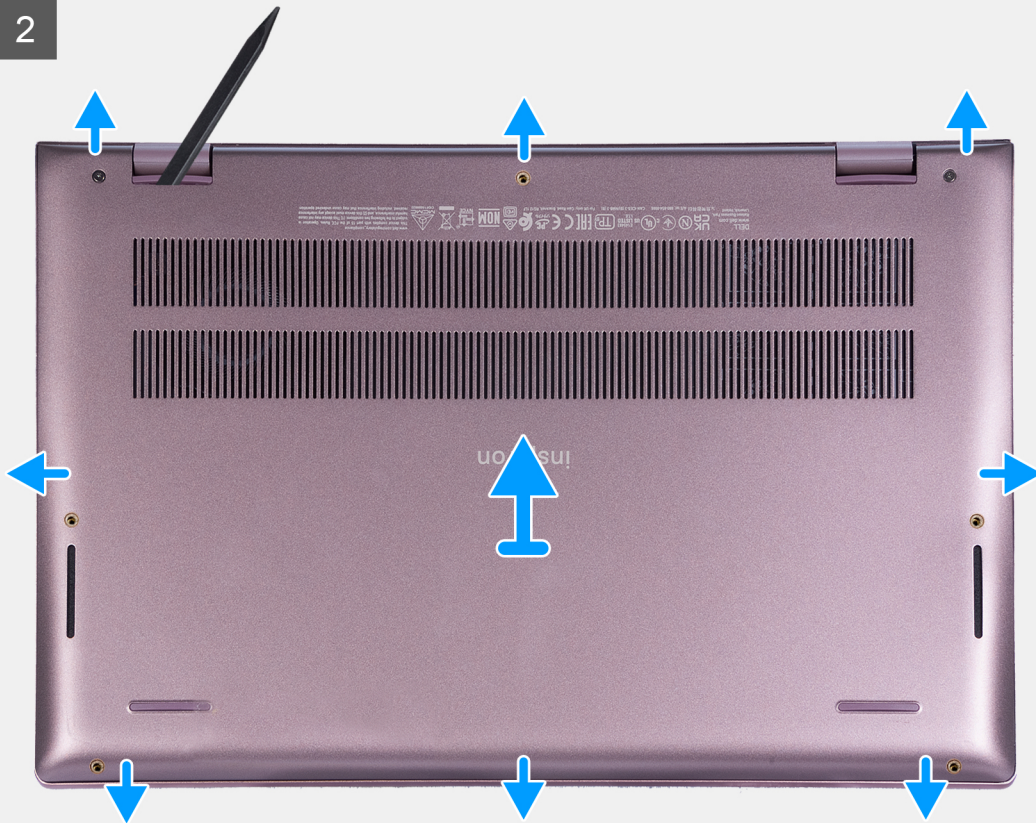

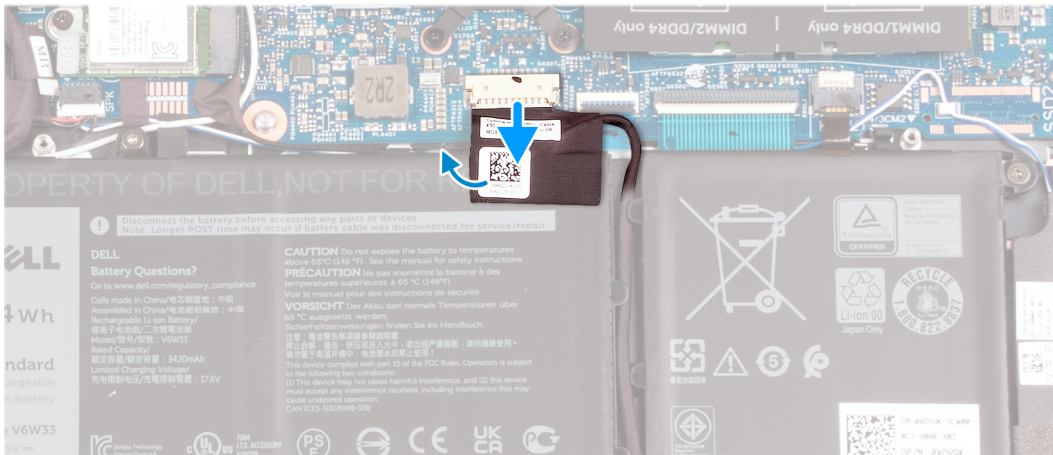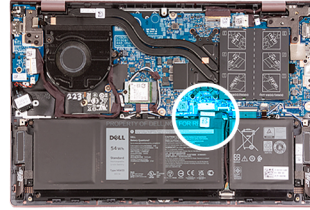

Steps

1. Remove the five screws (M2x4) that secure the base cover to the palm-rest and keyboard assembly.
2. Loosen the two captive screws that secure the base cover to the palm-rest and keyboard assembly.
3. Using a plastic scribe, pry the base cover from the bottom left and continue to work on the sides to open the base cover.
4. Lift the base cover off the palm-rest and keyboard assembly.
5. Peel the tape that secures the battery cable to the battery.
6. Disconnect the battery cable from the system board.
7. Press and hold the power button for 20 seconds to ground the computer and drain the flea power.

Installing the base cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task



The following image(s) indicate the location of the base cover and provides a visual representation of the installation procedure.



5x
M2x4



2x

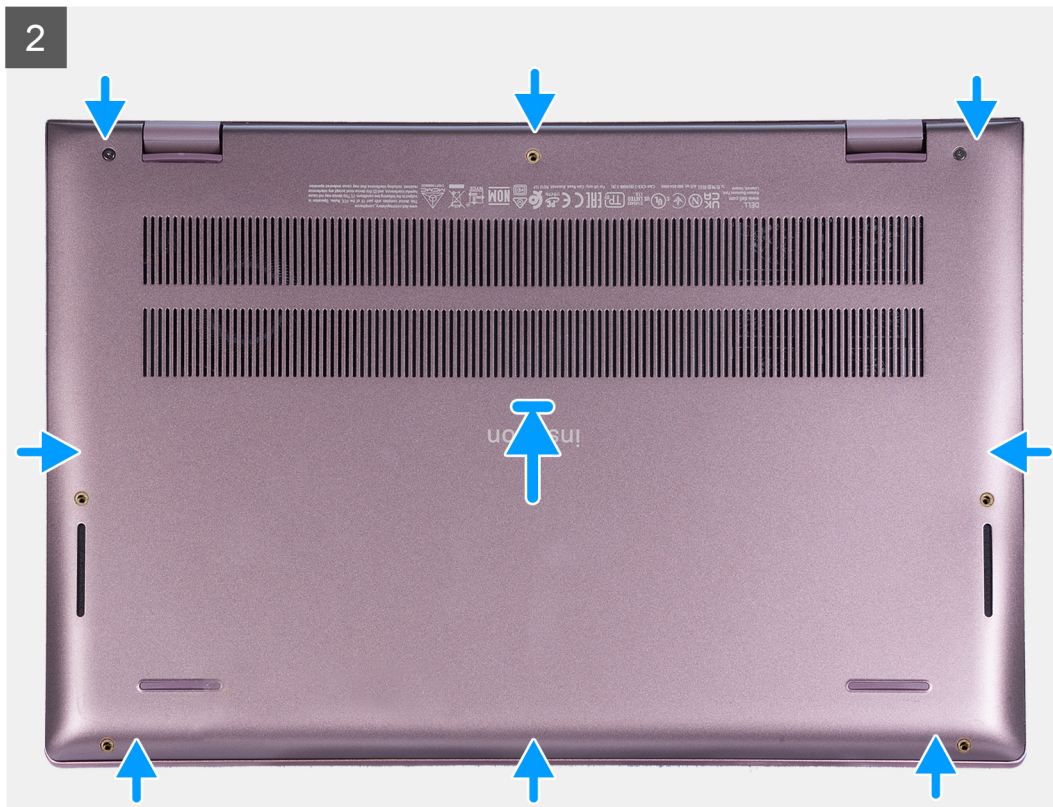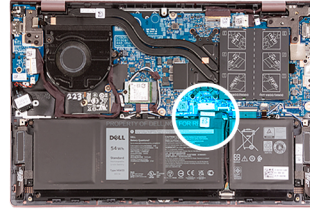



Steps

1. Connect the battery cable to the system board.
2. Adhere the tape that secures the battery cable to the battery.
3. Place and snap the base cover into place on the palm-rest and keyboard assembly.
4. Tighten the two captive screws that secure the base cover to the palm-rest and keyboard assembly.
5. Replace the five screws (M2x4) that secure the base cover to the palm-rest and keyboard assembly.

Next steps

1. Follow the procedure in [After working inside your computer](#).

Battery cable



Removing the 3-cell battery cable

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the 3-cell battery cable and provides a visual representation of the removal procedure.

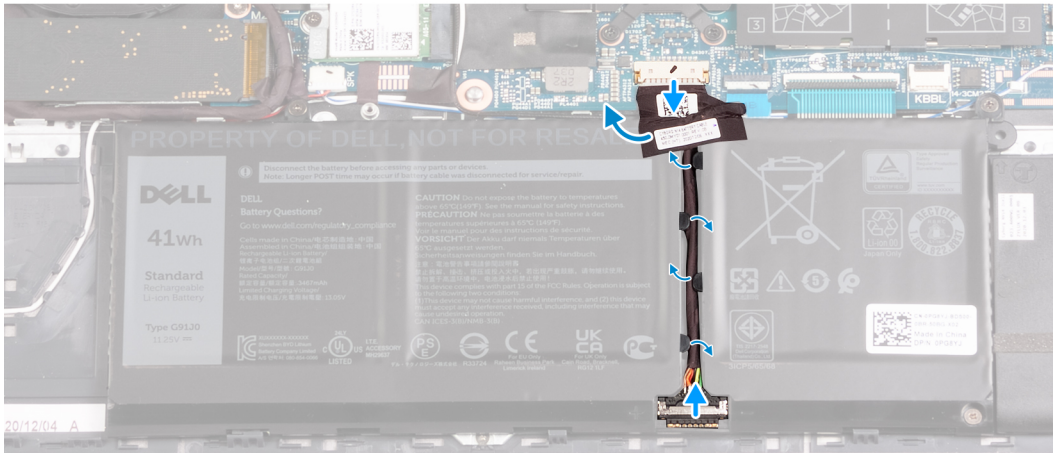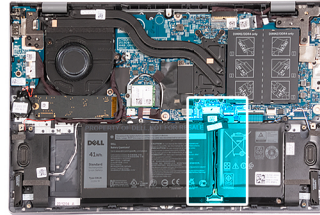

Steps

1. Peel the tape that secures the battery cable to the 3-cell battery.
2. Disconnect the battery cable from the system board.
3. Remove the battery cable from the routing guides on the 3-cell battery.
4. Disconnect the battery cable from the 3-cell battery.
5. Lift the battery cable off the 3-cell battery.



Installing the 3-cell battery cable

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the 3-cell battery cable and provides a visual representation of the installation procedure.

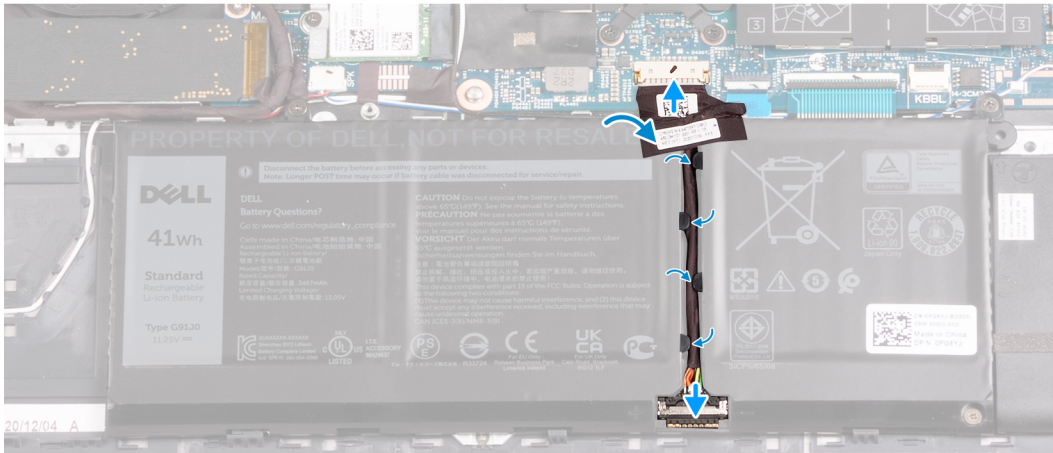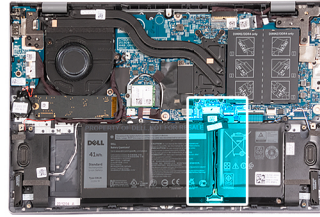

Steps

1. Connect the battery cable to the 3-cell battery.
2. Route the battery cable through the routing guides on the 3-cell battery.
3. Connect the battery cable to the system board.
4. Adhere the tape that secures the battery cable to the 3-cell battery.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).


Removing the 4-cell battery cable

Prerequisites



1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the 4-cell battery cable and provides a visual representation of the removal procedure.

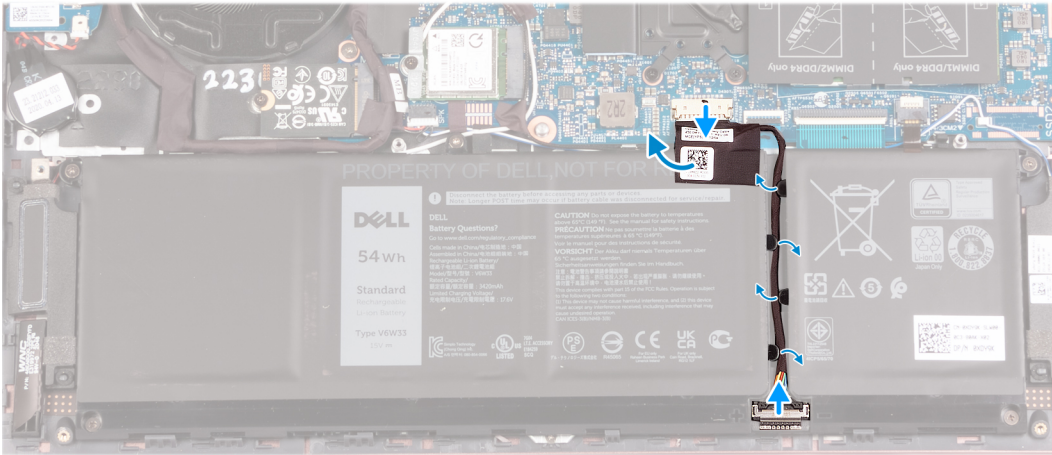

1. Peel the tape that secures the battery cable to the 4-cell battery.
2. Disconnect the battery cable from the system board.
3. Remove the battery cable from the routing guides on the 4-cell battery.
4. Disconnect the battery cable from the 4-cell battery.
5. Lift the battery cable off the 4-cell battery.

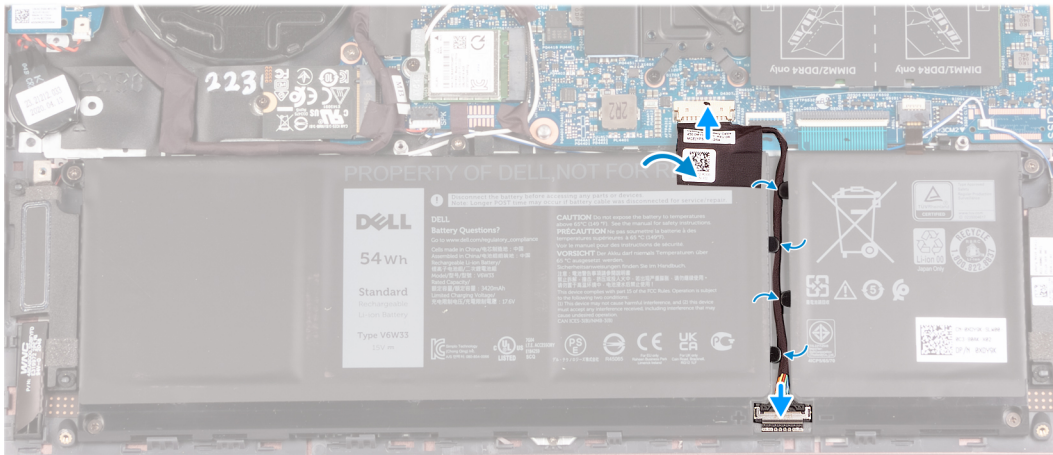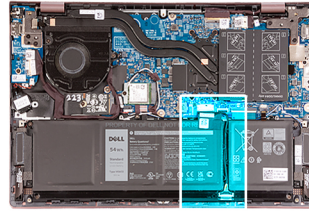

Steps

1. Connect the battery cable to the 4-cell battery.
2. Route the battery cable through the routing guides on the 4-cell battery.
3. Connect the battery cable to the system board.
4. Adhere the tape that secures the battery cable to the 4-cell battery.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Battery

Lithium-ion battery precautions

⚠ CAUTION:

- Exercise caution when handling Lithium-ion batteries.
- Discharge the battery completely before removing it. Disconnect the AC power adapter from the system and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any kind to pry on or against the battery.
- Ensure any screws during the servicing of this product are not lost or misplaced, to prevent accidental puncture or damage to the battery and other system components.

- If the battery gets stuck inside your computer as a result of swelling, do not try to release it as puncturing, bending, or crushing a lithium-ion battery can be dangerous. In such an instance, contact Dell technical support for assistance. See www.dell.com/contactdell.
- Always purchase genuine batteries from www.dell.com or authorized Dell partners and resellers.
- Swollen batteries should not be used and should be replaced and disposed properly. For guidelines on how to handle and replace swollen Lithium-ion batteries, see [Handling swollen Lithium-ion batteries](#).


Removing the 3-cell battery

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the 3-cell battery and provides a visual representation of the removal procedure.

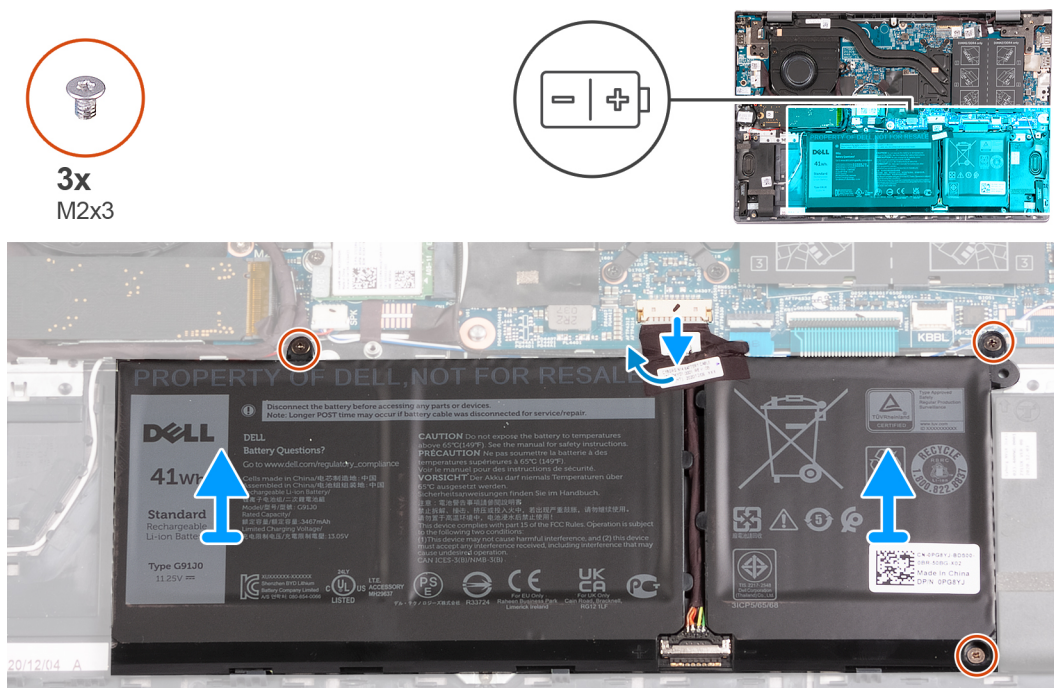

Steps

1. Peel the tape that secures the battery cable to the 3-cell battery.
2. Disconnect the battery cable from the system board.
3. Remove the three screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
4. Lift the battery off the palm-rest and keyboard assembly.


Installing the 3-cell battery

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the 3-cell battery and provides a visual representation of the installation procedure.

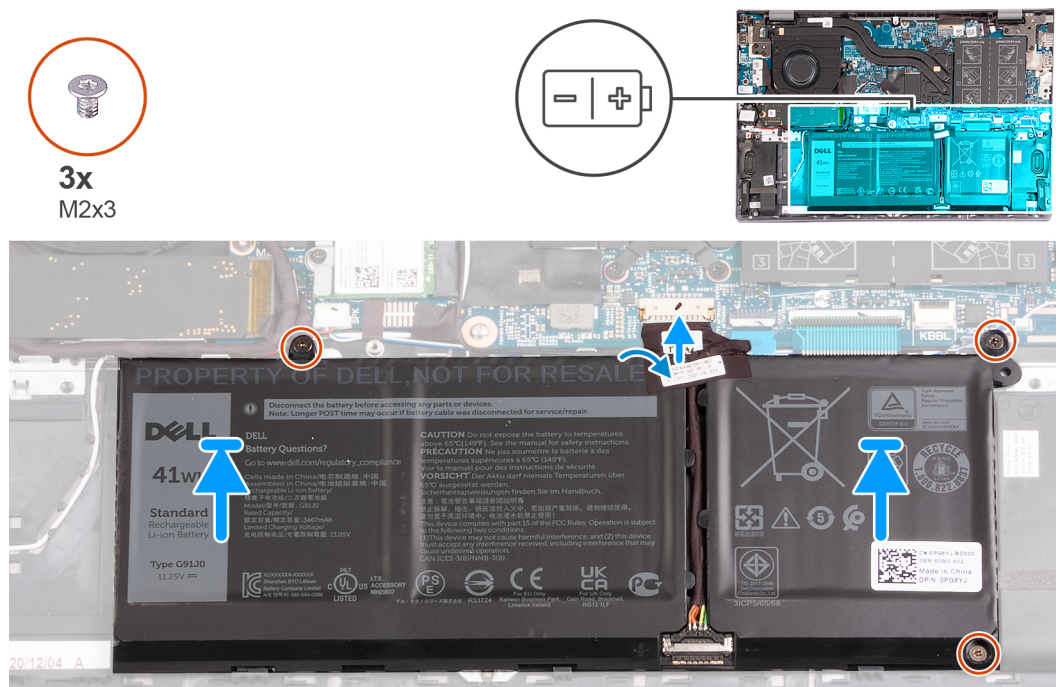

Steps

1. Align the screw holes on the battery with the screw holes on the palm-rest and keyboard assembly.
2. Replace the three screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
3. Connect the battery cable to the system board.
4. Adhere the tape that secures the battery cable to the 3-cell battery.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Removing the 4-cell battery

Prerequisites




1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the 4-cell battery and provides a visual representation of the removal procedure.



5x
M2x3

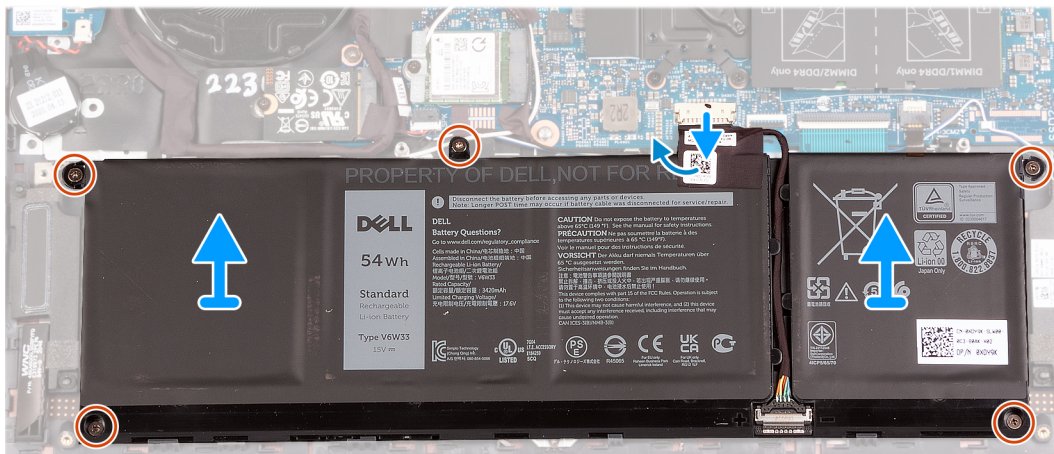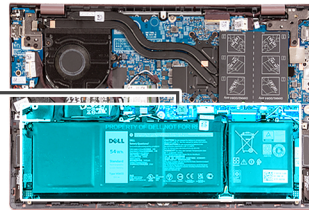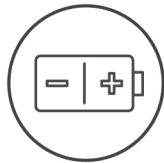

Steps

1. Peel the tape that secures the battery cable to the 4-cell battery.
2. Disconnect the battery cable from the system board, if applicable.
3. Remove the five screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
4. Lift the battery off the palm-rest and keyboard assembly.

Installing the 4-cell battery

Prerequisites




If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the 4-cell battery and provides a visual representation of the installation procedure.



5x
M2x3

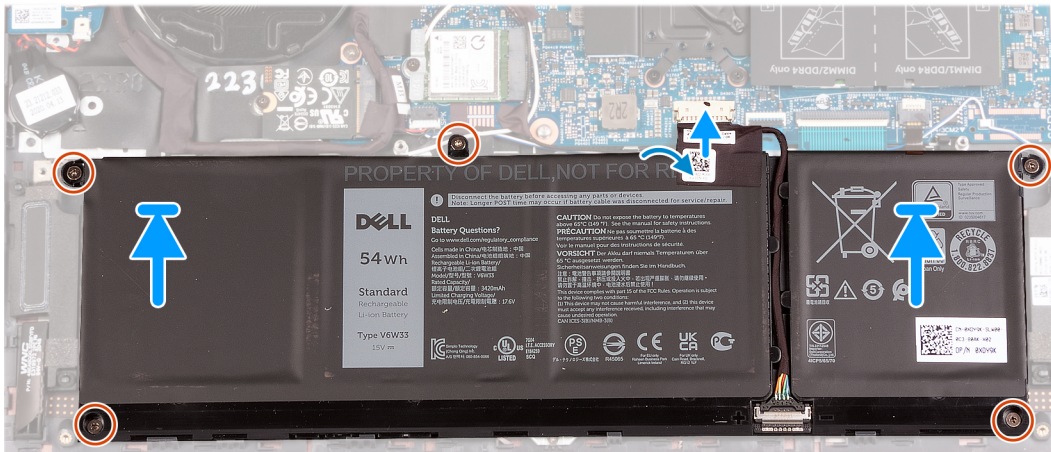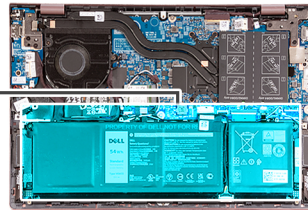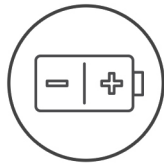

Steps

1. Align the screw holes on the battery with the screw holes on the palm-rest and keyboard assembly.
2. Replace the five screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
3. Connect the battery cable to the system board.
4. Adhere the tape that secures the battery cable to the 4-cell battery.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Coin-cell battery



Removing the coin-cell battery

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the coin-cell battery and provides a visual representation of the removal procedure.

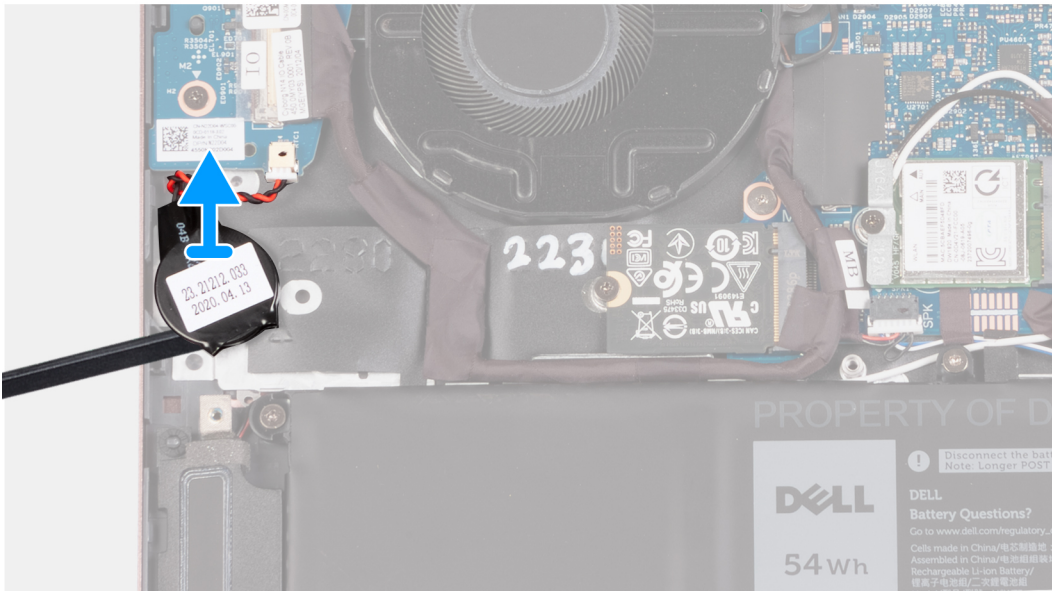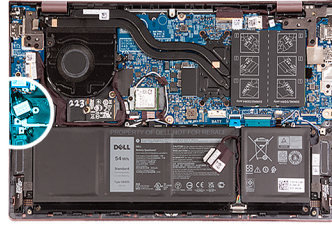

Steps

1. Disconnect the coin-cell battery from the I/O board.
2. Peel and lift the coin-cell battery from the palm-rest and keyboard assembly.



Installing the coin-cell battery

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the coin-cell battery and provides a visual representation of the installation procedure.

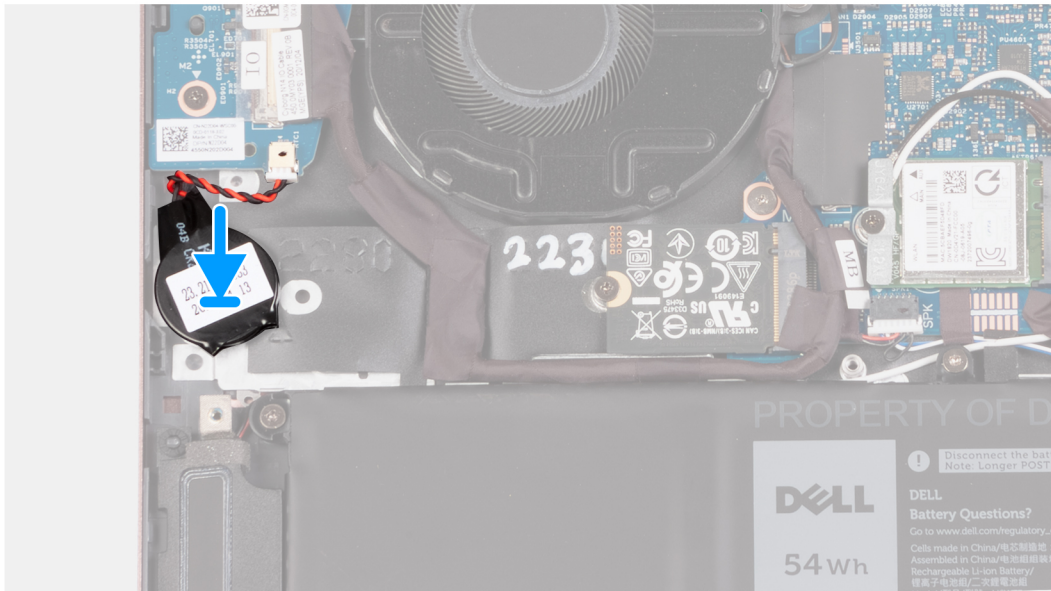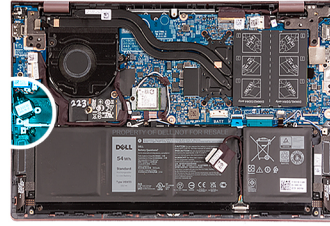

Steps

1. Connect the coin-cell battery cable to the I/O board.
2. Adhere the coin-cell battery to the palm-rest and keyboard assembly.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Solid-state drive

Removing the M.2 2230 solid-state drive


Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

- NOTE:** This procedure applies only to computers shipped with an M.2 2230 solid-state drive installed.
- NOTE:** The M.2 card installed on your computer will depend on the configuration ordered. Supported card configurations on the M.2 card slot:
 - M.2 2230 solid-state drive
 - M.2 2280 solid-state drive

The following image(s) indicate the location of the M.2 2230 solid-state drive and provides a visual representation of the removal procedure.

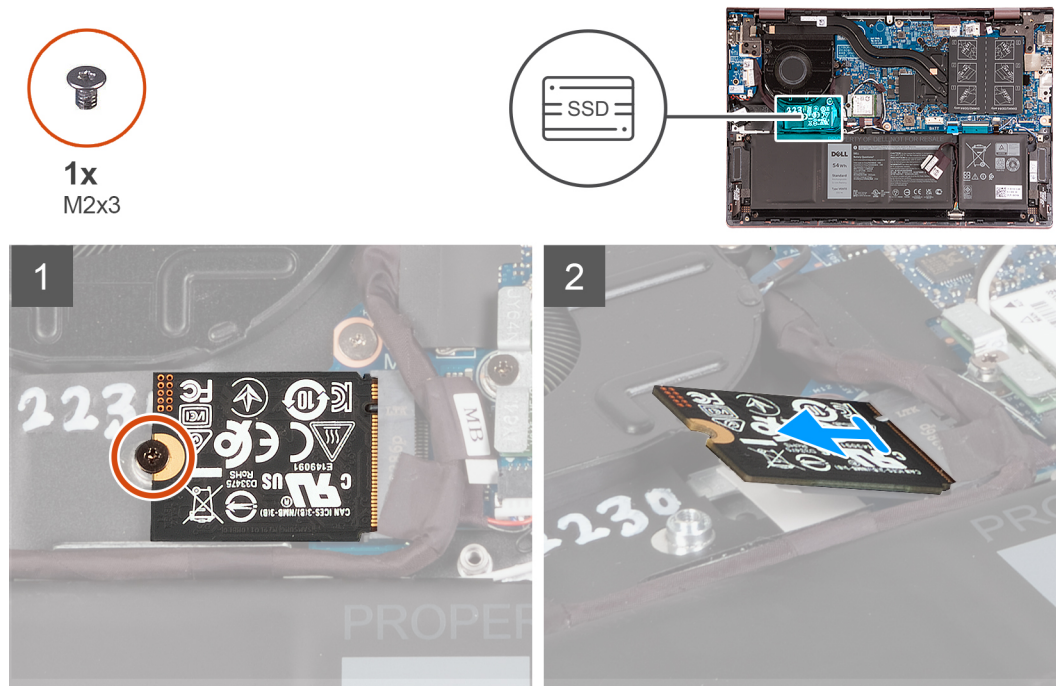

Steps

1. Remove the screw (M2x3) that secures the M.2 2230 solid-state drive to the system board.
2. Slide and lift the M.2 2230 solid-state drive off the system board.
3. Slide and lift the M.2 2230 solid-state drive off the system board.

Installing the M.2 2230 solid-state drive

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.




About this task

- NOTE:** This procedure applies if you are installing a M.2 2230 solid-state drive.
- NOTE:** The M.2 card installed on your computer will depend on the configuration ordered. Supported card configurations on the M.2 card slot:
 - M.2 2230 solid-state drive + M.2 2230 solid-state drive mounting bracket
 - M.2 2280 solid-state drive

The following image(s) indicate the location of the M.2 2230 solid-state drive and provides a visual representation of the installation procedure.



1x
M2x3

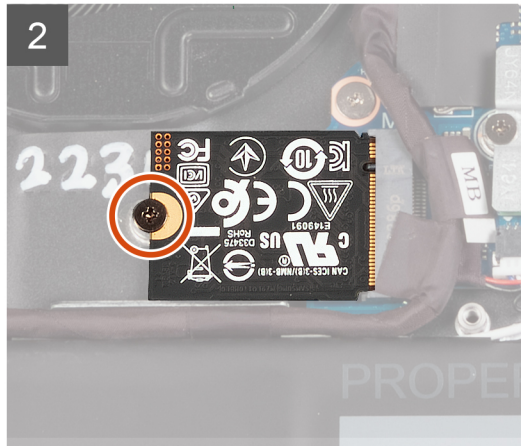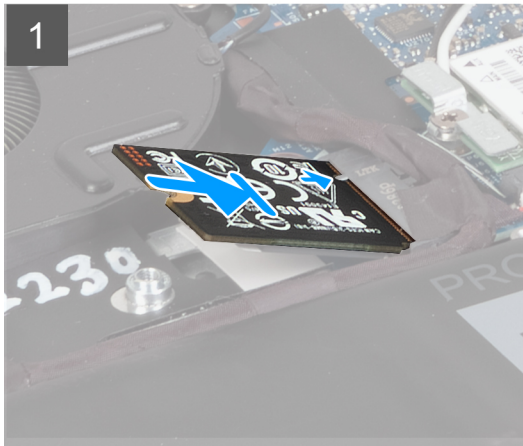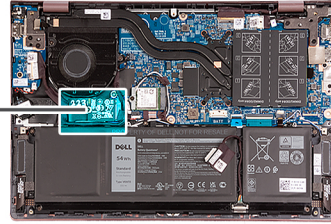

Steps

1. Align the notch on the M.2 2230 solid-state drive with the tab on the M.2 card slot on the system board.
2. Slide the M.2 2230 solid-state drive into the M.2 card slot on the system board.
3. Replace the screw (M2x3) that secures the M.2 2230 solid-state drive to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Removing the M.2 2280 solid-state drive

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).




About this task

- NOTE:** This procedure applies only to computers shipped with a M.2 2280 solid-state drive installed.
- NOTE:** The M.2 card installed on your computer will depend on the configuration ordered. Supported card configurations on the M.2 card slot:
- M.2 2230 solid-state drive
 - M.2 2280 solid-state drive

The following image(s) indicate the location of the M.2 2280 solid-state drive and provides a visual representation of the removal procedure.



1x
M2x3

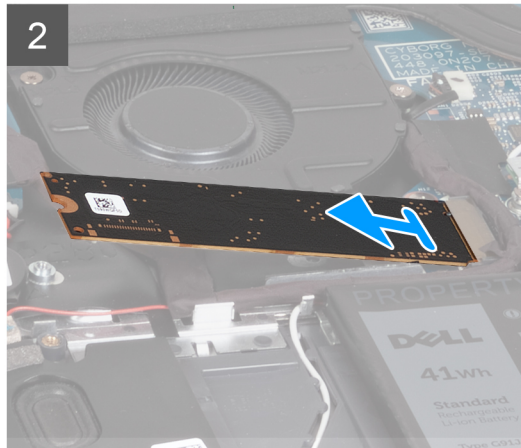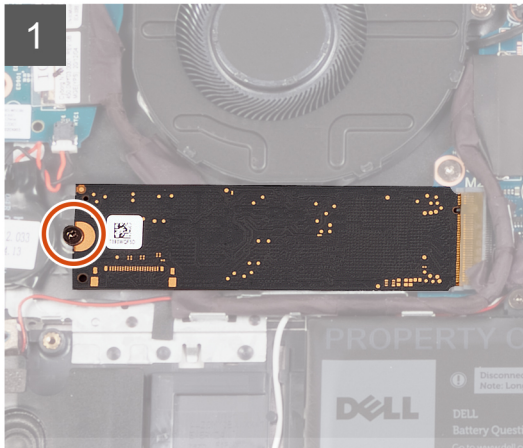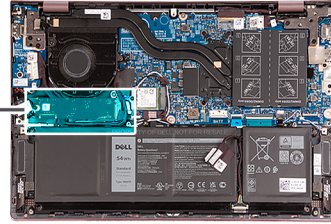

Steps

1. Remove the screw (M2x3) that secures the M.2 2280 solid-state drive to the palm-rest and keyboard assembly.
2. Slide and remove the M.2 2280 solid-state drive from the M.2 card slot on the system board.

Installing the M.2 2280 solid-state drive

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.




About this task

- NOTE:** This procedure applies if you are installing a M.2 2280 solid-state drive.
- NOTE:** The M.2 card installed on your computer will depend on the configuration ordered. Supported card configurations on the M.2 card slot:
- M.2 2230 solid-state drive
 - M.2 2280 solid-state drive

The following image(s) indicate the location of the M.2 2280 solid-state drive and provides a visual representation of the installation procedure.



1x
M2x3

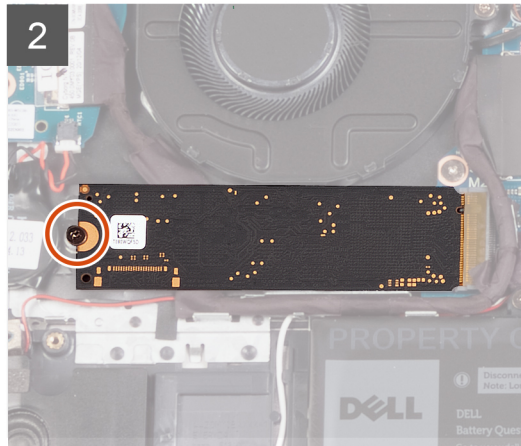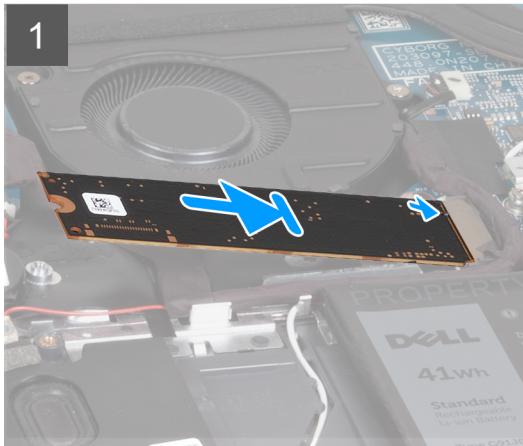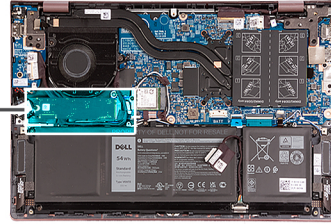

Steps

1. Align the notch on the M.2 2280 solid-state drive with the tab on the M.2 card slot on the system board.
2. Slide the M.2 2280 solid-state drive into the M.2 card slot on the system board.
3. Replace the screw (M2x3) that secures the M.2 2280 solid-state drive to the palm-rest and keyboard assembly.


Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).


Installing the solid-state drive mounting bracket

About this task

The following image provides a visual representation of the procedure to install the solid-state drive mounting bracket when replacing a M.2 2230 solid-state drive with a M.2 2280 solid-state drive.

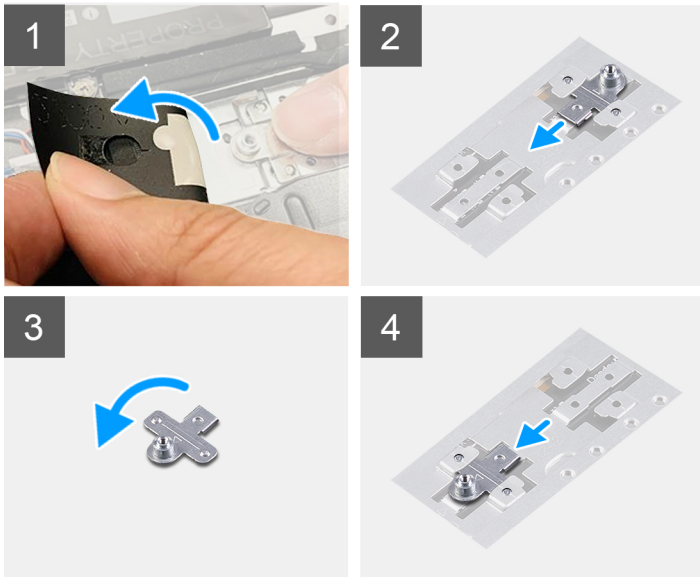

The following image provides a visual representation of the procedure to install the solid-state drive mounting bracket when replacing a M.2 2280 solid-state drive with a M.2 2230 solid-state drive.

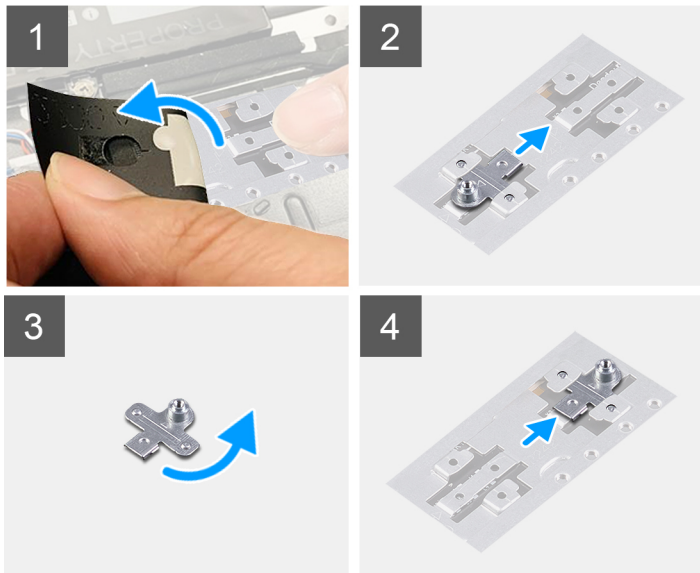

Steps

1. Remove the [2230 solid-state drive](#) or [2280 solid-state drive](#), whichever applicable.
2. Peel the Mylar that covers the solid-state drive mounting-bracket and mounting-bracket slot.
3. Slide and remove the solid-state drive mounting-bracket from the mounting-bracket slot on the palm-rest and keyboard assembly.
4. Rotate the solid-state drive mounting-bracket.
5. Slide the solid-state mounting-bracket into the mounting-bracket slot on the palm-rest and keyboard assembly.
6. Adhere the Mylar that covers the solid-state drive mounting-bracket and mounting-bracket slot.
7. Install the [2230 solid-state drive](#) or [2280 solid-state drive](#), whichever applicable.

Memory module



Removing the memory

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the memory and provides a visual representation of the removal procedure.

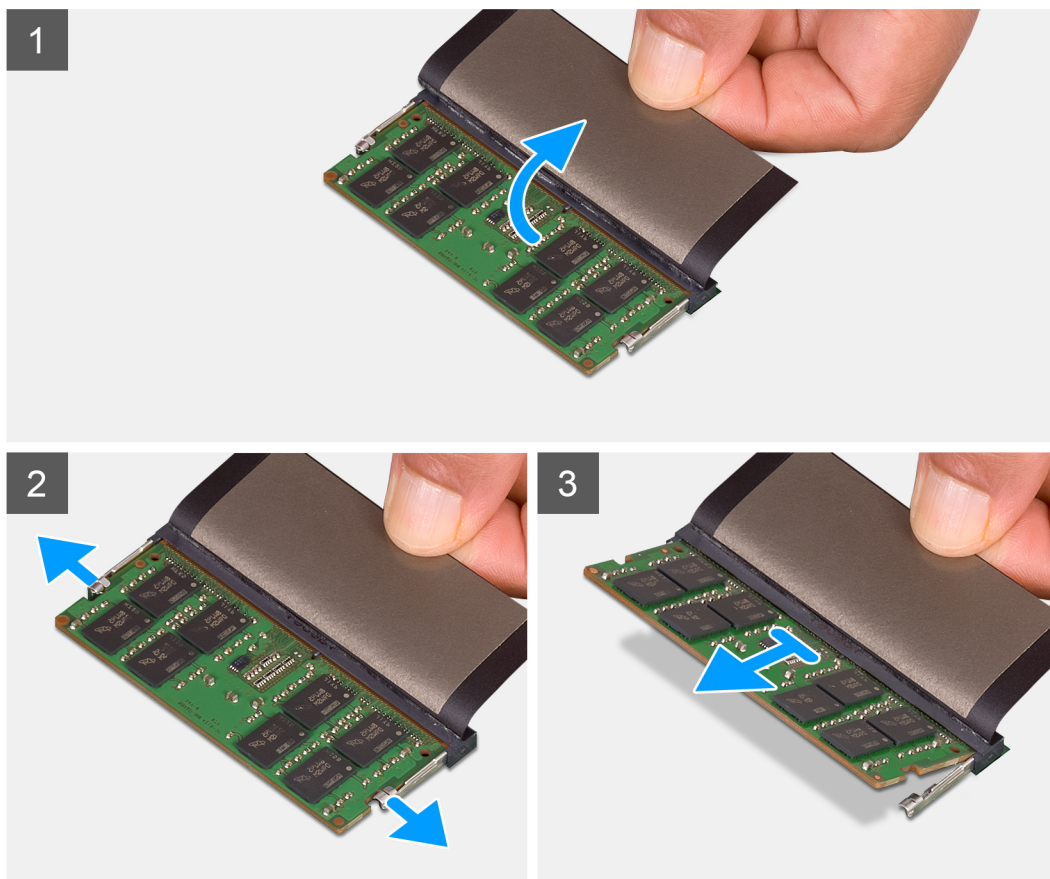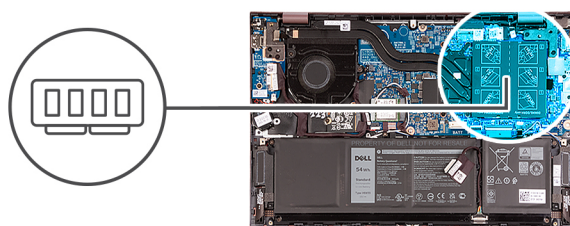

Steps

1. Lift the Mylar to access the memory module.
2. Using your fingertips, carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops-up.
3. Remove the memory module from the memory-module slot on the system board.

NOTE: Your computer may have up to two memory modules installed. Repeat steps 1 to 3 if there is a second memory module installed.



Installing the memory

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.


About this task

The following image(s) indicate the location of the memory and provides a visual representation of the installation procedure.

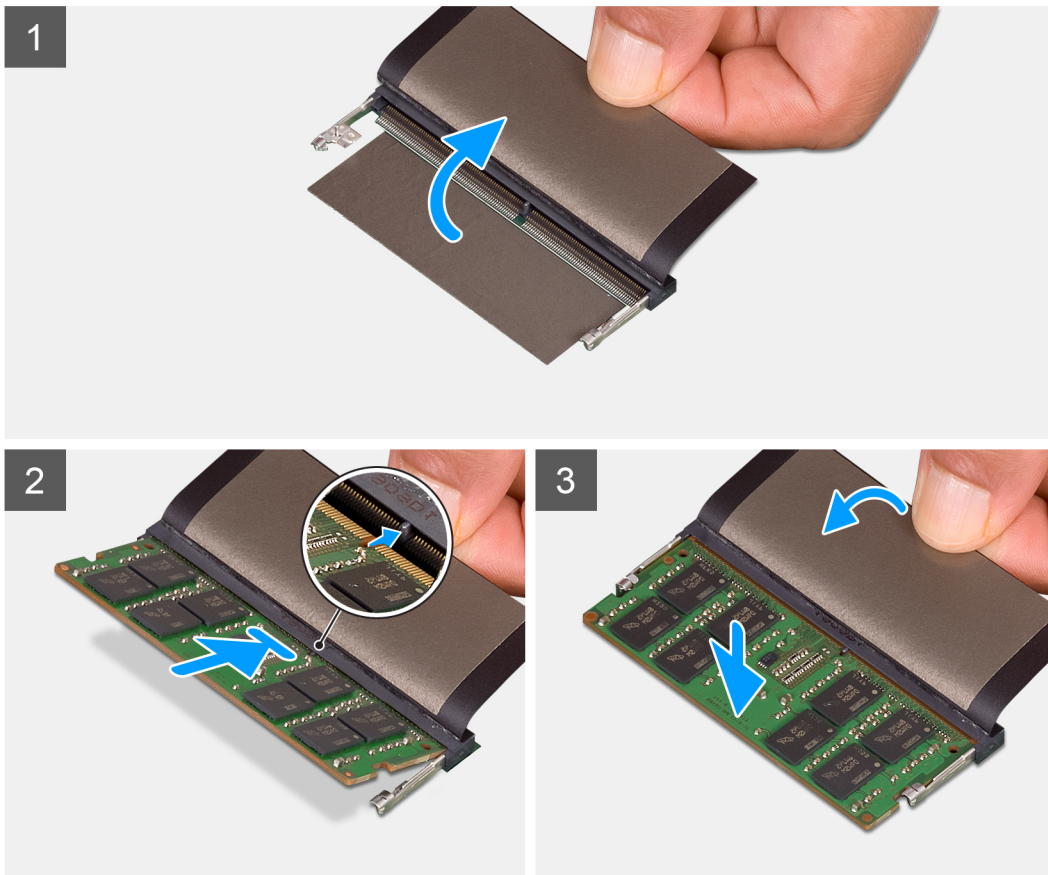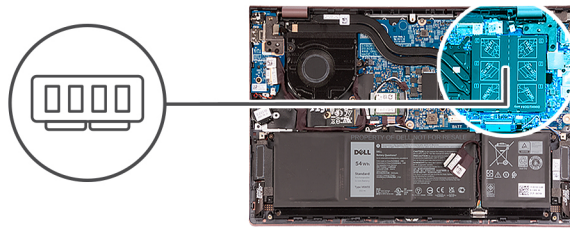

Steps

1. Lift the Mylar to access the memory-module slot.
2. Align the notch on the memory module with the tab on the memory-module slot on the system board.
3. Slide the memory module into the memory-module slot on the system board.
4. Press down on the memory module till the securing clips click, locking the memory module in place.

 **NOTE:** Repeat steps 1 to 4 for each memory module being installed into your computer.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Wireless card

Removing the wireless card

Prerequisites




1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the wireless card and provides a visual representation of the removal procedure.



1x
M2x4

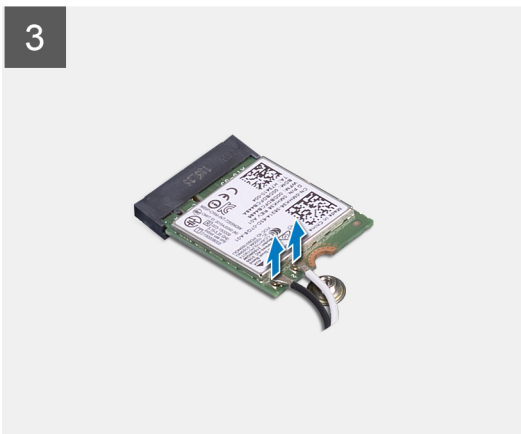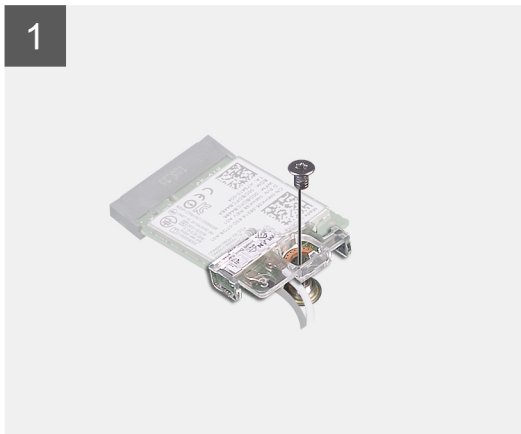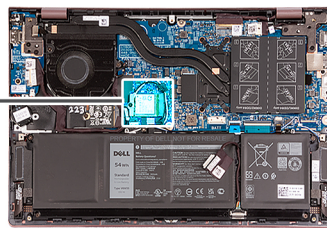

Steps

1. Remove the screw (M2x4) that secures the wireless-card bracket to the wireless card and system board.
2. Lift the wireless-card bracket off the wireless card.
3. Disconnect the antenna cables from the wireless card.
4. Slide and remove the wireless card from the M.2 card slot on the system board.

Installing the wireless card

Prerequisites


If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the wireless card and provides a visual representation of the installation procedure.



1x
M2x4

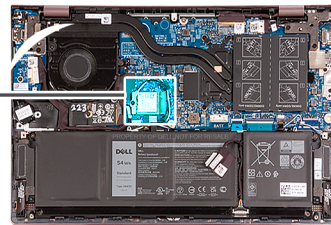


1




2



3

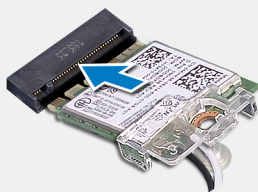

3

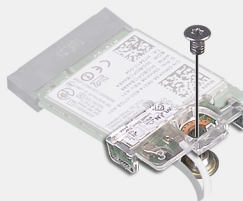

Steps

1. Connect the antenna cables to the wireless card.

Table 2. Antenna-cable color scheme

Connectors on the wireless card	Antenna-cable color	Silkscreen marking	
Main	White	MAIN	△ (white triangle)
Auxiliary	Black	AUX	▲ (black triangle)

- 2. Place the wireless-card bracket on the wireless card.
- 3. Align the notch on the wireless card with the tab on the M.2 card slot on the system board.
- 4. Slide the wireless card into the M.2 card slot on the system board.
- 5. Replace the screw (M2x4) that secures the wireless card and wireless-card bracket to the system board.

Next steps

- 1. Install the [base cover](#).
- 2. Follow the procedure in [After working inside your computer](#).

Power-adapter port


Removing the power-adapter port

Prerequisites

- 1. Follow the procedure in [Before working inside your computer](#).
- 2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the power-adapter port and provides a visual representation of the removal procedure.

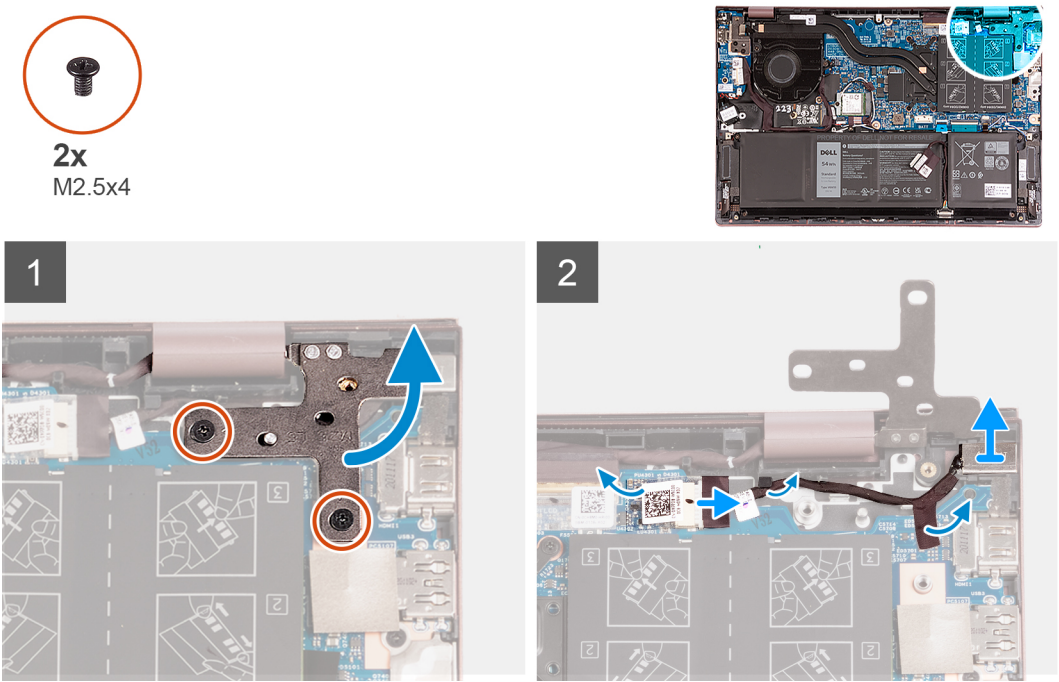

Steps

- 1. Remove the two screws (M2.5x4) that secures the right-display hinge to the system board.

2. Pry open the right-display hinge at an angle of 90 degrees.
3. Peel the tape that covers the power-adapter port connector on the system board.
4. Disconnect the power-adapter port from the system board.
5. Remove the power-adapter port cable from the routing guides on the palm-rest and keyboard assembly.
6. Remove the power-adapter port from the palm-rest and keyboard assembly.

Installing the power-adapter port

Prerequisites




If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the power-adapter port and provides a visual representation of the installation procedure.



2x
M2.5x4

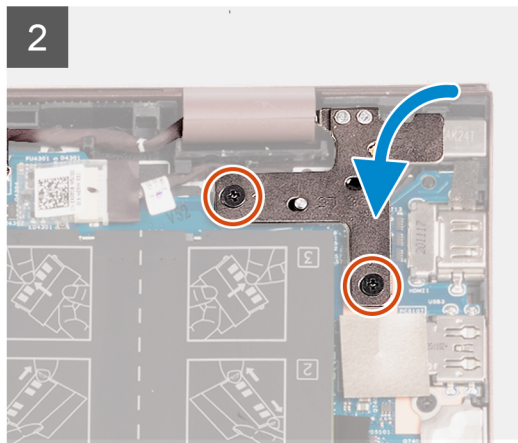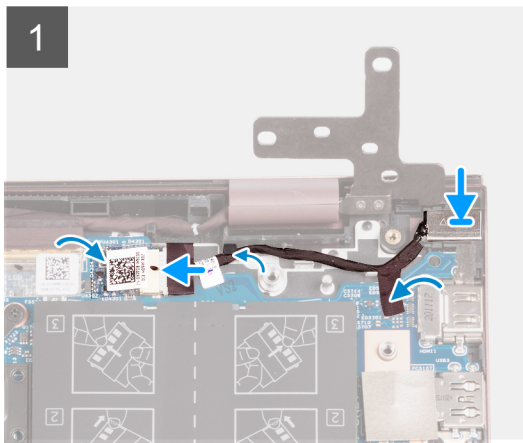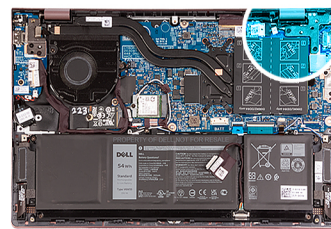

Steps

1. Connect the power-adapter port cable to the system board.
2. Adhere the tape that covers the power-adapter port connector on the system board.
3. Route the power-adapter port cable through the routing guides on the palm-rest and keyboard assembly.
4. Place the power-adapter port into the slot on the palm-rest and keyboard assembly.
5. Close the right-display hinge and align the screw holes on the right-display hinge with the screw holes on the system board.
6. Replace the two screws (M2.5x4) that secures the right-display hinge to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Display assembly

Removing the display assembly

Prerequisites





1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the display assembly and provides a visual representation of the removal procedure.



4x
M2.5x4

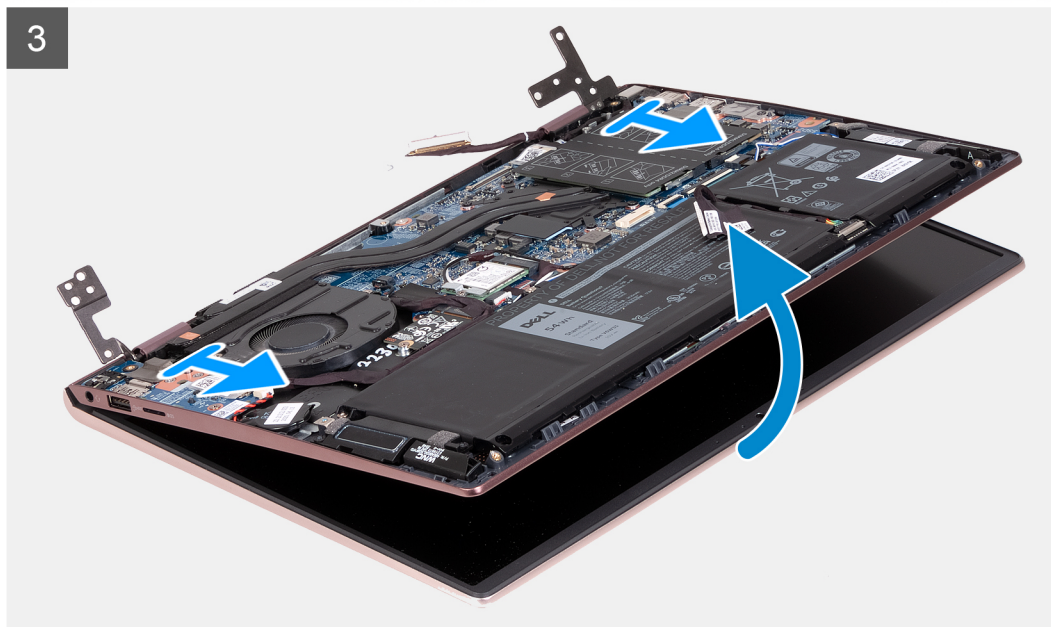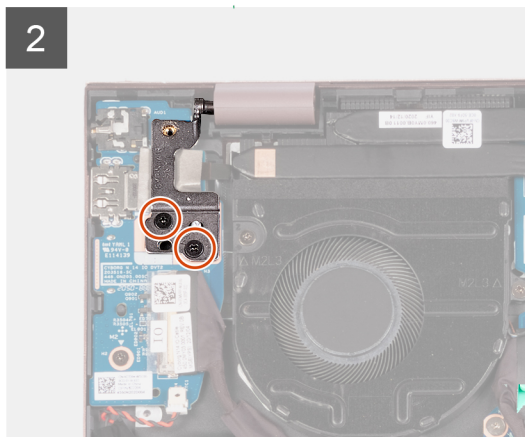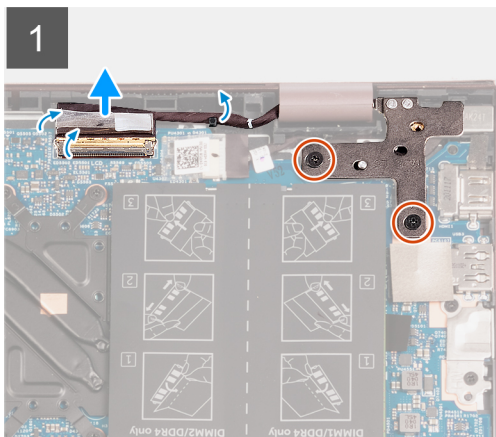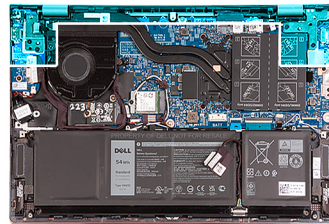



Steps

1. Peel the tape that secures the display-cable connector latch to the system board.
2. Lift the latch and disconnect the display-cable from the connector on the system board.
3. Remove the two screws (M2.5x4) that secure the right-display hinge to the system board.
4. Pry open the right-display hinge at an angle of 90 degrees.
5. Remove the two screws (M2.5x4) that secure the left-display hinge to the I/O board.
6. Pry open the left-display hinge at an angle of 90 degrees.
7. Gently lift the palm-rest and keyboard assembly off the display assembly

 **CAUTION:** To avoid damaging the display, do not slide the palm-rest and keyboard assembly over the display assembly.

Installing the display assembly

Prerequisites





If you are replacing a component, remove the existing component before performing the installation process.

About this task


The following image(s) indicate the location of the display assembly and provides a visual representation of the installation procedure.



4x
M2.5x4

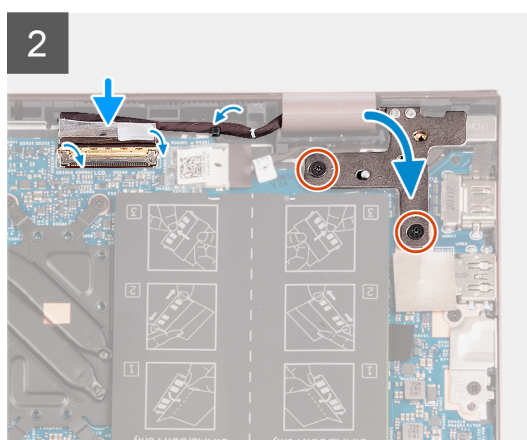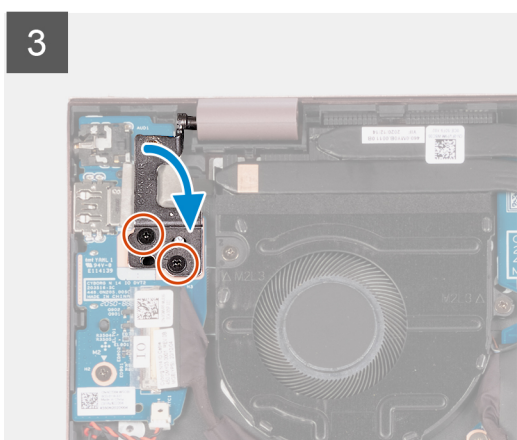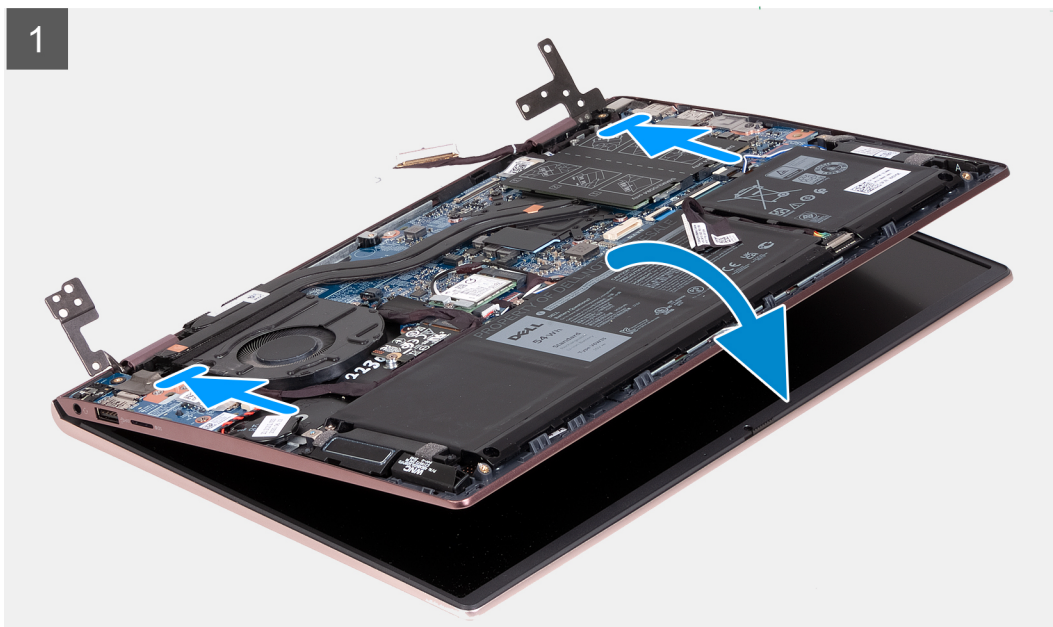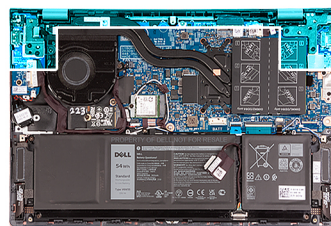

Steps

1. Place the display assembly on a clean and flat surface with the display panel facing up.
2. Gently place the palm-rest and keyboard assembly under the display hinges.
 **CAUTION:** To avoid damaging the display, do not slide the palm-rest and keyboard assembly over the display assembly.
3. Close the left-display hinge and align the screw holes on the left-display hinge with the screw holes on the I/O board.
4. Replace the two screws (M2.5x4) that secure the left-display hinge to the palm-rest and keyboard assembly.
5. Close the right-display hinge and align the screw holes on the right-display hinge with the screw holes on the system board.
6. Replace the two screws (M2.5x4) that secure the right-display hinge to the palm-rest and keyboard assembly.
7. Connect the display cable to the connector on the system board and close the latch.
8. Adhere the tape that secures the display-cable connector latch to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

I/O board




Removing the I/O board

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).


About this task

The following image(s) indicate the location of the I/O board and provides a visual representation of the removal procedure.

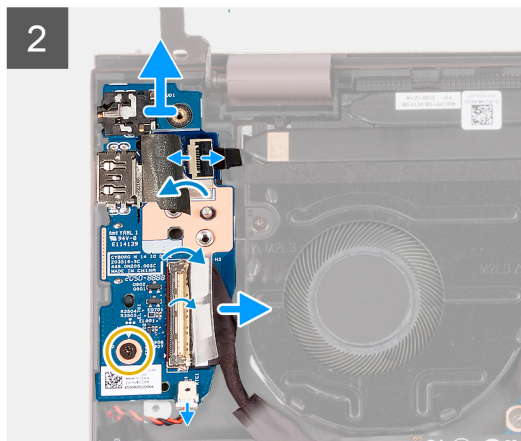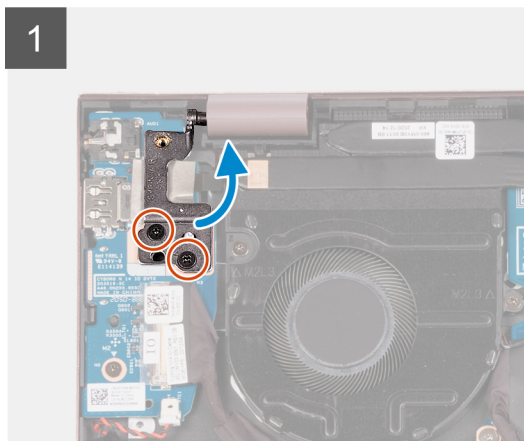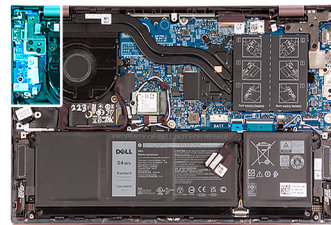

Steps

1. Remove the two screws (M2.5x4) that secure the left-display hinge to the I/O board.
2. Pry open the left-display hinge at an angle of 90 degrees.
3. Lift the I/O-board cable-connector latch and disconnect the I/O-board cable from the I/O board.
4. Lift the power-button with fingerprint-reader cable-connector latch and disconnect the power-button with fingerprint-reader cable from the I/O board.

 **NOTE:** This step is only applicable for computers shipped with the optional fingerprint reader.

5. Remove the screw (M2x3) that secures the I/O board to the palm-rest and keyboard assembly.
6. Disconnect the coin-cell battery cable from the I/O board.
7. Lift the I/O board off the palm-rest and keyboard assembly.


Installing the I/O board

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the I/O board and provides a visual representation of the installation procedure.

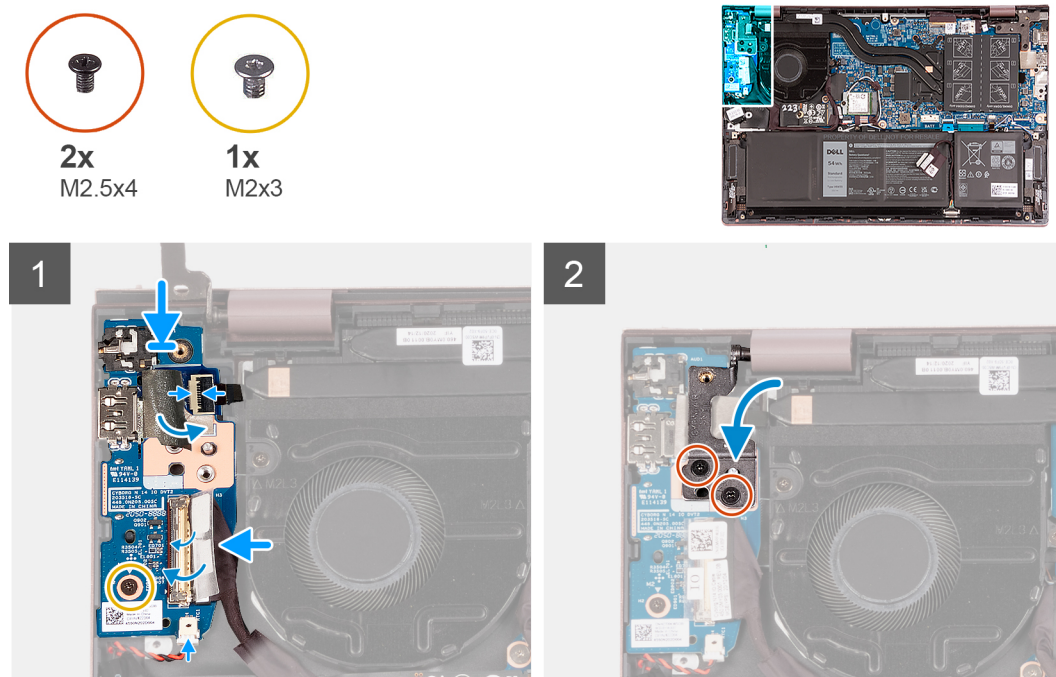

Steps

1. Align the ports on the I/O board to the slots on the palm-rest and keyboard assembly.
2. Place the I/O board on the palm-rest and keyboard assembly.
3. Align the screw hole on the I/O board to the screw hole on the palm-rest and keyboard assembly.
4. Replace the screw (M2x3) that secures the I/O board to the palm-rest and keyboard assembly.
5. Close the left-display hinge and align the screw holes on the left-display hinge with the screw holes on the I/O board.
6. Replace the two screws (M2.5x4) that secure the left-display hinge to the I/O board.
7. Connect the I/O-board cable to the connector on the I/O board and close the latch.
8. Connect the power-button with fingerprint-reader cable to the connector on the I/O board and close the latch.
i NOTE: This step is only applicable for computers shipped with the optional fingerprint reader.
9. Connect the coin-cell battery cable to the I/O board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Speakers



Removing the speakers

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [3-cell battery](#) or the [4-cell battery](#), whichever applicable.

About this task

The following image(s) indicate the location of the speakers and provides a visual representation of the removal procedure.

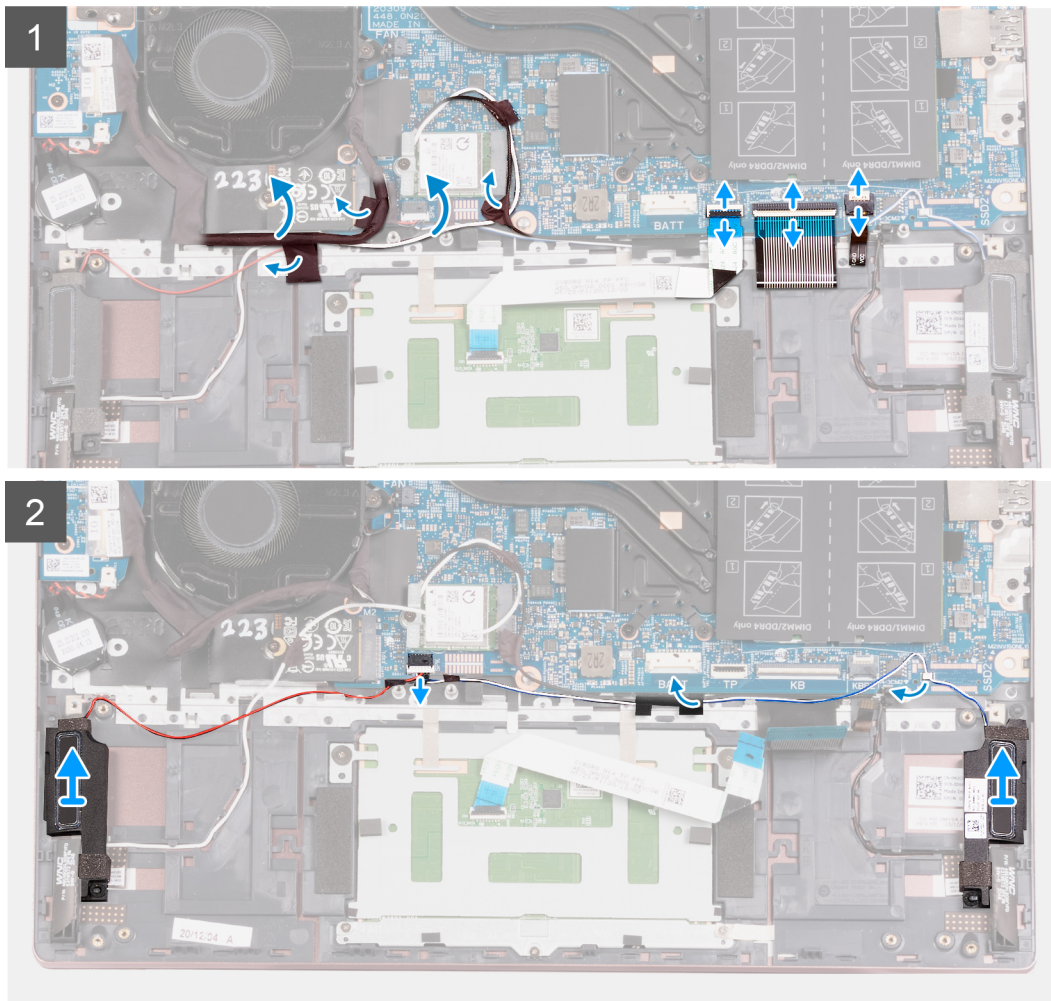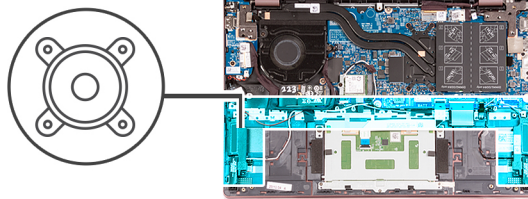

Steps

1. Peel off the tapes that secure the I/O-board cable and antenna cables to the palm-rest and keyboard assembly.

2. Lift the I/O-board cable and antenna cables and move them out of the way.
3. Lift the latch and disconnect the touchpad cable from the system board.
4. Lift the latch and disconnect the keyboard cable from the system board.
5. Lift the latch and disconnect the keyboard-backlight cable from the system board.
6. Disconnect the speaker cable from the system board.
7. Peel off the tape that secures the speaker cable to the palm-rest and keyboard assembly.
8. Remove the speaker cables from the routing guides on the palm-rest and keyboard assembly.
9. Lift the speakers along with their cables off the palm-rest and keyboard assembly.




Installing the speakers

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the speakers and provides a visual representation of the installation procedure.

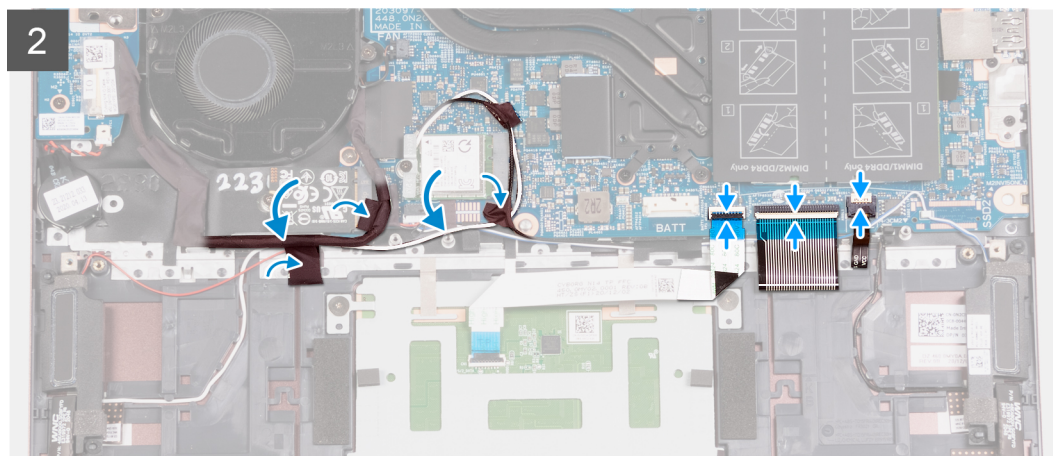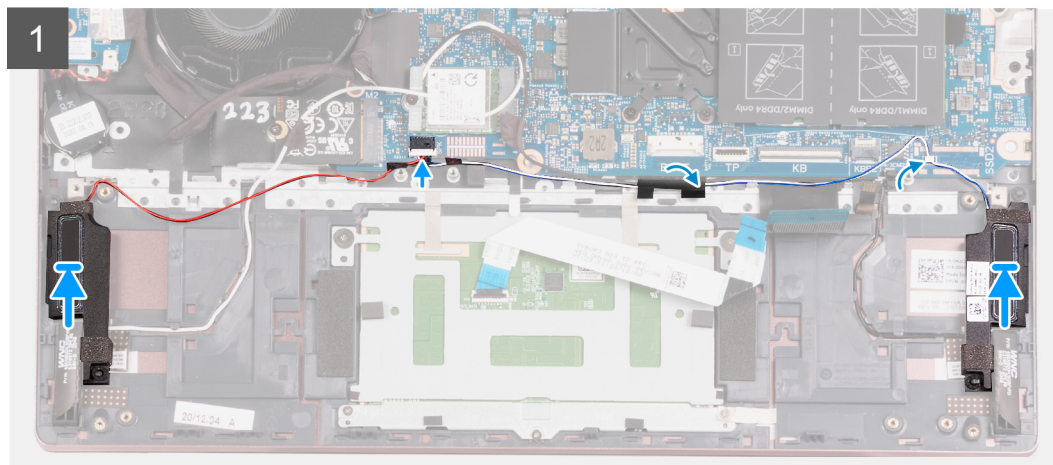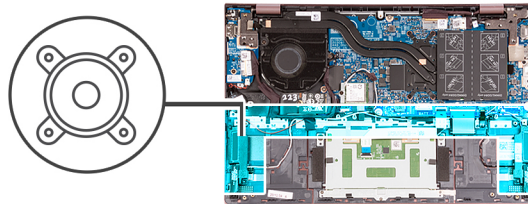

Steps

1. Using the alignment posts, place the left and right speakers on the palm-rest and keyboard assembly.
NOTE: Ensure that the alignment posts are threaded through the rubber grommets on the speaker.
2. Route the speaker cable through the routing guides on the palm-rest and keyboard assembly.
3. Connect the speaker cable to the connector on the system board.
4. Adhere the tape that secures the speaker cable to the palm-rest and keyboard assembly.
5. Connect the touchpad cable to the system board and close the latch.
6. Connect the keyboard cable to the system board and close the latch.
7. Connect the keyboard-backlight cable to the system board and close the latch.
8. Place the I/O-board and antenna cables back into place and adhere the tapes that secure them to the palm-rest and keyboard assembly.

Next steps

1. Install the [3-cell battery](#) or the [4-cell battery](#), whichever applicable.
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Touchpad


Removing the touchpad

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [3-cell battery](#) or the [4-cell battery](#), whichever applicable.

About this task

The following image(s) indicate the location of the touchpad and provides a visual representation of the removal procedure.

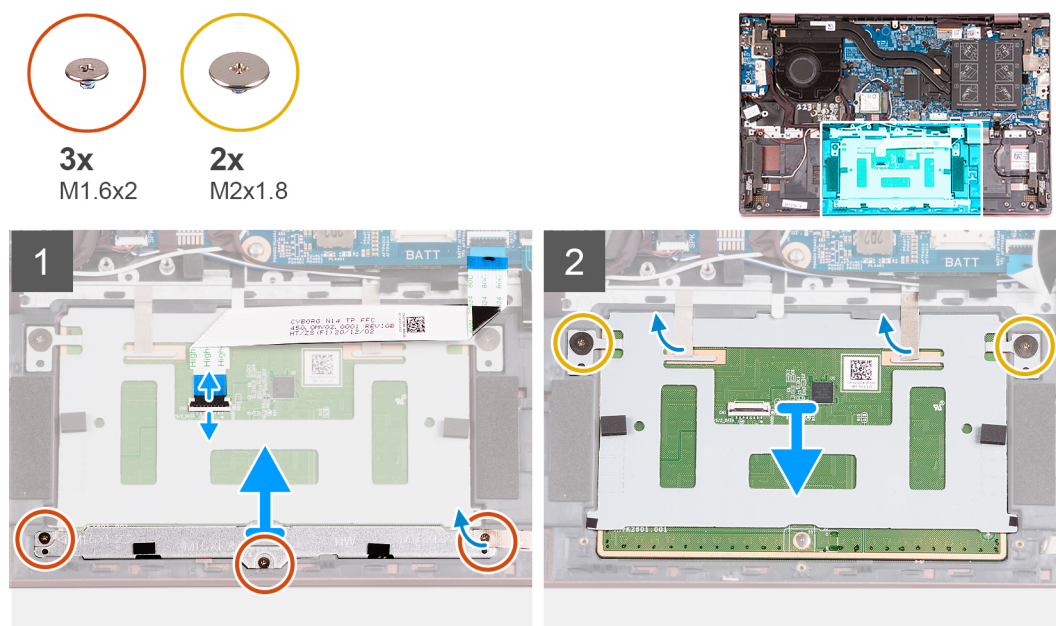

Steps

1. Open the latch and disconnect the touchpad cable from the touchpad.
2. Remove the three screws (M1.6x2) that secure the touchpad bracket to the palm-rest and keyboard assembly.
3. Lift the touchpad bracket off the palm-rest and keyboard assembly.
4. Remove the two screws (M2x1.8) that secure the touchpad to the palm-rest and keyboard assembly.
5. Peel the tapes that secure the touchpad to the palm-rest and keyboard assembly.
6. Lift the touchpad off the palm-rest and keyboard assembly.


Installing the touchpad

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task


The following image(s) indicate the location of the touchpad and provides a visual representation of the installation procedure.

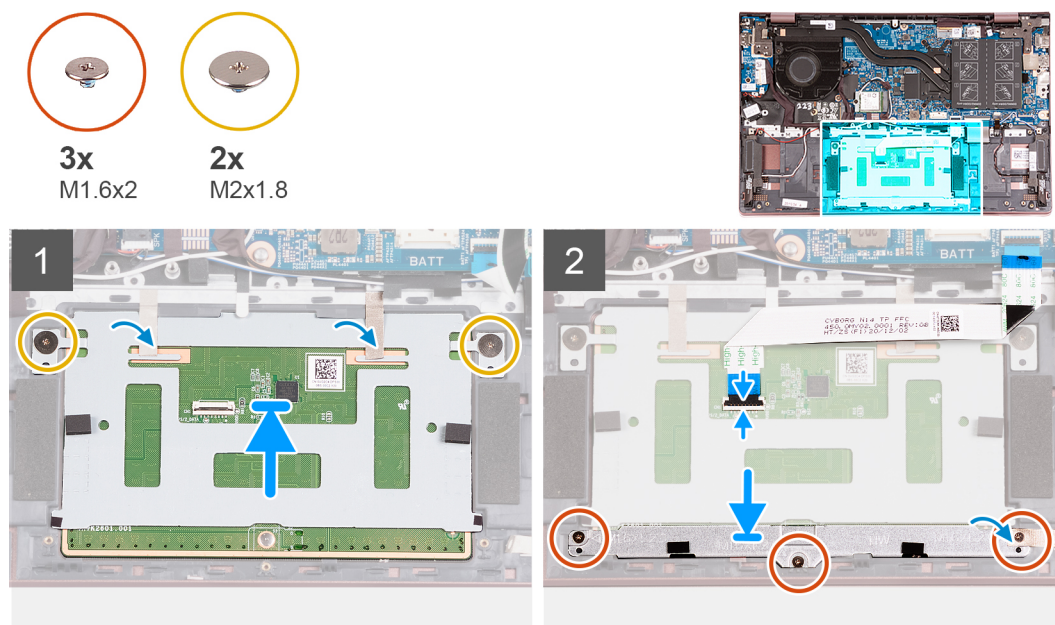

Steps

1. Place the touchpad on the palm-rest and keyboard assembly.
2. Turn the computer over and open the display to ensure that the touchpad is equally aligned on all sides.

NOTE: The image below shows the proper touchpad alignment for your computer.

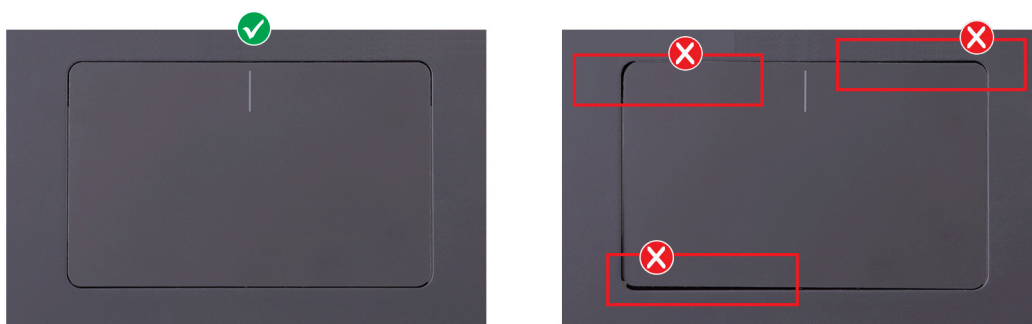

3. Close the display and place the computer in the position shown.
4. Replace the two screws (M2x1.8) that secure the touchpad to the palm-rest and keyboard assembly.
5. Place the touchpad bracket on the touchpad.
6. Align the screw holes on the touchpad bracket to the screw holes on the palm-rest and keyboard assembly.
7. Replace the three screws (M1.6x2) that secure the touchpad bracket to the palm-rest and keyboard assembly.
8. Adhere the tapes that secure the touchpad to the palm-rest and keyboard assembly.
9. Connect the touchpad cable to the touchpad and close the latch.

Next steps

1. Install the [3-cell battery](#) or the [4-cell battery](#), whichever applicable.
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Fan


Removing the fan

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image(s) indicate the location of the fan and provides a visual representation of the removal procedure.

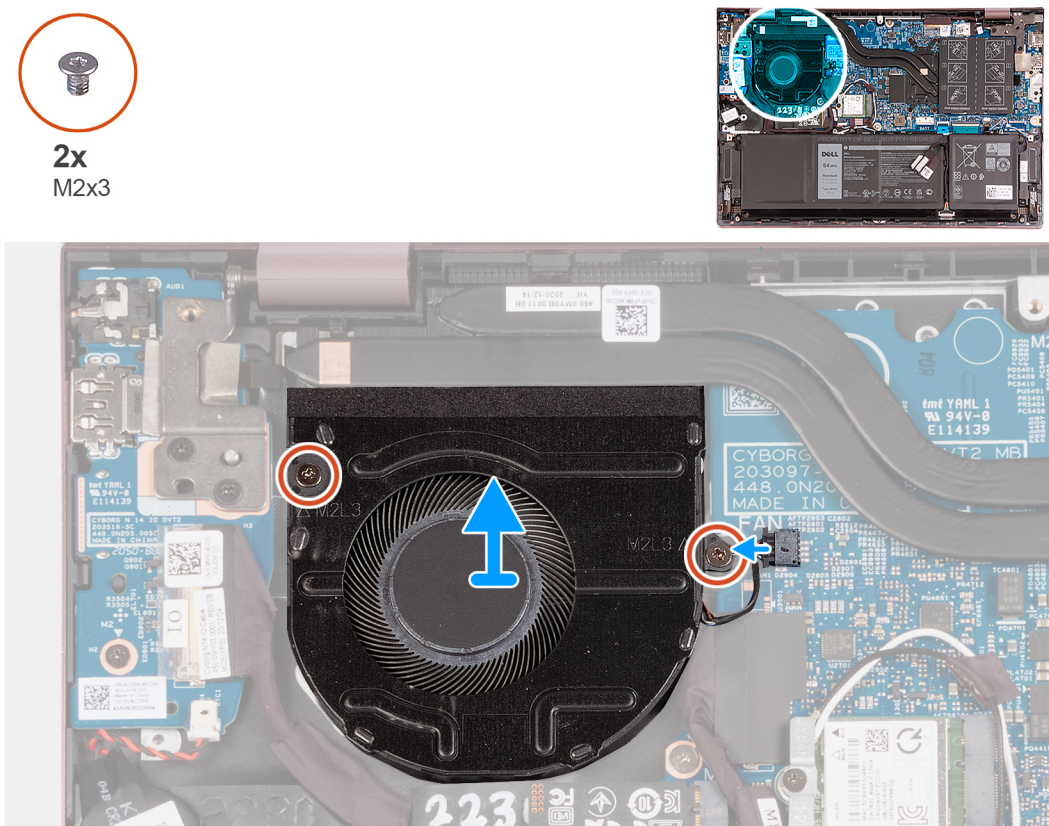

Steps

1. Disconnect the fan cable from the system board.
2. Remove the two screws (M2x3) that secure the fan to the palm-rest and keyboard assembly.
3. Lift the fan off the palm-rest and keyboard assembly.

Installing the fan

Prerequisites



If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the fan and provides a visual representation of the installation procedure.



2x
M2x3

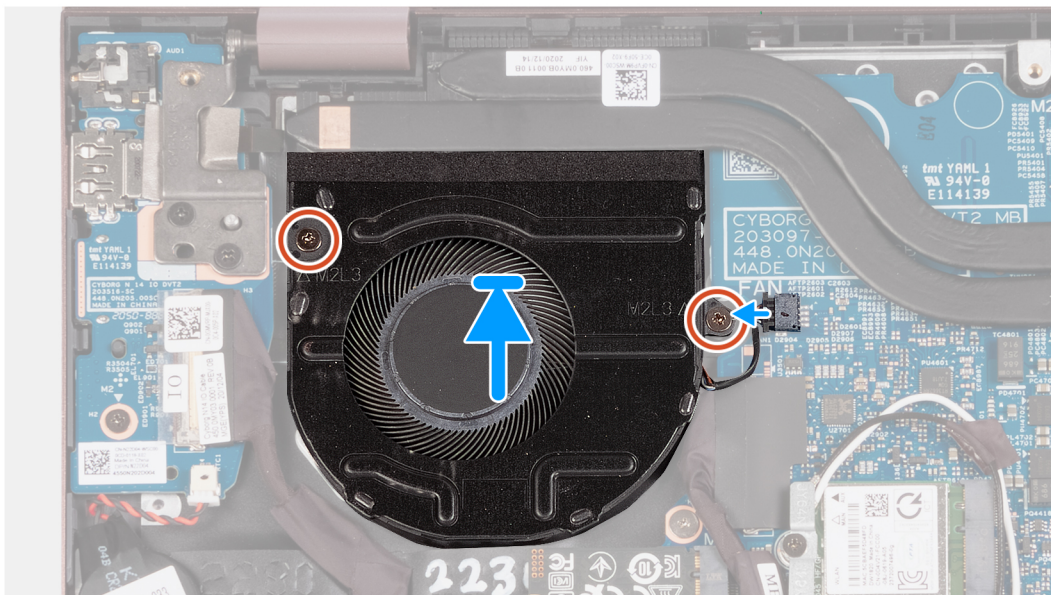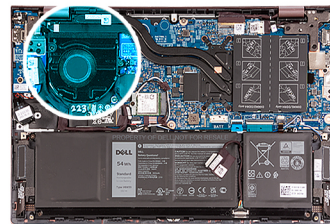

Steps

1. Place the fan on the palm-rest and keyboard assembly.
2. Align the screw holes on the fan with the screw holes on the palm-rest and keyboard assembly.
3. Replace the two screws (M2x3) that secure the fan to the palm-rest and keyboard assembly.
4. Connect the fan cable to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Heat sink

Removing the heat sink

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

CAUTION: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

NOTE: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

The following image(s) indicate the location of the heat sink and provides a visual representation of the removal procedure.



Steps

1. In reverse sequential order (7>6>5>4>3>2>1) loosen the seven captive screws that secure the heat sink to the system board.

NOTE: The number of screws varies depending on the configuration ordered.

2. Lift the heat sink from the system board.

Installing the heat sink



Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: If either the system board or the heat sink is replaced, use the thermal grease provided in the kit to ensure that thermal conductivity is achieved.

The following image(s) indicate the location of the heat sink and provides a visual representation of the installation procedure.

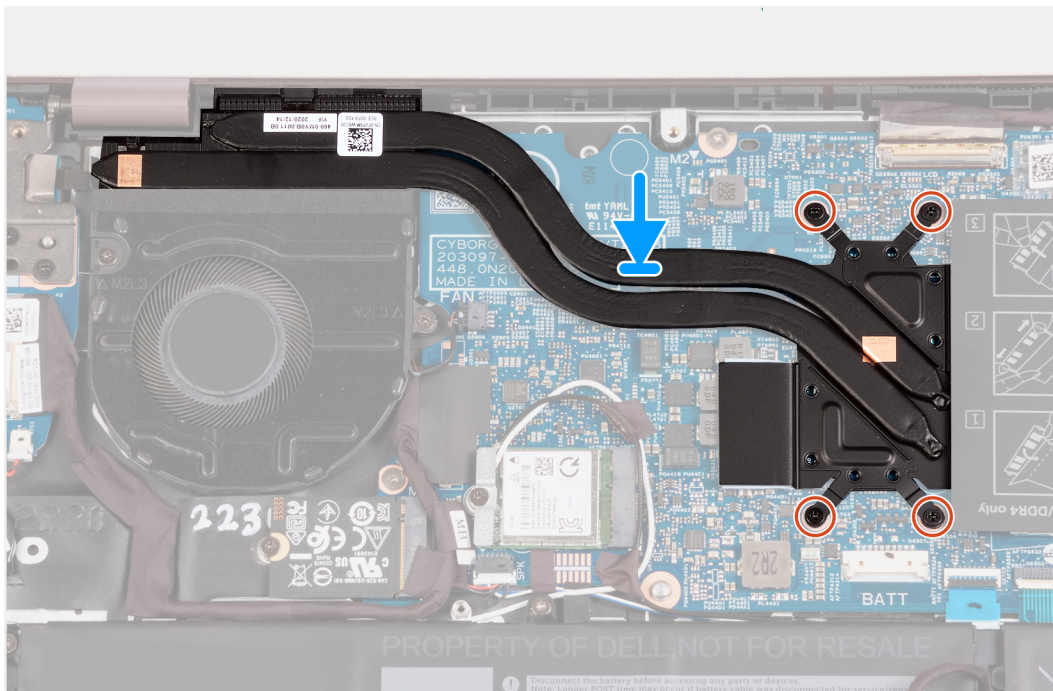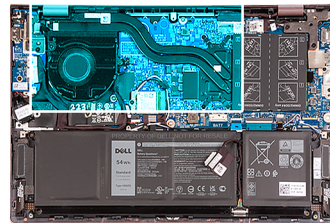

Steps

1. Place the heat-sink on the system board.
2. Align the screw holes on the heat sink to the screw holes on the system board.
3. In sequential order (1>2>3>4>5>6>7) tighten the seven captive screws that secure the heat sink to the system board.

NOTE: The number of screws varies depending on the configuration ordered.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Power button with optional fingerprint reader

Removing the power-button with optional fingerprint reader

Prerequisites



1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [I/O board](#).

About this task

The following image(s) indicate the location of the power-button with optional fingerprint reader and provides a visual representation of the removal procedure.



1x
M2x3

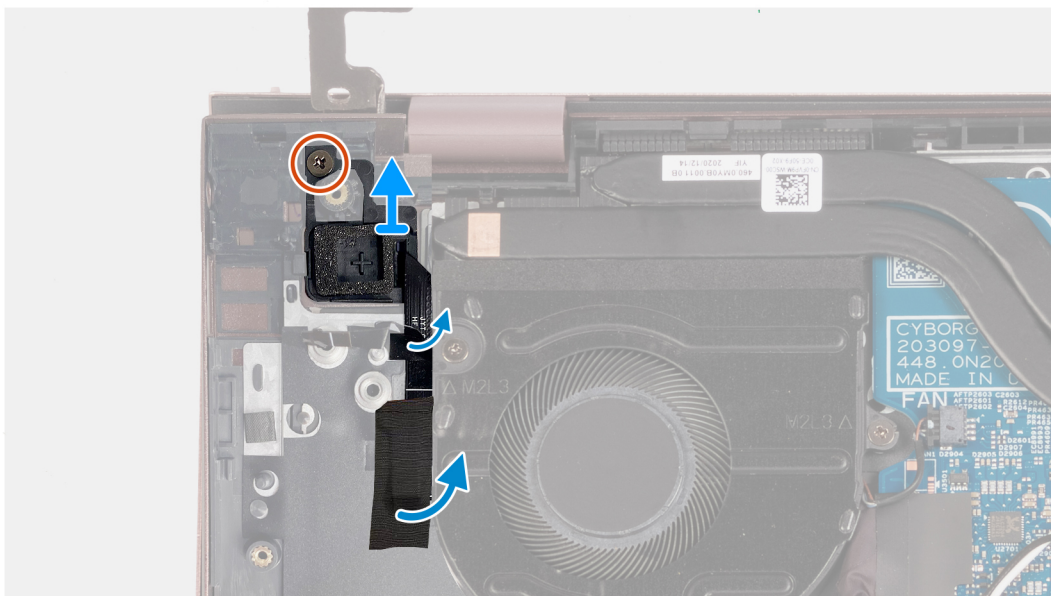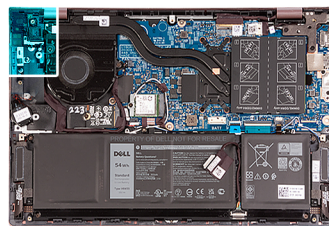

Steps

1. Remove the screw (M2x3) that secures the power-button with optional fingerprint reader off the palm-rest and keyboard assembly.
2. Peel the tape that secures the fingerprint-reader cable to the palm-rest and keyboard assembly.
3. Lift the power-button with optional fingerprint reader off the palm-rest and keyboard assembly.

Installing the power-button with optional fingerprint reader

Prerequisites



If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the power-button with optional fingerprint reader and provides a visual representation of the installation procedure.



1x
M2x3

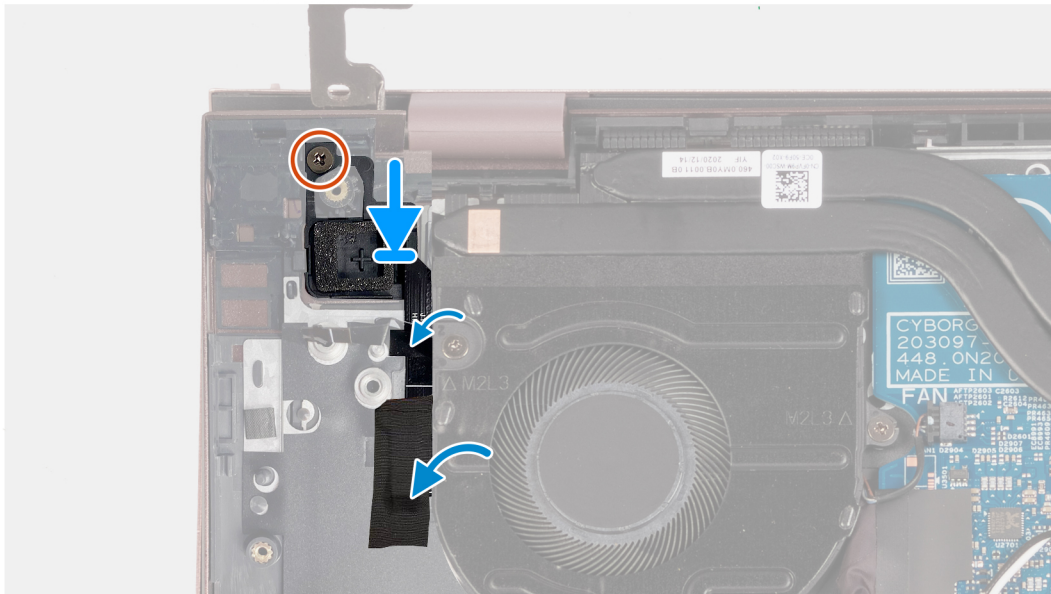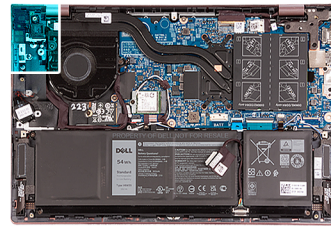

Steps

1. Using the alignment posts, place the power-button with optional fingerprint reader into its slot on the palm-rest and keyboard assembly.
2. Replace the screw (M2x3) that secures the power-button with optional fingerprint reader to the palm-rest and keyboard assembly.
3. Adhere the tape that secures the fingerprint-reader cable to the palm-rest and keyboard assembly.

Next steps

1. Install the [I/O board](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

System board

Removing the system board


Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [3-cell battery](#) or the [4-cell battery](#), whichever applicable.
4. Remove the [M.2 2230 solid-state drive](#).
5. Remove the [M.2 2280 solid-state drive](#).

6. Remove the [memory](#).
7. Remove the [wireless card](#).
8. Remove the [heat sink](#).



About this task

The following image indicates the connectors on your system board.

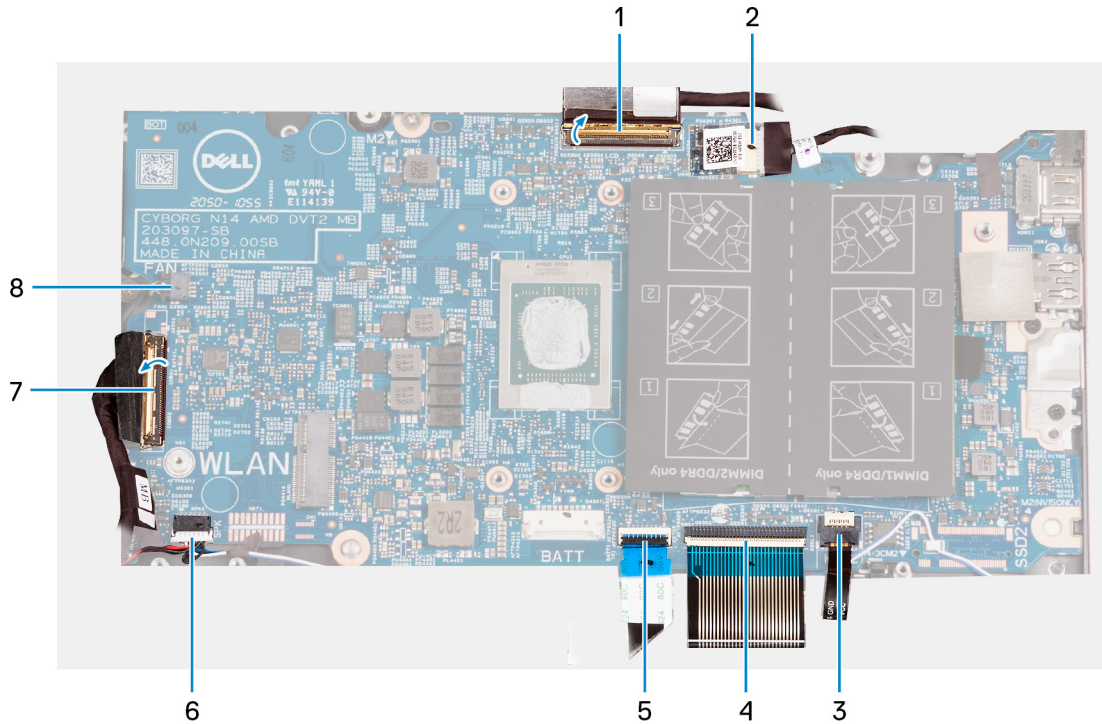


1. display cable
2. power-adaptor port-cable
3. keyboard-backlight cable
4. keyboard cable
5. touchpad cable
6. speaker cable
7. I/O-board cable
8. fan cable


The following image(s) indicate the location of the system board and provides a visual representation of the removal procedure.

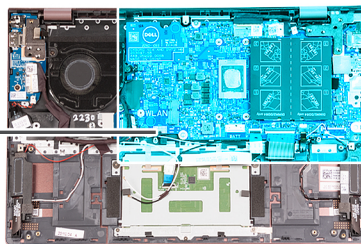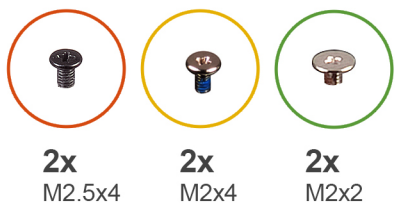


1

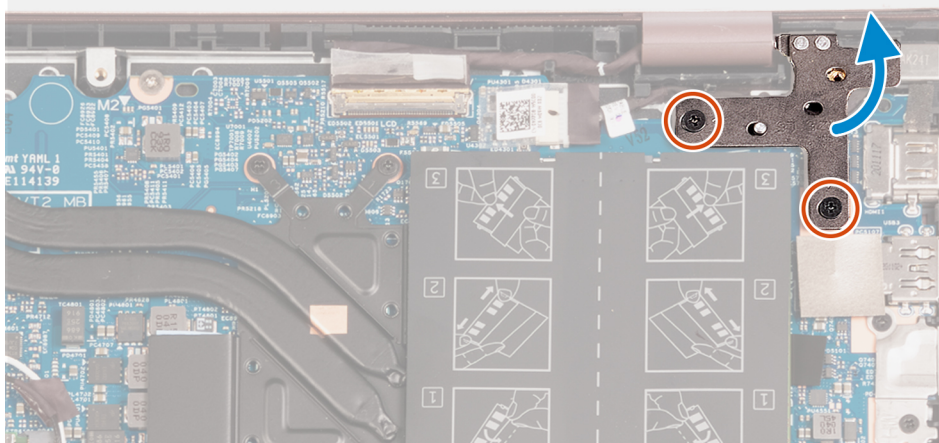

2

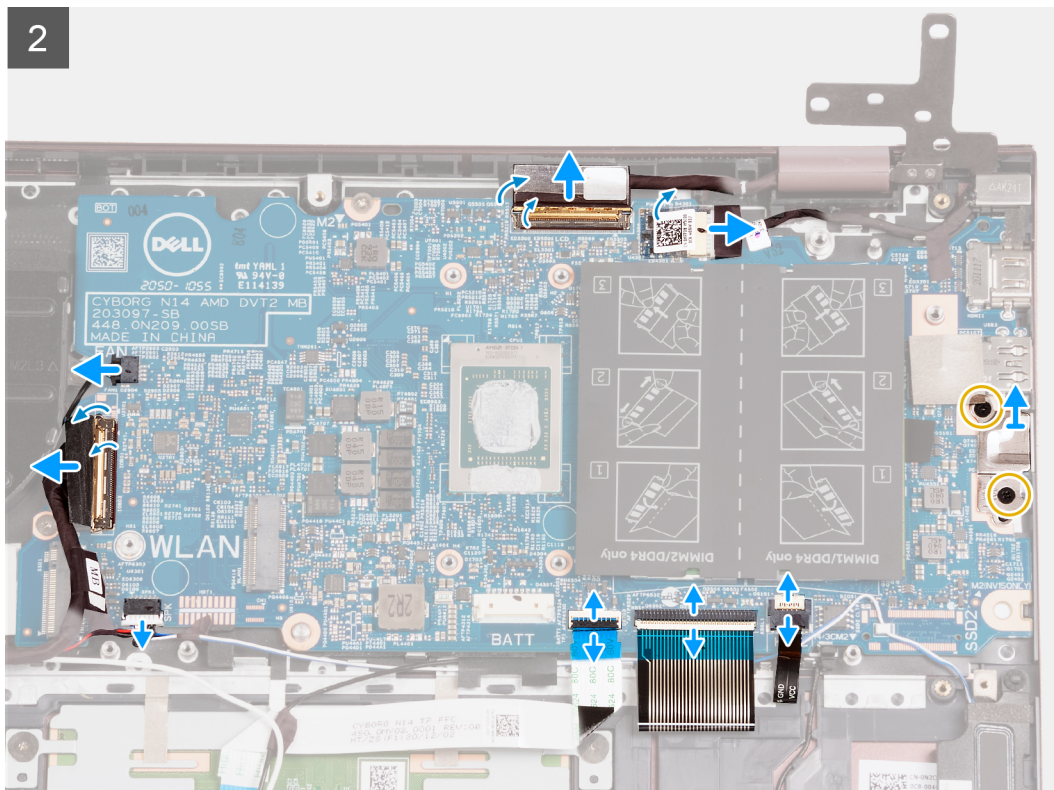

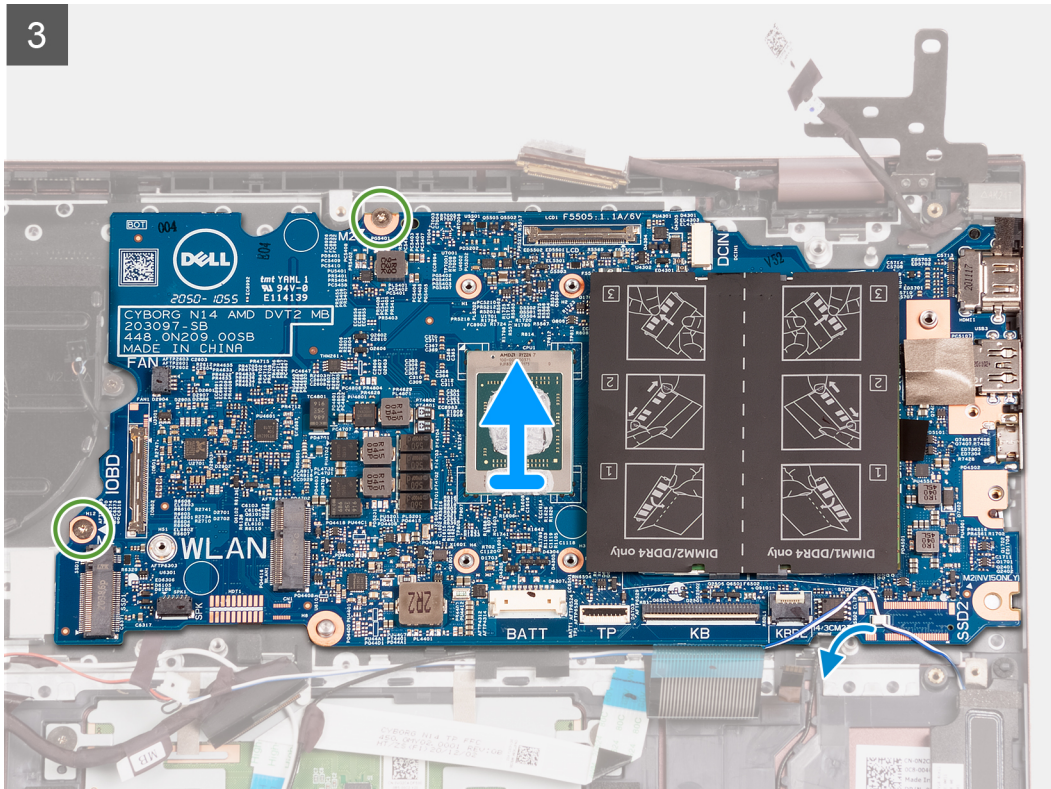

Steps

1. Remove the two screws (M2.5x4) that secure the right-display hinge to the system board.
2. Pry open the right-display hinge at an angle of 90 degrees.
3. Peel the tape that covers the power-adaptor port cable-connector on the system board.
4. Disconnect the power-adaptor port cable from the system board.
5. Peel the tape that secures the display-cable connector latch to the system board.
6. Lift the latch and disconnect the display-cable from the connector on the system board.
7. Disconnect the fan cable from the system board.
8. Lift the I/O-board cable-connector latch and disconnect the I/O-board cable from the system board.
9. Disconnect the speaker cable from the system board.
10. Lift the latch and disconnect the touchpad cable from the system board.
11. Lift the latch and disconnect the keyboard cable from the system board.
12. Lift the latch and disconnect the keyboard-backlight cable from the system board.

NOTE: This step is only applicable for computers installed with a backlit keyboard.

13. Remove the two screws (M2x4) that secure the Type-C port-bracket to the system board.
14. Lift the Type-C port-bracket off the system board.
15. Remove the two screws (M2x2) that secure the system board to the palm-rest and keyboard assembly.
16. Lift the system board from the palm-rest and keyboard assembly.


Installing the system board

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.


About this task

The following image indicates the connectors on your system board.

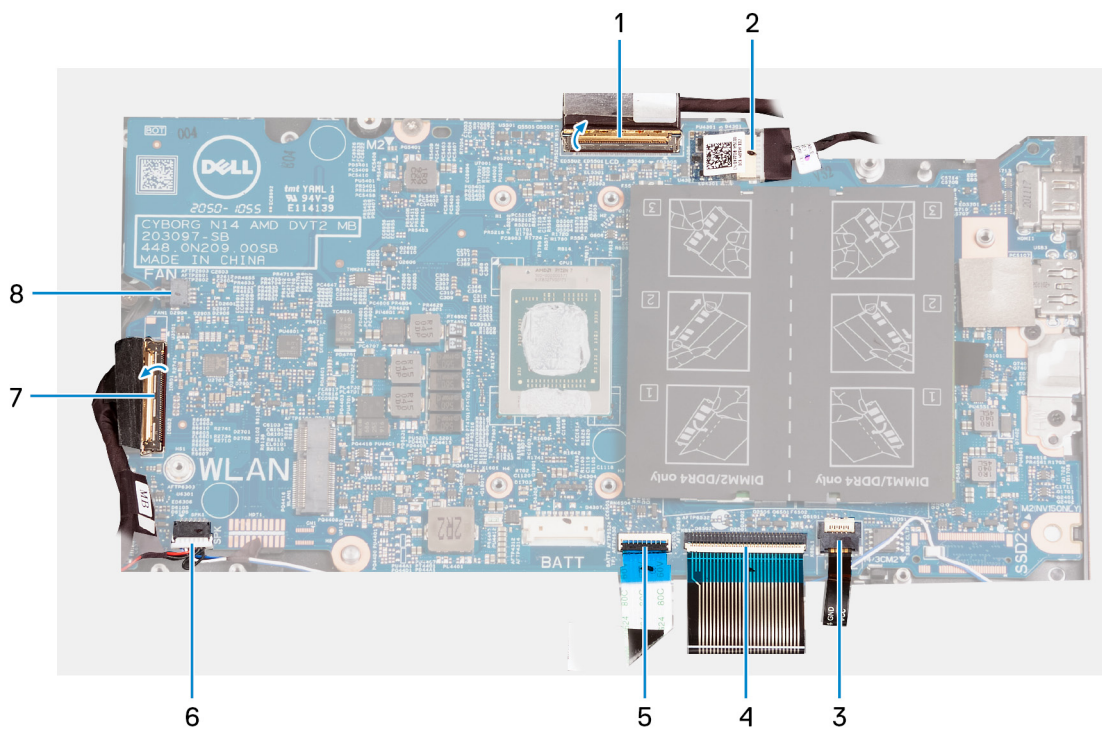


1. display cable
2. power-adaptor port-cable
3. keyboard-backlight cable
4. keyboard cable
5. touchpad cable
6. speaker cable
7. I/O-board cable
8. fan cable


The following image(s) indicate the location of the system board and provides a visual representation of the installation procedure.

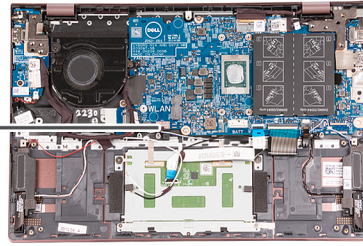

2

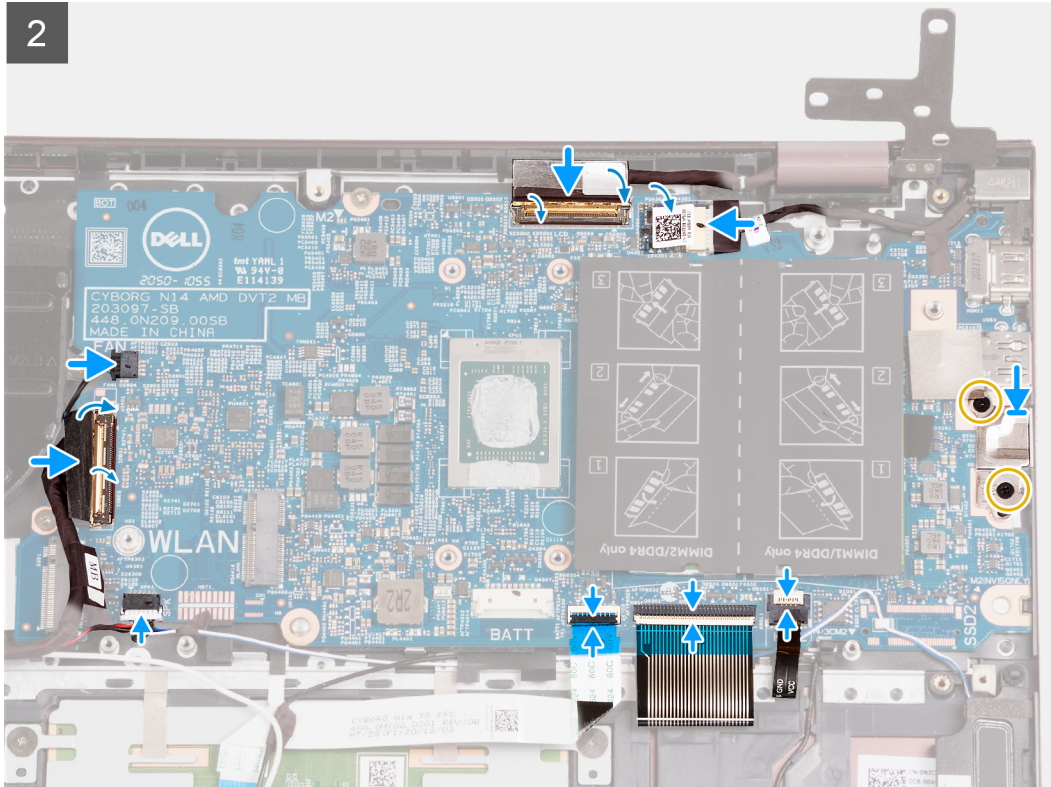

3

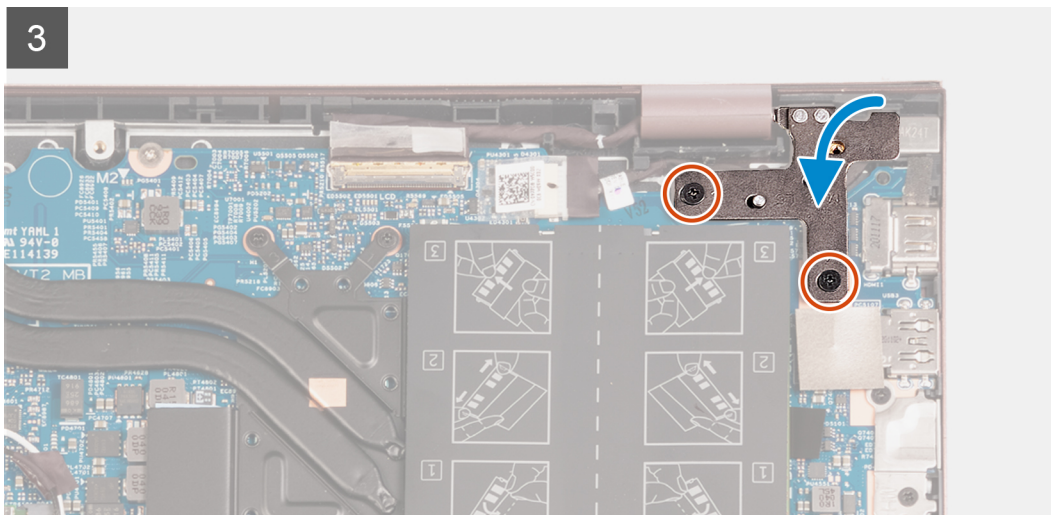

Steps

1. Place the system board on the palm-rest and keyboard assembly.
 2. Align the screw holes on the system board with the screw holes on the palm-rest and keyboard assembly.
 3. Replace the two screws (M2x2) that secure the system board to the palm-rest and keyboard assembly.
 4. Place the Type-C port-bracket on the system board.
 5. Replace the two screws (M2x4) that secure the Type-C port-bracket to the system board.
 6. Connect the keyboard-backlight cable to the connector on the system board and close the latch.
- NOTE:** This step is only applicable if you are installing a backlit keyboard on your computer.
7. Connect the keyboard cable to the connector on the system board and close the latch.
 8. Connect the touchpad cable to the connector on the system board and close the latch.
 9. Connect the speaker cable to the system board.
 10. Connect the I/O-board cable to the connector on the system board and close the latch.

11. Connect the fan cable to the system board.
12. Connect the display cable to the connector on the system board and close the latch.
13. Adhere the tape that secures the display-cable connector latch to the system board.
14. Connect the power-adaptor port cable to the system board,
15. Adhere the tape that covers the power-adaptor cable-connector on the system board.
16. Close the right-display hinge and align the screw holes on the right-display hinge with the screw holes on the system board.
17. Replace the two screws (M2.5x4) that secure the right-display hinge to the system board.

Next steps


1. Install the [heat sink](#).
2. Install the [wireless card](#).
3. Install the [memory](#).
4. Install the [M.2 2280 solid-state drive](#).
5. Install the [M.2 2230 solid-state drive](#).
6. Install the [3-cell battery](#) or the [4-cell battery](#), whichever applicable.
7. Install the [base cover](#).
8. Follow the procedure in [After working inside your computer](#).

Palm-rest and keyboard assembly

Removing the palm-rest and keyboard assembly


Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [3-cell battery](#) or the [4-cell battery](#), whichever applicable.
4. Remove the [coin-cell battery](#).
5. Remove the [M.2 2230 solid-state drive](#).
6. Remove the [M.2 2280 solid-state drive](#).
7. Remove the [wireless card](#).
8. Remove the [power-adaptor port](#).
9. Remove the [I/O board](#).
10. Remove the [speakers](#).
11. Remove the [touchpad](#).
12. Remove the [fan](#).
13. Remove the [display assembly](#).
14. Remove the [power-button with optional fingerprint reader](#).
15. Remove the [system board](#).

 **NOTE:** The system board can be removed with the heat sink and solid-state drives attached.

About this task

The following image(s) indicate the location of the palm-rest and keyboard assembly and provides a visual representation of the removal procedure.

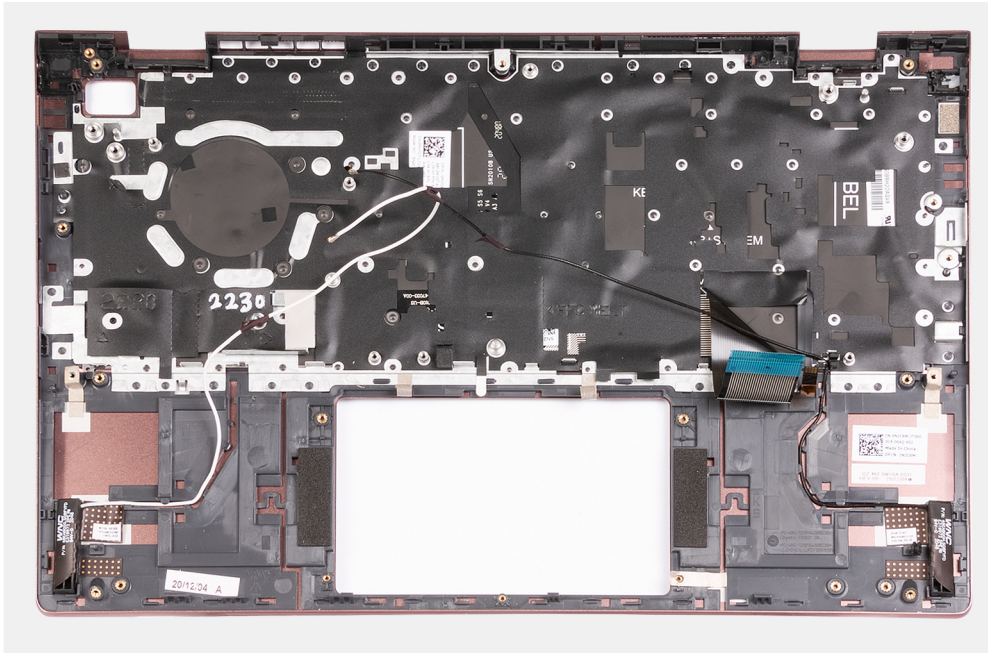

Steps

After performing the pre-requisites you are left with the palm-rest and keyboard assembly.


Installing the palm-rest and keyboard assembly

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image(s) indicate the location of the palm-rest and keyboard assembly and provides a visual representation of the installation procedure.

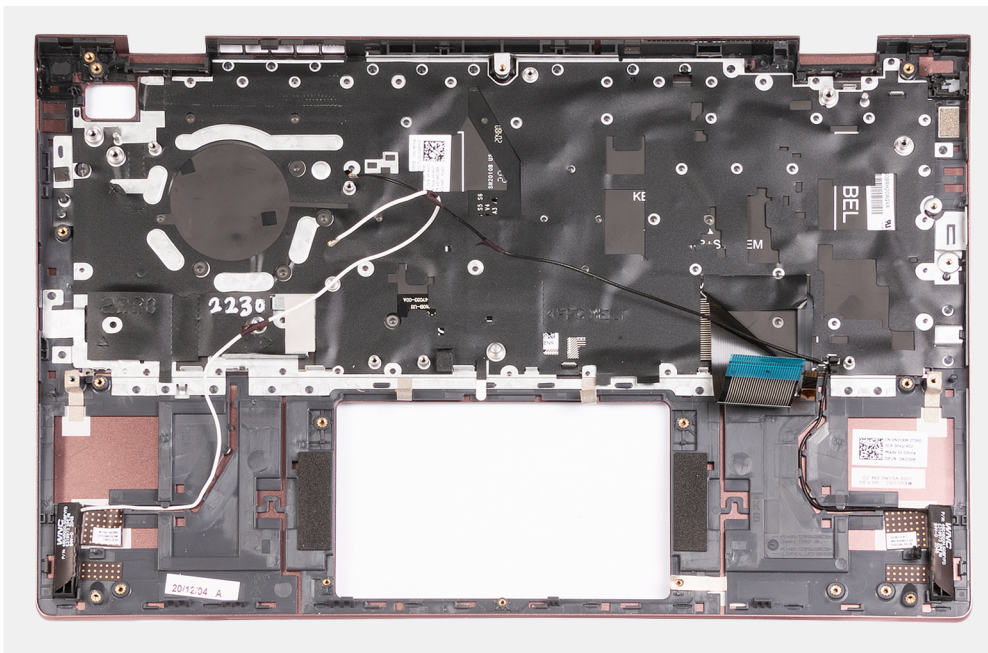

Steps

Place the palm-rest and keyboard assembly on a flat and clean surface and perform the post-requisites to install the palm-rest and keyboard assembly.

Next steps

1. Install the [system board](#).
2. Install the [power-button with optional fingerprint reader](#).
3. Install the [display assembly](#).
4. Install the [fan](#).
5. Install the [touchpad](#).
6. Install the [speakers](#).
7. Install the [I/O board](#).
8. Install the [power-adaptor port](#).
9. Install the [wireless card](#).
10. Install the [M.2 2280 solid-state drive](#).
11. Install the [M.2 2230 solid-state drive](#).
12. Install the [coin-cell battery](#).
13. Install the [3-cell battery](#) or the [4-cell battery](#), whichever applicable.
14. Install the [base cover](#).
15. Follow the procedure in [After working inside your computer](#).

Drivers and downloads

When troubleshooting, downloading or installing drivers it is recommended that you read the Dell Knowledge Based article, Drivers and Downloads FAQ [000123347](#).

System setup

CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

NOTE: Depending on the computer and its installed devices, the items listed in this section may or may not be displayed.

NOTE: Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

Entering BIOS setup program

Steps

1. Turn on your computer.
2. Press F2 immediately to enter the BIOS setup program.

NOTE: If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

Navigation keys

NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Table 3. Navigation keys


Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area. NOTE: For the standard graphics browser only.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)
 **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The boot sequence screen also displays the option to access the System Setup screen.

System setup options


 **NOTE:** Depending on this computer and its installed devices, the items that are listed in this section may or may not be displayed.

Table 4. System setup options—Main menu

Main		
System Time		Displays the current system time of the computer in HH/MM/SS format.
System Date		Displays the ownership date of the computer in MM/DD/YYYY format.
BIOS Version		Displays the BIOS version of the computer.
Product Name		Displays the system model name of the computer.
Service Tag		Displays the service tag of the computer.
Asset Tag		Displays the asset tag of the computer.
CPU Type		Displays the processor type.
CPU Speed		Displays the maximum processor clock speed.
CPU ID		Displays the processor identification code.
CPU Cache		
	L1 Cache	Displays the processor L1 Cache size.
	L2 Cache	Displays the processor L2 Cache size.
	L3 Cache	Displays the processor L3 Cache size.
M.2 PCIe SSD		Displays the PCIe SSD information connected to the M.2 slot.
AC Adapter Type		Displays whether an AC adapter is installed.
System Memory		Displays the total computer memory installed.
Memory Speed		Displays the memory speed.
Keyboard Type		Displays the type of the keyboard (option could be backlit or non-backlit).

Table 5. System setup options—Advance menu

Advance	
Virtualization	<p>Specify whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Onboard Virtualization Technology.</p> <p>Options are:</p> <ul style="list-style-type: none"> • Enabled (Default) • Disabled
Integrated NIC	<p>Allows pre-OS and early OS networking features to use any enabled NICs.</p> <p>Options are:</p> <ul style="list-style-type: none"> • Enabled (Default) • Disabled
USB Emulation	<p>Allows to enable USB emulation.</p> <p>Options are:</p> <ul style="list-style-type: none"> • Enabled (Default) • Disabled
SATA Operation	<p>Allows to select the SATA mode of the computer. Option is set to AHCI.</p>
Adapter Warnings	<p>Displays Adapter Warning during the POST when Battery Level is Critically low.</p> <p>Options are:</p> <ul style="list-style-type: none"> • Enabled (Default) • Disabled
Function Key Behavior	<p>Allows to reverse Function Key Primary behavior with secondary.</p> <p>Options are:</p> <ul style="list-style-type: none"> • Multimedia Key(Default) • Function Key
Keyboard Illumination	<p>Allows to Switch-on/switch-off the Keyboard backlight.</p> <p>Options are:</p> <ul style="list-style-type: none"> • Disable • Dim • Bright (Default)
Keyboard Backlight with AC	<p>Allows to permanently turn off/turn-on the Keyboard backlight without the AC adapter.</p> <p>Options are from 5 Seconds to 15 Minutes. Default option is set to 1 Minute.</p>
Keyboard Backlight with Battery	<p>Allows to permanently turn off/turn-on the Keyboard backlight without the AC adapter.</p> <p>Options are from 5 Seconds to 15 Minutes. Default option is set to 1 Minute.</p>
Battery Health	<p>Shows Battery Health and Charge Status.</p>
External USB Ports	<p>Allows to turn off the External USB ports in the Operating System.</p> <p>Options are:</p> <ul style="list-style-type: none"> • Enabled (Default) • Disabled
Microphone	<p>Allows to Switch-on/switch-off the microphone.</p> <p>Options are:</p> <ul style="list-style-type: none"> • Enabled (Default) • Disabled
Camera	<p>Allows to Switch-on/switch-off the Camera.</p>

Table 5. System setup options—Advance menu (continued)

Advance	
	Options are:
	<ul style="list-style-type: none"> • Enabled (Default) • Disabled
Internal Bluetooth	Allows to Switch-on/switch-off the Bluetooth.
	Options are:
	<ul style="list-style-type: none"> • Enabled (Default) • Disabled
Internal WLAN	Allows to Switch-on/switch-off the Wireless Card.
	Options are:
	<ul style="list-style-type: none"> • Enabled (Default) • Disabled
Media Card Reader	Allows to enable/disable the Media Card reader.
	Options are:
	<ul style="list-style-type: none"> • Enabled (Default) • Disabled
Fingerprint Reader	Allows to enable/disable the Fingerprint reader.
	Options are:
	<ul style="list-style-type: none"> • Enabled (Default) • Disabled
Boot Disable	Disable the automatic Boot.
	Options are:
	<ul style="list-style-type: none"> • Enabled • Disabled (Default)
Battery Charge Configuration	Displays the Battery Charge configuration.
	Options are:
	<ul style="list-style-type: none"> • Adaptive (Default) • Standard • ExpressCharge™ • Primarily AC Use • Custom
Advanced Battery Charge Configuration	Displays the Advanced Charge configuration.
	Options are:
	<ul style="list-style-type: none"> • Enabled • Disabled (Default)
Power on LID open	Controls the Power function on LID open action.
	Options are:
	<ul style="list-style-type: none"> • Enabled (Default) • Disabled
Maintenance	Maintenance information.
Data Wipe on next boot	Performs Data wipe on next boot. Options are:
	<ul style="list-style-type: none"> • Disabled (Default) • Enabled
BIOS Recovery from Hard Drive	Performs reset of firmware to the factory image saved on the secondary storage. Options are:

Table 5. System setup options—Advance menu (continued)

Advance	
BIOS Auto Recovery	<ul style="list-style-type: none"> • Enabled (Default) • Disabled <p>Performs auto firmware reset when corrupted BIOS is detected. Options are:</p> <ul style="list-style-type: none"> • Disabled (Default) • Enabled
SupportAssist System Resolution	Onboard Diagnostics
Auto OS Recovery Threshold	<p>Performs SupportAssist OS recovery after the set value failed boot attempts. Options are:</p> <ul style="list-style-type: none"> • Off • 1 • 2 (Default) • 3
Support Assist OS Recovery	<p>Enabled Support Assist OS recovery on failed boot attempts. Options are:</p> <ul style="list-style-type: none"> • Disabled • Enabled (Default)

Table 6. System setup options—Security menu

Security	
Admin Password	Displays the Status of the administrator password.
System Password	Displays the Status of the computer password.
Asset Tag	Displays and allows to edit the Asset Tag of the computer.
Admin Password	Set, change, or delete the administrator password.
System Password	Set, change, or delete the computer password.
Password Change	<p>Set the status to allow User to set the System Password. The options are:</p> <ul style="list-style-type: none"> • Permitted (Default) • Disabled
Password Bypass	<p>Set the status to allow User to bypass System Password. The options are:</p> <ul style="list-style-type: none"> • Disable (Default) • Reboot Bypass
Absolute®	<p>Set the Status of the Absolute Module on the computer. The options are:</p> <ul style="list-style-type: none"> • Activate • Deactivate
Absolute® Status	<p>Displays the Status of the Absolute Module on the computer. The options are:</p> <ul style="list-style-type: none"> • Disabled • Enabled (Default) • Permanently Disabled
Firmware TPM	Enable or disable TPM 2.0 security options.
TPM Security	TPM 2.0 Security options.
TPM On	<p>Turn On/Off TPM security option. The options are:</p> <ul style="list-style-type: none"> • On • Off
PPI Bypass for Enable Commands	<p>Controls the TPM Physical Presence Interface(PPI). When enabled, this setting allows the OS to skip BIOS PPI user prompts when issuing TPM PPI enable and activate commands. The Options are:</p> <ul style="list-style-type: none"> • Enabled • Disabled (Default)

Table 6. System setup options—Security menu (continued)

Security	
PPI Bypass for Disable Commands	Controls the TPM Physical Presence Interface(PPI). When enabled, this setting will allow the OS to skip BIOS PPI user prompts when issuing TPM PPI disable and deactivate commands(#2, 4, 7, 9, & 11). The options are: <ul style="list-style-type: none"> • Disabled (Default) • Enabled
Attestation Enable	Provides for the user to control whether the TPM Endorsement Hierarchy is available to the OS. The options are: <ul style="list-style-type: none"> • Disabled • Enabled (Default)
Key Storage Enable	Provides for the user to control whether TPM Storage Hierarchy is available to the operating system. The options are: <ul style="list-style-type: none"> • Disabled • Enabled (Default)
SHA-256	Provides the BIOS and the TPM to use the SHA-256 hash algorithm to extend measurements into the TPM PCRs during BIOS boot. The options are: <ul style="list-style-type: none"> • Disabled • Enabled (Default)
Clear	Clears the TPM owner information, and returns the TPM to the default state. The options are: <ul style="list-style-type: none"> • Disabled (Default) • Enabled
PPI Bypass for Clear Commands	Controls the TPM Physical Presence Interface(PPI). When enabled, this setting will allow the OS to skip BIOS PPI user prompts when issuing the Clear command. The options are: <ul style="list-style-type: none"> • Disabled (Default) • Enabled
TPM Status	Displays the Status of the TPM Module on the computer. The options are: <ul style="list-style-type: none"> • Disabled • Enabled (Default)
UEFI Firmware Capsule Updates	Enable or disable BIOS updates through UEFI capsule update packages. By default, the option is enabled.
Secure Boot	Ensures the system boots using only to validated boot software.

Table 7. System setup options—Boot menu



Boot	
File Browser Add Boot Option	
Windows Boot Manager:	Displays the Default UEFI Boot Path of the computer Operating System and allows to navigate and select the EFI file.  NOTE: Option may differ with the Linux Operating System.
File Browser Del Boot Option	
Windows Boot Manager:	Displays the Dell Boot Path of the Default Boot Option..  NOTE: Option may differ with the Linux Operating System.
UEFI BOOT	
HDD1- Windows Boot Manager	Displays the Device ID of the Secondary Storage of the computer.
UEFI Onboard LAN IPv4	Displays the Device ID of the UEFI enabled Onboard IPv4 LAN controller.
UEFI Onboard LAN IPv6	Displays the Device ID of the UEFI enabled Onboard IPv6 LAN controller.

Table 8. System setup options—Exit menu

Exit	
Exit Saving Changes	Exit the System Setup saving the changes made to the Setup Options.
Save Change Without Exit	Save the Changes made to the System Setup and continue the Setup.
Exit Discarding Changes	Exit the System Setup without saving the changes made to the Setup Options.
Load Optional Defaults	Load the Factory Defaults in the System Setup Options.
Discard Changes	Discard any changes made to the System Setup and continue the Setup.


System and setup password


Table 9. System and setup password

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

Assigning a system setup password

Prerequisites

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

About this task

To enter the system setup, press F12 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - At least one special character: ! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ` { | }
 - Numbers 0 through 9.
 - Upper case letters from A to Z.
 - Lower case letters from a to z.
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press Esc and save the changes as prompted by the pop-up message.
5. Press Y to save the changes.
The computer restarts.

Deleting or changing an existing system setup password


Prerequisites

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

About this task

To enter the System Setup, press F12 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, update, or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**, update, or delete the existing setup password, and press Enter or Tab.
 **NOTE:** If you change the System and/or Setup password, reenter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.
5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.
The computer restarts.

Clearing CMOS settings

About this task

 **CAUTION:** Clearing CMOS settings will reset the BIOS settings on your computer.


Steps

1. Remove the [base cover](#).
2. Ensure that the battery cable has been disconnected from the system board.
3. Remove the [coin-cell battery](#).
4. Wait for one minute.
5. Replace the [coin-cell battery](#).
6. Replace the [base cover](#).
7. Ensure that the battery cable has been reconnected to the system board.

Clearing BIOS (System Setup) and System passwords

About this task


To clear the system or BIOS passwords, contact Dell technical support as described at www.dell.com/contactdell.

 **NOTE:** For information on how to reset Windows or application passwords, refer to the documentation accompanying Windows or your application.

Updating the BIOS

Updating the BIOS in Windows

Steps

1. Go to www.dell.com/support.
2. Click **Product support**. In the **Search support** box, enter the Service Tag of your computer, and then click **Search**.
 **NOTE:** If you do not have the Service Tag, use the SupportAssist feature to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, browse the folder where you saved the BIOS update file.
8. Double-click the BIOS update file icon and follow the on-screen instructions.
For more information, see knowledge base article [000124211](https://www.dell.com/support/article/000124211) at www.dell.com/support.

Updating the BIOS using the USB drive in Windows

Steps

1. Follow the procedure from step 1 to step 6 in [Updating the BIOS in Windows](#) to download the latest BIOS setup program file.
2. Create a bootable USB drive. For more information, see the knowledge base article [000145519](https://www.dell.com/support/article/000145519) at www.dell.com/support.
3. Copy the BIOS setup program file to the bootable USB drive.
4. Connect the bootable USB drive to the computer that needs the BIOS update.
5. Restart the computer and press **F12**.
6. Select the USB drive from the **One Time Boot Menu**.
7. Type the BIOS setup program filename and press **Enter**.
The **BIOS Update Utility** appears.
8. Follow the on-screen instructions to complete the BIOS update.

Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see the knowledge base article [000131486](https://www.dell.com/support/article/000131486) at www.dell.com/support.

Updating the BIOS from the F12 One-Time boot menu


Update your computer BIOS using the BIOS update.exe file that is copied to a FAT32 USB drive and booting from the F12 One-Time boot menu.

About this task

BIOS Update

You can run the BIOS update file from Windows using a bootable USB drive or you can also update the BIOS from the F12 One-Time boot menu on the computer.

Most of the Dell computers built after 2012 have this capability, and you can confirm by booting your computer to the F12 One-Time Boot Menu to see if BIOS FLASH UPDATE is listed as a boot option for your computer. If the option is listed, then the BIOS supports this BIOS update option.


 **NOTE:** Only computers with BIOS Flash Update option in the F12 One-Time boot menu can use this function.

Updating from the One-Time boot menu

To update your BIOS from the F12 One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (key does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter that is connected to the computer
- Functional computer battery to flash the BIOS

Perform the following steps to perform the BIOS update flash process from the F12 menu:

 **CAUTION: Do not turn off the computer during the BIOS update process. The computer may not boot if you turn off your computer.**

Steps

1. From a turn off state, insert the USB drive where you copied the flash into a USB port of the computer.
2. Turn on the computer and press F12 to access the One-Time Boot Menu, select BIOS Update using the mouse or arrow keys then press Enter.
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS update is completed.

Troubleshooting

Handling swollen Lithium-ion batteries

Like most laptops, Dell laptops use lithium-ion batteries. One type of lithium-ion battery is the lithium-ion polymer battery. Lithium-ion polymer batteries have increased in popularity in recent years and have become standard in the electronics industry due to customer preferences for a slim form factor (especially with newer ultra-thin laptops) and long battery life. Inherent to lithium-ion polymer battery technology is the potential for swelling of the battery cells.

Swollen battery may impact the performance of the laptop. To prevent possible further damage to the device enclosure or internal components leading to malfunction, discontinue the use of the laptop and discharge it by disconnecting the AC adapter and letting the battery drain.

Swollen batteries should not be used and should be replaced and disposed of properly. We recommend contacting Dell product support for options to replace a swollen battery under the terms of the applicable warranty or service contract, including options for replacement by a Dell authorized service technician.

The guidelines for handling and replacing Lithium-ion batteries are as follows:

- Exercise caution when handling Lithium-ion batteries.
- Discharge the battery before removing it from the system. To discharge the battery, unplug the AC adapter from the system and operate the system only on battery power. When the system will no longer power on when the power button is pressed, the battery is fully discharged.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any type to pry on or against the battery.
- If a battery gets stuck in a device as a result of swelling, do not try to free it as puncturing, bending, or crushing a battery can be dangerous.
- Do not attempt to reassemble a damaged or swollen battery into a laptop.
- Swollen batteries that are covered under warranty should be returned to Dell in an approved shipping container (provided by Dell)—this is to comply with transportation regulations. Swollen batteries that are not covered under warranty should be disposed of at an approved recycling center. Contact Dell product support at <https://www.dell.com/support> for assistance and further instructions.
- Using a non-Dell or incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell that is designed to work with your Dell computer. Do not use a battery from other computers with your computer. Always purchase genuine batteries from <https://www.dell.com> or otherwise directly from Dell.

Lithium-ion batteries can swell for various reasons such as age, number of charge cycles, or exposure to high heat. For more information on how to improve the performance and lifespan of the laptop battery and to minimize the possibility of occurrence of the issue, see [Dell Laptop Battery - Frequently Asked Questions](#).

Locate the Service Tag or Express Service Code of your Dell computer

Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, we recommend entering the Service Tag or Express Service Code at www.dell.com/support.

For more information on how to find the Service Tag for your computer, see [Locate the Service Tag for your Dell Laptop](#).

System-diagnostic lights

Power and battery-status light

The power and battery status light indicates the power and battery status of the computer. These are the power states:

Solid white:Power adapter is connected and the battery has more than 5% charge.

Amber:Computer is running on battery and the battery has less than 5% charge.

Off:

- Power adapter is connected, and the battery is fully charged.
- Computer is running on battery, and the battery has more than 5% charge.
- Computer is in sleep state, hibernation, or turned off.

The power and battery-status light may blink amber or white according to pre-defined "beep codes" indicating various failures.

For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off, indicating no memory or RAM is detected.

The following table shows different power and battery-status light patterns and associated problems.

NOTE: The following diagnostic light codes and recommended solutions are intended for Dell service technicians to troubleshoot problems. You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty.

Table 10. Diagnostic-light LED codes

Diagnostic light codes (Amber,White)	Problem description
2,1	Processor failure
2,2	System board: BIOS or ROM (Read-Only Memory) failure
2,3	No memory or RAM (Random-Access Memory) detected
2,4	Memory or RAM (Random-Access Memory) failure
2,5	Invalid memory installed
2,6	System-board or chipset error
2,7	Display failure - SBIOS message
2,8	Display failure - EC detection of power rail failure
3,1	Coin-cell battery failure
3,2	PCI, video card/chip failure
3,3	Recovery image not found
3,4	Recovery image found but invalid
3,5	Power-rail failure
3,6	System BIOS Flash incomplete

Camera status light: Indicates whether the camera is in use.

- Solid white—Camera is in use.
- Off—Camera is not in use.

Caps Lock status light: Indicates whether Caps Lock is enabled or disabled.

- Solid white—Caps Lock enabled.
- Off—Caps Lock disabled.

SupportAssist | On-board Diagnostics

About this task

The SupportAssist | On-board Diagnostics performs a complete check of your hardware.


This diagnostic is the new on-board diagnostic tool and replaces the ePSA 3.0 diagnostics. It has a clean and modern user interface, quicker tests, simplified messaging.

SupportAssist | On-board Diagnostics can be initiated by one of the following methods:

- Pressing F12 to enter one-time Boot Menu and selecting Diagnostics to initiate the diagnostics OR Fn + Power
- BIOS POST detecting a hardware failure or error and initiating the diagnostics

The SupportAssist | On-board Diagnostics is embedded with the BIOS and is launched by the BIOS internally. The embedded system diagnostics provides a set of options for particular devices or device groups allowing you to:

- Run tests in either Quick Test Mode or Advanced Test Mode
- Run thorough tests to introduce additional test options to provide extra information about the failed device(s)
- Run tests in either Automatic Mode or Interactive Test Mode
- Run interactive tests on LCD panel and keyboard
- Display or save test results
- View status messages that indicate if the tests are completed successfully
- View error messages that indicate if problems were encountered during the test

 **NOTE:** Some tests for specific devices require user interaction. Ensure that you are present at the computer terminal when the diagnostic tests are performed.

For more information, see [SupportAssist Pre-Boot System Performance Check](#).

Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a standalone tool that is preinstalled in all Dell computers installed with Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, or restore your computer to its factory state.


You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into their primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at www.dell.com/serviceabilitytools. Click **SupportAssist** and then, click **SupportAssist OS Recovery**.

WiFi power cycle

About this task

If your computer is unable to access the internet due to WiFi connectivity issues a WiFi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a WiFi power cycle:

 **NOTE:** Some ISPs (Internet Service Providers) provide a modem/router combo device.

Steps

1. Turn off your computer.
2. Turn off the modem.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.

7. Turn on your computer.

Drain residual flea power (perform hard reset)

About this task

Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.


For your safety, and to protect the sensitive electronic components in your computer, you are requested to drain residual flea power before removing or replacing any components in your computer.

Draining residual flea power, also known as a performing a "hard reset", is also a common troubleshooting step if your computer does not power on or boot into the operating system.

To drain residual flea power (perform a hard reset)

Steps

1. Turn off your computer.
2. Disconnect the power adapter from your computer.
3. Remove the base cover.
4. Remove the battery.
5. Press and hold the power button for 20 seconds to drain the flea power.
6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to your computer.
9. Turn on your computer.



 **NOTE:** For more information about performing a hard reset, see the knowledge base article [000130881](https://www.dell.com/support) at www.dell.com/support.

Getting help and contacting Dell

Self-help resources


You can get information and help on Dell products and services using these self-help resources:


Table 11. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell app	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	www.dell.com/support/windows www.dell.com/support/linux
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support . For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer .
Dell knowledge base articles for a variety of computer concerns	<ol style="list-style-type: none"> 1. Go to www.dell.com/support. 2. On the menu bar at the top of the Support page, select Support > Knowledge Base. 3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.