

# Precision 5530

## Setup and Specifications

## Notes, cautions, and warnings


 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.


 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

# Set up your computer


1. Connect the power adapter.

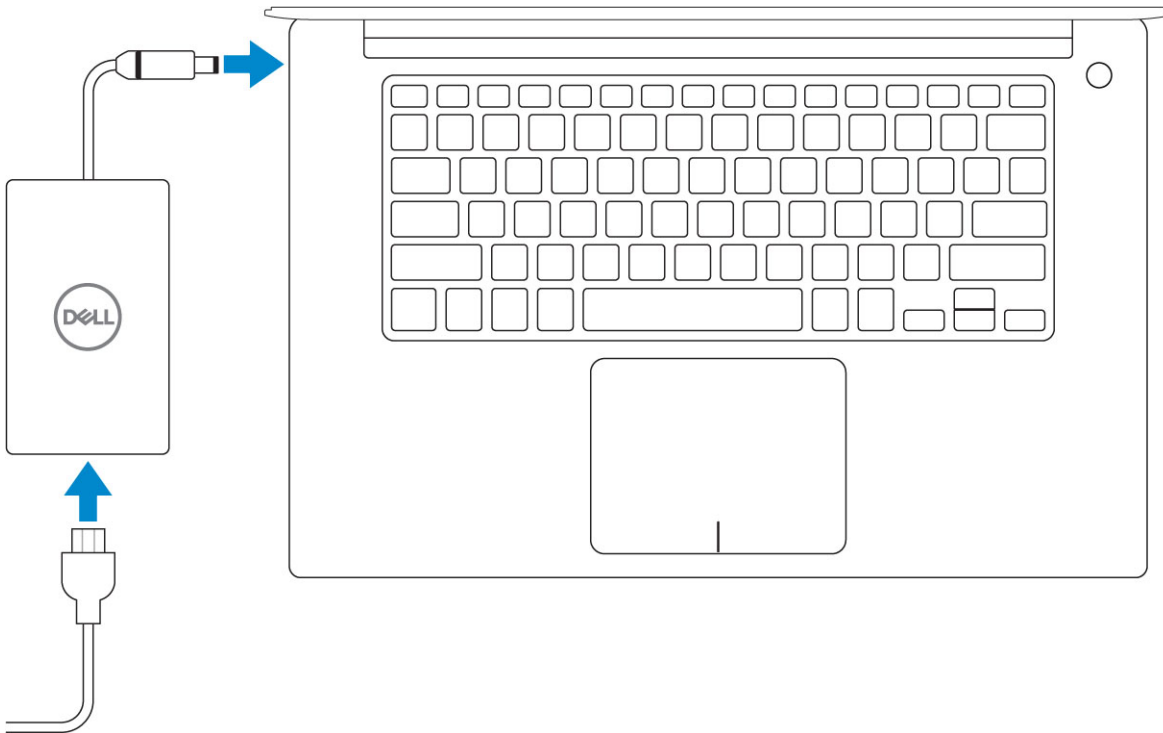


2. Press the power button.

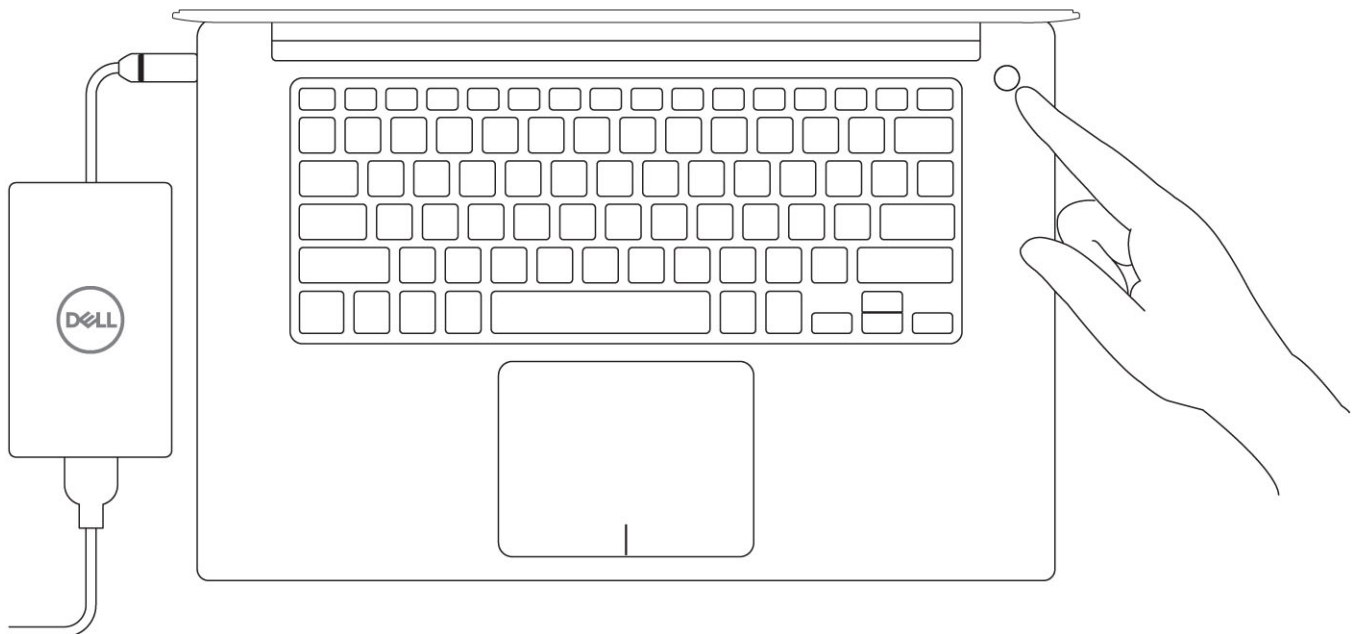

3. Follow the instructions on the screen to finish Windows setup:
  - a. Connect to a network.

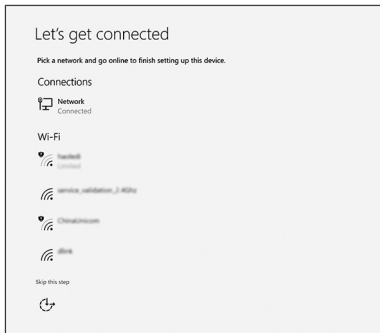

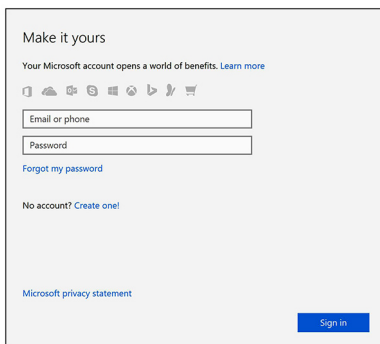



b. Sign-in to your Microsoft account or create a new account.



4. Locate Dell apps.

**Table 1. Locate Dell apps**

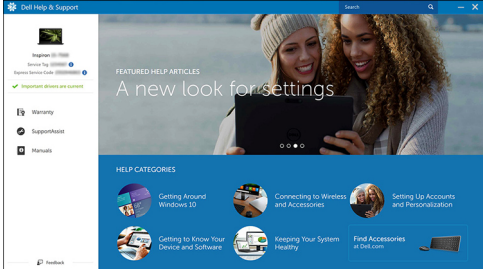Resources	Description
	Register your computer
	Dell Help & Support 
	SupportAssist — Check and update your computer


# Chassis

This chapter illustrates the multiple chassis views along with the ports and connectors and also explains the FN hot key combinations.

**Topics:**

- [System Overview](#)
- [Hot key combinations](#)

## System Overview

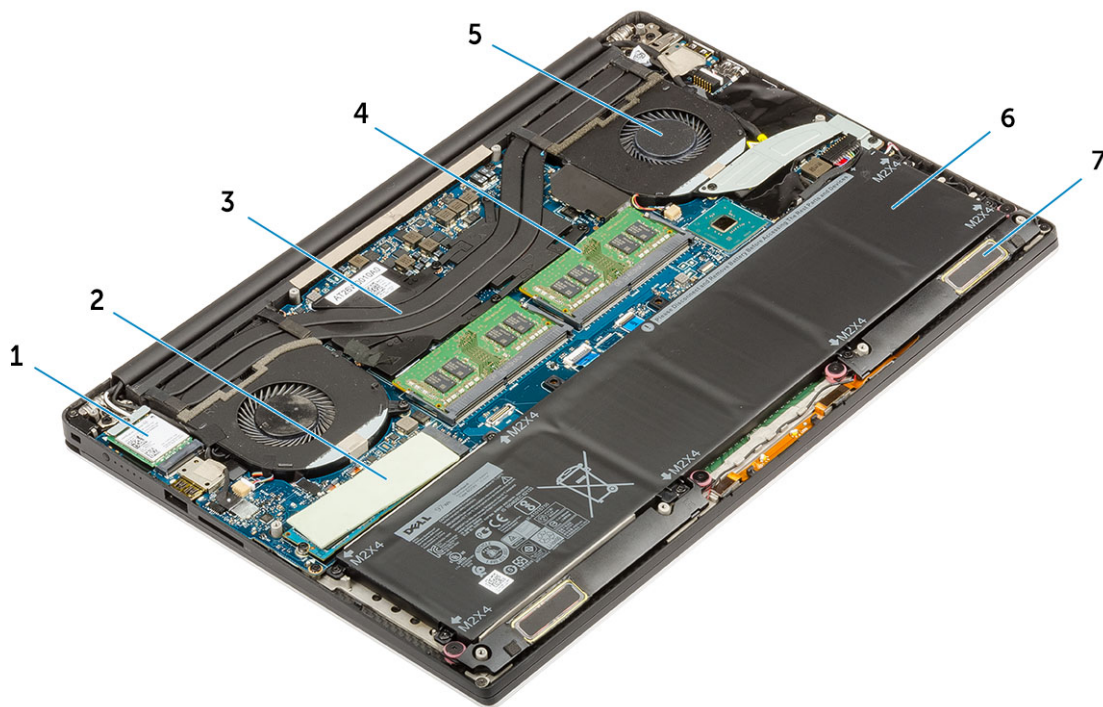


**Figure 1. Inside View — Back**

- |               |                   |
|---------------|-------------------|
| 1. WLAN card  | 2. M.2 PCIe SSD   |
| 3. heatsink   | 4. memory modules |
| 5. system fan | 6. battery        |
| 7. speakers   |                   |




**Figure 2. Front View**

- |  |             |
|--|-------------|
| 1. Power button with light indicator / Power button with fingerprint reader without light indicator (optional) | 2. Keyboard |
| 3. Palmrest  | 4. Touchpad |

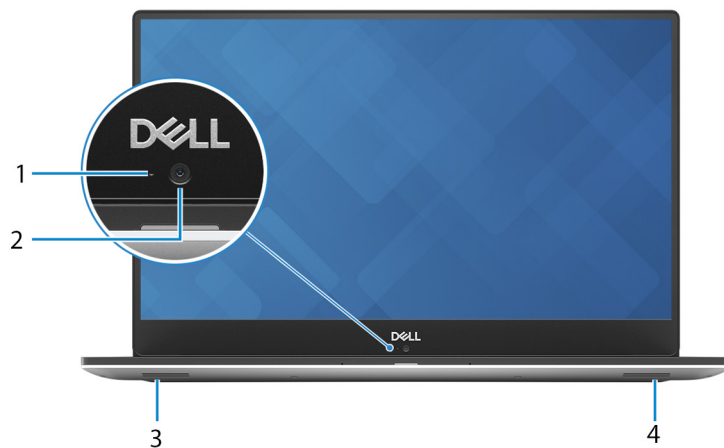


**Figure 3. Front Open View**

- |                        |                  |
|------------------------|------------------|
| 1. Camera-status light | 2. Camera        |
| 3. Left speaker        | 4. Right speaker |

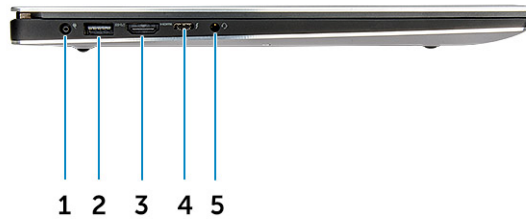

**Figure 4. Left View**

- 1. Power connector port
- 2. USB 3.1 Gen 1 port with PowerShare
- 3. HDMI port
- 4. Thunderbolt 3 (USB Type C) port with DisplayPort 1.2
- 5. Headset port

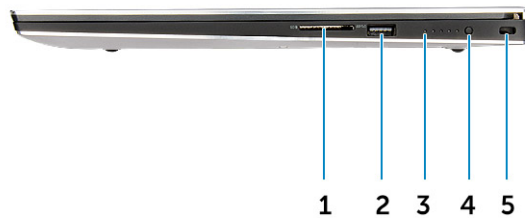

**Figure 5. Right View**

- 1. Memory card reader
- 2. USB 3.1 Gen 1 port with PowerShare
- 3. Battery-charge status lights
- 4. Battery-charge status button
- 5. Noble wedge security slot

## Hot key combinations

**Table 2. Hot key combination**

<b>Fn key combination</b>	<b>Precision 5530</b>
Fn+ESC	Fn Toggle
Fn+ F1	Speaker Mute
Fn+ F2	Volume Down
Fn+ F3	Volume Up

**Table 2. Hot key combination (continued)**

<b>Fn key combination</b>	<b>Precision 5530</b>
Fn+ F4	Rewind
Fn+ F5	Play/Pause
Fn+ F6	Forward
Fn+ F8	Display Toggle (Win + P)
Fn+ F9	Search
Fn+ F10	Increase Keyboard Back light Brightness
Fn+ F11	Panel Brightness Down
Fn+ F12	Panel Brightness Up
Fn+ PrtScr	Wireless

# Technical specifications

**NOTE:** Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For more information about the configuration of your computer, go to **Help and Support** in your Windows operating system and select the option to view information about your computer.

## Topics:

- [Physical specifications](#)
- [System information](#)
- [Processor specifications](#)
- [Operating system specifications](#)
- [Memory specifications](#)
- [Port and connector specifications](#)
- [Communication specifications](#)
- [Video specifications](#)
- [Audio specifications](#)
- [Storage specifications](#)
- [Display specifications](#)
- [Keyboard specifications](#)
- [Camera](#)
- [Touchpad specifications](#)
- [Power supply specifications](#)
- [Battery](#)
- [Power adapter](#)
- [Security](#)
- [Computer environment](#)

## Physical specifications

**Table 3. Dimensions and weight**

Features	Specification
Height	17 mm (0.66 in)
Width	357 mm (14.06 in)
Depth	235 mm (9.26 in)
Weight	1.78 kg (3.93 lb) - Non Touch / 2.04 kg (4.5 lb) - Touch

## System information

**Table 4. System information**

Features	Specifications
Chipset	Intel CM246

**Table 4. System information (continued)**

Features	Specifications
DRAM bus width	64-bit wide channels
FLASH EPROM	32 MB
PCIe bus	up to Gen3; 8 Gbps

## Processor specifications

**NOTE:** Processor numbers are not a measure of performance. Processor availability is subject to change and may vary by region/country.

**Table 5. Processor specifications**

Type	UMA Graphics
Intel Xeon E-2176M (6-core 2.7GHz, 4.4GHz Turbo, 12MB 45W)	Intel UHD Graphics P630
Intel 8th generation Intel Core i9-8950HK,(6-core 2.9GHz, 4.8GHz Turbo, 12MB 45W)	Intel UHD Graphics 630
Intel 8 th generation Intel Core i7-8850H (6-core 2.6GHz, 4.3GHz Turbo, 9MB 45W)	Intel UHD Graphics 630
Intel 8 th generation Intel Core i5-8300H (4-core 2.3GHz, 4.0GHz Turbo, 8MB 45W)	Intel UHD Graphics 630

## Operating system specifications

**Table 6. Operating system specifications**

Features	Specification
Operating systems supported	<ul style="list-style-type: none"> <li>• Microsoft 10 Windows Pro 64-bit</li> <li>• Microsoft Windows 10 Home 64-bit</li> <li>• Microsoft Windows 10 Pro National Academic (64-bit)</li> <li>• Microsoft Windows 10 Home National Academic (64-bit)</li> <li>• Microsoft Windows 10 Pro for Enterprise</li> <li>• Microsoft windows 10 Pro for Workstation (64-bit)</li> <li>• Red Hat Enterprise Linux (RHEL)</li> <li>• Ubuntu 16.04 LTS SP1 64-bit</li> </ul>

## Memory specifications

**Table 7. Memory specifications**

Features	Specification
Minimum memory configuration	8 GB
Maximum memory configuration	64 GB
Number of slots	2 SoDIMM

**Table 7. Memory specifications (continued)**

Features	Specification
Maximum memory supported per slot	32 GB
Memory options	<ul style="list-style-type: none"> <li>8 GB DDR4 2666 MHz (8Gx1)</li> <li>8 GB DDR4 2666 MHz (4Gx2)</li> <li>12 GB DDR4 2666 MHz (8Gx1 + 4Gx1)</li> <li>16 GB DDR4 2666 MHz (8Gx2)</li> <li>16 GB DDR4 2666 MHz (16Gx1)</li> <li>24 GB DDR4 2666 MHz (16Gx1 + 8Gx1)</li> <li>32 GB DDR4 2666 MHz (16Gx2)</li> <li>64 GB DDR4 2666 MHz (32Gx2)</li> </ul> <p><b>i</b> <b>NOTE:</b> The memory modules are customer replaceable units (CRU), and it can be upgraded.</p> <p><b>i</b> <b>NOTE:</b></p> <ul style="list-style-type: none"> <li>Memory configuration of 2666 MHz pair with core i5, i7, and i9 CPU</li> </ul>
Type	DDR4 SDRAM Non-ECC memory
Speed	2666 MHz on Core i5, i7, and i9 processor

## Port and connector specifications

**Table 8. Ports and connectors**

Features	Specification
USB	<ul style="list-style-type: none"> <li>Two USB 3.1 Gen 1 ports with PowerShare</li> <li>One Thunderbolt 3 port (USB 3.1 Gen 2 Type-C) with power delivery</li> </ul>
Security	Noble lock slot
Audio	One headset port (headphone and microphone combo)
Video	HDMI 2.0 port
Memory Card reader	SD 4.0

## Communication specifications

**Table 9. Communication specifications**

Features	Specifications
Network adapter	Ethernet via USB-to-Ethernet Dongle (Optional)
Wireless	<ul style="list-style-type: none"> <li>Intel Wi-Fi 6 AX200 2x2 .11ax 160MHz + Bluetooth 5.0</li> <li>Intel Wireless-AC 9260 2x2 802.11ac + BT5.0 (vPro)</li> <li>Qualcomm QCA6174A 2x2 802.11ac + BT5.0</li> <li>Bluetooth 5.0</li> </ul>

# Video specifications

Table 10. Video

Controller	Type	CPU Dependency	Graphics memory type	Capacity	External display support	Maximum resolution
Intel UHD Graphics 630	UMA	Intel Core i5 - 8300H Intel Core i7 - 8850 Intel Core i9 - 8950	Integrated	Shared system memory	HDMI 2.0	HDMI : 1920x1080@60 Hz
Intel UHD Graphics P630	UMA	Intel Xeon E-2176M	Integrated	Shared system memory	HDMI 2.0	HDMI : 1920x1080@60 Hz
NVIDIA Quadro P1000	Discrete	N/A	GDDR5	4 GB	HDMI 2.0	HDMI = 1920x1200 (PC Mode), 1920x1080 (TV mode, 1080p) HDMI 2.0 = 3840x2160 (TV mode, 2160p)
NVIDIA Quadro P2000	Discrete	N/A	GDDR5	4 GB	HDMI 2.0	HDMI = 1920x1200 (PC Mode), 1920x1080 (TV mode, 1080p) HDMI 2.0 = 3840x2160 (TV mode, 2160p)

# Audio specifications

Table 11. Audio specifications

Features	Specification
Controller	Waves MaxxAudio Pro
Type	Integrated
Interface	<ul style="list-style-type: none"> <li>High-quality speakers</li> <li>Dual-array microphones</li> </ul>

# Storage specifications

Table 12. Storage specifications

Type	Form factor	Interface	Capacity
Solid-State Drive (SSD)	M.2 PCIe SSD	PCIe , 3x4 NVMe up to 32Gbps	256 GB upto 2 TB SSD
Hard drive (HDD)	2.5 inch SATA HDD	SATA , Up to 6 Gbps	500 GB / 1 TB/ 2 TB HDD

# Display specifications

**Table 13. Display specifications**

Features	Specification
Type	<ul style="list-style-type: none"> <li>15.6-inch UltraSharp FHD IPS (1920x1080) Wide View Anti-Glare LED-backlit with Premium Panel Guarantee (72% color gamut)</li> <li>15.6-inch UltraSharp UHD IGZO (3840x2160) Touch Wide View LED-backlit with Premium Panel Guarantee (100% Minimum Adobe color gamut)</li> </ul>
Luminance/Brightness (typical)	<ul style="list-style-type: none"> <li>400 nits (FHD 72% color gamut )</li> <li>360 nits (UHD Adobe 100% color gamut)</li> </ul>
Height (Active area)	<ul style="list-style-type: none"> <li>FHD - 194.5 mm (7.66 inches)</li> <li>UHD - 194.5 mm (7.66 inches)</li> </ul>
Width (Active area)	<ul style="list-style-type: none"> <li>FHD - 345.6 mm (13.61 inches)</li> <li>UHD - 345.6 mm (13.55 inches)</li> </ul>
Diagonal	<ul style="list-style-type: none"> <li>FHD - 396.52 mm (15.61 inches)</li> <li>UHD - 396.52 mm (15.61 inches)</li> </ul>
Megapixels	<ul style="list-style-type: none"> <li>FHD - 2.07</li> <li>UHD - 8.29</li> </ul>
Pixels Per Inch (PPI)	<ul style="list-style-type: none"> <li>FHD - 141</li> <li>UHD - 282</li> </ul>
Contrast ratio	<ul style="list-style-type: none"> <li>FHD - 1500:1</li> <li>UHD - 1500:1</li> </ul>
Refresh rate	60 Hz
Horizontal viewing angle (min)	+/- 89 degrees
Vertical viewing angle (min)	+/- 89 degrees
Pixel pitch	<ul style="list-style-type: none"> <li>FHD - 0.18 mm</li> <li>UHD - 0.09 mm</li> </ul>
Power consumption (max)	<ul style="list-style-type: none"> <li>4.22 W (FHD 72% color gamut )</li> <li>9.23 W (UHD Adobe 100% color gamut)</li> </ul>

# Keyboard specifications

**Table 14. Keyboard specifications**

Features	Specification
Number of keys	<ul style="list-style-type: none"> <li>80 (U.S. and Canada)</li> <li>81 (Europe)</li> <li>84 (Japan)</li> </ul>
Size	Full sized

**Table 14. Keyboard specifications (continued)**

Features	Specification
	<ul style="list-style-type: none"><li>• X= 19.05 mm key pitch</li><li>• Y= 18.05 mm key pitch</li></ul>
Backlit keyboard	Easy enable/disable via hotkey <Fn+F10 Key> variable brightness levels
Layout	QWERTY

## Camera

**Table 15. Camera specifications**

Features	Specification
Resolution	HD Camera: <ul style="list-style-type: none"><li>• Still image: 0.92 megapixels</li><li>• Video: 1280x720 at 30 fps</li></ul>
Diagonal viewing angle	<ul style="list-style-type: none"><li>• Camera - 66 degrees</li></ul>

## Touchpad specifications

**Table 16. Touchpad specifications**

Features	Specifications
Resolution	<ul style="list-style-type: none"><li>• Horizontal: 1952</li><li>• Vertical: 3220</li></ul>
Dimensions	<ul style="list-style-type: none"><li>• Width: 4.03 inches (102.40 mm )</li><li>• Height: 2.45 inches (62.40 mm)</li></ul>
Multi-touch	Support 5 fingers

## Power supply specifications

**Table 17. Power supply**

Features	Specification
Input Voltage	100 – 240 VAC
Input frequency	50 – 60 Hz
Type	130 W AC Adapter

# Battery

**Table 18. Battery specifications**

Features	Specifications
Type	<ul style="list-style-type: none"> <li>56 WHr lithium-ion 3 cell battery</li> <li>97 WHr lithium-ion 6 cell battery</li> </ul>
Dimension	<ol style="list-style-type: none"> <li>56 WHr lithium-ion               <ul style="list-style-type: none"> <li>Length: 223.2 mm (8.79 inch)</li> <li>Width: 71.8 mm (2.83 inch)</li> <li>Height: 7.2 mm (0.28 inch)</li> <li>Weight: 250.00 g (0.55 lb)</li> </ul> </li> <li>97 WHr lithium-ion               <ul style="list-style-type: none"> <li>Length: 332 mm (13.07 inch)</li> <li>Width: 96.0 mm (3.78 inch)</li> <li>Height: 7.7 mm (0.30 inch)</li> <li>Weight: 450.00 g (0.992 lb)</li> </ul> </li> </ol>
Weight (maximum)	450.00 g (0.992 lb)
Voltage	<ul style="list-style-type: none"> <li>56 WHr - 11.4 VDC</li> <li>97 WHr - 11.4 VDC</li> </ul>
Life span	300 discharge/recharge cycles
Charging time when the computer is off (approximate)	4 hours
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions
Temperature range: Operating	0°C to 35°C (32°F to 95°F)
Temperature range: Storage	-40°C to 65°C (-40°F to 149°F)
Coin-cell battery	ML1220

# Power adapter

**Table 19. Power adapter specifications**

Features	Specification
Type	130W adapter
Input Voltage	100 to 240 VAC
Adapter size	Height:22 mm (0.86 inches) Width:66 mm (2.59 inches) Depth:143 mm (5.62 inches)
Input frequency	50 Hz to 60 Hz
Output current	130 W - 6.67 A (continuous)
Rated output voltage	19.5 VDC

**Table 19. Power adapter specifications (continued)**

Features	Specification
Temperature range (Operating)	0° to 40° C (32° to 104° F)
Temperature range (Non-Operating)	40° to 70° C (-40° to 158° F)

## Security

**Table 20. Security**

Features	Specification
Security HW	Trusted Platform Module (TPM) 2.0 - Integrated on system board

## Computer environment

**Airborne contaminant level:** G1 as defined by ISA-S71.04-1985

**Table 21. Computer environment**

	Operating	Storage
Temperature range	0°C to 40°C (32°F to 104°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	20% to 80% (non-condensing)	5% to 95% (non-condensing)
Vibration (maximum)	2 to 600 Hz at 0.66 Grms	2 to 600 Hz at 1.3 Grms
Shock (maximum)	140 G with pulse duration of 2 msec +/- 5% (equivalent to 70 in/sec)	160 G with pulse duration of 2 msec +/- 5% (equivalent to 80 in/sec)
Altitude (maximum)	0 m to 3048 m (0 to 10,000 ft); 0° to 40°C (32° to 104°F)	0 m to 10668 m (0 to 35,000 ft)

\* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

‡ Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

# BIOS Setup

**CAUTION:** Certain changes can make your computer work incorrectly. Before you change the settings in BIOS Setup, it is recommended that you note down the original settings for future reference.

**NOTE:** Depending on the computer and the installed devices, the options that are listed in this section may differ.

Use BIOS Setup for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the capacity of the storage device.
- Change the system configuration information.
- Set or change user-selectable options such as the user password, enabling or disabling base devices, and configuring hard drive settings.

## Topics:

- [BIOS overview](#)
- [Entering BIOS Setup](#)
- [Navigation keys](#)
- [F12 One Time Boot menu](#)
- [System Setup Options](#)
- [Updating the BIOS](#)
- [System and setup password](#)
- [Clearing system and setup passwords](#)

## BIOS overview

The BIOS manages data flow between the computer's operating system and attached devices such as hard disk, video adapter, keyboard, mouse, and printer.

## Entering BIOS Setup

1. Turn on your computer.
2. Press F2 immediately to enter the BIOS Setup.

**NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

## Navigation keys

**NOTE:** For most of the BIOS Setup options, changes that you make are recorded but do not take effect until you restart the computer.

**Table 22. Navigation keys**


Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.

**Table 22. Navigation keys (continued)**

Keys	Navigation
Enter	Selects a value in the selected field (if applicable) or follows the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restart the computer.


## F12 One Time Boot menu

To enter the One Time Boot menu, turn on or restart your computer, and then press F12 immediately.

 **NOTE:** If you are unable to enter the One Time Boot menu, repeat the above action.

The One Time Boot menu displays the devices that you can boot from and also display the options to start diagnostics. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)

 **NOTE:** XXXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The One Time Boot menu screen also displays the option to access BIOS Setup.

## System Setup Options

 **NOTE:** Depending on your computer and its installed devices, the items listed in this section may or may not appear.

**Table 23. Main**

Option	Description
<b>System Time/Date</b>	Allows you to set the date and time.
<b>BIOS Version</b>	Displays the BIOS version.
<b>Product Name</b>	Displays the product name. <b>Dell Precision 5530</b> (Default Setting)
<b>Service Tag</b>	Displays the service tag.
<b>Asset Tag</b>	Displays the asset tag. <b>None</b> (Default Setting)
<b>CPU Type</b>	Displays the CPU type.
<b>CPU Speed</b>	Displays the CPU speed.
<b>CPU ID</b>	Displays the CPU ID.
<b>CPU Cache</b>	Displays the sizes of the CPU caches.
<b>Fixed HDD</b>	Displays the type and size of the HDD.

**Table 23. Main (continued)**

Option	Description
<b>mSATA Device</b>	Displays the type and size of the mSATA device.
<b>AC Adapter Type</b>	Displays the type of the AC adapter. <b>None</b> (Default Setting)
<b>System Memory</b>	Displays the size of the system memory.
<b>Extended Memory</b>	Displays the size of the extended memory.
<b>Memory Speed</b>	Displays the speed of the memory.
<b>Keyboard Type</b>	Displays the type of keyboard. <b>Backlits</b> (Default Setting)





**Table 24. Advanced**

Option	Description
<b>Intel (R) SpeedStep (TM)</b>	Allows you to enable or disable the Intel (R) SpeedStep (TM) feature. <b>Enabled</b> (Default Setting)
<b>Virtualization</b>	This option specifies whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization technology. Allows you to enable or disable the Virtualization feature. <b>Enabled</b> (Default Setting)
<b>Multi Core Support</b>	Specifies whether the processor will have one or more cores enabled. <b>All</b> (Default Setting)
<b>Intel TurboBoost</b>	Enables or disables the Intel TurboBoost mode of the processor. <b>Enabled</b> (Default Setting)
<b>C-States Control</b>	This option enables or disables additional processor sleep states. <b>Enabled</b> (Default Setting)
<b>Audio</b>	Enables or disables the integrated audio controller. <b>Enabled</b> (Default Setting)
<b>Keyboard Illumination</b>	This field lets you choose the operating mode of the keyboard illumination feature. <b>Disabled</b> (Default Setting)
<b>USB Configuration</b>	Allows you to configure the integrated USB controller. <b>Default Enabled:</b> Enable Boot Support, Enable Thunderbolt Ports; Always Allow Dell Docks; Enable External USB Port
<b>Touchscreen</b>	This field controls whether the touchscreen is enabled or disabled. <b>Enabled</b> (Default Setting)
<b>AC Behavior</b>	Allows the system (if OFF or in Hibernate) to power-on automatically when AC is inserted.
<b>Wake On LAN</b>	Allows the computer to power up from the off state when triggered by special LAN. <b>Disabled</b> (Default Setting)
<b>Advanced Battery Charge Configuration</b>	Maximizes battery health while still supporting heavy use during the work day. <b>Disabled</b> (Default Setting)
<b>Block Sleep</b>	Lets you to block entering to sleep (S3 state) in OS environment. <b>Disabled</b> (Default Setting)
<b>Auto On Time</b>	Sets the time of day when you would like the system to turn on automatically. <b>Disabled</b> (Default Setting)

**Table 24. Advanced (continued)**

Option	Description
<b>Peak Shift</b>	Minimizes AC power usage at times of peak demand. <b>Disabled</b> (Default Setting)
<b>USB Wake Support</b>	Allows you to enable USB devices to wake the system from Standby. <b>Enabled</b> (Default Setting)
<b>LCD Brightness</b>	This options sets the panel brightness independently for Battery and AC power.
<b>USB Emulation</b>	Allows you to enable or disable the USB Emulation feature. <b>Enabled</b> (Default Setting)
<b>USB PowerShare</b>	Allows you to enable or disable the USB PowerShare feature. <b>Enabled</b> (Default Setting)
<b>USB Wake Support</b>	This option allows you to enable USB devices to wake the system from Standby. <b>Disable</b> (Default Setting)
<b>SATA Operation</b>	Displays the SATA Operation information.
<b>Adapter Warnings</b>	Allows you to enable or disable the adapter warnings feature.
<b>Multimedia Key Behaviour</b>	<b>Function Key</b> (Default Setting)
<b>Battery Health</b>	Displays the battery health information.
<b>Battery Charge Configuration</b>	<b>Adaptive</b> (Default Setting)
<b>Miscellaneous Devices</b>	Allows you enable or disable the various on board devices. The options are: <ul style="list-style-type: none"> <li>● <b>External USB Ports</b> - <b>Enabled</b> (Default Setting)</li> <li>● <b>USB Debug</b> - <b>Disabled</b> (Default Setting)</li> </ul>

**Table 25. Security**

Option	Description
<b>Unlock Setup Status</b>	<b>Unlocked</b> (Default Setting)
<b>Admin Password Status</b>	Displays the status of the admin password. Default Setting: <b>Not set</b>
<b>System Password Status</b>	Displays the status of the system password. Default Setting: <b>Not set</b>
<b>HDD Password Status</b>	Displays the status of the system password. Default Setting: <b>Not set</b>
<b>Asset Tag</b>	Allows you to set the asset tag.
<b>Admin Password</b>	Allows you to set, change, or delete the administrator (admin) password. <ul style="list-style-type: none"> <li> <b>NOTE:</b> You must set the admin password before you set the system or hard drive password.</li> <li> <b>NOTE:</b> Successful password changes take effect immediately.</li> <li> <b>NOTE:</b> Deleting the admin password automatically deletes the system password and the hard drive password.</li> <li> <b>NOTE:</b> Successful password changes take effect immediately.</li> </ul>

**Table 25. Security (continued)**

Option	Description
<b>System Password</b>	Allows you to set, change or delete the system password. <i>i</i> <b>NOTE:</b> Successful password changes take effect immediately.
<b>HDD Password</b>	Allows you to set, change or delete the administrator password.
<b>Strong Password</b>	This field enforces strong passwords that contain at least one uppercase character, one lowercase character, and be at least 8 characters long.
<b>Password Change</b>	Allows you to enable or disable permissions to set a System password and a Hard Drive password when the admin password is set.  Default Setting: <b>Permitted</b>
<b>Password Bypass</b>	This option lets you bypass the System (Boot) password and the internal HDD password prompts during system re-start. <b>Disabled</b> (Default Setting)
<b>Password configuration</b>	These fields control the minimum and maximum number of characters allowed for Admin and System passwords.
<b>Computrace</b>	Allows you to activate or disable the optional Computrace software The options are: <ul style="list-style-type: none"> <li>● <b>Deactivate</b> (Default Setting)</li> <li>● Activate</li> </ul> <i>i</i> <b>NOTE:</b> The Activate and Disable options will permanently activate or disable the feature and no further changes will be allowed.
<b>TPM Security</b>	This option lets you control whether the Trusted Platform Module (TPM) in the system is enabled and visible to the operating system. When disabled the BIOS will not turn On the TPM During POST. The TPM will be non-functional and invisible to the operating system. When enabled, the BIOS will turn On the TPM during POST so that it can be used by the operating system. This option is <b>Enable</b> by default. <i>i</i> <b>NOTE:</b> Disabling this option does not change any settings you may have made to the TPM, nor does it delete or change any information or keys you may have stored there. It simply turns Off the TPM so that it cannot be used. When you re-enable this option, the TPM will function exactly as it did before it was disabled. <i>i</i> <b>NOTE:</b> Changes to this option take effect immediately.
<b>UEFI Capsule Firmware Updates</b>	This option controls whether this system allows BIOS updates via UEFI capsule update packages. <b>Enabled</b> (Default Setting)
<b>CPU XD Support</b>	This option enables or disables the Execute Disable mode for the processor. <b>Enabled</b> (Default Setting)
<b>OROM Keyboard Access</b>	This option determines whether users are able to enter Option ROM configuration screens via hotkeys during boot.

**Table 26. Boot**

Option	Description
<b>Boot List Option</b>	Default Setting: <b>Legacy</b>
<b>Secure Boot</b>	This option enables or disables the Secure Boot feature. <ul style="list-style-type: none"> <li>● <b>Disabled</b> (Default Setting) - Windows 10)</li> <li>● Enabled - Windows 10</li> </ul>
<b>Load Legacy Option ROM</b>	This option enables or disables the Load Legacy Option ROM feature. <ul style="list-style-type: none"> <li>● <b>Enabled</b> (Default Setting) - Windows 10</li> <li>● Disabled - Windows 10</li> </ul>
<b>Expert Key Management</b>	Expert Key Management allows the PK, KEK, db, and dbx security key databases to be manipulated. <b>Disabled</b> (Default Setting)

**Table 26. Boot (continued)**

Option	Description
<b>Intel Software Guard Extensions</b>	Intel SGX Enabled: Enables Intel Software Guard Extensions (SGX) to provide a secured environment for running code/storing sensitive information in the context of the main OS. <b>Enabled</b> (Default Setting)
<b>Set Boot Priority</b>	Allows you to change the order in which the computer attempts to find an operating system: <ul style="list-style-type: none"> <li>• 1st Boot Priority [ CD/DVD/CD-RW Drive]</li> <li>• 2nd Boot Priority [Network]</li> <li>• 3rd Boot Priority [mini SSD]</li> <li>• 4th Boot Priority [USB Storage Device]</li> <li>• 5th Boot Priority [Hard Drive]</li> <li>• 6th Boot Priority [Diskette Drive]</li> </ul>
<b>Adapter Warnings</b>	Lets you choose whether the system displays warning messages when you use certain power adapters. <b>Enabled</b> (Default Setting)
<b>SupportAssist OS Recovery</b>	Enables for disables the boot flow for SupportAssist OS Recovery tool in the event of certain errors. <b>Enabled</b> (Default Setting)
<b>Keypad (embedded)</b>	Lets you choose one of two methods to enable the keypad that is embedded in the internal keyboard. Fn Key Only <b>Enabled</b> by default.
<b>Fastboot</b>	This option can speed up the boot process by bypassing some compatibility steps. <b>Minimal</b> (Default Setting)
<b>Extend BIOS POST Time</b>	Creates an additional pre-boot delay to see POST messages.
<b>Warnings and Errors</b>	This option cause the boot process to only pause when warnings or errors are detected. <b>Enabled</b> (Default Setting)
<b>Wireless Switch</b>	Determines which wireless devices can be controlled by the Wireless Switch. WLAN and Bluetooth Enabled (Default Setting)
<b>SupportAssist System Resolution</b>	Auto OS Recovery Threshold: Controls the automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery Tool. Setting 2 default

**Table 27. Exit**

Option	Description
<b>Save Changes and Reset</b>	Allows you to save the changes you made.
<b>Discard Changes and Reset</b>	Allows you to discard the changes you made.
<b>Restore Defaults</b>	Allows you to restore the default options.
<b>Discard Changes</b>	Allows you to discard the changes you made.
<b>Save Changes</b>	Allows you to save the changes you made.

## Updating the BIOS

### Updating the BIOS in Windows

**CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result

in data loss or an operating system reinstall. For more information, refer [Updating the BIOS on Dell systems with BitLocker enabled](#).

**CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

1. Go to [Dell Support Site](#).
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.

**NOTE:** If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.

3. Click **Drivers & Downloads**.
  4. Select the operating system installed on your computer.
  5. In the **Category** drop-down list, select **BIOS**.
  6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
  7. After the download is complete, navigate to the folder where the BIOS update file has been saved.
  8. Double-click the BIOS update file and follow the on-screen instructions.
- For more information, search [Dell Support Site](#).

## Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see [How to Update the Dell BIOS in the Ubuntu or Linux Environment](#) at [Dell Support Site](#).

## Updating the BIOS using the USB drive in Windows

**CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, refer [Updating the BIOS on Dell systems with BitLocker enabled](#).

**CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

1. Go to [Dell Support Site](#).
2. Go to **Identify your product or ask support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.

**NOTE:** If you do not have the Service Tag, click **Detect This PC**. The site automatically detects your device, and you can then click **Explore Product Support** to go to the support page for your device. You can also use the product ID or manually browse for your computer model.

3. Click **Drivers & Downloads**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. Create a bootable USB drive. For more information, search [Dell Support Site](#).
8. Copy the BIOS setup program file to the bootable USB drive.
9. Connect the bootable USB drive to the computer that needs the BIOS update.
10. Restart the computer and press **F12**.
11. Select the USB drive from the **One Time Boot Menu**.
12. Type the BIOS setup program filename and press **Enter**.  
The **BIOS Update Utility** appears.

13. Follow the on-screen instructions to complete the BIOS update.

## Updating the BIOS from the One-Time boot menu

To update the BIOS from the One-Time boot menu, see [Updating the BIOS from the One Time Boot Menu](#) at [Dell Support Site](#).

## System and setup password


 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Ensure that your computer is locked when it is not in use. Anyone can access the data that is stored on your computer, when left unattended.

**Table 28. System and setup password**

Password type	Description
System password	Password that you must enter to boot to your operating system.
Setup password	Password that you must enter to access and change the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **NOTE:** The System and setup password feature is disabled by default.

## Assigning a System Setup password


You can assign a new System or Admin Password only when the status is set to **Not Set**. To enter BIOS System Setup, press F2 immediately after a power-on or reboot.

- To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
- In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.  
The **Security** screen is displayed.
- Select **System/Admin Password** and create a password in the **Enter the new password** field.  
Use the following guidelines to create the system password:
  - Password can be up to 32 characters.
  - Password must contain at least one special character: "( ! " # \$ % & ' \* + , - . / : ; < = > ? @ [ \ ] ^ \_ ` { | } )"
  - The password can contain numbers from 0 to 9.
  - The password can contain alphabets A to Z and a to z.
- Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
- Press Y to save the changes.  
The computer restarts.

## Deleting or changing an existing system password or setup password


Ensure that the **Password Status** is Unlocked in the System Setup before attempting to delete or change the existing system password and/or setup password. You cannot delete or change an existing system password or setup password if the **Password Status** is Locked. To enter the System Setup, press F2 immediately after a power-on or reboot.

- To enter the **System Setup**, press **F2** immediately after a power-on or reboot.
- In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.  
The **System Security** screen is displayed.
- In the **System Security** screen, verify that the **Password Status** is Unlocked.

4. Select **System Password**. Update or delete the existing system password, and press Enter or Tab.
5. Select **Setup Password**. Update or delete the existing setup password, and press Enter or Tab.
  -  **NOTE:** If you change the system password and/or setup password, reenter the new password when prompted. If you delete the system password and/or setup password, confirm the deletion when prompted.
6. Press Esc. A message prompts you to save the changes.
7. Press Y to save the changes and exit from **System Setup**.  
The computer restarts.

## Clearing system and setup passwords

To clear the system or setup passwords, contact Dell technical support as described at [Contact Support](#).

-  **NOTE:** For information about how to reset Windows or application passwords, see the documentation accompanying Windows or your application.

## Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

### Topics:

- [Supported operating systems](#)
- [Downloading Windows drivers](#)
- [Downloading the chipset driver](#)

## Supported operating systems


The topic lists the operating systems supported for Precision 5530 .

**Table 29. Supported operating systems**

Features	Specifications
Supported operating systems	Description
Windows 10	<ul style="list-style-type: none"> <li>• Microsoft 10 Windows Pro 64-bit</li> <li>• Microsoft Windows 10 Home 64-bit</li> <li>• Microsoft Windows 10 Pro National Academic (64-bit)</li> <li>• Microsoft Windows 10 Home National Academic (64-bit)</li> <li>• Microsoft Windows 10 Pro for Enterprise</li> <li>• Microsoft windows 10 Pro for Workstation (64-bit)</li> </ul>
Other	<ul style="list-style-type: none"> <li>• Ubuntu 16.04 LTS SP1 64-bit</li> <li>• RedHat Enterprise Linux 7.5</li> </ul>

## Downloading Windows drivers

1. Turn on the .
2. Go to **Dell.com/support**.
3. Click **Product Support**, enter the Service Tag of your , and then click **Submit**.
 

 **NOTE:** If you do not have the Service Tag, use the auto detect feature or manually browse for your model.
4. Click **Drivers and Downloads**.
5. Select the operating system installed on your .
6. Scroll down the page and select the driver to install.
7. Click **Download File** to download the driver for your .
8. After the download is complete, navigate to the folder where you saved the driver file.
9. Double-click the driver file icon and follow the instructions on the screen.

## Downloading the chipset driver

1. Turn on the computer.
2. Go to **Dell.com/support**.
3. Click **Product Support**, enter the Service Tag of your computer, and then click **Submit**.

 **NOTE:** If you do not have the Service Tag, use the autodetect feature or manually browse for your computer model.


4. Click **Drivers and Downloads**.
5. Select the operating system installed in your computer.
6. Scroll down the page, expand **Chipset**, and select your chipset driver.
7. Click **Download File** to download the latest version of the chipset driver for your computer.
8. After the download is complete, navigate to the folder where you saved the driver file.
9. Double-click the chipset driver file icon and follow the instructions on the screen.

# Getting help

## Topics:

- [Contacting Dell](#)

## Contacting Dell

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Go to **Dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.