

XPS 13

Service Manual

Computer Model: XPS 9360
Regulatory Model: P54G
Regulatory Type: P54G002



Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your product.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2017-2019 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2019 - 05

Rev. A02

Contents

- Before working inside your computer..... 10**
 - Before you begin 10
 - Safety instructions..... 10
 - Recommended tools..... 11
 - Screw list..... 12

- After working inside your computer..... 14**

- Removing the base cover..... 15**
 - Procedure..... 15

- Replacing the base cover..... 18**
 - Procedure..... 18

- Removing the battery..... 19**
 - Prerequisites..... 19
 - Procedure..... 19

- Replacing the battery..... 22**
 - Procedure..... 22
 - Post-requisites..... 22

- Removing the solid-state drive..... 23**
 - Prerequisites..... 23
 - Procedure..... 23

- Replacing the solid-state drive..... 25**
 - Procedure.....25
 - Post-requisites..... 26

- Removing the wireless card..... 27**
 - Prerequisites..... 27
 - Procedure.....27

- Replacing the wireless card..... 29**
 - Procedure.....29
 - Post-requisites..... 30

- Removing the speakers..... 31**
 - Prerequisites..... 31
 - Procedure..... 31

- Replacing the speakers..... 33**
 - Procedure.....33
 - Post-requisites..... 33

- Removing the coin-cell battery.....34**
 - Prerequisites.....34
 - Procedure.....34

- Replacing the coin-cell battery.....36**
 - Procedure.....36
 - Post-requisites..... 36

- Removing the heat sink..... 37**
 - Prerequisites.....37
 - Procedure.....37

Replacing the heat sink.....	39
Procedure.....	39
Post-requisites.....	39
Removing the battery-status light cable with microphones.....	40
Prerequisites.....	40
Procedure.....	40
Replacing the battery-status light cable with microphones.....	42
Procedure.....	42
Post-requisites.....	42
Removing the touchpad.....	43
Prerequisites.....	43
Procedure.....	43
Replacing the touchpad.....	46
Procedure.....	46
Post-requisites.....	46
Removing the I/O-board cable	47
Prerequisites.....	47
Procedure.....	47
Replacing the I/O-board cable	49
Procedure.....	49
Post-requisites.....	49

Removing the I/O board.....	50
Prerequisites.....	50
Procedure.....	50
Replacing the I/O board.....	53
Procedure.....	53
Post-requisites.....	53
Removing the display assembly.....	54
Prerequisites.....	54
Procedure.....	54
Replacing the display assembly.....	60
Procedure.....	60
Post-requisites.....	61
Removing the display hinge cover.....	62
Prerequisites.....	62
Procedure.....	62
Replacing the display hinge cover.....	64
Procedure.....	64
Post-requisites.....	64
Removing the antenna.....	65
Prerequisites.....	65
Procedure.....	65
Replacing the antenna.....	67
Procedure.....	67
Post-requisites.....	67

Removing the system board.....	68
Prerequisites.....	68
Procedure.....	68
Replacing the system board.....	73
Procedure.....	73
Post-requisites.....	74
Entering the Service Tag in the BIOS setup program.....	74
Removing the power-adaptor port.....	75
Prerequisites.....	75
Procedure.....	75
Replacing the power-adaptor port.....	77
Procedure.....	77
Post-requisites.....	77
Removing the fan.....	78
Prerequisites.....	78
Procedure.....	78
Replacing the fan.....	81
Procedure.....	81
Post-requisites.....	81
Removing the keyboard.....	82
Prerequisites.....	82
Procedure.....	83
Replacing the keyboard.....	86
Procedure.....	86
Post-requisites.....	86

Removing the palm-rest assembly.....	87
Prerequisites.....	87
Procedure.....	88
Replacing the palm-rest assembly.....	89
Procedure.....	89
Post-requisites.....	89
Downloading drivers.....	91
Downloading the audio driver.....	91
Downloading the graphics driver.....	91
Downloading the USB 3.0 driver.....	92
Downloading the Wi-Fi driver.....	92
Downloading the media-card reader driver.....	93
Downloading the chipset driver.....	94
Downloading the network driver.....	95
System setup.....	96
Boot Sequence.....	96
Navigation keys.....	96
System setup.....	97
Entering BIOS setup program.....	97
System setup options.....	98
System and setup password.....	105
Assigning a system setup password.....	106
Deleting or changing an existing system setup password.....	106
Clearing CMOS settings.....	107
Clearing BIOS (System Setup) and System passwords.....	107

Troubleshooting..... 108
 Flashing the BIOS..... 108
 Flashing BIOS (USB key)..... 108
 Enhanced Pre-Boot System Assessment (ePSA) diagnostics..... 109
 Running the ePSA Diagnostics..... 109
 System diagnostic lights..... 110
 Flea power release..... 111
 Wi-Fi power cycle..... 112

Getting help and contacting Dell.....113
 Self-help resources..... 113
 Contacting Dell..... 114

Before working inside your computer

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

Before you begin

- 1 Save and close all open files and exit all open applications.
- 2 Shut down your computer. Click **Start** →  **Power** → **Shut down**.
 **NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
- 3 Disconnect your computer and all attached devices from their electrical outlets.
- 4 Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
- 5 Remove any media card and optical disc from your computer, if applicable.

Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.

-  **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.
-  **WARNING:** Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the electrical outlet.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat and clean.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching pins and contacts.

-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at www.dell.com/regulatory_compliance.
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.
-  **CAUTION:** When you disconnect a cable, pull on its connector or on its pull tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, ensure that the ports and connectors are correctly oriented and aligned.
-  **CAUTION:** Press and eject any installed card from the media-card reader.

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver
- Torx #5 (T5) screwdriver
- Plastic scribe

Screw list

The following table provides the list of screws that are used for securing different components.

Table 1. Screw list

Component	Secured to	Screw type	Quantity	Screw image
Antenna	Display back-cover	M2x4	4	
Display hinges	Display back-cover	M2.5x6	4	
Fingerprint reader bracket (optional)	Palm-rest assembly	M1.6x1.5	1	
Keyboard	Palm-rest assembly	M1.6x1.5	30	
Touchpad	Palm-rest assembly	M2x2	4	
Speakers	Palm-rest assembly	M2x2	4	
Power-adapter port	Palm-rest assembly	M2x3	1	
System board	Palm-rest assembly	M1.6x3	7	
I/O board	Palm-rest assembly	M1.6x3	2	
Heat sink	System board	M2x3	4	
Hinge brackets	Palm-rest assembly	M2.5x4	4	
Hard drive (SSD)	Hard-drive (SSD) bracket	M2x2	1	

Component	Secured to	Screw type	Quantity	Screw image
Wireless card	System board	M2x3	1	
Display-cable bracket	System board	M2x3	2	
Battery	Palm-rest assembly	M2x2	3	
Battery	Palm-rest assembly	M1.6x4	1	
Base cover	Palm-rest assembly	M2x3, Torx	8	
Base cover	Palm-rest assembly	M1.6x6	1	

After working inside your computer



CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.

- 1** Replace all screws and ensure that no stray screws remain inside your computer.
- 2** Connect any external devices, peripherals, or cables you removed before working on your computer.
- 3** Replace any media cards, discs, or any other parts that you removed before working on your computer.
- 4** Connect your computer and all attached devices to their electrical outlets.
- 5** Turn on your computer.

Removing the base cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Using your fingertips, open the system badge.
- 2 Remove the screw (M1.6x6) that secures the base cover to the palm-rest assembly.

- 3 Remove the eight screws (M2x3, Torx) that secure the base cover to the palm-rest assembly.

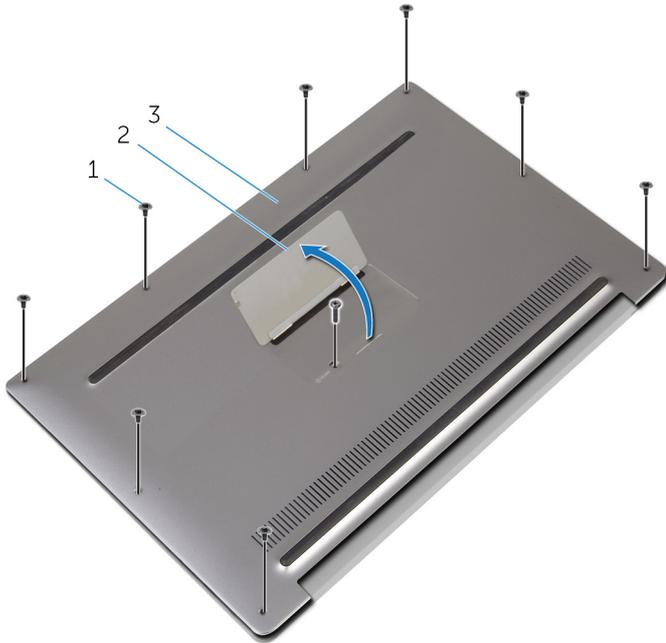


Figure 1. Removing the base cover

- | | | | |
|---|------------|---|--------------|
| 1 | screws (9) | 2 | system badge |
| 3 | base cover | | |

- 4 Starting from the back of the computer, pry up the base cover using a plastic scribe.

- 5 Lift the base cover off the palm-rest assembly.



Figure 2. Removing the base cover

- | | | | |
|---|--------------------|---|------------|
| 1 | palm-rest assembly | 2 | base cover |
| 3 | plastic scribe | | |

Replacing the base cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the base cover with the screw holes on the palm-rest assembly and snap the base cover into place.
- 2 Using your fingertips, open the system badge.
- 3 Replace the screw (M1.6x4) under the system badge that secures the base cover to the palm-rest assembly.
- 4 Replace the eight screws (M2x3, Torx) that secure the base cover to the palm-rest assembly.

Removing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

Remove the [base cover](#).

Procedure

- 1 Disconnect the battery cable from the system board.

- 2 Peel off the tape that secures the speaker cable to the battery.

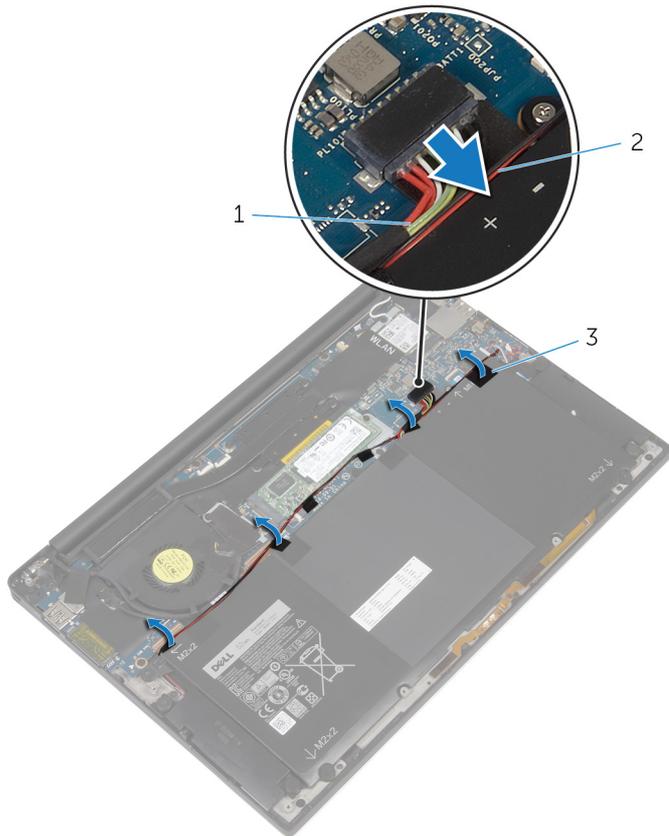


Figure 3. Removing the battery

- | | | | |
|---|---------------|---|---------------|
| 1 | battery cable | 2 | speaker cable |
| 3 | tape (6) | | |

- 3 Remove the screw (M1.6x4) that secures the battery to the palm-rest assembly.
- 4 Remove the three screws (M2x2) that secure the battery to the palm-rest assembly.

- 5 Lift the battery off the palm-rest assembly.

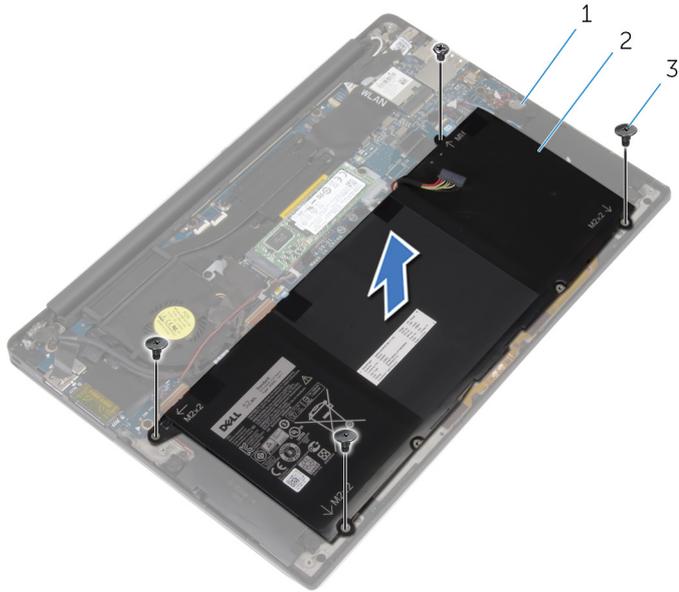


Figure 4. Removing the battery

- | | | | |
|---|--------------------|---|---------|
| 1 | palm-rest assembly | 2 | battery |
| 3 | screws (4) | | |
- 6 Turn the computer over, open the display, and press the power button for about 5 seconds to ground the computer.

Replacing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the battery with the screw holes on the palm-rest assembly.
- 2 Replace the three screws (M2x3) that secure the battery to the palm-rest assembly.
- 3 Replace the screw (M1.6x4) that secures the battery to the palm-rest assembly.
- 4 Connect the battery cable to the system board.

Post-requisites

Replace the [base cover](#).

Removing the solid-state drive

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

 **CAUTION:** Solid-state drives are fragile. Exercise care when handling the solid-state drive.

 **CAUTION:** To avoid data loss, do not remove the solid-state drive while the computer is in sleep or on state.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 Remove the screw (M2x2) that secures the solid-state drive to the system board.

- 2 Slide and remove the solid-state drive from the solid-state drive slot.

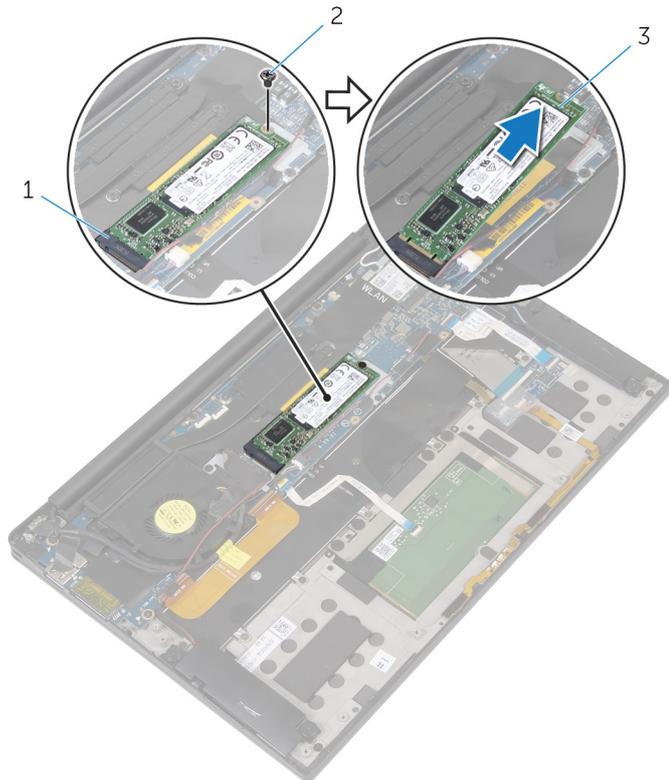


Figure 5. Removing the solid-state drive

- | | | | |
|---|------------------------|---|-------|
| 1 | solid-state drive slot | 2 | screw |
| 3 | solid-state drive | | |

Replacing the solid-state drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Solid-state drives are fragile. Exercise care when handling the solid-state drive.

Procedure

- 1 Align the notches on the solid-state drive with the tabs in the solid-state drive slot.
- 2 Slide the solid-state drive at an angle into the solid-state drive slot.

- 3 Press the other end of the solid-state drive down and replace the screw (M2x2) that secures the solid-state drive to the system board.

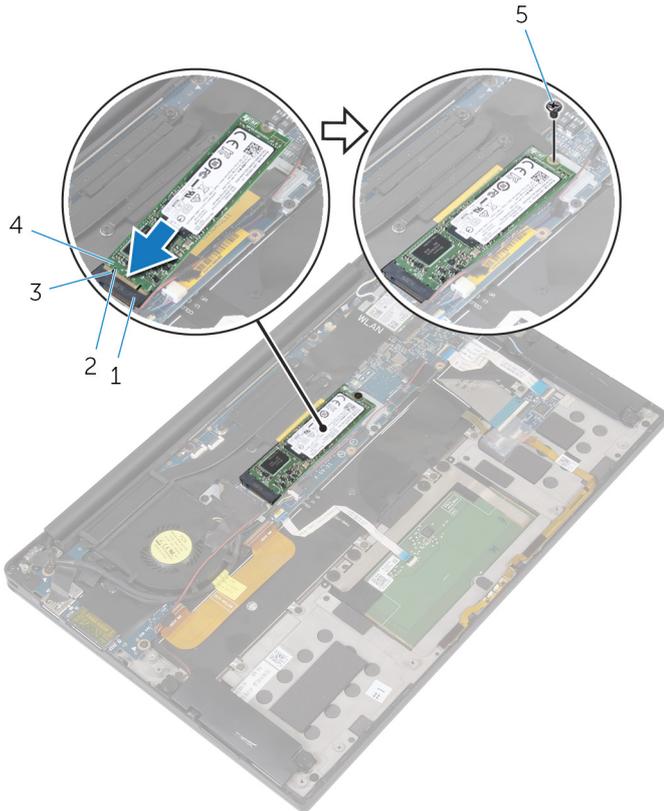


Figure 6. Replacing the solid-state drive

- | | | | |
|---|------------------------|---|-------------------|
| 1 | solid-state drive slot | 2 | tab |
| 3 | notch | 4 | solid-state drive |
| 5 | screw | | |

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 Remove the screw (M2x3) that secures the wireless-card bracket and the wireless card to the system board.
- 2 Lift the wireless-card bracket off the wireless card.
- 3 Disconnect the antenna cables from the wireless card.

- 4 Slide and remove the wireless card out of the wireless-card slot.

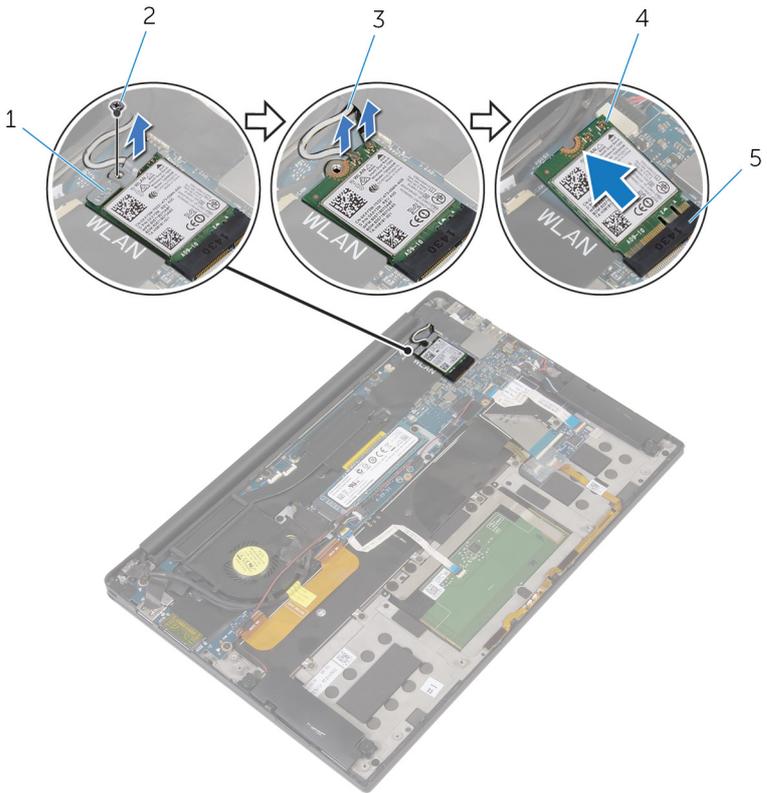


Figure 7. Removing the wireless card

- | | | | |
|---|-----------------------|---|---------------|
| 1 | wireless-card bracket | 2 | screw |
| 3 | antenna cables (2) | 4 | wireless card |
| 5 | wireless-card slot | | |

Replacing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the notches on the wireless card with the tabs in the wireless-card slot.



CAUTION: To avoid damage to the wireless card, never place cables under the wireless card.

- 2 Slide the wireless-card at an angle into the wireless-card slot.
- 3 Connect the antenna cables to the wireless card.

The following table provides the antenna cable color scheme for the wireless card supported by your computer.

Table 2. Antenna-cable color scheme

Connectors on the wireless card	Antenna-cable color
Main (white triangle)	White
Auxiliary (black triangle)	Black

- 4 Press the other end of the wireless card down.
- 5 Place the wireless-card bracket on the wireless card.

- 6 Replace the screw (M2x3) that secures the wireless-card bracket to the system board.

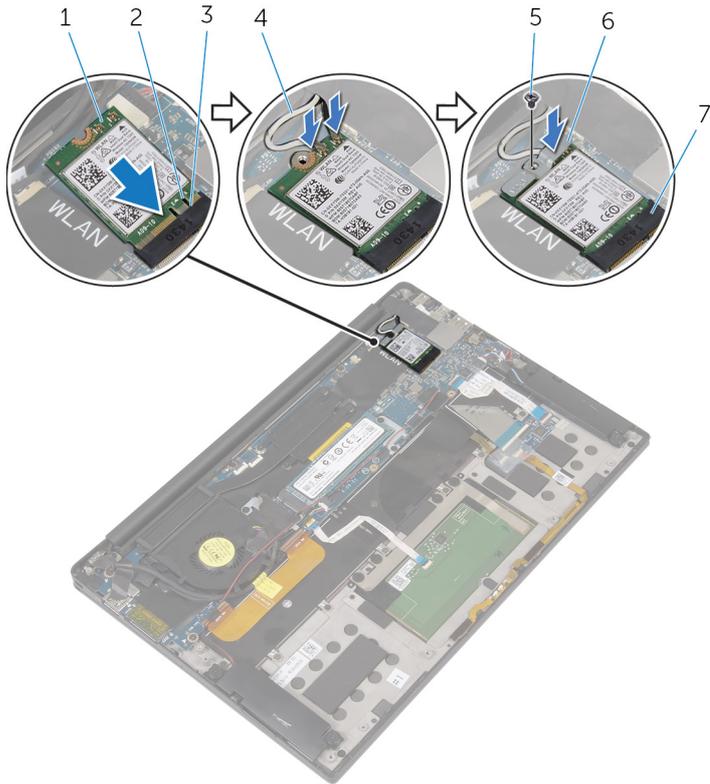


Figure 8. Replacing the wireless card

- | | | | |
|---|--------------------|---|-----------------------|
| 1 | wireless card | 2 | notch |
| 3 | tab | 4 | antenna cables (2) |
| 5 | screw | 6 | wireless-card bracket |
| 7 | wireless-card slot | | |

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 Disconnect the speaker cable from the system board.
- 2 Remove the four screws (M2x2) that secure the speakers to the palm-rest assembly.
- 3 Note the speaker-cable routing and peel off the tape that secures the speaker cable to the system board.

- 4 Lift the speakers, along with its cables, off the palm-rest assembly.

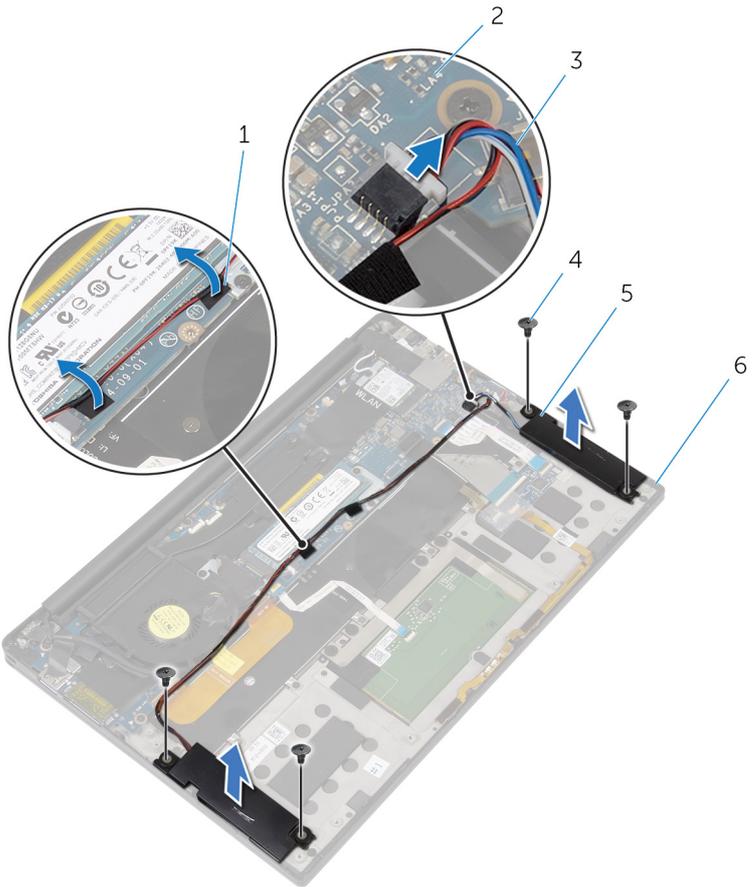


Figure 9. Removing the speakers

- | | | | |
|---|---------------|---|--------------------|
| 1 | tape (2) | 2 | system board |
| 3 | speaker cable | 4 | screws (4) |
| 5 | speakers (2) | 6 | palm-rest assembly |

Replacing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Using the alignment posts on the palm-rest assembly, place the speakers on the palm-rest assembly.
- 2 Replace the four screws (M2x2) that secure the speakers to the palm-rest assembly.
- 3 Route the speaker cable on the system board and adhere the tape to the system board.
- 4 Connect the speaker cable to the system board.
- 5 Adhere the tape securing the speaker cable to the system board.

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 Disconnect the coin-cell battery cable from the system board.

- 2 Note the location of the coin-cell battery and pry it off the palm-rest assembly.

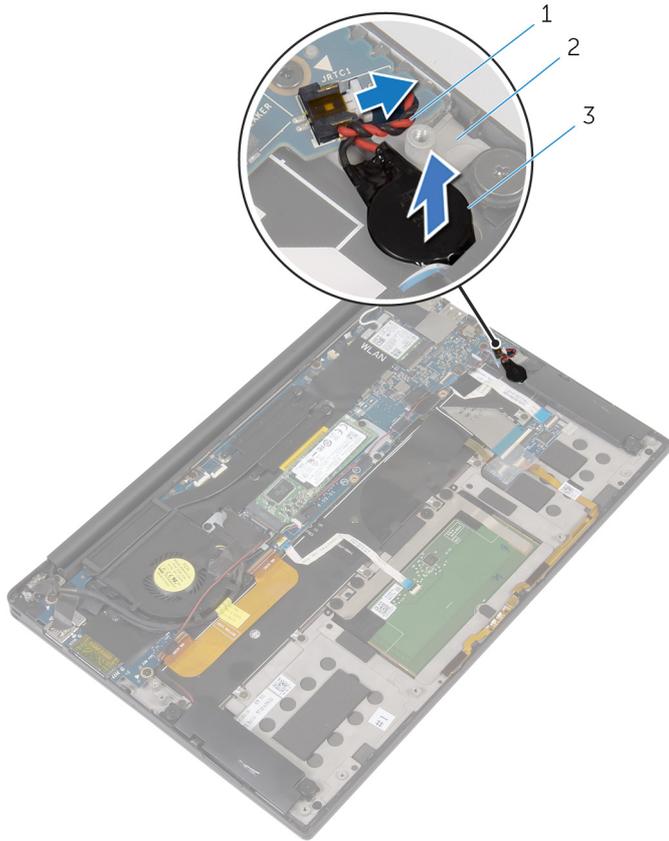


Figure 10. Removing the coin-cell battery

- | | | | |
|---|-------------------------|---|--------------------|
| 1 | coin-cell battery cable | 2 | palm-rest assembly |
| 3 | coin-cell battery | | |

Replacing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Adhere the coin-cell battery to the palm-rest assembly.
- 2 Connect the coin-cell battery cable to the system board.

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the heat sink

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

 **WARNING:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

 **CAUTION:** For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 In sequential order (as indicated on the heat sink), remove the screws that secure the heat sink to the system board.

- 2 Lift the heat sink off the system board.

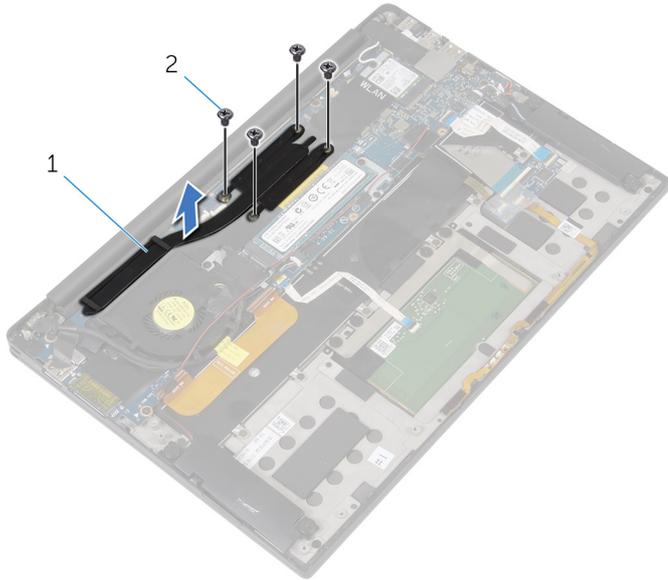


Figure 11. Removing the heat sink

1 heat sink

2 M2x3 screws (4)

Replacing the heat sink



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Incorrect alignment of the heat sink can damage the system board and processor.



NOTE: If either the system board or the heat sink is replaced, use the thermal pad/paste provided in the kit to ensure that thermal conductivity is achieved.

Procedure

- 1 Align the screw holes on the heat sink with the screw holes on the system board.
- 2 Replace the screws that secure the heat sink to the system board in the reverse order (as indicated on the heat sink).

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the battery-status light cable with microphones



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: The battery-status light cable with microphones is an assembly that includes LED indicators and digital-array microphones.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 Peel the tape that secures the battery-status light cable with microphones to the keyboard-controller board.
- 2 Open the latch and disconnect the battery-status light cable with microphones from the keyboard-controller board.
- 3 Peel the tape that secures the battery-status light cable with microphones to the palm-rest assembly.

- 4 Note the battery-status light cable with microphones routing and peel the cable along with the microphones from the palm-rest assembly.

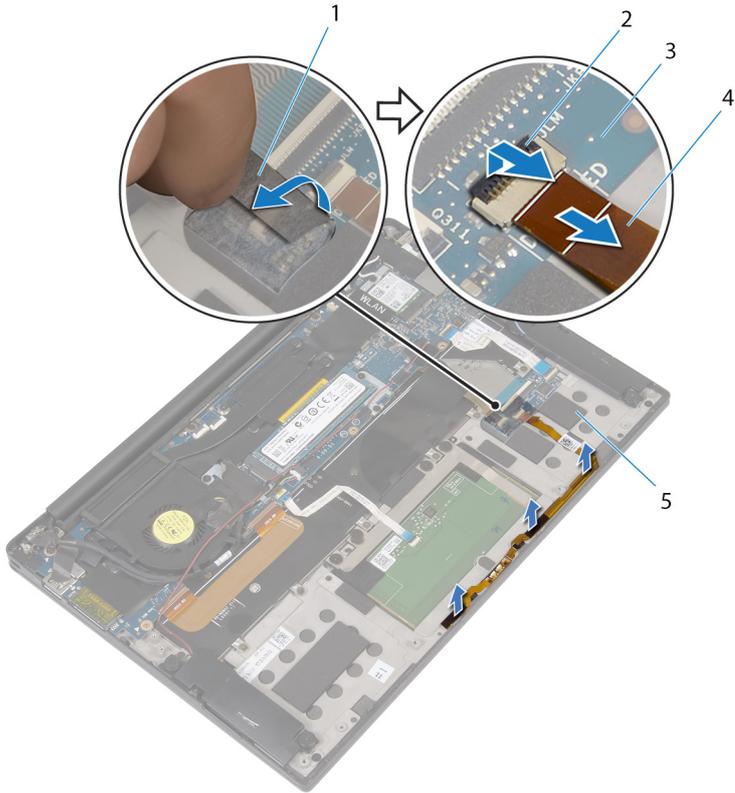


Figure 12. Removing the battery-status light cable with microphones

- | | | | |
|---|---------------------------|---|---|
| 1 | tape | 2 | latch |
| 3 | keyboard-controller board | 4 | battery-status light cable with microphones |
| 5 | palm-rest assembly | | |

Replacing the battery-status light cable with microphones



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: The battery-status light cable with microphones is an assembly that includes LED indicators and digital-array microphones.

Procedure

- 1 Using the alignment posts, place the battery-status light cable with microphones on the palm-rest assembly.
- 2 Route the battery-status light cable with microphones through the routing guides and adhere it to the palm-rest assembly.
- 3 Adhere the tape that secures the battery-status light cable with microphones to the palm-rest assembly.
- 4 Slide the battery-status light cable with microphones into the connector on the keyboard-controller board and close the latch to secure the cable.
- 5 Adhere the tape that secures the battery-status light cable to the keyboard-controller board.

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the touchpad



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 Open the latch and disconnect the touchpad cable from the system board.

- 2 Peel off the touchpad cable from the keyboard and palm-rest assembly.

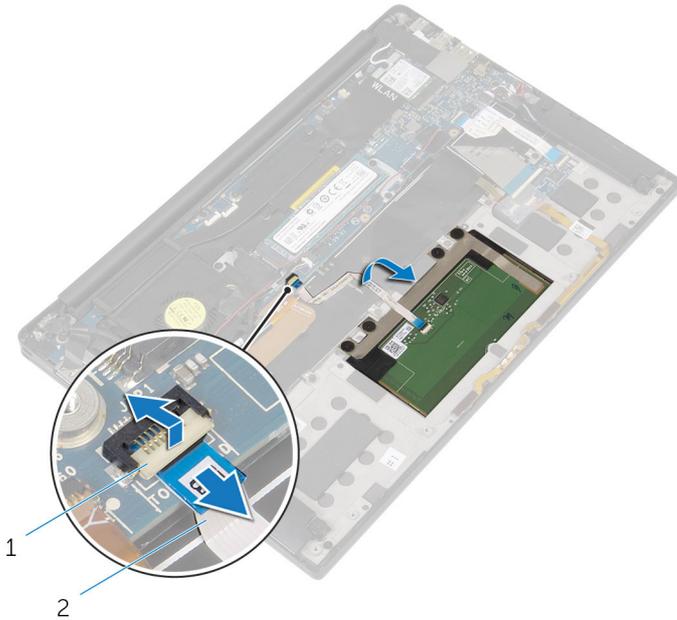


Figure 13. Removing the touchpad cable

1 latch

2 touchpad cable

- 3 Remove the four screws (M2x2) that secure the touchpad to the palm-rest assembly. If applicable, peel off any foam adhering the touchpad to the palm-rest assembly.

- 4 Lift the touchpad from the inner edge and remove it from the palm-rest assembly.

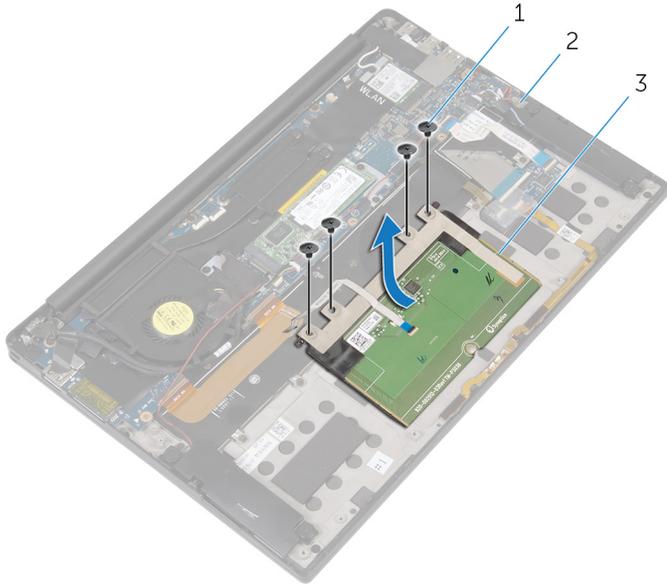


Figure 14. Removing the touchpad

- | | | | |
|---|------------|---|--------------------|
| 1 | screws (4) | 2 | palm-rest assembly |
| 3 | touchpad | | |

Replacing the touchpad



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the touchpad with the screw holes on the palm-rest assembly.
- 2 Replace the four screws (M2x2) that secure the touchpad to the palm-rest assembly.
- 3 Slide the touchpad cable into the connector on the system board and close the latch to secure the cable.
- 4 Route the touchpad cable and adhere the cable to the keyboard and palm-rest assembly.

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the I/O-board cable



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 Open the latches and disconnect the I/O-board cable from the system board and the I/O board.

- 2 Note the I/O-board cable routing as well as its orientation, and then peel off the cable from the keyboard.

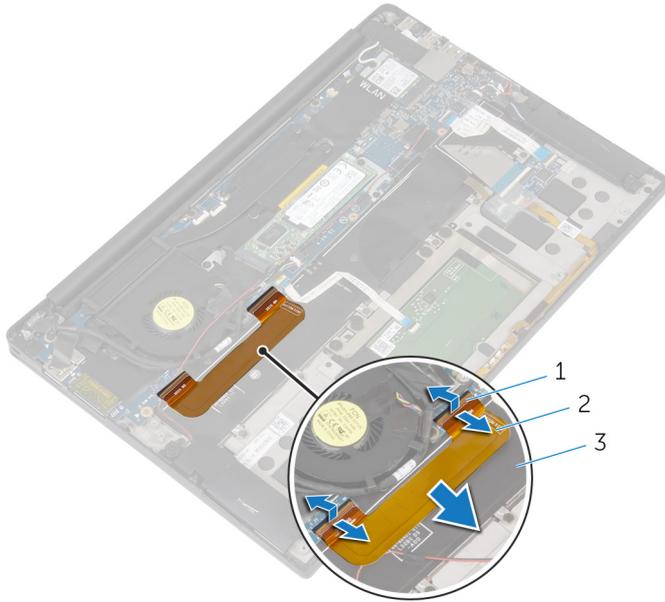


Figure 15. Removing the I/O-board cable

- | | | | |
|---|-------------|---|-----------------|
| 1 | latches (2) | 2 | I/O-board cable |
| 3 | keyboard | | |

Replacing the I/O-board cable



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide both ends of the I/O-board cable into their connectors on the system board and I/O board, then close the latches to secure the cable.
- 2 Adhere the I/O-board cable to the keyboard.

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 Remove the two screws (M1.6x3) that secure the I/O board to the palm-rest assembly.
- 2 Peel off the tape that secures the display cable to the I/O board.
- 3 Disconnect the media-card reader cable from the I/O board.
- 4 Open the latch and disconnect the I/O-board cable from the I/O board.

- 5 Open the latch and disconnect the fingerprint-reader cable (optional) from the I/O board.

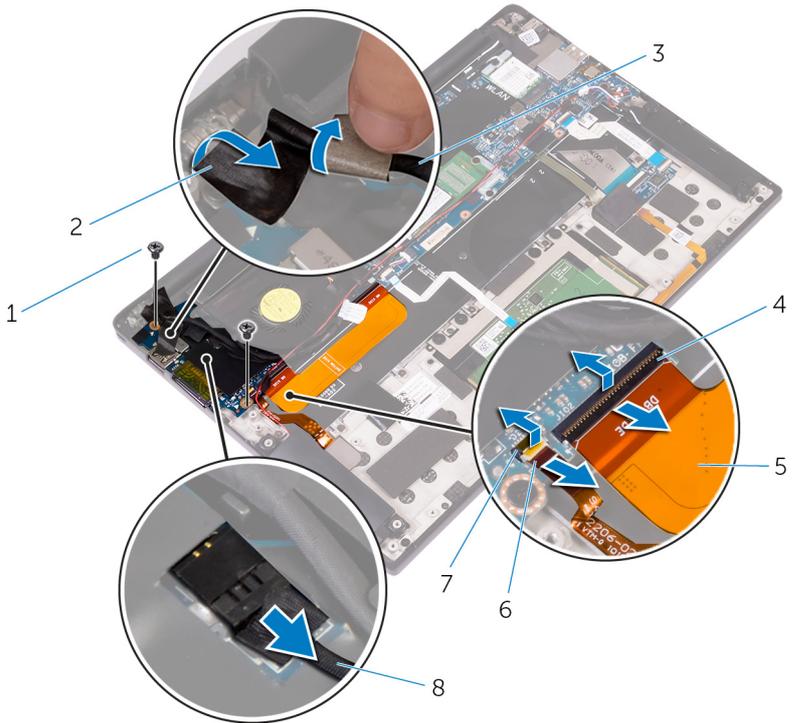


Figure 16. Removing the I/O board

- | | | | |
|---|-----------------|---|-------------------------------------|
| 1 | screws (2) | 2 | tape |
| 3 | display cable | 4 | latch |
| 5 | I/O-board cable | 6 | fingerprint-reader cable (optional) |
| 7 | latch | 8 | media-card reader cable |

- 6 Peel off the tape that secures the I/O board.

- 7 Starting from the outer edge, lift the I/O board at an angle and remove the I/O board.

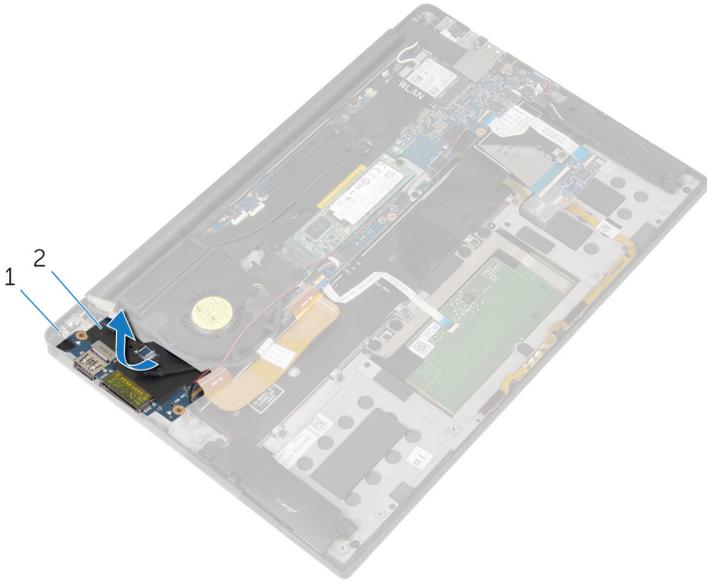


Figure 17. Removing the I/O board

1 palm-rest assembly

2 I/O board

Replacing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the I/O board at an angle and then align the screw holes on the I/O board with the screw holes on the palm-rest assembly.
- 2 Adhere the tape that secures the I/O board.
- 3 Align the screw hole on the display cable with the screw hole on the I/O board.
- 4 Replace the two screws (M1.6x3) that secure the I/O board to the palm-rest assembly.
- 5 Slide the I/O-board cable into the I/O board and close the latch to secure the cable.
- 6 Slide the fingerprint-reader cable (optional) into the I/O board and close the latch to secure the cable.
- 7 Connect the media-card reader cable to the connector on the I/O board.
- 8 Adhere the tape that secures the display cable to the I/O board.

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).

Procedure

- 1 Disconnect the touchscreen cable (optional) and camera cable from the system board.
- 2 Peel off the tape that secures the antenna cables to the system board.
- 3 Remove the screw (M2x3) that secures the wireless-card bracket to the system board.
- 4 Lift the wireless-card bracket off the wireless card.

- 5 Disconnect the antenna cables from the wireless card.

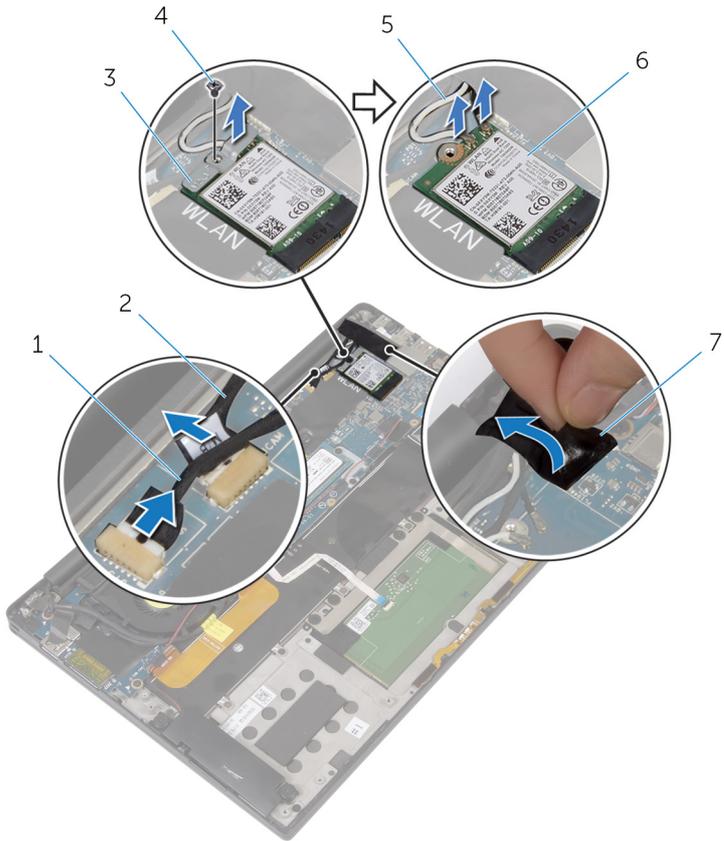


Figure 18. Removing the display assembly

- | | | | |
|---|------------------------------|---|---------------|
| 1 | touchscreen cable (optional) | 2 | camera cable |
| 3 | wireless-card bracket | 4 | screw |
| 5 | antenna cables (2) | 6 | wireless card |
| 7 | tape | | |

- 6** Remove the screw (M1.6x3) that secures the display cable to the I/O board.
7 Peel off the tapes that secure the display cable to the fan and the I/O board.
8 Disconnect the media-card reader cable from the I/O board.

- 9 Note the display-cable routing and remove the cable from the routing guides on the fan.
- 10 Peel off the tape from the display-cable bracket.

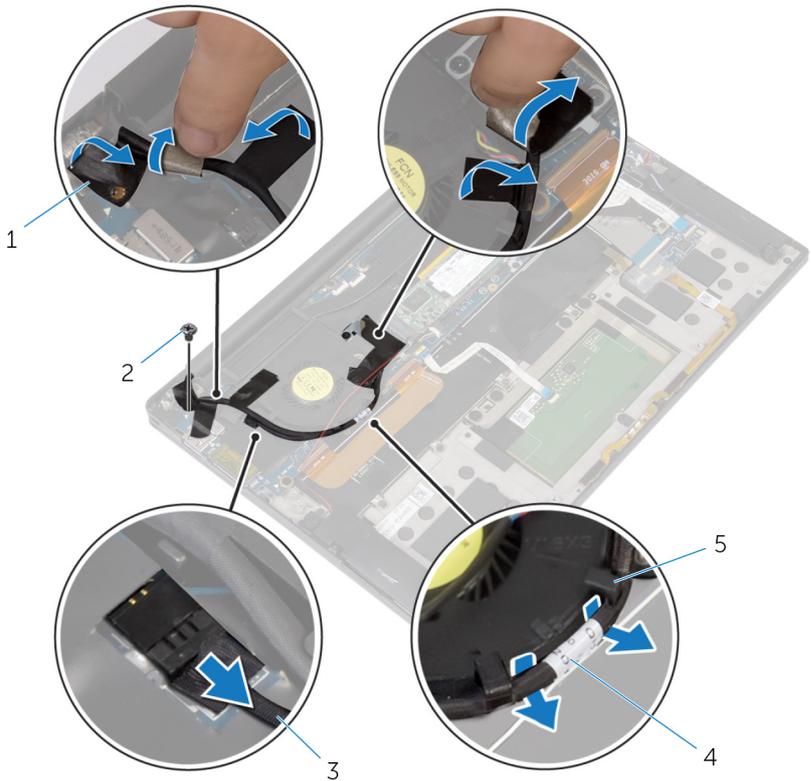


Figure 19. Removing the display assembly

- | | | | |
|---|-------------------------|---|---------------|
| 1 | tapes (4) | 2 | screw |
| 3 | media-card reader cable | 4 | display cable |
| 5 | routing guides (2) | | |

- 11 Remove the two screws (M2x3) that secure the display-cable bracket to the system board.
- 12 Lift the display-cable bracket off the display cable.

13 Using the pull tab, disconnect the display cable from the system board.

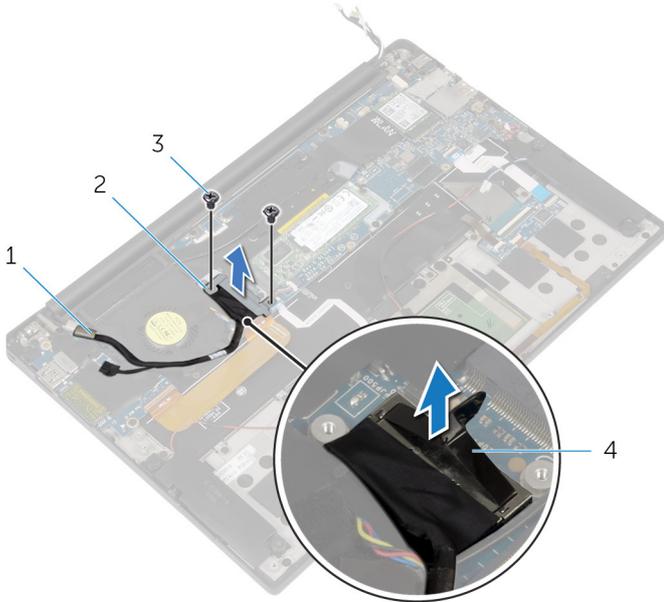


Figure 20. Removing the display assembly

- | | | | |
|---|---------------|---|-----------------------|
| 1 | display cable | 2 | display-cable bracket |
| 3 | screws (2) | 4 | pull tab |

- 14** Open the palm-rest assembly at an angle of 90 degrees, and then remove the four screws (M2.5x4) that secure the display hinges to the palm-rest assembly.

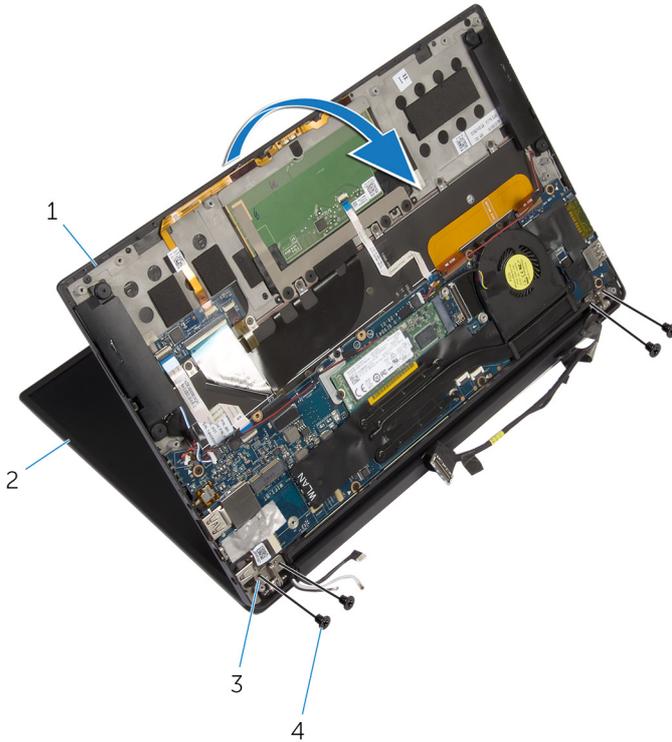


Figure 21. Removing the display assembly

- | | | | |
|---|--------------------|---|------------------|
| 1 | palm-rest assembly | 2 | display assembly |
| 3 | display hinges (2) | 4 | screws (4) |

15 Slide and remove the palm-rest assembly from the display hinges.

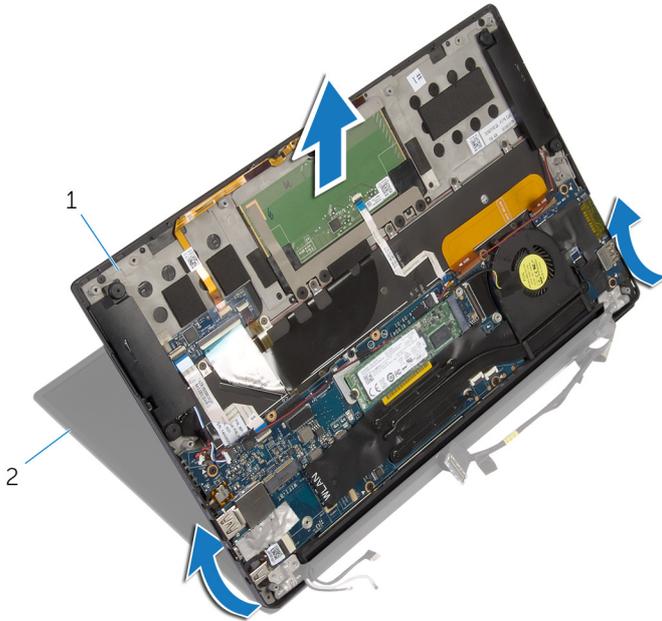


Figure 22. Removing the display assembly

1 palm-rest assembly

2 display assembly

Replacing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the palm-rest assembly under the display hinges and align the screw holes on the palm-rest assembly with the screw holes on the display hinges.
- 2 Replace the four screws (M2.5x4) that secure the palm-rest assembly to the display hinges.
- 3 Close the palm-rest assembly.
- 4 Connect the display cable to the system board.
- 5 Align the screw holes on the display-cable bracket with the screw holes on the system board.
- 6 Replace the two screws (M2x3) that secure the display-cable bracket to system board.
- 7 Adhere the tape over the display-cable bracket.
- 8 Route the display cable through the routing guides on the fan.
- 9 Connect the media-card reader cable to the I/O board.
- 10 Adhere the tape that secures the display cable to the fan and the I/O board.
- 11 Replace the screw (M1.6x3) that secures the display cable to the I/O board.
- 12 Connect the antenna cables to the wireless card.
- 13 Align the screw hole on the wireless-card bracket with the screw hole on the system board.
- 14 Replace the screw (M2x3) that secures the wireless-card bracket to the system board.
- 15 Adhere the tape that secures the antenna cables to the system board.
- 16 Connect the touchscreen cable (optional) and camera cable to the system board.

Post-requisites

- 1 Replace the [battery](#).
- 2 Replace the [base cover](#).

Removing the display hinge cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: The display hinge cover is included as part of the display assembly. However, the hinge cover can be replaced separately.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [display assembly](#).

Procedure

- 1 With the display facing up, slide the display hinge cover towards the right.

- 2 Lift the display hinge cover off the display assembly.

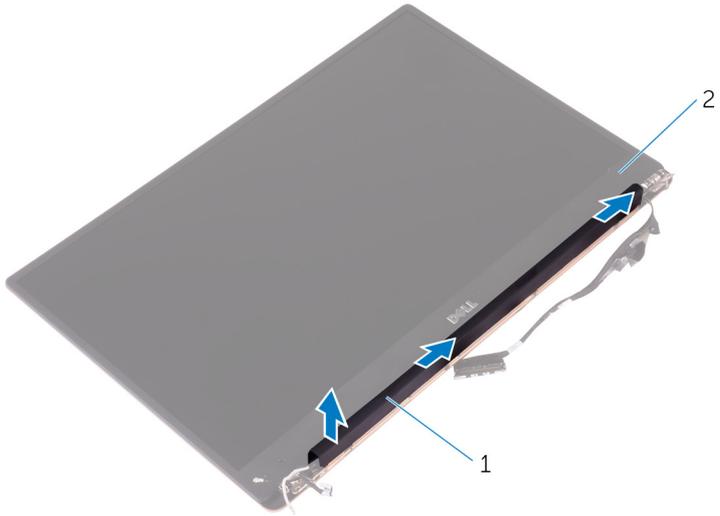


Figure 23. Remove the display hinge cover

1 display hinge cover

2 display assembly

Replacing the display hinge cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: The display hinge cover is included as part of the display assembly. However, the hinge cover can be replaced separately.

Procedure

- 1 Align the display hinge cover to the base of the display assembly.
- 2 With the display facing up, press and slide the display hinge cover to the left, to lock it into position.

Post-requisites

- 1 Replace the [display assembly](#).
- 2 Replace the [battery](#).
- 3 Replace the [base cover](#).

Removing the antenna



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: The antenna is included as part of the display assembly. However, the antenna can be replaced separately.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [display assembly](#).
- 4 Remove the [display hinge cover](#).

Procedure

- 1 Remove the four screws (M2x4) that secure the antenna to the display assembly.

2 Lift the antenna off the display assembly.

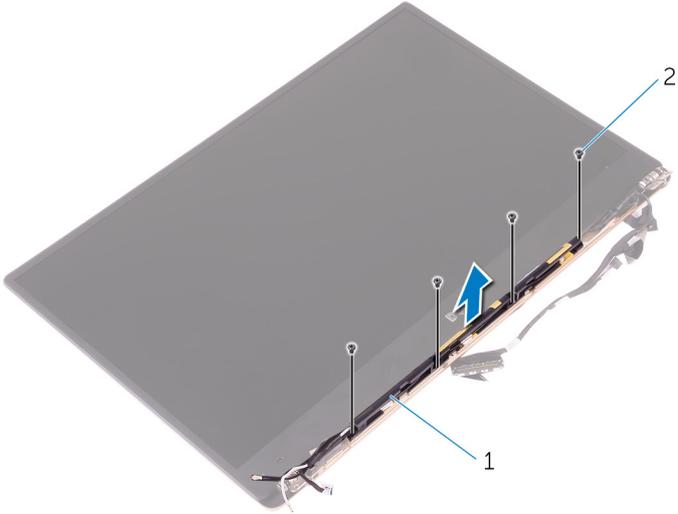


Figure 24. Removing the antenna

1 antenna

2 screws (4)

Replacing the antenna



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: The antenna is included as part of the display assembly. However, the antenna can be replaced separately.

Procedure

- 1 Align the screw holes on the antenna with the screw holes on the display assembly.
- 2 Replace the four screws (M2x4) that secure the antenna to the display assembly.

Post-requisites

- 1 Replace the [display hinge cover](#).
- 2 Replace the [display assembly](#).
- 3 Replace the [battery](#).
- 4 Replace the [base cover](#).

Removing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



NOTE: Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.



NOTE: Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [wireless card](#).
- 4 Remove the [solid-state drive](#).
- 5 Remove the [heat sink](#).

Procedure

- 1 Peel off the tape that secures the antenna cables and power-adaptor port cable to the system board.
- 2 Disconnect the camera cable, touchscreen cable (optional), power-adaptor port cable, and coin-cell battery cable from the system board.

- 3 Open the latch and disconnect the keyboard-controller board cable from the system board.

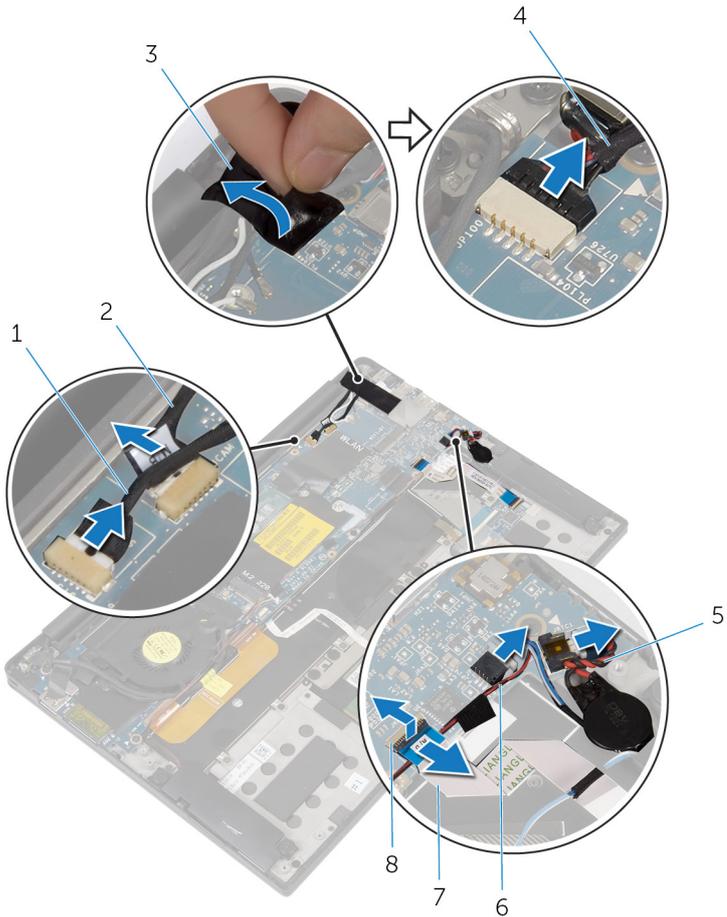


Figure 25. Removing the system board

- | | | | |
|---|---------------------------------|---|--------------------------|
| 1 | touchscreen cable (optional) | 2 | camera cable |
| 3 | tape | 4 | power-adapter port cable |
| 5 | coin-cell battery cable | 6 | speaker cable |
| 7 | keyboard-controller board cable | 8 | latch |

- 4 Peel off the tape from the display-cable bracket.
- 5 Peel off the tape that secures the speaker cable to the system board.
- 6 Disconnect the fan cable from the system board.
- 7 Open the latches and disconnect the I/O-board cable and the touchpad cable from the system board.

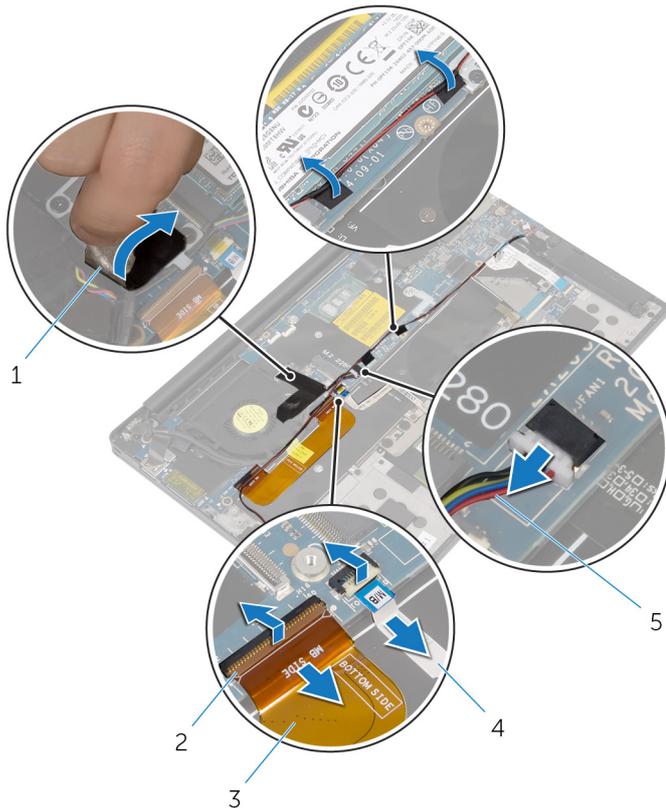


Figure 26. Removing the system board

- | | | | |
|---|-----------------|---|----------------|
| 1 | tape (3) | 2 | latches (2) |
| 3 | I/O-board cable | 4 | touchpad cable |
| 5 | fan cable | | |

- 8 Remove the two screws (M2x3) that secure the display-cable bracket to the system board.

- 9 Lift the display-cable bracket off the display cable.
- 10 Using the pull tab, disconnect the display cable from the system board.

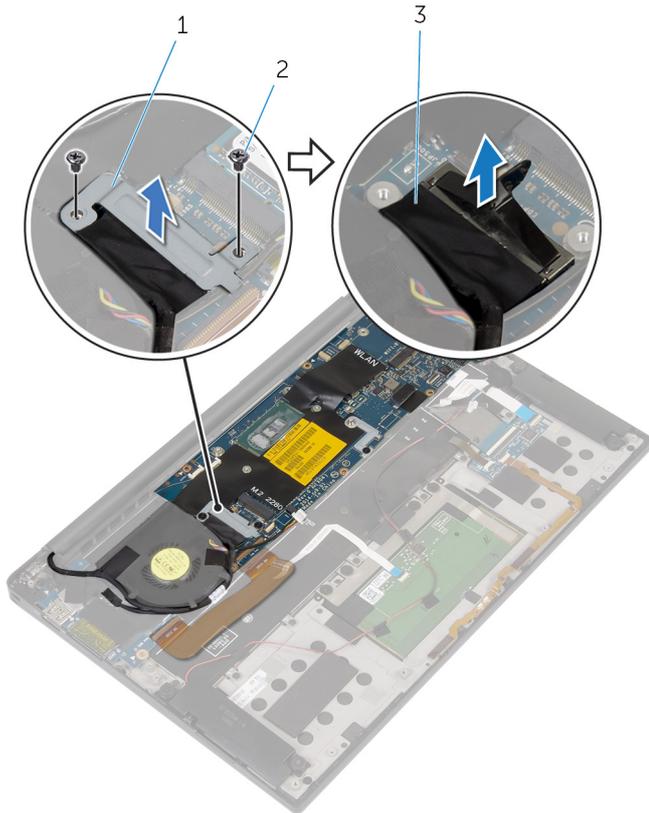


Figure 27. Removing the system board

- | | | | |
|---|-----------------------|---|------------|
| 1 | display-cable bracket | 2 | screws (2) |
| 3 | display cable | | |

- 11 Remove the six screws (M1.6x3) that secure the system board to the palm-rest assembly.

12 Starting from the outer edge, lift the system board at an angle to release it from the tabs on the palm-rest assembly.

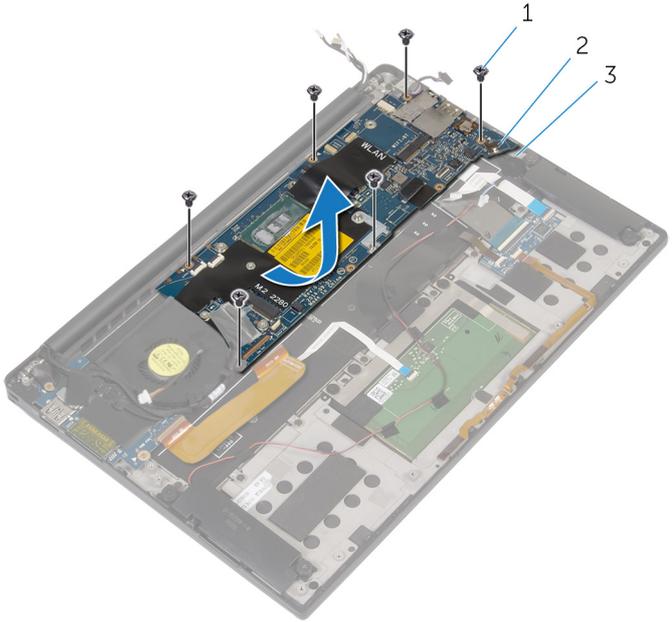


Figure 28. Removing the system board

- 1 screws (6)
- 2 system board
- 3 palm-rest assembly

Replacing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



NOTE: Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.

Procedure

- 1 Using the alignment posts, place the system on the palm-rest assembly and align the screw holes on the system board with the screw holes on the palm-rest assembly.
- 2 Replace the six screws (M1.6x3) that secure the system board to the palm-rest assembly.
- 3 Slide the I/O-board cable, the touchpad cable, and the keyboard-controller board cable into the system board and close the connector latches to secure the cables.
- 4 Connect the camera cable, the touchscreen cable (optional), the power-adaptor port cable, the coin-cell battery cable, the speaker cable, the fan cable, and the display cable to the system board.
- 5 Adhere the tape that secures the antenna cables and power-adaptor port to the system board.
- 6 Align the screw holes on the display-cable bracket with the screw holes on the system board.
- 7 Replace the two screws (M2x3) that secure the display-cable bracket to system board.
- 8 Adhere the tapes that secure the speaker cable to the system board.
- 9 Adhere the tape over the display-cable bracket.

Post-requisites

- 1 Replace the [heat sink](#).
- 2 Replace the [solid-state drive](#).
- 3 Replace the [wireless card](#).
- 4 Replace the [battery](#).
- 5 Replace the [base cover](#).

Entering the Service Tag in the BIOS setup program

- 1 Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed to enter the BIOS setup program.
- 3 Navigate to the **Main** tab and enter the Service Tag in the **Service Tag Input** field.



NOTE: Service tag is the alphanumeric identifier located at the back side of your computer.

Removing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [wireless card](#).
- 4 Remove the [system board](#).

Procedure

- 1 Remove the screw (M2x3) that secures the power-adapter port to the palm-rest assembly.
- 2 Note the power-adapter port cable routing and remove the cable from the routing guide on the palm-rest assembly.

- 3 Lift the power-adapter port off the palm-rest assembly.

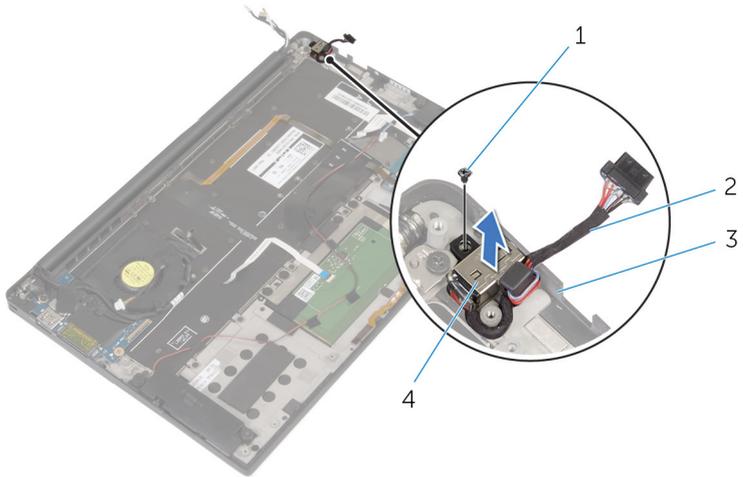


Figure 29. Removing the power-adapter port

- | | | | |
|---|--------------------|---|--------------------------|
| 1 | screw | 2 | power-adapter port cable |
| 3 | palm-rest assembly | 4 | power-adapter port |

Replacing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw hole on the power-adapter port with the screw hole on the palm-rest assembly.
- 2 Replace the screw (M2x3) that secures the power-adapter port to the palm-rest assembly.
- 3 Route the power-adapter port cable through the routing guide on the palm-rest assembly.

Post-requisites

- 1 Replace the [system board](#).
- 2 Replace the [wireless card](#).
- 3 Replace the [battery](#).
- 4 Replace the [base cover](#).

Removing the fan



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [wireless card](#).
- 4 Remove the [system board](#).

Procedure

- 1 Peel off the tape that secures the display cable to the fan.

- 2 Note the display-cable routing and remove the cable from the routing guides on the fan.

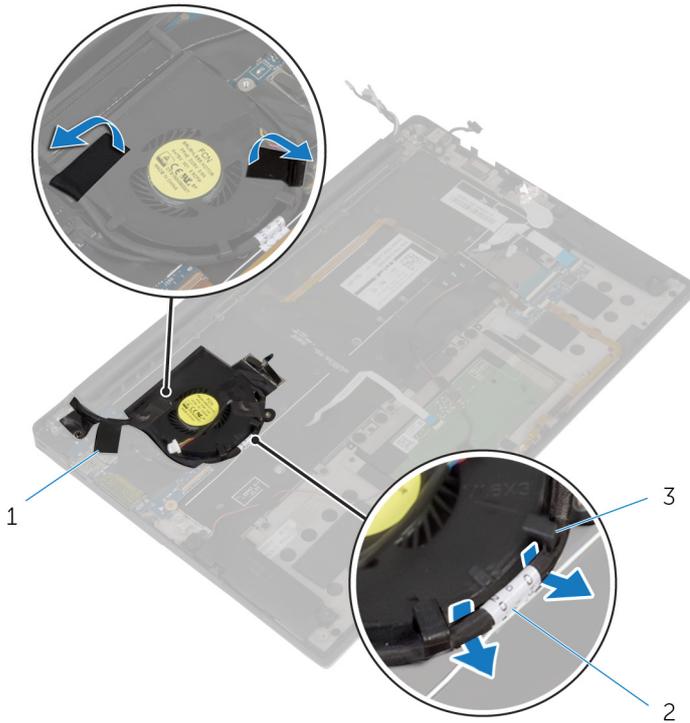


Figure 30. Removing the fan

- | | | | |
|---|--------------------|---|---------------|
| 1 | tape (3) | 2 | display cable |
| 3 | routing guides (2) | | |
- 3 Remove the screw (M1.6x3) that secures the fan to the palm-rest assembly.

- 4 Lift the fan along with its cable off the palm-rest assembly.

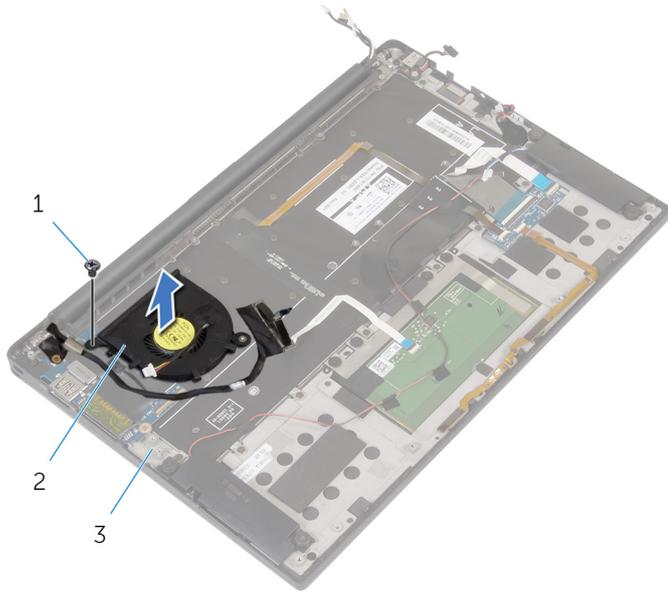


Figure 31. Removing the fan

- | | | | |
|---|--------------------|---|-----|
| 1 | screw | 2 | fan |
| 3 | palm-rest assembly | | |

Replacing the fan



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the fan with the screw holes on the palm-rest assembly.
- 2 Replace the screw (M1.6x3) that secures the fan to the palm-rest assembly.
- 3 Route the display cable through the routing guides on the fan.
- 4 Adhere the tape that secures the display cable to the fan.

Post-requisites

- 1 Replace the [system board](#).
- 2 Replace the [wireless card](#).
- 3 Replace the [battery](#).
- 4 Replace the [base cover](#).

Removing the keyboard



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [wireless card](#).
- 4 Remove the [speakers](#).
- 5 Remove the [coin-cell battery](#).
- 6 Remove the [heat sink](#).
- 7 Remove the [I/O board](#).
- 8 Remove the [system board](#).
- 9 Remove the [fan](#).
- 10 Remove the [I/O-board cable](#).

Procedure

- 1 Open the latches and disconnect the keyboard cable and the keyboard-backlight cable from the keyboard-controller board.

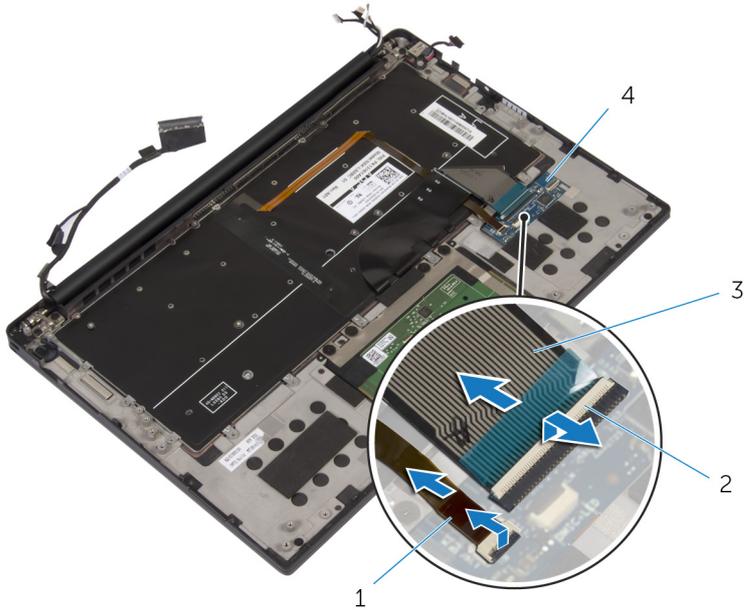


Figure 32. Removing the keyboard

- | | | | |
|---|--------------------------|---|---------------------------|
| 1 | keyboard-backlight cable | 2 | latches (2) |
| 3 | keyboard cable | 4 | keyboard-controller board |
- 2 Note the routing of the touchpad cable, the I/O-board cable, and the keyboard-controller board cable, and peel off the cables from the keyboard.

- 3** Remove the 30 screws (M1.6x1.5) that secure the keyboard to the palm-rest assembly.

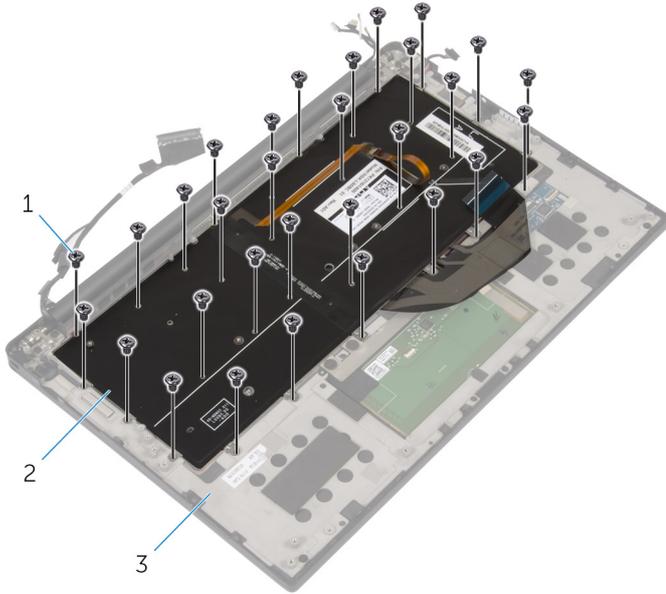


Figure 33. Removing the keyboard

- | | | | |
|---|--------------------|---|----------|
| 1 | screws (30) | 2 | keyboard |
| 3 | palm-rest assembly | | |

4 Lift the keyboard off the palm-rest assembly.

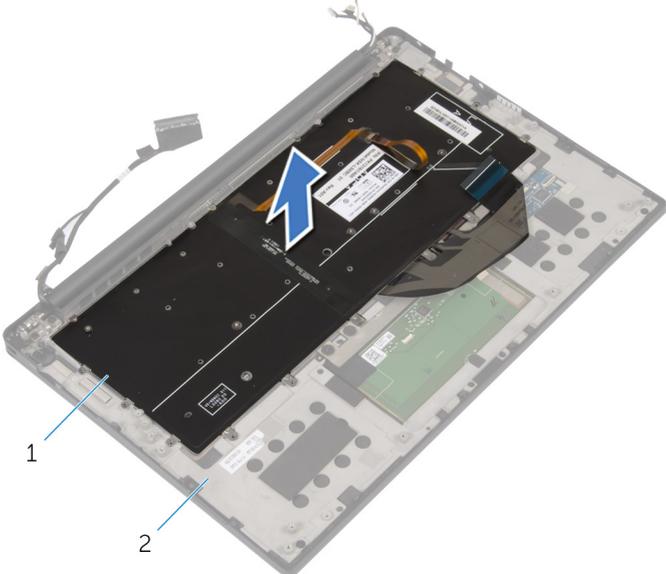


Figure 34. Removing the keyboard

1 keyboard

2 palm-rest assembly

Replacing the keyboard



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the keyboard with the screw holes on the palm-rest assembly.
- 2 Replace the 30 screws (M1.6x1.5) that secure the keyboard to the palm-rest assembly.
- 3 Adhere the touchpad cable, the I/O-board cable, and the keyboard-controller board cable to the keyboard.
- 4 Slide the keyboard cable and the keyboard-backlight cable into the keyboard-controller board and close the latches to secure the cables.

Post-requisites

- 1 Replace the [I/O-board cable](#).
- 2 Replace the [fan](#).
- 3 Follow the procedure from step 1 to step 8 in "[Replacing the system board](#)".
- 4 Replace the [I/O board](#).
- 5 Replace the [heat sink](#).
- 6 Replace the [coin-cell battery](#).
- 7 Replace the [speakers](#).
- 8 Replace the [wireless card](#).
- 9 Replace the [battery](#).
- 10 Replace the [base cover](#).

Removing the palm-rest assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: The palm-rest assembly is an assembly that includes the palm rest and the keyboard-controller board.

Prerequisites

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [wireless card](#).
- 4 Remove the [speakers](#).
- 5 Remove the [coin-cell battery](#).
- 6 Remove the [battery-status light cable with microphones](#).
- 7 Remove the [touchpad](#).
- 8 Remove the [I/O-board cable](#).
- 9 Remove the [I/O board](#).
- 10 Remove the [display assembly](#).
- 11 Remove the [heat sink](#).
- 12 Remove the [system board](#).
- 13 Remove the [fan](#).
- 14 Remove the [keyboard](#).

Procedure

After performing all the pre-requisites, we are left with the palm-rest assembly.



Replacing the palm-rest assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before working inside your computer](#). After working inside your computer, follow the instructions in [After working inside your computer](#). For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: The palm-rest assembly is an assembly that includes the palm rest and the keyboard-controller board.

Procedure

Place the palm-rest assembly on a clean and flat surface.



Post-requisites

- 1 Replace the [keyboard](#).

- 2** Replace the [fan](#).
- 3** Replace the [system board](#).
- 4** Replace the [heat sink](#).
- 5** Replace the [display assembly](#).
- 6** Replace the [I/O board](#).
- 7** Replace the [I/O-board cable](#).
- 8** Replace the [touchpad](#).
- 9** Replace the [battery-status light cable with microphones](#).
- 10** Replace the [coin-cell battery](#).
- 11** Replace the [speakers](#).
- 12** Replace the [wireless card](#).
- 13** Replace the [battery](#).
- 14** Replace the [base cover](#).

Downloading drivers

Downloading the audio driver

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click **Product Support**, enter the Service Tag of your computer, and then click **Submit**.



NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click **Drivers & Downloads** → **Find it myself**.
- 5 Scroll down the page and expand **Audio**.
- 6 Click **Download** to download the audio driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the audio driver file.
- 8 Double-click the audio driver file icon and follow the instructions on the screen to install the driver.

Downloading the graphics driver

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Enter the Service Tag of your computer, and then click **Submit**.



NOTE: If you do not have the Service Tag, use the autodetect feature or manually browse for your computer model.

- 4 Click **Drivers & downloads**.
- 5 Click the **Detect Drivers** button.
- 6 Review and agree to the Terms and Conditions to use **SupportAssist**, then click **Continue**.
- 7 If necessary, your computer starts to download and install **SupportAssist**.



NOTE: Review on-screen instructions for browser-specific instructions.

- 8 Click **View Drivers for My System**.

- 9 Click **Download and Install** to download and install all driver updates detected for your computer.
- 10 Select a location to save the files.
- 11 If prompted, approve requests from **User Account Control** to make changes on the system.
- 12 The application installs all drivers and updates identified.
 **NOTE: Not all files can be installed automatically. Review the installation summary to identify if manual installation is necessary.**
- 13 For manual download and installation, click **Category**.
- 14 Click **Video** in the drop-down list.
- 15 Click **Download** to download the graphics driver for your computer.
- 16 After the download is complete, navigate to the folder where you saved the graphics driver file.
- 17 Double-click the graphics driver file icon and follow the instructions on the screen to install the driver.

Downloading the USB 3.0 driver

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click **Product Support**, enter the Service Tag of your computer, and then click **Submit**.

 **NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.**

- 4 Click **Drivers & Downloads** → **Find it myself**.
- 5 Scroll down the page and expand **Chipset**.
- 6 Click **Download** to download the USB 3.0 driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved USB 3.0 driver file.
- 8 Double-click the USB 3.0 driver file icon and follow the instructions on screen to install the driver.

Downloading the Wi-Fi driver

- 1 Turn on the computer.
- 2 Go to www.dell.com/support.

- 3 Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.



NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click **Drivers & downloads** → **Find it myself**.
- 5 Scroll down the page and expand **Network**.
- 6 Click **Download** to download the Wi-Fi driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the Wi-Fi driver file.
- 8 Double-click the driver file icon and follow the instructions on the screen.

Downloading the media-card reader driver

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.



NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click **Drivers & downloads** → **Find it myself**.
- 5 Scroll down the page, and expand **Chipset**.
- 6 Click **Download** to download the media-card reader driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the card reader driver file.

- Double-click the card reader driver file icon, and follow the instructions on the screen.

Table 3. Identifying media-card reader driver in device manager

Before driver installation	After driver installation
<ul style="list-style-type: none"> <ul style="list-style-type: none"> Universal Serial Bus controllers <ul style="list-style-type: none"> AMD USB 3.10 eXtensible Host Controller - 1.10 (Microsoft) AMD USB 3.10 eXtensible Host Controller - 1.10 (Microsoft) Generic USB Hub UCSI USB Connector Manager USB Composite Device USB Composite Device USB Root Hub (USB 3.0) USB Root Hub (USB 3.0) <ul style="list-style-type: none"> Universal Serial Bus controllers <ul style="list-style-type: none"> AMD USB 3.10 eXtensible Host Controller - 1.10 (Microsoft) Generic USB Hub Realtek USB 2.0 Card Reader USB Mass Storage Device USB Root Hub (USB 3.0) 	<ul style="list-style-type: none"> <ul style="list-style-type: none"> Universal Serial Bus controllers <ul style="list-style-type: none"> AMD USB 3.10 eXtensible Host Controller - 1.10 (Microsoft) AMD USB 3.10 eXtensible Host Controller - 1.10 (Microsoft) Generic USB Hub Realtek USB 2.0 Card Reader USB Composite Device USB Mass Storage Device USB Root Hub (USB 3.0) USB Root Hub (USB 3.0) <ul style="list-style-type: none"> Universal Serial Bus controllers <ul style="list-style-type: none"> AMD USB 3.10 eXtensible Host Controller - 1.10 (Microsoft) AMD USB 3.10 eXtensible Host Controller - 1.10 (Microsoft) Generic USB Hub Realtek USB 2.0 Card Reader UCSI USB Connector Manager USB Composite Device USB Composite Device USB Root Hub (USB 3.0) USB Root Hub (USB 3.0)

Downloading the chipset driver

- Turn on your computer.
- Go to www.dell.com/support.
- Click **Product Support**, enter the Service Tag of your computer, and then click **Submit**.

 **NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.**
- Click **Drivers & downloads** → **Find it myself**.
- Scroll down the page and expand **Chipset**.
- Click **Download** to download the appropriate chipset driver for your computer.
- After the download is complete, navigate to the folder where you saved the chipset driver file.
- Double-click the chipset driver file icon and follow the instructions on the screen to install the driver.

Downloading the network driver

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click **Product support** enter the Service Tag of your computer and click **Submit**.



NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click **Drivers & downloads** → **Find it myself**.
- 5 Scroll down the page and expand **Network**.
- 6 Click **Download** to download the network driver for your computer.
- 7 Save the file, and after the download is complete, navigate to the folder where you saved the network driver file.
- 8 Double-click the network driver file icon and follow the instructions on screen.

System setup

 **NOTE: Depending on the computer and its installed devices, the items listed in this section may or may not be displayed.**

Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive

 **NOTE: XXX denotes the SATA drive number.**

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

 **NOTE: Choosing Diagnostics, will display the ePSA diagnostics screen.**

The boot sequence screen also displays the option to access the System Setup screen.

Navigation keys

 **NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.**

Keys

Navigation

Up arrow

Moves to the previous field.

Keys	Navigation
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

System setup

 **CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.**

 **NOTE: Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.**

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

Entering BIOS setup program

- 1 Turn on (or restart) your computer.

- 2 During POST, when the DELL logo is displayed, watch for the F2 prompt to appear, and then press F2 immediately.



NOTE: The F2 prompt indicates that the keyboard is initialized. This prompt can appear very quickly, so you must watch for it, and then press F2. If you press F2 before the F2 prompt, this keystroke is lost. If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

System setup options



NOTE: Depending on this computer and its installed devices, the items listed in this section may or may not appear.

Table 4. System setup options—System information menu

General-System Information

System Information

BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.
Ownership Tag	Displays the ownership tag of the computer.
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the express service code of the computer.

Memory Information

Memory Installed	Displays the total computer memory installed.
Memory Available	Displays the total computer memory available.
Memory Speed	Displays the memory speed.
Memory Channel Mode	Displays single or dual channel mode.
Memory Technology	Displays the technology used for the memory.
DIMM A Size	Displays the DIMM A memory size.
DIMM B Size	Displays the DIMM B memory size.

General-System Information

Processor Information

Processor Type	Displays the processor type.
Core Count	Displays the number of cores on the processor.
Processor ID	Displays the processor identification code.
Current Clock Speed	Displays the current processor clock speed.
Minimum Clock Speed	Displays the minimum processor clock speed.
Maximum Clock Speed	Displays the maximum processor clock speed.
Processor L2 Cache	Displays the processor L2 Cache size.
Processor L3 Cache	Displays the processor L3 Cache size.
HT Capable	Displays whether the processor is HyperThreading (HT) capable.
64-Bit Technology	Displays whether 64-bit technology is used.

Device Information

SATA-0	Displays the SATA-0 device information of the computer.
SATA-2	Displays the SATA-2 device information of the computer.
M.2 PCIe SSD-0	Displays the M.2 PCIe SSD information of the computer.
Video Controller	Displays the video controller type of the computer.
dGPU Video Controller	Displays the discrete graphics information of the computer.
Video BIOS Version	Displays the video BIOS version of the computer.
Video Memory	Displays the video memory information of the computer.
Panel Type	Displays the Panel Type of the computer.
Native Resolution	Displays the native resolution of the computer.
Audio Controller	Displays the audio controller information of the computer.

General-System Information

Wi-Fi Device	Displays the wireless device information of the computer.
Bluetooth Device	Displays the bluetooth device information of the computer.
Battery Information	Displays the battery health information.
Boot Sequence	
Boot Sequence	Displays the boot sequence.
Boot List Option	Displays the available boot options.
Advanced Boot Options	
Enable Legacy Option ROMs	Enable or disable the Legacy Option ROMs.
Enable UEFI Network Stack	Enable or disable UEFI Network Stack.
UEFI Boot Path Security	Enable or disable the system to prompt the user to enter the Admin password when booting a UEFI boot path from the F12 boot menu.
Date/Time	Displays the current date in MM/DD/YY format and current time in HH:MM:SS AM/PM format.

Table 5. System setup options—System Configuration menu

System Configuration

SATA Operation	Configure operating mode of the integrated SATA hard drive controller.
Drives	Enable or disable various drives on board.
SMART Reporting	Enable or disable SMART Reporting during system startup.
USB Configuration	
Enable Boot Support	Enable or disable booting from USB mass storage devices such as external hard drive, optical drive, and USB drive.

System Configuration

Enable External USB Port	Enable or disable booting from USB mass storage devices connected to external USB port.
USB PowerShare	Enable or disable charging external devices through the USB PowerShare port.
Audio	Enable or disable the integrated audio controller.
Keyboard Illumination	Configure the operating mode of the keyboard illumination feature.
Keyboard Backlight with AC	Enable or disable the keyboard backlight.
Miscellaneous Devices	Enable or disable various onboard devices.
Enable Camera	Enable or disable the camera.
Enable Secure Digital (SD) Card	Enable or disable the SD card.

Table 6. System setup options—Video menu

Video

LCD Brightness	Set the panel brightness independently for Battery and AC power.
----------------	--

Table 7. System setup options—Security menu

Security

Strong Password	Enable or disable strong passwords.
Password Configuration	Control the minimum and maximum number of characters allowed for Admin and System passwords.
Password Bypass	Bypass the System (Boot) Password and the internal HDD password prompts during a system restart.
Password Change	Enable or disable changes to the System and Hard Disk passwords when an administrator password is set.

Security

Non-Admin Setup Changes	Determines whether changes to the setup option are permitted when an administrator password is set.
UEFI Capsule Firmware Updates	Enable or disable BIOS updates through UEFI capsule update packages.
PTT Security	Enable or disable Platform Trust Technology (PTT) visibility to the operating system.
Computrace(R)	Enable or disable the BIOS module interface of the optional Computrace(R) Service from Absolute Software.
CPU XD Support	Enable or disable the Execute Disable mode of the Processor.
Admin Setup Lockout	Enable to prevent users from entering Setup when an Admin Password is set.

Table 8. System setup options—Secure Boot menu

Secure Boot

Secure Boot Enable	Enable or disable the secure boot feature.
--------------------	--

Expert Key Management

Expert Key Management	Enable or disable Expert Key Management.
Custom Mode Key Management	Select the custom values for expert key management.

Table 9. System setup options—Intel Software Guard Extensions menu

Intel Software Guard Extensions

Intel SGX Enable	Enable or disable Intel Software Guard Extensions.
Enclave Memory Size	Set the Intel Software Guard Extensions Enclave Reserve Memory Size.

Performance

Multi Core Support	Enable multiple cores. Default: Enabled.
--------------------	---

Intel Software Guard Extensions

Intel SpeedStep Enable or disable Intel Speedstep Technology.
Default: Enabled.



NOTE: If enabled, the processor clock speed and core voltage are adjusted dynamically based on the processor load.

C-States Control Enable or disable additional processor sleep states.
Default: Enabled.

Intel TurboBoost Enable or disable Intel TurboBoost mode of the processor.
Default: Enabled.

HyperThread control Enable or disable HyperThreading in the processor.
Default: Enabled.

Power Management

AC Behavior Enables the system to turn on automatically, when AC is inserted.

Enable Intel Speed Shift Technology Enable or disable Intel Speed Shift Technology.

Auto on Time Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays or Selected Days.
Default: Disabled.

USB Wake Support Enable the USB devices to wake the computer from Standby.

Advanced Battery Charge Configuration Enable Advanced Battery Charge Configuration from the beginning of the day to a specified work period.

Primary Battery Charge Configuration Set the primary battery charge settings with a preselected custom charge start and stop.
Default: Adaptive.

POST Behavior

Adapter Warnings Enable adapter warnings.

Intel Software Guard Extensions

	Default: Enabled.
Numlock Enable	Enable or disable Numlock. Default: Enable Numlock.
Fn Lock Options	Enable or disable the Fn lock mode.
Fastboot	Enable to set the speed of the boot process. Default: Thorough.
Extend BIOS POST Time	Configure additional pre-boot delay.
Pull Screen Logo	Enable or disable to display full screen logo.
Warnings and Errors	Select an action on encountering a warning or error.

Table 10. System setup options—Virtualization Support menu

Virtualization Support

Virtualization	Specify whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization Technology.
VT for Direct I/O	Specify whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization Technology for Direct I/O.

Table 11. System setup options—Wireless menu

Wireless

Wireless Switch	Determine which wireless devices can be controlled by the Wireless Switch.
Wireless Device Enable	Enable or disable internal wireless devices.

Table 12. System setup options—Maintenance menu

Maintenance

Service Tag	Display the system's Service Tag.
Asset Tag	Create a system Asset Tag.

Maintenance

BIOS Downgrade	Control flashing of the system firmware to previous revisions.
Data Wipe	Enable to securely erase data from all internal storage devices.
BIOS Recovery	Enable the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key.

Table 13. System setup options—System Logs menu

System Logs

BIOS Events	Display BIOS events.
Thermal Events	Display Thermal events.
Power Events	Display Power events.

Table 14. System setup options—SupportAssist System Resolution menu

SupportAssist System Resolution

Auto OS Recovery Threshold	Control the automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery tool.
SupportAssist OS Recovery	Enable or disable the boot flow for SupportAssist OS Recovery tool in the even of certain system errors.

System and setup password

Table 15. System and setup password

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION: The password features provide a basic level of security for the data on your computer.**

 **CAUTION: Anyone can access the data stored on your computer if it is not locked and left unattended.**

 **NOTE: System and setup password feature is disabled.**

Assigning a system setup password

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

To enter the system setup, press F2 immediately after a power-on or re-boot.

- 1 In the **System BIOS** or **System Setup** screen, select **Security** and press Enter. The **Security** screen is displayed.
- 2 Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - The password can contain the numbers 0 through 9.
 - Only lower case letters are valid, upper case letters are not allowed.
 - Only the following special characters are allowed: space, ("), (+), (,), (-), (.), (/), (:), ([), (\), (]), (^).
- 3 Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
- 4 Press Esc and a message prompts you to save the changes.
- 5 Press Y to save the changes.
The computer reboots.

Deleting or changing an existing system setup password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

To enter the System Setup, press F2 immediately after a power-on or reboot.

- 1 In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.

The **System Security** screen is displayed.

- 2 In the **System Security** screen, verify that **Password Status** is **Unlocked**.
- 3 Select **System Password**, alter or delete the existing system password and press Enter or Tab.
- 4 Select **Setup Password**, alter or delete the existing setup password and press Enter or Tab.



NOTE: If you change the System and/or Setup password, re-enter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.

- 5 Press Esc and a message prompts you to save the changes.
- 6 Press Y to save the changes and exit from System Setup.

The computer reboot.

Clearing CMOS settings

- 1 Remove the [base cover](#).
- 2 Remove the [battery](#).
- 3 Remove the [coin-cell battery](#).
- 4 Wait for one minute.
- 5 Replace the [coin-cell battery](#).
- 6 Replace the [battery](#).
- 7 Replace the [base cover](#).

Clearing BIOS (System Setup) and System passwords

Contact Dell technical support to clear the forgotten passwords. For more information, see www.dell.com/contactdell.

Troubleshooting

Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board.

Follow these steps to flash the BIOS:

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.
 **NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.**
- 4 Click **Drivers & downloads** → **Find it myself**.
- 5 Select the operating system installed on your computer.
- 6 Scroll down the page and expand **BIOS**.
- 7 Click **Download** to download the latest version of the BIOS for your computer.
- 8 After the download is complete, navigate to the folder where you saved the BIOS update file.
- 9 Double-click the BIOS update file icon and follow the instructions on the screen.

Flashing BIOS (USB key)

- 1 Follow the procedure from step 1 to step 7 in "[Flashing the BIOS](#)" to download the latest BIOS setup program file.
- 2 Create a bootable USB drive. For more information see the knowledge base article [SLN143196](#) at www.dell.com/support.
- 3 Copy the BIOS setup program file to the bootable USB drive.
- 4 Connect the bootable USB drive to the computer that needs the BIOS update.
- 5 Restart the computer and press **F12** when the Dell logo is displayed on the screen.
- 6 Boot to the USB drive from the **One Time Boot Menu**.
- 7 Type the BIOS setup program filename and press **Enter**.

- 8 The **BIOS Update Utility** appears. Follow the instructions on the screen to complete the BIOS update.

Enhanced Pre-Boot System Assessment (ePSA) diagnostics

The ePSA diagnostics (also known as system diagnostics) performs a complete check of your hardware. The ePSA is embedded with the BIOS and is launched by the BIOS internally. The embedded system diagnostics provides a set of options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode
- Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options to provide extra information about the failed device(s)
- View status messages that inform you if tests are completed successfully
- View error messages that inform you of problems encountered during testing

 **NOTE: Some tests for specific devices require user interaction. Always ensure that you are present at the computer terminal when the diagnostic tests are performed.**

For more information, see [Dell EPSA Diagnostic 3.0](#).

Running the ePSA Diagnostics

Invoke diagnostics boot by either of the methods that are suggested below:

- 1 Power on the computer.
- 2 As the computer boots, press the F12 key when the Dell logo is displayed.
- 3 In the boot menu screen, use Up/Down arrow key to select the **Diagnostics** option and then press **Enter**.

 **NOTE: The Enhanced Pre-boot System Assessment window displays, listing all devices detected in the computer. The diagnostics starts running the tests on all the detected devices.**

- 4 Press the arrow in the lower-right corner to go to the page listing. The detected items are listed and tested.
- 5 To run a diagnostic test on a specific device, press Esc and click **Yes** to stop the diagnostic test.

- 6 Select the device from the left pane and click **Run Tests**.
- 7 If there are any issues, error codes are displayed.
Note the error code and contact Dell.
or
- 8 Shut down the computer.
- 9 Press and hold the Fn key, while pressing the power button, and then release both.
- 10 Repeat steps 3–7 above.

System diagnostic lights

Power and battery-status light

Indicates the power and battery-charge status.

Solid white—Power adapter is connected and the battery has more than 5 percent charge.

Solid amber—Computer is running on battery and the battery has less than 5 percent charge.

Off

- Power adapter is connected and the battery is fully charged.
- Computer is running on battery and the battery has more than 5 percent charge.
- Computer is in sleep state, hibernation, or turned off.

The power and battery-status light blinks amber along with beep codes indicating failures.

For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off indicating no memory or RAM is detected.

The following table shows different power and battery-status light patterns and associated problems.

Table 16. Diagnostics

Light pattern	Problem description
2,1	CPU failure
2,2	System board: BIOS and ROM failure
2,3	No memory or RAM detected

Light pattern	Problem description
2,4	Memory or RAM failure
2,5	Invalid memory installed
2,6	System board or chipset error
2,7	LCD failure
3,1	CMOS battery failure
3,2	PCI or video card or chip failure
3,3	Recovery image not found
3,4	Recovery image found but invalid

Camera status light: Indicates whether the camera is in use.

- Solid white—Camera is in use.
- Off—Camera is not in use.

Caps Lock status light: Indicates whether Caps Lock is enabled or disabled.

- Solid white—Caps Lock enabled.
- Off—Caps Lock disabled.

Flea power release

Flea power is the residual static electricity that remains on the computer even after it has been powered off and the battery has been removed. The following procedure provides the instructions on how to conduct flea power release:

- 1 Turn off your computer.
- 2 Remove the [base cover](#).
- 3 Follow step 1 in "[Removing the battery](#)".
- 4 Press and hold the power button for 15 seconds to drain the flea power.
- 5 Follow step 4 in "[Replacing the battery](#)".
- 6 Replace the [base cover](#).
- 7 Turn on your computer.

Wi-Fi power cycle

If your computer is unable to access the Internet due to Wi-Fi connectivity issues a Wi-Fi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a Wi-Fi power cycle:

 **NOTE: Some ISPs (Internet Service Providers) provide a modem/router combo device.**

- 1 Turn off your computer.
- 2 Turn off the modem.
- 3 Turn off the wireless router.
- 4 Wait for 30 seconds.
- 5 Turn on the wireless router.
- 6 Turn on the modem.
- 7 Turn on your computer.

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 17. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell	
Tips	
Contact Support	In Windows search, type Contact Support , and press Enter.
Online help for operating system	www.dell.com/support/windows www.dell.com/support/linux
Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.	www.dell.com/support
Dell knowledge base articles for a variety of computer concerns.	<ol style="list-style-type: none">1 Go to www.dell.com/support.2 Type the subject or keyword in the Search box.3 Click Search to retrieve the related articles.
Learn and know the following information about your product:	See <i>Me and My Dell</i> at www.dell.com/support/manuals .

Self-help resources	Resource location
<ul style="list-style-type: none">• Product specifications• Operating system• Setting up and using your product• Data backup• Troubleshooting and diagnostics• Factory and system restore• BIOS information	<p>To locate the <i>Me and My Dell</i> relevant to your product, identify your product through one of the following:</p> <ul style="list-style-type: none">• Select Detect Product.• Locate your product through the drop-down menu under View Products.• Enter the Service Tag number or Product ID in the search bar.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.



NOTE: Availability varies by country and product, and some services may not be available in your country.



NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.